



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KONICA MINOLTA RP603Z. You'll find the answers to all your questions on the KONICA MINOLTA RP603Z in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KONICA MINOLTA RP603Z

User guide KONICA MINOLTA RP603Z

Operating instructions KONICA MINOLTA RP603Z


Instructions for use KONICA MINOLTA RP603Z

Instruction manual KONICA MINOLTA RP603Z

7664-1371-01



MINOLTA ROLL FILM CARRIER 22A

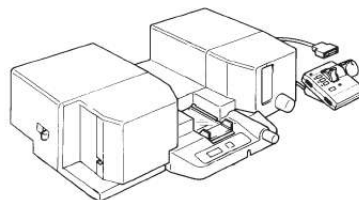

[You're reading an excerpt. Click here to read official KONICA MINOLTA RP603Z user guide](http://yourpdfguides.com/dref/592755)
<http://yourpdfguides.com/dref/592755>

Manual abstract:

To achieve optimum utility of this device, all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine. Please read the next section before using this device. It contains important information related to user safety and preventing equipment problems. Make sure you observe all of the precautions listed in this manual. * Please note that some parts of the contents of this section may not correspond with the purchased product. **Warning and Precaution Symbols** Ignoring this warning could cause serious injury or even death. Ignoring this caution could cause injury or damage to property. **Meaning of Symbols** A triangle indicates a danger against which you should take precaution. This symbol warns against cause burns.

A diagonal line indicates a prohibited course of action. This symbol warns against dismantling the device. A black circle indicates an imperative course of action. This symbol indicates you must unplug the device. **P-1 PL 03** · Do not modify this product, as a fire, electrical shock, or breakdown could result. If the product employs a laser, the laser beam source could cause blindness. · Do not attempt to remove the covers and panels which have been fixed to the product. @ · Only use the power cord supplied in the package. @@ · Failure to use this cord could result in a fire or electrical shock. · Use only the specified power source voltage.

Failure to do that could result in a fire or electrical shock. @@@ · Do not unplug and plug in the power cord with a wet hand, as an electrical shock could result. Plug the power cord all the way into the power outlet. Failure to do this could result in a fire or electrical shock. · Do not scratch, abrade, place a heavy object on, heat, twist, bend, pull on, or damage the power cord. Use of a damaged power cord (exposed core wire, broken wire, etc.) could result in a fire or breakdown. @@ · In principle, do not use an extension cord. Use of an extension cord could cause a fire or electrical shock. @@@ · Spilled water or metallic objects dropped inside the product could result in a fire, electrical shock, or breakdown.

Should a piece of metal, water, or any other similar foreign matter get inside the product, immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative. **P-2** · If this product becomes inordinately hot or emits smoke, or unusual odor or noise, immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative. If you keep on using it as is, a fire or electrical shock could result. · If this product has been dropped or its cover damaged, immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative. If you keep on using it as is, a fire or electrical shock could result. Do not throw the toner cartridge or toner into an open flame. The hot toner may scatter and cause burns or other damage. Connect the power cord to an electrical outlet that is equipped with a grounding terminal. **P-3** · Do not use flammable sprays, liquids, or gases near this product, as a fire could result. ·

Do not leave a toner unit or drum unit in a place within easy reach of children.

Licking or ingesting any of these things could injure your health. @@@@ · A fire, electrical shock, or breakdown could result. @@@ · After installing this product, mount it on a secure base. If the unit moves or falls, it may cause personal injury. · Do not store toner units and PC drum units near a floppy disk or watch that are susceptible to magnetism.

They could cause these products to malfunction. The inside of this product has areas subject to high temperature, which may cause burns. When checking the inside of the unit for malfunctions such as a paper misfeed, do not touch the locations (around the fusing unit, etc.) which are indicated by a "CAUTION HOT" caution label. Do not place any objects around the power plug as the power plug may be difficult to pull out when an emergency occurs.

P-4 · Always use this product in a well ventilated location. Operating the product in a poorly ventilated room for an extended period of time could injure your health. Ventilate the room at regular intervals. · Whenever moving this product, be sure to disconnect the power cord and other cables. Failure to do this could damage the cord or cable, resulting in a fire, electrical shock, or breakdown. · When moving this product, always hold it by the locations specified in the User manual or other documents. If the unit falls it may cause severe personal injury. The product may also be damaged or malfunction. @@ · Dust that accumulates between the plug terminals may cause a fire. @@@@ · Do not leave an unpacked unit standing.

Install it immediately or poor image quality could result. @@@@ · NEVER attempt to disassemble or remodel the system. The contents of this manual are subject to change without notice. @@@@ · 6 Positioning the Image on the Screen

....
....
.....

.. 7 Auto Vertical Scan Unit (Option)..

.....
.....
.....
.....

..... 9 How to use the Vertical Positioning Set Key .

....
....
.....
.....

. 9 Odometer (Option)...

.....
.....
....

.....
.....
.....
.....
.....
.....
..... @@@@ @@@@ @@@@ @@@@ @2.

For best performance, it is recommended to use authorized supplies. Failure to do so may cause inferior results or damage the unit, in such case the warranty may be void. WARNING This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. @@@@ When the Speed Control Knob is used to rewind the film, be sure to turn it back to the central position as you reach the film leader. 6 Operation 5 5.4 Positioning the Image on the Screen To move the image up and down, turn the Image Vertical Positioning Knob. G G Turn Knob clockwise to move the image up side. Turn Knob counterclockwise to move the image down side. To move the image right and left, use the Speed Control Knob. 7 5 To advance the film manually, rotate the Manual Film Advance Knob and, turn it clockwise. Operation To reverse the film manually, Manual Film Advance Knob and, turn it counterclockwise. To rotate the image, turn the Prism Rotation Knob. 8 Operation 5 5.5 Auto Vertical Scan Unit (Option) To move the image on the Screen up and down, use the Image Vertical Positioning Knob and Image Vertical Positioning Keys on the Control Unit.



[You're reading an excerpt. Click here to read official KONICA MINOLTA RP603Z user guide](http://yourpdfguides.com/dref/592755)
<http://yourpdfguides.com/dref/592755>

These controls are especially convenient when a film in duo-format or duplex are used. G Image Vertical Positioning Keys Cause the image to move up () or down () from the standard (STD) position. G Image Vertical Positioning Knob Used to move the image up or down slightly.

How to use the Vertical Positioning Set Key The position of the image as adjusted with the Image Vertical Positioning Keys and/or Image Vertical Positioning Knob can be stored in memory. Once the position is stored in memory, you have only to depress the corresponding Image Vertical Positioning Key: when the Key is depressed, the image is moved to the exact position stored in memory. Vertical Positioning Set Key The image position stored in memory does not change until memory is updated. 9 5 5.6 Odometer (Option) The optional Odometer can be used for image retrieval. When a Cartridge is loaded in position, the Odometer is reset to "0000." To reset the Odometer during a retrieval sequence, depress the CLEAR Button. Operation Depending on the setting, an Odometer count is equivalent in film length to either: 12.7 mm (1/2 inch) or 30.5 mm (1/10 feet).

For this setting, consult your Tech. Service Rep. The Odometer has been factory-set to 12.7 mm (1/2 inch) for one count. 5.7 Reel Shaft Release Lever After the film has been rewind, the Film Reel Shaft is not pulled back out of the Cartridge Film. Therefore, the Cartridge Film cannot be slid out of Roll Film Carrier. If this should occur, push the Reel Shaft Release Lever toward the rear side of Roll Film Carrier. Reel Shaft Release Lever 10 Installation 6 6 Installation NOTE The Machine Power Switch should be turned OFF before installing the Roll Film Carrier 22A. 1 Align two Guide Rails on the underside of the Roll Film Carrier 22A with the right and left edges of the Carrier Table.

Then, slide the Carrier all the way into position along the side edges of the Carrier Table. 2 Plug the Cable Connector of the Carrier into the Socket in the machine dedicated to this Carrier. 11 6 3 Install the Lens Unit all the way into Position. Installation To remove the Carrier from the machine, reverse the order of installation. NOTE The Machine Power Switch should be turned OFF before removing the Roll Film Carrier 22A.

12 Maintaining Your Films 7 7 7.1 Maintaining Your Films Use the following precautions when handling your own films. ANSI Cartridge 1 .



[You're reading an excerpt. Click here to read official KONICA MINOLTA RP603Z user guide](http://yourpdfguides.com/dref/592755)
<http://yourpdfguides.com/dref/592755>