



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LA CROSSE TECHNOLOGY WS-9006U. You'll find the answers to all your questions on the LA CROSSE TECHNOLOGY WS-9006U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual LA CROSSE TECHNOLOGY WS-9006U
User guide LA CROSSE TECHNOLOGY WS-9006U
Operating instructions LA CROSSE TECHNOLOGY WS-9006U
Instructions for use LA CROSSE TECHNOLOGY WS-9006U
Instruction manual LA CROSSE TECHNOLOGY WS-9006U



Tomorrow's Weather Today™

WS-9006U
Wireless Temperature Station

Instruction Manual

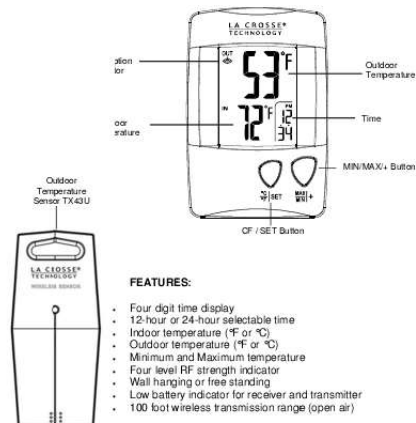

[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9006U user guide](http://yourpdfguides.com/dref/4123243)
<http://yourpdfguides.com/dref/4123243>

Manual abstract:

First, insert fresh 2x AA, IEC LR 1.5V alkali batteries into the TX43 transmitter observing the correct polarity (see marking inside battery compartment). Keep transmitter 5-10 feet from the temperature station. Within 30 seconds of powering up the transmitter, insert 2x AAA, IEC LR3, 1.5V batteries into the Temperature Station observing the correct polarity (see marking inside battery compartment). Once the batteries are in place, all segments of the LCD will light up briefly. Following, the indoor temperature will display. If the indoor temperature does not show in the LCD after 60 seconds, then remove the batteries and wait for at least 60 seconds before reinserting them. Once the indoor display is visible, proceed to the next step.

If this does not happen after 2 minutes, remove the batteries from both units and start again from the beginning. In order to ensure sufficient 433 MHz transmission, place the outdoor transmitter at a distance of no more than 100 feet (30 meters) from the Temperature Station and the transmitter. **INSTALL AND REPLACE BATTERIES IN THE TEMPERATURE TRANSMITTER** The Temperature transmitter uses 2x AA, IEC LR6, 1.5V batteries. When batteries will need to be replaced the low battery icon will appear on the LCD in front of the outdoor temperature.

Remove the battery compartment cover. (Slide to the bottom and then lift straight off). Insert the batteries, observing the correct polarity (see marking). **REPLACE BATTERIES IN THE TEMPERATURE STATION** The Temperature Station uses 2x AAA IEC LR3 1.5V batteries. When batteries need to be replaced, the low battery icon will appear in front of the indoor temperature. To install and replace the batteries, please follow the steps below: 1. Remove the battery compartment cover. 2. Insert batteries observing the correct polarity (see marking). 3.

Replace battery compartment cover. **LOW BATTERY:** Replace the batteries in all units every 12 months to ensure the optimum accuracy of these units. **CONNECTION:** The Hour will flash. **CONNECTION MINUTES:** The minutes will flash. Press and release the MIX/MAX/+ button to change the minutes. **RECEPTION BARS:** Shows after initial set up and station when reception is at full strength. 43-bars: Indicate one reception failure from the outdoor transmitter. 2-bars: Indicate two reception failures from the outdoor transmitter. 1-bar: Indicate three reception failures from the outdoor transmitter. 0-bars: Indicate four reception failures from the outdoor transmitter. The antenna symbol will flash on initial set while searching for the signal. If it fails to receive a signal after 63 minutes the temperature station will display dashes ("--").

The temperature station will search and gain for a signal for 3 minutes every next hour. **TEMPERATURE STATION:** Gently pull the Temperature Station down to lock into place. **WALL MOUNT:** LL 1. **PLACEMENT:**

Once the transmitter is attached to a piece of metal, it may reduce the transmitting range. For this reason, we recommend not to place the unit on any metal surfaces or in any position where a large metal or highly polished surface is in the immediate vicinity (garage doors, double-glazing, etc.). Before securing in place, please ensure that the Temperature Station can receive the 433MHz signal from the temperature transmitter at the positions that you wish to place them. **MAINTENANCE:** Keep the temperature station in a dry place. Clean it with a soft damp cloth. Do not use solvents or scouring agents. If the unit does not work properly change the battery. **Do Not Mix Old and New Batteries or Do Not Mix Alkaline, Standard, or Rechargeable Batteries or RECHARGEABLE BATTERIES:** **SPECIFIC Indoor Temperature:** Range: +32° F to 122° F (0° C to 50° C) **Resolution:** 1° F/C **Interval:** 57 sec conds **Outdoor Temperature:** Range: -22° F to 140° F (-3° C to -60° C) **Resolution:** 1° F/C **Interval:** 57 sec conds **Power:** Receiver: 2-AAA IEC, LR3 alkaline batteries.

Transmitter: 2-AA, IEC, LR6 alkaline batteries. **Dimensions:** Receiver: Transmitter: 2 1/2" W x 1" D x 3 3/4" H 3/4" W x 1" D x 4" H **WARRANTY INFORMATION** La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center. La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. **Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions:** (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the product's inability to receive a signal due to any source of interference. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances. **LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT.**

THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9006U user guide](http://yourpdfguides.com/dref/4123243)
<http://yourpdfguides.com/dref/4123243>