



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LA CROSSE TECHNOLOGY WS-9520U. You'll find the answers to all your questions on the LA CROSSE TECHNOLOGY WS-9520U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LA CROSSE TECHNOLOGY WS-9520U
User guide LA CROSSE TECHNOLOGY WS-9520U
Operating instructions LA CROSSE TECHNOLOGY WS-9520U
Instructions for use LA CROSSE TECHNOLOGY WS-9520U
Instruction manual LA CROSSE TECHNOLOGY WS-9520U


WEATHER PROJECTION STATION Instruction Manual

INTRODUCTION:

Congratulations on purchasing this state-of-the-art weather projection station as an example of innovative design and quality piece of engineering. Providing radio controlled time, date, calendar, moon phase, indoor and outdoor temperature, indoor and outdoor relative humidity, this unit will never keep you guessing on current and future weather conditions. Operation of this product is simple and straightforward. By reading this operating manual, the user will receive a better understanding of the weather projection station together with the optimum benefit of all its features.

FEATURES:

The Weather Projection Station

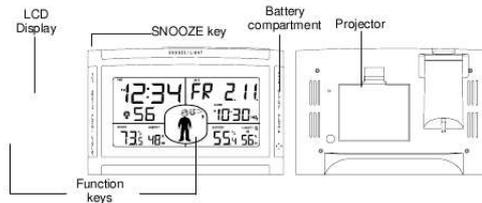

- WWVB Radio-controlled time with manual setting option
- Time reception ON/OFF (user selectable)
- 12/24-hour time display
- DST ON/OFF (daylight saving time)
- Time zone option ± 12 hours
- Month, date, weekday calendar display
- Alarm setting with snooze function
- Automatic daylight saving time updating
- Weather forecasting with 24 combinations of weather icons and "weather boy" images
- Weather tendency indicator
- Temperature display with MIN/MAX records and time of reception
- Indoor and outdoor temperature display in $^{\circ}$ F/ $^{\circ}$ C
- Humidity data with MIN/MAX records
- Indoor and outdoor humidity display as RH%



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9520U user guide](http://yourpdfguides.com/dref/1296588)
<http://yourpdfguides.com/dref/1296588>

Manual abstract:

@@@back light Low battery indicator Table standing AC/DC power adapter included The Remote Temperature/Humidity Sensor Table stand/wall mount bracket . . . Remote transmission of outdoor temperature and humidity to weather projection station by 433 MHz Rain proof casing Wall mounting case LCD display of temperature and humidity readings The weather projection station uses 3 AA batteries. To install and replace the batteries, please follow the steps below: 1. Push down on the top center of the battery cover and pull away from the unit to remove the cover. 2. Insert batteries observing the correct polarity (see marking). 3. Replace compartment cover. TO INSTALL AND REPLACE BATTERIES IN THE WEATHER PROJECTION STATION TO INSTALL AND REPLACE BATTERIES IN THE REMOTE TEMPERATURE/HUMIDITY SENSOR The remote temperature/humidity sensor uses 2 AA batteries. To install and replace the batteries, please follow the steps below: 1. Remove the battery cover.

2. Insert the batteries, observing the correct polarity (see marking). 3. Replace the battery cover on the unit. Note: In the event of changing batteries in any of the units, all units need to be reset by following the set-up procedures.

This is due to a random security code assigned by the remote temperature/humidity sensor at start-up. This code must be received and stored by the weather projection station in the first 3 minutes of power being supplied to the remote temperature/humidity sensor. 2 BATTERY CHANGE: It is recommended to replace the batteries in all units on an annual basis to ensure optimum accuracy of these units. Please participate in the preservation of the environment. Return used batteries to an authorized depot.

SETTING UP The weather projection station can be either batteries-operated or powered by the provided AC adapter. BATTERY INSTALLATION: 1. First, insert the batteries into the weather projection station (see "To install and replace batteries in the weather projection station"). Once the batteries are in place, all segments of the LCD will light up briefly and a short signal tone will sound. Then the ALM1 6:00, the indoor temperature and humidity, the time as 12:00, the date as WE 1.1. and the weather icons will be displayed. If the indoor temperature and indoor humidity are not displayed after 15 seconds, remove the batteries and wait for at least 3 minutes before reinserting them. Once the indoor data is displayed proceed to step 2. Within 4 minutes of activating the weather projection station, place the batteries into the remote temperature/humidity sensor (see "To install and replace batteries in the remote temperature/humidity sensor").

After inserting the batteries into the remote temperature/humidity sensor, the weather projection station will start receiving data from the remote temperature/humidity sensor. The outdoor temperature and humidity should then be displayed on the weather projection station. If this does not happen after 3 minutes, the batteries will need to be removed from both units and reset from step 1. The weather projection station can receive up to 3 remote temperature/humidity sensors. If you have purchased additional remote temperature/humidity sensors, repeat from step 3 for all extra remote temperature/humidity sensors. However, ensure that you leave 10 seconds in between the reception of the last remote temperature/humidity sensor and the set-up of the following remote temperature/humidity sensor. The weather projection station will number the remote temperature/humidity sensors in the order of set-up, i.e. the first remote temperature/humidity sensor will have the temperature/humidity displayed with the number 1 against it and so on. With less than 3 remote temperature/humidity sensor received, the weather projection station will try to pick up the remaining one in approximately another 3 minutes.

If 3 remote temperature/humidity sensors are received, the weather projection station will stop further reception. Once the outdoor temperature and the humidity have been received and displayed on the weather projection station, the WWVB time code reception is automatically started. This takes typically between 6-8 minutes in good conditions. If after 10 minutes, the WWVB time has not been received, use the SET key to manually enter a time initially. The clock will automatically attempt to receive the WWVB time from 12:00 to 6:00 a.m. for a successful reception. When WWVB reception signal is successful, the received time will override the manually set time. The date is also updated with the received time. The next reception attempt will occur on the following day.

(Please refer to notes on "About WWVB Radio controlled Time" and "Manual Time Setting"). 2. 3. 4. 5. 6. 7. Your weather projection station is now operational! Note: If the batteries are used as the main power source: 1. Projected image brightness, alarm volume and back-light strength will be weaker when batteries are low 2. Battery life time will be much less than 1 year; depending on the frequency of projection and alarm.

3 TO USE THE WEATHER PROJECTION STATION POWER ADAPTER The unit comes with an AC adapter for using the projector for an extended period of time, such as throughout the night. To connect the AC adapter: Important! Make sure that your household voltage is 120V! Otherwise it can result in damaging your weather projection station. 1. Connect the AC adapter to a wall socket. Plug the adapter into the jack on the back of the weather projection station. All segments of the LCD will light up briefly and a short signal tone will sound. Then the ALM 1 6:00, the indoor temperature and humidity, the time as 12:00, the date as WE 1.1 and the weather icons will be displayed. If the indoor temperature and indoor humidity are not displayed after 15 seconds, remove the batteries and wait for at least 3 minutes before reinserting them. 2.

Within 4 minutes of activating the weather projection station, place the batteries into the remote temperature/humidity sensor (see "To install and replace batteries in the remote temperature/humidity sensor"). 3. After inserting the batteries into the remote temperature/humidity sensor, the weather projection station will start receiving data from the remote temperature/humidity sensor. The outdoor temperature and humidity should then be displayed on the weather projection station. If this does not happen after 3 minutes, the batteries will need to be removed from both units and reset from step 1.

4. The weather projection station can receive up to 3 remote temperature/humidity sensors. If you have purchased additional remote temperature/humidity sensors, repeat from step 3 for all extra remote temperature/humidity sensors. However, ensure that you leave 10 seconds in between the reception of the last remote temperature/humidity sensor and the set-up of the following remote temperature/humidity sensor. The weather projection station will number the remote temperature/humidity sensors in the order of set-up, i.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9520U user guide](http://yourpdfguides.com/dref/1296588)
<http://yourpdfguides.com/dref/1296588>

e. the first remote temperature/humidity sensor will have the temperature/humidity displayed with the number 1 against it and so on. 5. With less than 3 remote temperature/humidity sensors received, the weather projection station will try to pick up the remaining one in approximately another 3 minutes. If 3 remote temperature/humidity sensors are received, the weather projection station will stop further reception. 6. Once the outdoor temperature and the humidity have been received and displayed on the weather projection station, the WWVB time code reception is automatically started. This takes typically between 6-8 minutes in good conditions. 7. If after 10 minutes, the WWVB time has not been received, use the SET key to manually enter a time initially.

The clock will automatically attempt to receive the WWVB time from 12:00 to 6:00 a.m. for a successful reception. When WWVB reception signal is successful, the received time will override the manually set time. The date is also updated with the received time. The next reception attempt will occur on the following day. (Please refer to notes on "About WWVB Radio controlled Time" and "Manual Time Setting"). Your weather projection station is now operational! 4 Note: If the weather projection station is powered through the AC adapter, the projection will be constantly ON. If the weather projection station is battery operated the projection will turn ON only when the SNOOZE key is pressed. Once the SNOOZE key is released, the projection and E.

L. backlight will stay on for approximately 10 seconds. USING BOTH BATTERIES AND THE POWER ADAPTOR When using both the AC adaptor and batteries the main power source of the weather projection station will switch to AC power. The batteries will then act as a backup power source in the case of power failure. **RESETTING** The weather projection station and the remote temperature/humidity sensor need to be reset when one of the following conditions occur: · Unsuccessful 433MHz signal reception.

· Malfunction of the units. · Batteries need replacement. For resetting, remove all batteries from the units and unplug the AC adapter from the power source. Wait at least for 3 minutes before powering up the weather projection station again. Proceed from step 1 in "Setting Up", "Battery Installation" or "How to use the Projection Station Power Adaptor".

HOW TO USE THE PROJECTOR The projector projects the current time and the current outdoor temperature onto the ceiling, only within a darkened room. The projection image can also be adjusted in 4 upright positions, each with a rotation of 90° by using the key. **TO PROJECT THE TIME OR TEMPERATURE ONTO A FLAT SURFACE:** The projector will only project the current time, outdoor temperature or alternate between time/outdoor temperature only. 1. Point the projection lens to the appropriate direction (ideal distance of the projection is 6 feet/2 meters). 2. Press the DISPLAY key to select the desired mode for the projection. There are 3 display modes: M0 projecting the current time only. M1 projecting the current outdoor temperature only. 3.

M2 projecting by switching the display of the current time and the current outdoor temperature for every 5 seconds. Adjust the projection image in an upright position with the key. Note: If more than one remote temperature/humidity sensor is used, only the temperature from remote temperature/humidity sensor 1 will be projected. **ABOUT WWVB RADIO CONTROLLED TIME** The NIST (National Institute of Standards and Technology--Time and Frequency Division) WWVB radio station is located in Ft. Collins, Colorado, and transmits the exact time signal continuously throughout the United States at 60 kHz. The signal can be received up to 2,000 miles away through the internal antenna in and outdoor data. WWVB Signal Reception Icon Time Display Calendar display Alarm

time Alarm icon Outdoor data signal reception indicator Outdoor Indoor Outdoor Outdoor transmitter Indoor Weather Weather temperature relative forecast tendency temperature relative identification humidity icon in °F/ °C humidity number in °F/ °C indicator in RH% in RH% **MANUAL SETTINGS:** The following manual settings can be changed after entering the manual set-up mode: · LCD contrast setting · Time zone setting · DST (Daylight Saving Time) setting · Time reception ON/OFF setting · 12/24-Hour setting · Manual time setting · Calendar setting · Snooze setting · °F/°C setting · Weather forecasting icon sensitivity setting **LCD CONTRAST SETTING:** Last digit flashing The LCD contrast can be set within 8 levels, from LCD 0 to LCD7 (Default setting is LCD 5): 1. Press

and hold the SET key until the digit starts flashing. 2. Use the CH/+ key to view all levels of contrast. 3. Select the desired LCD contrast. Confirm with the SET key and enter in the Time Zone setting. **TIME ZONE SETTING:** Number Digit Flashing 8 The time zone default of the weather projection station is EST 5. To set a different time zone: 1. The current time zone value starts flashing. 2. Use the CH/+ key to set the time zone. The range runs from 0 to -12 and then runs from +12 back to 0 in consecutive 1-hour intervals. The U.

S. time zones are 5hr(EST), -6hr(CST), -7hr(MST) and 8hr(PST) zones. 3. Confirm with the SET key and enter the DST (Daylight Saving Time) setting. **DST (DAYLIGHT SAVING TIME) SETTING:** Flashing Note: The DST default is "ON", meaning that the received time will automatically be adjusted according to Daylight Saving Time in the spring and fall. For areas that do not recognize DST changes (Arizona and parts of Indiana) turn the DST "OFF". 1. The digit "ON" will start flashing on the LCD. 2. Use the CH/+ key to turn OFF the DST function.

3. Confirm with the SET key and enter the Time Reception ON/OFF setting. **TIME RECEPTION ON/OFF SETTING:** Digits flashing In area where reception of the WWVB time is not possible, the WWVB time reception function can be turned OFF. The clock will then work as a normal Quartz clock. (Default setting is ON). 1. The digit "ON" will start flashing on the LCD. 2. Use the CH/+ key to turn OFF the time reception function. 3.

Confirm with the SET key and enter the 12/24-HOUR setting. Note: If the Time Reception function is turned OFF manually, the clock will not attempt any reception of the WWVB time as long as the Time Reception OFF function is activated. The Time Reception and the "WWVB" icons will not be displayed on the LCD. **12/24-HOUR SETTING:** Flashing The hour display can be selected to show hours in 12-hour or 24-hour settings. (Default 12-Hour) 1. Use the CH/+ key to toggle between "12H" or "24H". 2. Confirm with the SET key and enter the Manual time setting. **MANUAL TIME SETTING:** In case the weather projection station cannot detect the WWVB-signal (for example due to disturbances, transmitting distance, etc.

3. Confirm with the SET key and enter the Time Reception ON/OFF setting. **TIME RECEPTION ON/OFF SETTING:** Digits flashing In area where reception of the WWVB time is not possible, the WWVB time reception function can be turned OFF. The clock will then work as a normal Quartz clock. (Default setting is ON). 1. The digit "ON" will start flashing on the LCD. 2. Use the CH/+ key to turn OFF the time reception function. 3.

Confirm with the SET key and enter the 12/24-HOUR setting. Note: If the Time Reception function is turned OFF manually, the clock will not attempt any reception of the WWVB time as long as the Time Reception OFF function is activated. The Time Reception and the "WWVB" icons will not be displayed on the LCD. **12/24-HOUR SETTING:** Flashing The hour display can be selected to show hours in 12-hour or 24-hour settings. (Default 12-Hour) 1. Use the CH/+ key to toggle between "12H" or "24H". 2. Confirm with the SET key and enter the Manual time setting. **MANUAL TIME SETTING:** In case the weather projection station cannot detect the WWVB-signal (for example due to disturbances, transmitting distance, etc.

3. Confirm with the SET key and enter the Time Reception ON/OFF setting. **TIME RECEPTION ON/OFF SETTING:** Digits flashing In area where reception of the WWVB time is not possible, the WWVB time reception function can be turned OFF. The clock will then work as a normal Quartz clock. (Default setting is ON). 1. The digit "ON" will start flashing on the LCD. 2. Use the CH/+ key to turn OFF the time reception function. 3.

Confirm with the SET key and enter the 12/24-HOUR setting. Note: If the Time Reception function is turned OFF manually, the clock will not attempt any reception of the WWVB time as long as the Time Reception OFF function is activated. The Time Reception and the "WWVB" icons will not be displayed on the LCD. **12/24-HOUR SETTING:** Flashing The hour display can be selected to show hours in 12-hour or 24-hour settings. (Default 12-Hour) 1. Use the CH/+ key to toggle between "12H" or "24H". 2. Confirm with the SET key and enter the Manual time setting. **MANUAL TIME SETTING:** In case the weather projection station cannot detect the WWVB-signal (for example due to disturbances, transmitting distance, etc.

3. Confirm with the SET key and enter the Time Reception ON/OFF setting. **TIME RECEPTION ON/OFF SETTING:** Digits flashing In area where reception of the WWVB time is not possible, the WWVB time reception function can be turned OFF. The clock will then work as a normal Quartz clock. (Default setting is ON). 1. The digit "ON" will start flashing on the LCD. 2. Use the CH/+ key to turn OFF the time reception function. 3.

Confirm with the SET key and enter the 12/24-HOUR setting. Note: If the Time Reception function is turned OFF manually, the clock will not attempt any reception of the WWVB time as long as the Time Reception OFF function is activated. The Time Reception and the "WWVB" icons will not be displayed on the LCD. **12/24-HOUR SETTING:** Flashing The hour display can be selected to show hours in 12-hour or 24-hour settings. (Default 12-Hour) 1. Use the CH/+ key to toggle between "12H" or "24H". 2. Confirm with the SET key and enter the Manual time setting. **MANUAL TIME SETTING:** In case the weather projection station cannot detect the WWVB-signal (for example due to disturbances, transmitting distance, etc.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9520U user guide](http://yourpdfguides.com/dref/1296588)
<http://yourpdfguides.com/dref/1296588>

), the time can be manually set.

@@2. 3. 4. 5. The hour digit will start flashing. Use the CH/+ key to set the hour. Press again the SET key to set the minutes. The minute digits start flashing. Use the CH/+ key to set the minutes. @@@@ During reception attempts the WWVB tower icon will flash.

@@1. in the year 2003. @@@@1. The year starts flashing. 2. Use the CH/+ key to set the year (between year 2003-2029). 3. Press the SET key again to confirm and to enter the month setting. The month starts flashing. 4.

Use the CH/+ key to set the month. 5. @@The date starts flashing. 6. Use the CH/+ key to set the date.

7. @@Use the CH/+ key to set the snooze time. Each pressing of the key will increase the snooze time by 5 minutes. @@2. @@1.

@@2. @@1. The current sensitivity value will start flashing. 2. Use the CH/+ key to set the weather sensitivity level. @@3. @@1. Press the ALARM 1 or ALARM 2 key until the alarm digits flash. 2. Use the HOUR/IN key to set the alarm hour.

3. Use the MIN/OUT key to set the alarm minute. 4. @@Note: The maximum alarm ring duration is 2 minutes. @@@@ Otherwise the snooze function will not be activated. @@@@ Or press and hold the SNOOZE key for 2 seconds (a beep sound can be heard). WEATHER FORECAST AND WEATHER TENDENCY INDICATOR: Weather forecast icon Weather tendency indicator Weather Boy icon WEATHER FORECAST ICONS The weather forecast can be displayed as follows: Sunny Cloudy Rainy For every sudden or significant change in the air pressure, the weather icons will update accordingly to represent the change in weather. If the icons do not change, then it means either the air pressure has not changed or the change has been too slow for the weather projection station to register. However, if the icon displayed is a sun or raining cloud, there will be no change of icon if the weather gets any better (with sunny icon) or worse (with rainy icon) since the icons are already at their extremes. The icons displayed forecasts the weather in terms of getting better or worse and not necessarily sunny or rainy as each icon indicates.

For example, if the current weather is cloudy and the rainy icon is displayed, it does not mean that the product is faulty because it is not raining. It simply means that the air pressure has dropped and the weather is expected to get worse but not necessarily rainy. Note: After setting up, readings for weather forecasts should be disregarded for the next 12-24 hours. This will allow sufficient time for the weather projection station to collect air pressure data at a constant altitude and therefore result in a more accurate forecast. Common to weather forecasting, absolute accuracy cannot be guaranteed.

The weather forecasting feature is estimated to have an accuracy level of about 75% due to the varying areas the weather projection station has been designed for use. In areas that experience sudden changes in weather (for example from sunny to rain), the weather projection station will be more accurate compared to use in areas where the weather is stagnant most of the time (for example mostly sunny). If the weather projection station is moved to another location significantly higher or lower than its initial standing point (for example from the ground floor to the upper floors of a house), discard the weather forecast for the next 12-24 hours. By doing this, the weather projection station will not mistake the new location as being a possible change in air-pressure when really it is due to the slight change of altitude. 12 WEATHER TENDENCY INDICATOR Working together with the weather icons is the weather tendency indicators (located on the right side of the weather icons).

When the indicator points upwards, it means that the air-pressure is increasing and the weather is expected to improve, but when indicator points downwards, the air-pressure is dropping and the weather is expected to become worse. Taking this into account, one can see how the weather has changed and is expected to change. For example, if the indicator is pointing downwards together with cloud and sun icons, then the last noticeable change in the weather was when it was sunny (the sun icon only). Therefore, the next change in the weather will be cloud with rain icons since the indicator is pointing downwards. Note: Once the weather tendency indicator has registered a change in air pressure, it will remain permanently visualized on the LCD. WEATHER BOY FORECASTING

ICONS: A total of 24 Weather Boy icons combinations can be displayed depending on outdoor temperature and air pressure recorded from outdoor transmitter 1 only. Once the temperature and air pressure are recorded, the weather station automatically display the appropriate Weather Boy icon as an indication of current weather and suggestion for dressing up accordingly. The icon will remain permanently visualized on the LCD once it registered a change in temperature and air pressure. For additional details on the Weather Boy icons, please refer to the additional information sheet "WEATHER FORECAST ICONS COMBINATIONS". INDOOR RELATIVE HUMIDITY AND INDOOR TEMPERATURE: The indoor temperature and humidity data, the indoor comfort indicator are automatically updated and displayed on the fourth section of the LCD.

Indoor temperature in °F or °C Indoor relative humidity in RH% TOGGING AND RESETTING THE INDOOR READINGS: 1. Press the HOUR/IN key to toggle between the indoor current, MIN/MAX temperature and humidity data. The time and dates of the recorded data will also be displayed in the time and calendar sections (for temperature data only). To reset the MIN/MAX data, press and hold the HOUR/IN key for about 4 seconds. This will reset all recorded indoor data to the current temperature and humidity readings. 2. OUTDOOR RELATIVE HUMIDITY AND OUTDOOR TEMPERATURE The last LCD section shows the outdoor temperature and humidity, the reception indicator, the MIN/MAX outdoor data. A number in the center will also be shown if more than one transmitter has been used. 13 Outdoor reception indicator Transmitter identification number (only if there is more than one transmitter) Outdoor relative humidity in RH% Outdoor temperature in °F/ °C TOGGING AND RESETTING THE OUTDOOR RECORDINGS: To toggle between the outdoor current, MIN/MAX temperature and humidity data and the times (for temperature data only) that were recorded press the MIN/OUT key: Once to show the MAX outdoor temperature and humidity data with the recorded time and date. Twice to show the MIN outdoor temperature and humidity data with the recorded time and date.

Three times to return to the current displayed values. 2. To toggle between transmitters, press the CH/+ key: Once to show transmitter 2 Twice to show transmitter 3 Three times to return to transmitter 1 Note: The transmitter number will only be displayed if there is more than one transmitter being used. 3. To reset the MIN/MAX outdoor temperature, and the time at which they were recorded, press and hold the MIN/OUT key for about 4 seconds.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9520U user guide](http://yourpdfguides.com/dref/1296588)
<http://yourpdfguides.com/dref/1296588>

This will reset all MIN/MAX data recorded to the displayed values for that particular transmitter. 1. TO EXIT THE MANUAL SETTING MODE To exit the manual setting mode anytime during the manual setting modes, press the SNOOZE key anytime or wait for automatic timeout. The mode will return to normal time display. E.

L. BACK-LIGHT The back-light is automatically switched ON when any keys are pressed. The back-light will be switched on for approximately 10 seconds before automatically switching OFF. However, if the SNOOZE key is pressed and held down, then back-light will remain ON constantly until the key is released. ABOUT THE OUTDOOR REMOTE TEMPERATURE/HUMIDITY SENSOR The range of the remote temperature/humidity sensor may be affected by the temperature. At cold temperatures the transmitting distance may be decreased. Please bear this in mind when positioning the sensor. The battery life may be reduced as well at cold temperatures. CHECKING FOR 433MHz RECEPTION If the outdoor temperature and humidity data is not being received within three minutes after setting up (the display shows "- - °F" and "- -%" on the outdoor section of the weather projection station after 3 attempts during normal operation), please check the following items: 1.

The distance of the weather projection station or remote temperature/humidity sensor should be at least 6 feet (2 meters) away from any interfering sources such as computer monitors or TV sets. 2. Avoid placing the remote temperature/humidity sensor onto or in the immediate proximity of metal window frames. 3. Using other electrical products such as headphones or speakers operating on the 433MHz-signal frequency may prevent correct signal transmission or reception. Neighbors using electrical devices operating on the 433MHz-signal frequency can also cause interference. 14 Note: When the 433 MHz-signal is received correctly, do not re-open the battery cover of either the remote temperature/humidity sensor or weather projection station, as the batteries may spring free from the contacts and force a false reset. Should this happen accidentally then reset all units (see "Setting up" above) otherwise transmission problems may occur. The transmission range is approximately 330 feet (100 meters) from the remote temperature/humidity sensor to the weather projection station (in open space). However, this depends on the surrounding environment and interference levels.

If no reception is possible despite the observation of these factors, all system units have to be reset (see "Setting up" above). POSITIONING THE REMOTE TEMPERATURE/HUMIDITY SENSOR: Each transmitter is supplied with 2 wall mounting screws and plastic anchors. To wall mount simply: 1. 2. Secure the wall base onto a desired wall using the screws and plastic anchors.

Insert the transmitter to the wall base. Table stand/wall mount bracket Note: Before permanently fixing the transmitter wall base, place all units in the desired locations to check that the outdoor temperature and humidity readings are receivable. In event that the signal is not received, relocate the transmitters or move them slightly as this may help the signal reception. CARE AND MAINTENANCE: Extreme temperatures, vibration and shock should be avoided as these may cause damage to the units and give inaccurate forecasts and readings. When cleaning the display and casings, use a soft damp cloth only.

Do not use solvents or scouring agents as they may mark the LCD and casings. Do not submerge the units in water. Immediately remove all low powered batteries to avoid leakage and damage. Replace only with new batteries of the recommended type. Do make any repair attempts to the units. Return it to their original point of purchase for repair by a qualified engineer. Opening and tampering with the units may invalidate their guarantee. Do not expose the units to extreme and sudden temperature changes, this may lead to rapid changes in forecasts and readings and thereby reduce their accuracy. SPECIFICATIONS:

Temperature measuring range: Indoor : +14.2°F to +139.

8°F with 0.2°F resolution -9.9°C to +59.9°C with 0.1°C resolution ("OFL" displayed if outside this range) -21.8°F to +157.8°F with 0.2°F resolution -29.9°C to +69.9°C with 0.

1°C resolution ("OFL" displayed if outside this range) Outdoor : 15 Relative humidity measuring range: Indoor and outdoor : 1% to 99% with 1% resolution ("- -" displayed if outside this range) Indoor temperature checking interval : every 15 seconds Indoor humidity checking interval : every 20 seconds Outdoor temperature reception : every 5 minutes Transmitter checking interval : every 1 minute Power supply: Weather projection station : 3 x AA, 1.5V Remote temperature/humidity sensor : 2 x AA, 1.5V Battery life cycle : approximately 12 months, less if the projection is used frequently) (Alkaline batteries recommended) Dimensions (H x W x D) Weather projection station : 4.33 x 6.67 x 2.92 inches (110.2 x 169.6 x 74.4 mm) Remote temperature/humidity sensor : 6.29 x 1.

69 x 0.90 inches (160 x 43 x 23 mm) LIABILITY DISCLAIMER The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place. This product is not to be used for medical purposes or for public information. This product is only designed to be used in the home as indication of the future weather and is not 100% accurate. @@The specifications of this product may change without prior notice. This product is not a toy. Keep out of the reach of children. @@@@Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center. La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above.

All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need or repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center. La Crosse Technology, Ltd will pay ground return shipping charges to the owner of the product to a USA address only.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9520U user guide](http://yourpdfguides.com/dref/1296588)
<http://yourpdfguides.com/dref/1296588>

16 Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances. LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH. This warranty gives you specific legal rights. You may also have other rights specific to your State.

Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you. For warranty work, technical support, or information contact: La Crosse Technology 2809 Losey Blvd. S. La Crosse, WI 54601 Phone: 608.782.

1610 Fax: 608.796.1020 e-mail: support@lacrossetechnology.com (warranty work) sales@lacrossetechnology.com (information on other products) web: www.lacrossetechnology.com Questions? Instructions? Please visit: www.lacrossetechnology.com/9520 All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences. All trademarks and patents are acknowledged. 17 FCC ID: OMO-01RX (receiver), OMO-01TX (transmitter) THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: 1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND 2. THIS DEVICE MUST ACCEPT INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. 18.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9520U user guide](http://yourpdfguides.com/dref/1296588)
<http://yourpdfguides.com/dref/1296588>