




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LA CROSSE TECHNOLOGY WT480. You'll find the answers to all your questions on the LA CROSSE TECHNOLOGY WT480 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LA CROSSE TECHNOLOGY WT480
User guide LA CROSSE TECHNOLOGY WT480
Operating instructions LA CROSSE TECHNOLOGY WT480
Instructions for use LA CROSSE TECHNOLOGY WT480
Instruction manual LA CROSSE TECHNOLOGY WT480

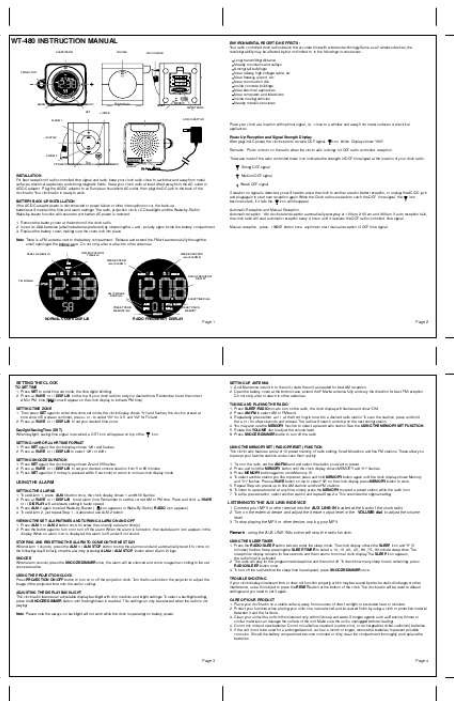

[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WT480 user guide](http://yourpdfguides.com/dref/3678219)
<http://yourpdfguides.com/dref/3678219>

Manual abstract:

Same as all wireless devices, the our receiving ability may be affected by, but not limited to, to the following circumstances : Long transmitting distance Nearby mountains and valleys Among tall buildings Near railway, high voltage cable, etc Near freeway, airport, etc Near construction site Inside concrete buildings Near electrical appliances Near computers and televisions Inside moving vehicles Nearby metallic structures FM ANTENNA PROJECTOR AM/FM Front MEMORY SET + / WAVE Right Side RESET Bottom ALARM 1 AC/DC ADAPTOR Place your clock at a location with optimal signal, i.e. : close to a window and away from metal surfaces or electrical appliances. - / DISPLAY Power Up Reception and Signal Strength Display After plug in AC power, the clock starts to receive DCF signal. Icon blinks. Display shows "0:00". Remarks : Pls do not turn on the radio when the clock radio is doing 1st DCF radio controlled reception. ALARM 2 The wave mark of the radio controlled tower icon indicates the strength of DCF time signal at the location of your clock radio : PROJECTION ON/OFF Top SNOOZE/DIMMER AUX LINE-IN Back DC Plug-in JACK Strong DCF signal Medium DCF signal Weak DCF signal If weak or no signal is detected, you will need to place the clock to another area for better reception, or unplug the AC/DC jack and plug again to start over reception again. When the Clock radio succeeds to catch the DCF time signal, the icon becomes static, if it fails the icon will disappear. Automatic Reception and

Manual Reception Automatic reception : this clock starts reception automatically everyday at 1:00am, 2:00 am and 3:00am.

If auto reception fails, the clock radio will start automatic reception every 3 hours until it receives the DCF radio controlled time signal. Manual reception : press - / WAVE button once anytime to start manual reception of DCF time signal. INSTALLATION For best reception of radio controlled time signal and radio, keep your clock radio close to a window and away from metal surfaces, electrical appliances and strong magnetic fields. Keep your clock radio at least 3 feet away from the AC outlet or AC/DC adaptor. Plug the AC/DC adaptor to an European household AC outlet, then plug the DC jack to the back of the clock radio.

Y clock radio is ready to work. our BATTERY BACK-UP INSTALLATION If the AC/DC adaptor power is disconnected or power failure or other interruptions occur, the back-up batteries will maintain the time and alarm settings. @@1. Remove the battery cover at the bottom of the clock radio. 2.

@@3. Replace the battery cover, making sure the cover lock into place. Note: There is a FM antenna next to the battery compartment. @@Do not strip, alter or attach to other antennas. SNOOZE Radio controlled icon DAYLIGHT-SAVING TIME icon WAKE-BY -RADIO icon (ALARM 1) WAKE-BY -BUZZER icon (ALARM 2) PM indicator RADIO FREQUENCY DISPLAY AM / FM Radio BAND icon SLEEP TIMER icon PRESET RADIO MEMORY icon PRESET RADIO MEMORY NORMAL CLOCK DISPLAY RADIO FREQUENCY DISPLAY Page 1 Page 2 SETTING THE CLOCK TO SET TIME 1. Press SET to enter time set mode, the time digits blinking. 2. Press + / WAVE or - / DISPLA on the top of your clock radio to set your desired time. Remember to set the correct Y AM or PM time (PM icon will appear on the clock display to indicate PM time). PM SETTING TIME ZONE 1.

Then press SET again to enter time zone set mode, the clock display shows "01" and flashes, the clock is preset at time zone of European continent, press + or - to select "00" for U.K. and "02" for Finland. 2. Press + / WAVE or - / DISPLA to set your desired time zone Y Daylight-Saving Time (DST) When daylight saving time signal is received, a DST icon will appear on top of the SETTING 12HR OR 24 HR TIME FORMAT 1. Press SET again, the clock display shows 12Hr and flashes. 2. Press + / WAVE or - / DISPLA to select 12Hr or 24Hr. Y SETTING SNOOZE DURATION 1. Press SET again, the clock display shows Zz and 05 flashes.

2. Press + / WAVE or - / DISPLA to set your desired snooze duration from 5 to 60 minutes. Y 3. Press SET again (or if no key is pressed within 5 seconds) to return to normal clock display mode. SETTING UP ANTENNA 1.

An AM antenna is built-in to the unit; rotate the unit as needed for best AM reception. 2. Open the battery cover at the bottom case, extend the FM wire antenna fully and vary the direction for best FM reception. Do not strip, alter or attach to other antennas. TUNING AND PLAYING THE RADIO 1. Press SLEEP/RADIO once to turn on the radio, the clock display will flashes and show "ON". 2. Press AM/FM to select AM or FM band. 3. Repeatedly press either + or - at the front ring to tune into a desired radio station. T scan the stations, press and hold o the + or - for a few seconds and release. The radio will search and stop on the next strong station. 4. Y may also use the MEMORY function to select a preset radio station. See the USING THE MEMORY SET FUNCTION.

ou 5. Rotate the VOLUME dial to adjust the volume level. 6. @@@@1. 2. 3. 4. @@@@Press MEMORY button again to store Memory 01. @@@@5.

Repeat Step 4 to preset up to five AM stations and five FM stations.

6. @@o 7. T edit a preset station, select another station and repeat Step 2-4. This overrides the original setting. o USING THE ALARM SETTING THE ALARMS 1.

@@o 2. Press + / WAVE or - / DISPLA to set alarm time. Remember to set the correct AM or PM time. @@Y 3. @@T set Alarm 2, just repeat Step 1 - 3 above but use ALM 2 button.

o VIEWING THE SET ALARM TIMES AND TURNING ALARM ON AND OFF 1. @@2. Press the button again to turn on or turn off the alarm. @@When no alarm icon is displayed, the alarm is off and will not sound. @@@@To select a backlight setting, press the SNOOZE/DIMMER button until the brightness is reached. This setting can only be selected when the radio is not playing. Note: Please note the always-on backlight will not work while the clock is operating on battery power. LISTENING TO THE AUX LINE-IN DEVICE 1. Connect your MP3 or other device into the AUX LINE-IN located at the back of the clock radio. 2.

Turn on the external device and adjust the device output level or the VOLUME dial to adjust the volume level. 3. T stop playing the MP3 or other device, unplug your MP3. o Remark : using the AUX LINE-IN function will stop the radio function. USING THE SLEEP TIMER 1. Press the RADIO/SLEEP button twice to enter the sleep mode. The clock display shows the SLEEP icon and "5" (5 minutes) flashes. Keep pressing the SLEEP/TIMER to select a 10-, 15-, 30-, 45-, 60-, 75-, 90-minute sleep timer. The sleep timer display remains for few seconds and then returns to normal clock display. The SLEEP icon appears, the radio timer is activated.

2. The radio will play for the programmed sleep time and then shut off. T check how many sleep time is remaining, press o RADIO/SLEEP button once. 3. T turn off the radio before the sleep time has elapsed, press SNOOZE/DIMMER once.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WT480 user guide](http://yourpdfguides.com/dref/3678219)
<http://yourpdfguides.com/dref/3678219>

o TROUBLE SHOOTING If your clock displays irrelevant time or does not function properly, which maybe caused by electro-static discharge or other interference, use a thin object to press the RESET button at the bottom of the clock. @@CARE OF YOUR PRODUCT 1. @@2. @@3. Clean your unit with a soft cloth moistened only with mild soap and water.

Stronger agents such as Benzine, thinner or similar materials can damage the surface of the unit. Make sure the unit is unplugged before cleaning. 4. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadimium) batteries. 5. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries. Page 3 Page 4 .



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WT480 user guide](http://yourpdfguides.com/dref/3678219)
<http://yourpdfguides.com/dref/3678219>