



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LEXMARK X2670. You'll find the answers to all your questions on the LEXMARK X2670 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LEXMARK X2670
User guide LEXMARK X2670
Operating instructions LEXMARK X2670
Instructions for use LEXMARK X2670
Instruction manual LEXMARK X2670

LEXMARK
2600 Series User's Guide

January 2009

www.lexmark.com

Machine type(s):
4433, 4445
Model(s):
Various, xxx, where "x" is any alphanumeric character



[You're reading an excerpt. Click here to read official LEXMARK X2670 user guide](http://yourpdfguides.com/dref/2385674)
<http://yourpdfguides.com/dref/2385674>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 29 Printing multiple pages on one sheet (N-Up).....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 29 Pausing print jobs.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 30 Canceling print jobs..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

@@@@@@@34 Contents 2 Printing on custom-size paper.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 35 Printing other specialty documents ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....

.....
... 36 Saving and deleting print settings..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.36 Copying.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....38 Making a copy...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
...38 Copying 4 x 6 photos..

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.38 Scanning....

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....39 Scanning original documents.

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....39 Canceling scan jobs....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....39 Faxing...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....41 Sending a fax.

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....

.....41 Receiving a fax automatically..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....41 Maintaining the printer....

.....
.....
.....
.....

.....
.....
.....
.....

...43 Maintaining print cartridges.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...43 Installing print cartridges.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

43 Removing a used print cartridge

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 44 Refilling print cartridges.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....

.....
.....
.....
.....

. 45 Using genuine Lexmark print cartridges.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 45 Cleaning the print cartridge nozzles.

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 46 Wiping the print cartridge nozzles and contacts

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.. 46 Preserving the print cartridges ...
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
... 47 Cleaning the scanner glass..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....47 Cleaning the exterior of the printer.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

.....
.47 Ordering supplies...

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.48 Ordering print cartridges

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 48 Ordering paper and other supplies..

.....
.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 48 Recycling Lexmark products....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....49 Troubleshooting.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

....50 Using the printer troubleshooting software (Windows only).....

.....

.....

.....

.....

.....

.....

.....

.....

.50 Setup troubleshooting...

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.50 Power button is not lit

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 50 Software did not install.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....

.....

.....

.....

.....

.... *51 Page does not print.....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. *52 Removing and reinstalling the software*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

54 Enabling the USB port in Windows

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....

.....
.....

... 55 Solving printer power problems ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

. 56 Contents 3 Notices....

.....
.....

.....
.....
.....

.....
.....
.....

.....

..57 Product information...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..57 Edition notice.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

57 Power consumption.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

60 Index.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....73 Contents 4 Safety information Use only the power supply and power supply cord provided with this product or the manufacturer's authorized replacement power supply and power supply cord. Connect the power supply cord to an electrical outlet that is near the product and easily accessible. CAUTION--POTENTIAL INJURY: Do not twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If the power cord is misused, a risk of fire or electrical shock results.

Inspect the power cord regularly for signs of misuse. Remove the power cord from the electrical outlet before inspecting it. Refer service or repairs, other than those described in the user documentation, to a professional service person. This product is designed, tested, and approved to meet strict global safety standards with the use of specific Lexmark components. The safety features of some parts may not al, Inc. furnishes a limited warranty, see the Statement of limited warranty that this printer will Limited Warranty included with this printer, or set forth at www.lexmark.com. be free of defects in materials and workmanship for a period of 12 1 Click SUPPORT. months after the original date of 2 Click Warranty Information. purchase. 3 Click Statement of Limited Warranty for Inkjet & All-In-One Printers. 4 Scroll through the Web page to view the warranty. Record the following information (located on the store receipt and the back of the printer), and have it ready when you contact customer support so that they may serve you faster:

Machine Type number · Serial number Introduction 7 · Date purchased · Store where purchased Introduction 8 Setting up the printer Bypassing security warnings during software installation Third-party applications, including antivirus, security, and firewall programs may alert you about the printer software being installed. For your printer to work properly, allow the printer software to be installed on your computer.

Setting up the printer as a copier only Use the following instructions if you do not want to connect the printer to a computer. Note: If you want to connect the printer to a computer, use the setup documentation and the printer software CD that came with the printer. 1 Unpack the printer. 1 Print cartridges Note: Contents, such as the number of print cartridges, may vary. 2 3 4 Power cord Printer software CD Quick Setup sheet Setting up the printer 9 2 Remove all tape and packing material from all areas of the printer.

3 Extend the paper exit tray, and then raise the paper support. 4 Extend the paper guides. 5 Connect the power cord, and then make sure the power is on. Setting up the printer 10 6 Open the printer, and then press down on the levers. 7 Remove the tape from the black cartridge, insert the cartridge in the left carrier, and then close the black cartridge carrier lid. Setting up the printer 11 8 Remove the tape from the color cartridge, insert the cartridge in the right carrier, and then close the color cartridge carrier lid. 9 Close the printer, and then load paper. 10 Press and hold the button for three seconds. Setting up the printer 12 An alignment page prints. 11 Place the printed page on the scanner glass.

12 Press the button. 13 Discard the alignment page. Setting up the printer 13 Notes: · The alignment page may differ from the one shown. · Streaks on the alignment page are normal, and do not indicate a problem. Understanding the parts of the printer Use the 1 2 3 4 5 6 7 Paper support To Load paper. Printer control panel Operate the printer. Paper exit tray Top cover Paper feed guard Paper guide Scanner glass Hold paper as it exits. Access the scanner glass. Prevent small objects from falling inside the printer. Keep paper straight when feeding.

Copy, scan, fax, or remove an item. Setting up the printer 14 Use the 1 2 3 4 5 Scanner unit Scanner support Print cartridge carrier To Access the print cartridges. Hold up the scanner unit. Install, replace, or remove a print cartridge. Power supply with port Connect the printer to a power source.

USB port Connect the printer to a computer using a USB cable. Warning--Potential Damage: Do not touch the USB port except when plugging in or removing a USB cable. Setting up the printer 15 Using the printer control Windows printer software When you set up the printer using the installation software CD, all the necessary software was installed. You may have chosen to install some additional programs. The following table provides an overview of various software programs and what they can help you do.

If you did not install these additional programs during initial installation, then reinsert the installation software CD, run the installation software, and then select Install Additional Software from the Software Already Installed screen. Note: Your printer may not come with some of these programs or some of the functions of these programs, depending on the features of the printer that you purchased. Use the Lexmark™ Productivity Studio or Lexmark FastPics To · · · · Scan, copy, fax, e-mail, or print a photo or document. Transfer photos. Make photo greeting cards. Adjust settings for the printer. Understanding the printer software 19 Use the Lexmark Fax Solutions Software To · · · · Send a fax. Receive a fax Add, edit, or delete contacts in the built-in phone book.



[You're reading an excerpt. Click here to read official LEXMARK X2670 user guide](http://yourpdfguides.com/dref/2385674)
<http://yourpdfguides.com/dref/2385674>

Access the Lexmark Fax Setup Utility. Use the Lexmark Fax Setup Utility to set the Speed Dial and Group Dial numbers, set Ringing and Answering, and print fax history and status reports.

Printing Preferences When you select File Print with a document open, a Printing Preferences dialog appears. The dialog lets you select options for the print job such as the following: Lexmark Wireless Setup Utility Select the number of copies to be printed. Print two-sided copies. Select the paper type. Add a watermark. Enhance images. Save settings. . Set up the wireless printer on a wireless network. . Change the wireless settings of the printer. Using the Macintosh printer software Use the Print dialog Printer Services dialog To Adjust the print settings and schedule print jobs.

. Access the printer utility. Troubleshoot. Order ink or supplies. Contact Lexmark. Check the printer software version installed on the computer. Applications are also installed with the printer software during installation. These applications are saved in the printer folder that appears on the Finder desktop after installation. 1 From the Finder desktop, double-click the printer folder. 2 Double-click the icon of the application that you want to use. Use the Lexmark All-In-One Center To . Scan photos and documents. . Customize settings for scan jobs. . Customize settings for fax jobs. . Create and edit the Speed Dial list. Lexmark Fax Setup Utility Understanding the printer software 20 Use the Lexmark Network Card Reader To . View the contents of a memory device inserted into a network printer. . Transfer photos and documents from a memory device to the computer over a network. Lexmark Printer Utility Get help with cartridge installation. Print a test page. Print an alignment page. Clean the print cartridge nozzles. Order ink or supplies.

Register the printer. Contact customer support. Lexmark Wireless Setup Assistant Set up the printer on a wireless network. Note: Your printer may not come with these applications, depending on the features of the printer that you purchased. Understanding the printer software 21 Loading paper and original documents Loading paper 1 Make sure: . You use paper designed for inkjet printers. . If you are using photo, glossy, or heavyweight matte paper, you load it with the glossy or printable side facing you. (If you are not sure which side is the printable side, see the instructions that came with the paper.) . The paper is not used or damaged. . If you are using specialty paper, you follow the instructions that came with it. . You do not force paper into the printer.

2 Before loading paper the first time, slide the paper guides out toward the edges of the paper support. 3 Load the paper vertically in the center of the paper support, and adjust the paper guides to rest against the edges of the paper. Note: To avoid paper jams, make sure the paper does not buckle when you adjust the paper guides. Loading various paper types Load up to 100 sheets of plain paper Make sure . The paper is designed for use with inkjet printers. . The paper is loaded in the center of the paper support.

. The paper guides rest against the edges of the paper. . The glossy or printable side of the paper faces you. (If you are not sure which side is the printable side, then see the instructions that came with the paper.) 25 sheets of heavyweight matte paper 25 sheets of photo paper 25 sheets of glossy paper . The paper is loaded in the center of the paper support. . The paper guides rest against the edges of the paper.

Note: Photos require more drying time. Remove each photo as it exits, and then allow it to dry to avoid ink smudging. Loading paper and original documents 22 Load up to 10 envelopes Make sure The print side of the envelopes faces you. The stamp location is in the upper left corner. The envelopes are designed for use with inkjet printers. The envelopes are loaded in the center of the paper support. The paper guides rest against the edges of the envelopes.

Warning--Potential Damage: Do not use envelopes that have metal clasps, string ties, or metal folding bars. Notes: Do not load envelopes with holes, perforations, cutouts, or deep embossing. Do not use envelopes that have exposed flap adhesive.

Envelopes require more drying time. Remove each envelope as it exits, and then allow it to dry to avoid ink smudging. 25 sheets of labels . The print side of the label sheets faces you. . The top of the label sheets feeds into the printer first. . The adhesive on the labels does not extend to within 1 mm of the edge of the label sheets. . You use full label sheets. Partial sheets (with areas exposed by missing labels) may cause labels to peel off during printing, resulting in a paper jam. . The label sheets are loaded in the center of the paper support. . The paper guides rest against the edges of the label sheets. Note: Labels require more drying time.

Remove each sheet of labels as it exits, and then allow it to dry to avoid ink smudging. 50 transparencies . The rough side of the transparencies faces you. . If the transparencies have a removable strip, each strip faces away from you and down toward the printer. . The transparencies are loaded in the center of the paper support. . The paper guides rest against the edges of the transparencies.

Notes: . Transparencies with paper backing sheets are not recommended. . Transparencies require more drying time. Remove each transparency as it exits, and then allow it to dry to avoid ink smudging. Loading paper and original documents 23 Load up to 10 iron-on transfers Make sure You follow the loading instructions that came with the iron-on transfers. The print side of the transfers faces you.

The transfers are loaded in the center of the paper support. The paper guides rest against the edges of the transfers. Note: For best results, load transfers one at a time. 25 greeting cards 25 index cards 25 photo cards 25 postcards . The print side of the cards faces you. . The cards are loaded in the center of the paper support. . The paper guides rest against the edges of the cards. Note: Photo cards require more drying time. Remove each photo card as it exits, and then allow it to dry to avoid ink smudging. custom-size paper . The print side of the paper faces you. . The paper size fits within these dimensions: Width: 76.

2215.9 mm 3.08.5 inches Length: 127.



[You're reading an excerpt. Click here to read official LEXMARK X2670 user guide](http://yourpdfguides.com/dref/2385674)
<http://yourpdfguides.com/dref/2385674>

0355.6 mm 5.017.0 inches · The paper is loaded in the center of the paper support. · The paper guides rest against the edges of the paper. banner paper · You remove all the paper from the paper support before loading the banner paper.

· You tear off only the number of pages needed to print the banner. · You place the required stack of banner paper behind the printer, and then feed in the first sheet. · The leading edge of the banner paper feeds into the printer first. · The paper is loaded in the center of the paper support. · The paper guides rest against the edges of the paper.

Loading paper and original documents 24 Loading original documents on the scanner glass You can scan and then print photos, text documents, magazine articles, newspapers, and other publications. You can scan a document for faxing. Note: The maximum scan area for the scanner glass is 216 x 297 mm (8.5 x 11.7 in.

). 1 Open the top cover. 2 Place the original document or item facedown on the scanner glass in the lower right corner. Note: Photos should be loaded as shown. Loading paper and original documents 25 3 Close the top cover to avoid dark edges on the scanned image. Loading paper and original documents 26 Printing Printing basic documents Printing a document 1 Load the paper. 2 Do one of the following to print: Using Windows a With a document open in a Windows program, click File Print. b Click Properties, Preferences, Options, or Setup. c Select the print quality, the number of copies to print, the type of paper to be used, and how the pages should print. d Click OK to close any printer software dialogs.

e Click OK or Print. Using Macintosh a With a document open in a Macintosh application, click File Print. b From the Printer pop-up menu, choose the printer. c From the print options pop-up menu, choose the print quality, the number of copies to print, the type of paper to be used, and how the pages should print. d Click Print. Printing Web pages If you chose to install the Lexmark Toolbar software for your Web browser, then you can use it to create a printer-friendly version of any Web page. Notes: · For Windows, the software supports Microsoft Internet Explorer 5.5 or later or a compatible version of Firefox. · For Macintosh, the software supports a compatible version of Firefox. Printing 27 1 Load paper.

2 Open a Web page using a supported browser. 3 Select a print option to print the page. You can also adjust settings or preview the page before printing. Printing multiple copies of a document Using Windows 1 With a document open, click File Print. 2 Click Properties, Preferences, Options, or Setup. 3 From the Copies section of the Print Setup tab, enter the number of copies that you want to print. 4 Click OK to close any printer software dialogs. 5 Click OK or Print. Using Macintosh 1 With a document open, click File Print. 2 From the Printer pop-up menu, choose the printer. 3 In the Copies field, enter the number of copies that you want to print. 4 Click Print. Collating printed copies If you print multiple copies of a document, you can choose to print each copy as a set (collated) or to print the copies as groups of pages (not collated). Collated Not collated Using Windows 1 With a document open, click File Print. 2 Click Properties, Preferences, Options, or Setup. 3 From the Copies section of the Print Setup tab, enter the number of copies that you want to print, and then select Collate Copies. 4 Click OK to close any printer software dialogs. 5 Click OK or Print. Note: The collate option is available only when you are printing multiple copies. Printing 28 Using Macintosh 1 With a document open, click File Print.

2 In the Copies field, enter the number of copies that you want to print, and then select Collated. 3 Click Print. Note: To prevent smudging when printing photos, remove each photo as it exits the printer, and then let it dry before stacking. Printing the last page first (reverse page order) Using Windows 1 With a document open, click File Print. 2 Click Properties, Preferences, Options, or Setup. 3 From the Copies section of the Print Setup tab, select Print Last Page First. 4 Click OK to close any printer software dialogs. 5 Click OK or Print. Using Macintosh 1 With a document open, choose File Print. 2 From the Printer pop-up menu, choose the printer.

3 From the print options pop-up menu, choose Paper Handling. 4 From the Paper Handling menu, or from the Page Order pop-up menu, select a page order: · To print the last page first, select Reverse page order or Reverse. · To print the first page first, clear the Reverse page order or Reverse check box. 5 Click Print. Printing multiple pages on one sheet (N-Up) Using Windows 1 With a document open, click File Print.

2 Click Properties, Preferences, Options, or Setup. 3 From the Advanced tab, select N-Up under the Layout drop-down menu. 4 Select the number of page images to print on each page. If you want each page image to be surrounded by a border, then select Print Page Borders. 5 Click OK to close any printer software dialogs.

6 Click OK or Print. Printing 29 Using Macintosh 1 With a document open, choose File Print. 2 From the Printer pop-up menu, choose the printer. 3 If necessary, click the disclosure triangle. 4 From the print options pop-up menu, choose Copies & Pages, and then click Page Setup. 5 From the Paper Size pop-up menu, choose a paper size. 6 Choose an orientation, and then click OK. 7 From the print options pop-up menu, choose Layout. · From the Pages per Sheet pop-up menu, choose the number of page images that you want to print on one sheet. · From the Layout Direction menu, choose a layout direction.

· If you want to print a border around each page image, then choose an option from the Border pop-up menu. 8 Click Print. Pausing print jobs Using the printer folder in Windows 1 Do one of the following: In Windows Vista a Click . b Click Control Panel. c Under Hardware and Sound, click Printer. In Windows XP a Click Start. b Click Printers and Faxes. In Windows 2000 a Click Start. b Click Settings Printers. 2 Right-click the printer, and then select Pause Printing.

Using the taskbar in Windows 1 Double-click the printer icon in the taskbar. 2 Right-click the document name, and then select Pause. Printing 30 Using Macintosh 1 While the document is printing, click the printer icon in the Dock. The print queue dialog appears. 2 Do one of the following: · If you want to pause a particular print job, choose the document name, and then click Hold.

· If you want to pause all print jobs in the queue, click Pause Printer or Stop Jobs, depending on the operating system version that you are using. Canceling print jobs Using the printer control panel Press . Using the printing status window of the printer The printing status window automatically opens at the bottom-right part of your screen when you send a print job.



[You're reading an excerpt. Click here to read official LEXMARK X2670 user guide](http://yourpdfguides.com/dref/2385674)
<http://yourpdfguides.com/dref/2385674>

Click Cancel Printing to cancel the print job. Using the printer folder in Windows 1 Do one of the following: In Windows Vista a Click . b Click Control Panel. c Under Hardware and Sound, click Printer. In Windows XP a Click Start. b Click Printers and Faxes. In Windows 2000 a Click Start. b Click Settings Printers. 2 Right-click the printer name, and then select Open. 3 Do one of the following: · If you want to cancel a particular print job, right-click the document name, and then select Cancel. · If you want to cancel all print jobs in the queue, click Printer Cancel All Documents. Printing 31 Using the taskbar in Windows 1 Double-click the printer icon in the taskbar.

2 Do one of the following: · If you want to cancel a particular print job, right-click the document name, and then select Cancel. · If you want to cancel all print jobs in the queue, click Printer Cancel All Documents. Using Macintosh 1 While the document is printing, click the printer icon in the Dock. 2 From the print queue dialog, choose the job that you want to cancel, and then click Delete. Printing specialty documents Choosing compatible specialty paper types · Heavyweight matte paper--A photo paper with a matte finish used for printing high-quality graphics. · Photo/Glossy paper--Photo paper with a special coating. It is used specifically for printing photos with crisp, sharp images. · Lexmark Photo Paper--An outstanding "everyday" heavyweight inkjet photo paper designed for use with Lexmark printers, but compatible with all brands of inkjet printers. Although inexpensive, it offers excellent image quality and outstanding value. · Lexmark Premium Photo Paper--A high-gloss, heavyweight quality photo paper specifically designed to work with Lexmark's evercolor™ inks for eye-catching, color-rich results.

It is great for those special photos to be framed, placed in an album, or shared with friends and family. · Lexmark PerfectFinish™ Photo Paper--A high-quality photo paper specifically designed for Lexmark inkjet printers, but compatible with all inkjet printers. It is used specifically for printing professional quality photos with a glossy finish. It is best when used with genuine Lexmark evercolor 2 ink, providing photos that are fade- and water-resistant. · Transparency--A clear, plastic media primarily used for overhead projectors.

· Card stock--A very thick paper used for printing sturdier items, such as greeting cards. · Iron-On transfer--A type of media that has a reverse image printed on it that can be ironed onto fabric. Printing photos using printer software 1 Load photo paper with the glossy or printable side facing you. (If you are not sure which side is the printable side, then see the instructions that came with the paper.) 2 Print the photo: Using Windows a Do one of the following: · In Windows Vista, click .

· In Windows XP and earlier, click Start. b Click All Programs or Programs, and then select the printer program folder from the list. Printing 32 c Select Lexmark Productivity Studio. Note: This program may not appear in your printer program folder, depending on whether you chose to install it with the printer software during installation. d Open the photo that you want to print. e Follow the instructions on the computer screen to edit and print photos. You may also view the Help associated with the program. Using Macintosh a b c d With a photo open, choose File Print. From the Printer pop-up menu, choose the printer you want to use. If necessary, click Advanced.

From the print options pop-up menu, choose Print Settings or Quality & Media, depending on your operating system. · From the Paper Type pop-up menu, choose a paper type. · From the Print Quality menu, choose Photo or Best. e f g h From the print options pop-up menu, choose Paper Handling. From the "Destination Paper Size" section, select Scale to fit paper size. From the Paper Size pop-up menu, choose the paper size you want. Click Print. Printing envelopes 1 Load the envelopes in the printer. 2 Send the print job: Using Windows a b c d With a document open, click File Print. Click Properties, Preferences, Options, or Setup.

From the Media Type list of the Print Setup tab, select Plain. From the Paper Size list, select the envelope size. Note: To print on a custom-size envelope, select Custom Size, and then specify the height and width of the envelope. e Select Portrait or Landscape orientation. f Click OK to close any printer software dialogs.

g Click OK or Print. Printing 33 Using Macintosh a b c d e With a document open, choose File Print. From the Printer pop-up menu, choose the printer. If necessary, click the disclosure triangle. From the print options pop-up menu, choose Copies & Pages, and then click Page Setup.

From the Paper Size pop-up menu, choose the envelope size. If no size matches the size of the envelope, then set a custom size. f Select an orientation, and then click OK. g Click Print. Notes: · Most envelopes use landscape orientation. · Make sure the same orientation is also selected in the software application.

Printing labels 1 Load the label sheets in the printer. 2 Send the print job: Using Windows a With a document open, click File Print. b Click Properties, Preferences, Options, or Setup. c From the Paper Size drop-down menu of the Print Setup tab, choose a paper size that matches the size of the label sheet.

If no paper size matches the label sheet size, then set a custom size. If necessary, choose the appropriate type of paper from the Media Type drop-down menu. d Click OK to close any printer software dialogs. e Click OK or Print. Using Macintosh a b c d e With a document open, choose File Print. From the Printer pop-up menu, choose the printer. If necessary, click the disclosure triangle. From the print options pop-up menu, choose Copies & Pages, and then click Page Setup. From the Paper Size pop-up menu, choose a size that matches the size of the label sheet. If no paper size matches the label sheet size, then set a custom size.

f Choose an orientation, and then click OK. g From the print options pop-up menu, choose Print Settings or Quality & Media, depending on your operating system. · From the Paper Type pop-up menu, choose the appropriate type of paper. · From the Print Quality menu, choose a print quality other than Quick Print. h Click Print.

Printing 34 Tips on loading label sheets Make sure the top of the label sheet feeds into the printer first. Make sure the adhesive on the labels does not extend to within 1 mm of the edge of the label sheet. Make sure the paper guide or paper guides rest against the edges of the label sheet. Use full label sheets. Partial sheets (with areas exposed by missing labels) may cause labels to peel off during printing, resulting in a paper jam.



You're reading an excerpt. Click here to read official LEXMARK X2670 user guide
<http://yourpdfguides.com/dref/2385674>

Note: Labels require more drying time. Remove each label sheet as it exits, and then allow it to dry to avoid ink smudging. Printing on custom-size paper Before beginning these instructions, load the custom-size paper in the printer. For more information, see the "Loading Paper" chapter. Using Windows 1 With a document open, click File Print. 2 Click Properties, Preferences, Options, or Setup. The Print Setup tab appears. 3 In the Paper Options section, from the "Paper size" list, select Custom Size. The Define Custom Paper Size dialog appears. 4 Set the paper size.

5 Select the measurement units to use (inches or millimeters). 6 Click OK to close any printer software dialogs that are open. 7 Print the document. Using Macintosh 1 With a document open, choose File Print. 2 From the printer pop-up menu, choose the printer. 3 If necessary, click the disclosure triangle. 4 From the print options pop-up menu, choose Copies & Pages and then click Page Setup. 5 From the Paper Size pop-up menu, choose Manage Custom Sizes. 6

Select a custom size: a In the Page Size section, type the Width and Height of the paper. b From the Printer Margins pop-up menu, choose the printer. The margins are set by the printer. If you want to set the margins, then choose User defined, and then type the margins in the Printer Margins section. c From the custom sizes list on the left of the dialog, double-click Untitled, and then type a name for the custom paper size you set. d Click OK. Printing 35 7 Open the Paper Size pop-up menu again, and then choose the name of the custom paper size you added in step 6c.

8 Click OK. 9 Click Print. Printing other specialty documents When you installed the printer driver, some printer software was installed that may help you print specialty documents such as booklets, posters, iron-on transfers, transparencies, and banners. For information about printing these documents, see the Help installed with the programs or applications you choose to use. Using Windows 1 Do one of the following: · In Windows Vista, click All Programs, and then select the printer program folder from the list.

· In Windows XP, click Start Programs or All Programs, and then select the printer program folder from the list. 2 Click the program that you want to use. Using Macintosh 1 From the Finder desktop, double-click the printer folder. If the printer folder is not found on the desktop: a Go to the Mac OS X drive where the printer software was installed. b Choose Library Printers YYYY Lexmark, and then select your printer model. YYYY is the year that the printer was released. 2 Double-click the application that you want to use. Saving and deleting print settings Using Windows 1 With a document open, click File Print. 2 Click Properties, Preferences, Options, or Setup. 3 Make adjustments to the settings.

4 Click Profiles, and then click Save your current settings. 5 Select an empty location for your setting, and then assign a name. Note: The first location contains Factory Default Settings, which cannot be changed or deleted. 6 Click Save. 7 Close all open software dialogs. Printing 36 Notes: · To retrieve your print settings, click Profiles Restore a Profile, and then select the name of the profile that you want to use. · To delete a setting, click Profiles Delete Profiles. Select the setting that you want to delete, and then click Delete. Using Macintosh The Presets pop-up menu lets you save the print settings you use often. When print settings are saved into a Preset, there is no need to adjust the print settings for every print job.

1 With a document open, click File Print. 2 From the print options pop-up menu, choose and adjust the settings. 3 From the Presets pop-up menu, choose Save As. The Save Preset dialog appears. 4 Type a name for the Preset.

5 Click OK. Printing 37 Copying Making a copy 1 Load paper. 2 Load an original document facedown on the scanner glass. 3 If you want to print more than one copy, then press display. until the number of copies that you want appears on the 4 Press to start a color copy or to start a black-and-white copy.

Copying 4 x 6 photos 1 Load a 4 x 6 in. (10 x 15 cm) photo card with the glossy or printable side facing you. (If you are not sure which side is the printable side, then see the instructions that came with the paper.) 2 Place a photo facedown on the scanner glass in the lower right corner. 3 If you want to print more than one copy, press display. until the number of copies that you want appears on the 4 Press . Copying 38 Scanning Scanning original documents You can scan and then print photos, text documents, magazine articles, newspapers, and other publications. You can also scan a document for faxing. 1 Open the top cover, and then load an original document facedown on the scanner glass. 2 Close the top cover to avoid dark edges on the scanned image.

3 Make sure that the printer is connected to a computer, and that both the printer and the computer are on. 4 From the printer control panel, press . 5 If you are using a Macintosh operating system, click on the document or image preview and drag to select the part that you want to scan, and then click Scan from the Scan dialog on the computer screen. 6 If you want to save the scanned image, then from the software application, click File Save As. 7 Enter the file name, format, and location where you want the scanned image saved. 8 Click Save. Canceling scan jobs Using the printer control panel To cancel a job being scanned on the scanner glass, go to the printer control panel, and then press . Using Windows To cancel a scan job started in the Lexmark Productivity Studio or Lexmark FastPics, open the software, and then follow the instructions on the screen. Scanning 39 Using Macintosh 1 From the Finder desktop, double-click the printer folder. 2 Double-click the printer icon.

3 From the Progress dialog, click Cancel. Scanning 40 Faxing This chapter is applicable for Windows users only. Before you send a fax, make sure: · The printer is connected to a computer with an active fax modem, the computer is configured to fax, a phone line is connected to the computer, and both the printer and computer are on. · The Lexmark Fax Solutions and Lexmark Productivity Studio software are installed on your computer. If you have not installed these additional programs during initial installation, reinsert the installation software CD, run the installation software, and then select Install Additional Software from the Software Already Installed screen.

Sending a fax 1 Load an original document facedown on the scanner glass. 2 Do one of the following: · In Windows Vista, click All Programs, and then select the printer program folder. · In Windows XP, click Start Programs or All Programs, and then select the printer program folder.



[You're reading an excerpt. Click here to read official LEXMARK X2670 user guide](http://yourpdfguides.com/dref/2385674)
<http://yourpdfguides.com/dref/2385674>

3 Click Lexmark Productivity Studio. 4 From the Welcome Screen, click Fax.

5 Select the Document option. 6 Click Start. 7 Enter the recipient information, and then click Next. Note: A fax number can include up to 64 numbers, commas, periods, spaces, and/or these symbols: * # + - (). 8 Enter the cover page information, and then click Next. 9 If there are any additional documents that you want to send with your fax, add these now, and then click Next. 10 To send your fax: · Immediately--Select the Send now option. · At a scheduled time: a Select the Delay sending until option. b Set a time and date. 11 If you want a paper copy of your fax, then select Print a copy of your fax.

12 Click Send. Receiving a fax automatically 1 Do one of the following: · In Windows Vista, click All Programs, and then select the printer program folder. · In Windows XP, click Start Programs or All Programs, and then select the printer program folder. 2 Click Lexmark Productivity Studio. Faxing 41 3 From the Settings area in the left pane of the Welcome screen, click Set up and manage faxes. 4 From the "I Want To" menu, click Adjust speed dial list and other fax settings. 5 Click the Ringing and Answering tab. 6 From the "Automatically answer incoming calls as a fax" area, select On from the Auto Answer drop-down list. 7 To turn the Auto Answer feature on and off at scheduled times, select the settings that you want from the drop-down lists. 8 To set the number of telephone rings before the printer automatically receives faxes, select a setting from the "Pick-up on the" drop-down list in the "Answering on your phone line type" area.

9 Click OK to save the settings. Faxing 42 Maintaining the printer Maintaining print cartridges Installing print cartridges 1 Open the printer, and then press down on the cartridge carrier levers. 2 Remove the used print cartridge or cartridges. 3 If you are installing new print cartridges, remove the tape from the back and bottom of the black cartridge, insert the cartridge in the left carrier, and then close the black cartridge carrier lid. Warning--Potential Damage: Do not touch the gold contact area on the back or the metal nozzles on the bottom of the cartridge.

Maintaining the printer 43 4 Remove the tape from the back and bottom of the color cartridge, insert the cartridge in the right carrier, and then close the color cartridge carrier lid. Warning--Potential Damage: Do not touch the gold contact area on the back or the metal nozzles on the bottom of the cartridge. 5 Close the printer, making sure to keep your hands out from underneath the scanner unit. Removing a used print cartridge 1 Make sure the printer is on. 2 Lift the scanner unit.

Maintaining the printer 44 The print cartridge carrier moves and stops at the loading position, unless the printer is busy. 3 Press down on the cartridge carrier latch to raise the cartridge carrier lid. 4 Remove the used print cartridge. Note: If you are removing both cartridges, repeat step 3 and step 4 for the second cartridge. Refilling print cartridges The warranty does not cover repair of failures or damage caused by a refilled cartridge. Lexmark does not recommend use of a refilled cartridge. Refilling a cartridge can affect print quality and may cause damage to the printer. For best results, use Lexmark supplies. Using genuine Lexmark print cartridges Lexmark printers, print cartridges, and photo paper are designed to perform together for superior print quality. @@@@2 Do one of the following: · In Windows Vista, click .

· In Windows XP and earlier, click Start. @@@4 From the printer folder, click Maintenance Clean Cartridges. @@2 From the Finder desktop, double click the printer folder. 3 Double-click the printer utility icon. @@@@8 Repeat step 7 up to two more times. @@ · Do not remove a cartridge from the printer except to replace, clean, or store it in an airtight container. @@@@10 x 15 cm Letter A4 4 x 6 in. @@@@3 Plug the cord all the way into the power supply on the printer. @@@@These are some other possible solutions. @@If the cable is damaged, use a new one.

@@@3 Gently remove the power supply from the printer. 4 Reconnect the power supply to the printer. 5 Plug the power cord into the wall outlet. @@2 Disable any security programs. 3 Do one of the following: · In Windows Vista, click .

· In Windows XP and earlier, click Start. 4 Click Computer or My Computer. 5 Double-click the CD or DVD drive icon. @@@@b Click Control Panel. @@b Click Printers and Faxes.

In Windows 2000 a Click Start. b Click Settings Printers. 2 Double-click the printer. 3 Click Printer. · Make sure no check mark appears next to Pause Printing. · If a check mark does not appear next to Set As Default Printer, then you must select the printer for each file that you want to print. Using Macintosh For Mac OS X version 10.5 or later 1 From the Finder desktop, click System Preferences Print & Fax. 2 From the Default Printer pop-up menu, check if the printer is the default printer. If the printer is not the default printer, then you must select the printer for each file that you want to print.

If you want to set the printer as the default printer, then select the printer from the Default Printer pop-up menu. 3 Click Open Print Queue. The print queue dialog appears. Make sure that the print job is not on hold. If the print job is on hold: · If you want to resume a particular print job, choose the document name, and then click Resume. · If you want to resume all print jobs in the queue, then click Resume Printer. For Mac OS X version 10.4 and earlier 1 From the Finder desktop, click Go Utilities Print Center or Printer Setup Utility. The Printer List dialog appears. 2 Double-click the printer.

The print queue dialog appears. · Make sure that the print job is not on hold. If the print job is on hold: If you want to resume a particular print job, choose the document name, and then click Resume. If you want to resume all print jobs in the queue, then click Start Jobs. · If the printer is not in bold, then it is not the default printer.

You must select the printer for each file that you want to print. If you want to set the printer as the default printer: a Go back to the Printer List dialog, and then select the printer. b Click Make Default. Troubleshooting 53 DISCONNECT AND RECONNECT POWER SUPPLY 1 Press to turn off the printer. 2 Disconnect the power cord from the wall outlet.

3 Remove the power supply from the printer. 4 Reconnect the power supply to the printer. 5 Plug the power cord into the wall outlet. 6 Press to turn on the printer. REMOVE AND REINSTALL THE SOFTWARE If you encountered problems while installing, or if your printer does not appear in the printers folder or as a printer option when sending a print job, then try uninstalling and reinstalling the software.



[You're reading an excerpt. Click here to read official LEXMARK](http://yourpdfguides.com/dref/2385674)

[X2670 user guide](http://yourpdfguides.com/dref/2385674)

<http://yourpdfguides.com/dref/2385674>

Removing and reinstalling the software If the printer is not functioning properly, or if a communications error message appears when you try to use the printer, you may need to remove and reinstall the printer software. Using Windows 1 Do one of the following: · In Windows Vista, click . · In Windows XP, click Start. 2 Click Programs or All Programs, and then select the printer program folder from the list. 3 Select Uninstall.

4 Follow the instructions on the computer screen to remove the printer software. 5 Restart the computer before reinstalling the printer software. 6 Click Cancel on all New Hardware Found screens. 7 Insert the installation CD, and then follow the instructions on the computer screen to reinstall the software. If the install screen does not appear automatically after you restart your computer, do one of the following: In Windows Vista: a Click . b Locate the Start Search box. c Type D:\setup.exe, where D is the letter of your CD or DVD drive. In Windows XP: a Click Start Run. b Type D:\setup.

exe, where D is the letter of your CD or DVD drive. Troubleshooting 54 Using Macintosh 1 Close all open software applications. 2 From the Finder desktop, double-click the printer folder. 3 Double-click the Uninstaller icon. 4 Follow the instructions on the computer screen to remove the printer software.

5 Restart the computer before reinstalling the printer software. 6 Insert the installation CD, and then follow the instructions on the computer screen to reinstall the software. If the software still does not install correctly, visit our Web site at www.lexmark.com to check for the latest software.

1 In all countries or regions except the United States, select your country or region. 2 Click the links for drivers or downloads. 3 Select your printer family. 4 Select your printer model. 5 Select your operating system. 6 Select the file that you want to download, and then follow the directions on the computer screen.

Enabling the USB port in Windows To confirm that the USB port is enabled on the computer: 1 Do one of the following: In Windows Vista a Click Control Panel. b Click System and Maintenance System. c Click Device Manager. In Windows XP a Click Start.

b Click Control Panel Performance and Maintenance System. c From the Hardware tab, click Device Manager. In Windows 2000 a Click Start. b Click Settings Control Panel System. c From the Hardware tab, click Device Manager. 2 Click the plus sign (+) beside Universal Serial Bus Controller. If USB Host Controller and USB Root Hub are listed, then the USB port is enabled. For more information, see the computer documentation. Troubleshooting 55 Solving printer power problems The printer and the computer cannot exchange data. These are possible solutions.

Try one or more of the following: **MAKE SURE THE PRINTER POWER SUPPLY IS ATTACHED CORRECTLY** 1 Press to turn the printer off. 2 Disconnect the power cord from the wall outlet. 3 Remove the power supply from the printer. 4 Reconnect the power supply to the printer. 5 Plug the power cord into the wall outlet.

6 Press to turn the printer on. **MAKE SURE THE PRINTER IS NOT IN SLEEP MODE** If the power light is blinking on and off slowly, then the printer is in sleep mode. @@@@ For Lexmark technical support, visit support.lexmark.com.

For information on supplies and downloads, visit www.lexmark.com. @@@@ All rights reserved. Notices 57 UNITED STATES GOVERNMENT RIGHTS This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense. Trademarks Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries. Evercolor and PerfectFinish are trademarks of Lexmark International, Inc. All other trademarks are the property of their respective owners. Licensing notices The following documents can be viewed from the installation software CD.

Directory\drivers\xps\Pubs\InstalNLicenses File ZOpen.3.08.pdf FW_License.10.08.pdf Expat.txt Inst_lib.txt Instgui.txt/Instgui.

zip Federal Communications Commission (FCC) compliance information statement This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The FCC Class B limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · · · · Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult your point of purchase or service representative for additional suggestions. Notices 58 The manufacturer is not responsible for radio or television interference caused by using other than recommended cables or by unauthorized changes or modifications to this equipment.

Unauthorized changes or modifications could void the user's authority to operate this equipment. Note: To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded cable such as Lexmark part number 1021294 for USB attach. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations. Any questions regarding this compliance information statement should be directed to: Director of Lexmark Technology & Services Lexmark International, Inc. 740 West New Circle Road Lexington, KY 40550 (859) 2323000 Hinweis zum GS-Zeichen Modell Gerätetyp Verschiedene, xxx, wobei "x" einem alphanumerischen Zeichen entspricht 4433, 4445

Postanschrift Lexmark Deutschland GmbH Postfach 1560 63115 Dietzenbach Adresse Lexmark Deutschland GmbH Max-Planck-Straße 12 63128 Dietzenbach 0180 - 564 56 44 (Produktinformationen) 01805- 51 25 11 (Technischer Kundendienst) internet@lexmark.de Telefon Telefon E-mail Noise emission levels The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.



[You're reading an excerpt. Click here to read official LEXMARK X2670 user guide](http://yourpdfguides.com/dref/2385674)
<http://yourpdfguides.com/dref/2385674>

Note: Some modes may not apply to your product. I-meter average sound pressure, dBA Printing Scanning Copying Ready 50 34 44 inaudible Values are subject to change. See www.lexmark.com.

com for current values. Notices 59 Temperature information Ambient temperature Shipping temperature Storage temperature 1532° C (6090° F) -4060° C (-40140° F) 160° C (34140° F) Waste from Electrical and Electronic Equipment (WEEE) directive The WEEE logo signifies specific recycling programs and procedures for electronic products in countries of the European Union. We encourage the recycling of our products. If you have further questions about recycling options, visit the Lexmark Web site at www.lexmark.com for your local sales office phone number. Product disposal Do not dispose of the printer or supplies in the same manner as normal household waste. Consult your local authorities for disposal and recycling options. ENERGY STAR Any Lexmark product bearing the ENERGY STAR emblem on the product or on a start-up screen is certified to comply with Environmental Protection Agency (EPA) ENERGY STAR requirements as configured when shipped by Lexmark. Power consumption Product power consumption The following table documents the power consumption characteristics of the product.

Note: Some modes may not apply to your product. Notices 60 Mode Printing Copying Scanning Ready Description The product is generating hard-copy output from electronic inputs. The product is generating hard-copy output from hard-copy original documents. The product is scanning hard-copy documents. The product is waiting for a print job.

Power consumption (Watts) 13.04 (ENERGY STAR-compliant X2600); 14.97 (non-ENERGY STAR-compliant X2600) 11.84 (ENERGY STAR-compliant X2600); 13.79 (non-ENERGY STAR-compliant X2600) 6.

58 (ENERGY STAR-compliant X2600); 7.24 (non-ENERGY STAR-compliant X2600) 3.87 (ENERGY STAR-compliant X2600); 5.80 (non-ENERGY STAR-compliant X2600) 2.21 (ENERGY STAR-compliant X2600); not applicable (non-ENERGY STAR-compliant X2600) 0.21 (ENERGY STAR-compliant X2600); 5.62 (non-ENERGY STAR-compliant X2600) Power Saver The product is in energy-saving mode. Off The product is plugged into a wall outlet, but the power switch is turned off. The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average.

Values are subject to change. See www.lexmark.com for current values. Power Saver This product is designed with an energy-saving mode called Power Saver. The Power Saver Mode is equivalent to the EPA Sleep Mode. The Power Saver Mode saves energy by lowering power consumption during extended periods of inactivity. The Power Saver Mode is automatically engaged after this product is not used for a specified period of time, called the Power Saver Timeout. Factory default Power Saver Timeout for this product (in minutes): n/a Off mode If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the wall outlet. Total energy usage It is sometimes helpful to calculate the total product energy usage.

Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage. LEXMARK SOFTWARE LIMITED WARRANTY AND LICENSE AGREEMENTS PLEASE READ CAREFULLY BEFORE USING THIS PRODUCT: BY USING THIS PRODUCT, YOU AGREE TO BE BOUND BY ALL THE TERMS AND CONDITIONS OF THIS SOFTWARE LIMITED WARRANTY AND LICENSE AGREEMENTS. IF YOU DO NOT AGREE WITH THE TERMS OF THIS SOFTWARE LIMITED WARRANTY AND LICENSE AGREEMENTS, PROMPTLY RETURN THE PRODUCT UNUSED AND REQUEST A REFUND OF THE AMOUNT YOU PAID. IF YOU ARE INSTALLING THIS PRODUCT FOR USE BY OTHER PARTIES, YOU AGREE TO INFORM THE USERS THAT USE OF THE PRODUCT INDICATES ACCEPTANCE OF THESE TERMS.

Notices 61 PRINTER LICENSE AGREEMENT I agree that this patented printer is licensed for, and designed to work with only genuine Lexmark ink cartridges for the life of the patented printer. I agree to: (1) use only genuine Lexmark ink cartridges with this printer (except I may use replacement cartridges made by Lexmark but sold without single use terms as described in the below cartridge license agreement), and (2) pass this printer license/agreement to any subsequent user of this printer. CARTRIDGE LICENSE AGREEMENT* I agree that the patented print cartridge(s) shipped with this printing device are sold subject to the following license/agreement: The patented print cartridge(s) contained inside is/are licensed for a single use only and is/are designed to stop working after delivering a fixed amount of ink. A variable amount of ink will remain in the cartridge when replacement is required. After this single use, the license to use the print cartridge terminates, and the used cartridge must be returned only to Lexmark for remanufacturing, refilling or recycling.

If I buy another cartridge in the future that is sold subject to the above terms, I accept such terms as to that cartridge. If you do not accept the terms of this single use license/agreement; return this product in its original packaging to your point of purchase. A replacement cartridge sold without these terms is available at www.lexmark.com. LEXMARK SOFTWARE LICENSE AGREEMENT This Software License Agreement ("License Agreement") is a legal agreement between you (either an individual or a single entity) and Lexmark International, Inc. ("Lexmark") that, to the extent your Lexmark product or Software Program is not otherwise subject to a written software license agreement between you and Lexmark or its suppliers, governs your use of any Software Program installed on or provided by Lexmark for use in connection with your Lexmark product. The term "Software Program" includes machine-readable instructions, audio/visual content (such as images and recordings), and associated media, printed materials and electronic documentation, whether incorporated into, distributed with or for use with your Lexmark product. 1 STATEMENT OF SOFTWARE LIMITED WARRANTY. Lexmark warrants that the media (e.

g., diskette or compact disk) on which the Software Program (if any) is furnished is free from defects in materials and workmanship under normal use during the warranty period. The warranty period is ninety (90) days and commences on the date the Software Program is delivered to the original end-user. This limited warranty applies only to Software Program media purchased new from Lexmark or an Authorized Lexmark Reseller or Distributor. Lexmark will replace the Software Program should it be determined that the media does not conform to this limited warranty. 2 DISCLAIMER AND LIMITATION OF WARRANTIES.



[You're reading an excerpt. Click here to read official LEXMARK X2670 user guide](http://yourpdfguides.com/dref/2385674)
<http://yourpdfguides.com/dref/2385674>

EXCEPT AS PROVIDED IN THIS SOFTWARE LICENSE AGREEMENT AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, LEXMARK AND ITS SUPPLIERS PROVIDE THE SOFTWARE PROGRAM "AS IS" AND HEREBY DISCLAIM ALL OTHER WARRANTIES AND CONDITIONS, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, TITLE, NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ABSENCE OF VIRUSES, ALL WITH REGARD TO THE SOFTWARE PROGRAM. TO THE EXTENT LEXMARK CANNOT BY LAW DISCLAIM ANY COMPONENT OF THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, LEXMARK LIMITS THE DURATION OF SUCH WARRANTIES TO THE 90-DAY TERM OF THE EXPRESS SOFTWARE LIMITED WARRANTY. This Agreement is to be read in conjunction with certain statutory provisions, as that may be in force from time to time, that imply warranties or conditions or impose obligations on Lexmark that cannot be excluded or modified. If any such provisions apply, then to the extent Lexmark is able, Lexmark hereby limits its liability for breach of those provisions to one of the following: providing you a replacement copy of the Software Program or reimbursement of the price paid for the Software Program.

The Software Program may include internet links to other software applications and/or internet web pages hosted and operated by third parties unaffiliated with Lexmark. You acknowledge and agree that Lexmark is not responsible in any way for the hosting, performance, operation, maintenance, or content of, such software applications and/or internet web pages. Notices 62 3 LIMITATION OF REMEDY. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, ANY AND ALL LIABILITY OF LEXMARK UNDER THIS SOFTWARE LICENSE AGREEMENT IS EXPRESSLY LIMITED TO THE GREATER OF THE PRICE PAID FOR THE SOFTWARE PROGRAM AND FIVE U.S.

DOLLARS (OR THE EQUIVALENT IN LOCAL CURRENCY). YOUR SOLE REMEDY AGAINST LEXMARK IN ANY DISPUTE UNDER THIS SOFTWARE LICENSE AGREEMENT SHALL BE TO SEEK TO RECOVER ONE OF THESE AMOUNTS, UPON PAYMENT OF WHICH LEXMARK SHALL BE RELEASED AND DISCHARGED OF ALL FURTHER OBLIGATIONS AND LIABILITY TO YOU. IN NO EVENT WILL LEXMARK, ITS SUPPLIERS, SUBSIDIARIES, OR RESELLERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, EXEMPLARY, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LOST PROFITS OR REVENUES, LOST SAVINGS, INTERRUPTION OF USE OR ANY LOSS OF, INACCURACY IN, OR DAMAGE TO, DATA OR RECORDS, FOR CLAIMS OF THIRD PARTIES, OR DAMAGE TO REAL OR TANGIBLE PROPERTY, FOR LOSS OF PRIVACY ARISING OUT OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE SOFTWARE PROGRAM, OR OTHERWISE IN CONNECTION WITH ANY PROVISION OF THIS SOFTWARE LICENCE AGREEMENT), REGARDLESS OF THE NATURE OF THE CLAIM, INCLUDING BUT NOT LIMITED TO BREACH OF WARRANTY OR CONTRACT, TORT (INCLUDING NEGLIGENCE OR STRICT LIABILITY), AND EVEN IF LEXMARK, OR ITS SUPPLIERS, AFFILIATES, OR REMARKETERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY YOU BASED ON A THIRD-PARTY CLAIM, EXCEPT TO THE EXTENT THIS EXCLUSION OF DAMAGES IS DETERMINED LEGALLY INVALID. THE FOREGOING LIMITATIONS APPLY EVEN IF THE ABOVE-STATED REMEDIES FAIL OF THEIR ESSENTIAL PURPOSE. 4 U.S.A. STATE LAWS. This Software Limited Warranty gives you specific legal rights. You may also have other rights that vary from state to state. Some states do not allow limitations on how long an implied warranty lasts or the exclusion of limitation of incidental or consequential damages, so the above limitations may not apply to you. 5 LICENSE GRANT. Lexmark grants you the following rights provided you comply with all terms and conditions of this License Agreement: a Use. You may Use one (1) copy of the Software Program. The term "Use" means storing, loading, installing, executing, or displaying the Software Program.

If Lexmark has licensed the Software Program to you for concurrent use, you must limit the number of authorized users to the number specified in your agreement with Lexmark. You may not separate the components of the Software Program for use on more than one computer. You agree that you will not Use the Software Program, in whole or in part, in any manner that has the effect of overriding, modifying, eliminating, obscuring, altering or de-emphasizing the visual appearance of any trademark, trade name, trade dress or intellectual property notice that appears on any computer display screens normally generated by, or as a result of, the Software Program. b Copying. You may make one (1) copy of the Software Program solely for purposes of backup, archiving, or installation, provided the copy contains all of the original Software Program's proprietary notices. You may not copy the Software Program to any public or distributed network. c Reservation of Rights. The Software Program, including all fonts, is copyrighted and owned by Lexmark International, Inc. and/or its suppliers. Lexmark reserves all rights not expressly granted to you in this License Agreement.

d Freeware. Notwithstanding the terms and conditions of this License Agreement, all or any portion of the Software Program that constitutes software provided under public license by third parties ("Freeware") is licensed to you subject to the terms and conditions of the software license agreement accompanying such Freeware, whether in the form of a discrete agreement, shrink-wrap license, or electronic license terms at the time of download. Use of the Freeware by you shall be governed entirely by the terms and conditions of such license. Notices 63 6 TRANSFER. You may transfer the Software Program to another end-user.

Any transfer must include all software components, media, printed materials, and this License Agreement and you may not retain copies of the Software Program or components thereof. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end-user receiving the transferred Software Program must agree to all these License Agreement terms. Upon transfer of the Software Program, your license is automatically terminated. You may not rent, sublicense, or assign the Software Program except to the extent provided in this License Agreement, and any attempt to do so shall be void.

7 UPGRADES. To Use a Software Program identified as an upgrade, you must first be licensed to the original Software Program identified by Lexmark as eligible for the upgrade. After upgrading, you may no longer use the original Software Program that formed the basis for your upgrade eligibility. 8 LIMITATION ON REVERSE ENGINEERING. You may not alter, decrypt, reverse engineer, reverse assemble, reverse compile or otherwise translate the Software Program, except as and to the extent expressly permitted to do so by applicable law for the purposes of inter-operability, error correction, and security testing. If you have such statutory rights, you will notify Lexmark in writing of any intended reverse engineering, reverse assembly, or reverse compilation.



[You're reading an excerpt. Click here to read official LEXMARK X2670 user guide](http://yourpdfguides.com/dref/2385674)
<http://yourpdfguides.com/dref/2385674>