



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LEXMARK X644E. You'll find the answers to all your questions on the LEXMARK X644E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LEXMARK X644E
User guide LEXMARK X644E
Operating instructions LEXMARK X644E
Instructions for use LEXMARK X644E
Instruction manual LEXMARK X644E

Lexmark™ X646 Clearing Jams Guide

Avoiding jams

The following hints can help you avoid jams:

- Use only recommended print media.
- Do not overload the print media sources. Make sure the stack height does not exceed the maximum height indicated by the stack line on the labels in the sources.
- Do not load wrinkled, creased, damp, or curled print media.
- Flex, fan, and straighten print media before you load it. If jams do occur with print media, try feeding one sheet at a time through the multipurpose feeder.
- Do not use print media that you have cut or trimmed yourself.
- Do not mix print media sizes, weights, or types in the same print media source.
- Make sure the recommended print side is loaded in the source according to your simplex or duplex needs.
- Keep print media stored in an acceptable environment.
- Do not remove trays during a print job.
- Push all trays in firmly after loading them.
- Make sure the guides in the trays are properly positioned for the size of print media you have loaded. Make sure the guides are not placed too tightly against the stack of print media.

Clearing jams

Understanding jam messages


Message	What to do*
200 and 201 Paper Jam Remove Cartridge	Open the bottom then top front covers, remove the print cartridge, and then remove the jam.
202 Paper Jam Open Rear Door	Open the rear door on the MFP, and remove the jam.
23x Paper Jam Check Duplex	Remove the duplex tray from the duplex unit, raise the duplex deflector, and remove the jam. Open the rear duplex door, and remove the jam.
24x Paper Jam Check Tray <->	Open each tray, and remove any jammed media.
250 Paper Jam Check MP Feeder	Remove all media from the multipurpose feeder, flex and stack the media, reload the multipurpose feeder, and adjust the guide.
290, 291, 292, and 294 Scanner Jams	Remove all original documents from the ADF. Open the ADF cover, and remove any jammed pages. Open the document cover, and remove any jammed pages.

* After clearing the jam, press to resume printing.

200 and 201 Paper Jam Remove Cartridge


- 1 Push the release latch, and lower the multipurpose feeder.
- 2 Push the release latch, and open the top front

cover.

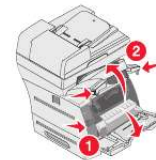

CAUTION: The inside of the MFP may be hot. Allow the MFP to cool before touching any internal components.

3 Lift and pull the print cartridge out of the MFP.

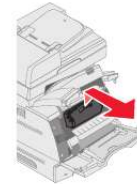

Warning: Do not touch the photoconductor drum on the underside of the cartridge. Use the cartridge handle whenever you are holding the cartridge.

4 Place the print cartridge aside.

Note: Do not leave the cartridge exposed to light for extended periods.

Note: The print media may be covered with unfused toner, which can stain garments and skin.



[You're reading an excerpt. Click here to read official LEXMARK X644E user guide](http://yourpdfguides.com/dref/2385712)

<http://yourpdfguides.com/dref/2385712>

Manual abstract:

Remove the duplex tray from the duplex unit, raise the duplex deflector, and remove the jam. Open the rear duplex door, and remove the jam. Open each tray, and remove any jammed media. Remove all media from the multipurpose feeder, flex and stack the media, reload the multipurpose feeder, and adjust the guide. Remove all original documents from the ADF. Open the ADF cover, and remove any jammed pages. Open the document cover, and remove any jammed pages. Open the scan unit access door, and remove any jammed pages. to resume printing. cover.

· Use only recommended print media. · Do not overload the print media sources. Make sure the stack height does not exceed the maximum height indicated by the stack line on the labels in the sources. Do not load wrinkled, creased, damp, or curled print media. Flex, fan, and straighten print media before you load it.

If jams do occur with print media, try feeding one sheet at a time through the multipurpose feeder. Do not use print media that you have cut or trimmed yourself. Do not mix print media sizes, weights, or types in the same print media source. @@Keep print media stored in an acceptable environment. Do not remove trays during a print job.

Push all trays in firmly after loading them. @@@@This could cause personal injury or damage to the MFP. @@@@7 Close the top front cover. CAUTION: The inside of the MFP may be hot. Allow the MFP to cool before touching any internal components. CAUTION: Do not use any pointed objects to remove the paper. This could cause personal injury or damage to the MFP. 3 Close the duplex rear door. Make sure it snaps into place. 3 Remove any jammed paper.

Clearing ADF Jams 290, 291, 292, and 294 Scanner Jams 1 Remove all original documents from the ADF. 2 Open the ADF cover. 4 Touch Continue. 23x and 24x jams Paper jams in these areas can occur on the incline surface of a tray or across more than one tray. To clear these areas: 4 Open any optional trays beginning at the top, and remove any jammed media. 3 Remove any jammed pages. 1 Open the MFP paper tray, and remove any jammed media. 4 Open the document cover, and remove any jammed pages. 250 Paper Jam Check MP Feeder 1 Remove the paper from the multipurpose 2 Open the duplex tray. feeder. 2 Flex, fan, and restack the media, and place it into the multipurpose feeder. 3 Load the print media. @@7 Close the ADF cover. .



[You're reading an excerpt. Click here to read official LEXMARK](#)

[X644E user guide](#)

<http://yourpdfguides.com/dref/2385712>