



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LEXMARK X6650. You'll find the answers to all your questions on the LEXMARK X6650 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LEXMARK X6650
User guide LEXMARK X6650
Operating instructions LEXMARK X6650
Instructions for use LEXMARK X6650
Instruction manual LEXMARK X6650

LEXMARK

5600-6600 Series User's Guide

2008

www.lexmark.com



[You're reading an excerpt. Click here to read official LEXMARK X6650 user guide](http://yourpdfguides.com/dref/1261502)

<http://yourpdfguides.com/dref/1261502>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 31 Using the Windows printer software....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 32 Using the Macintosh printer software....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 33 Switching between the rear USB port and the Quick Connect laptop port (selected models only).....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....*34 Getting the printer ready to fax.....*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....*35 Using an RJ11 adapter .*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

. @@@@41 Connecting to a computer with a modem.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 42 Connecting to a telephone

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 43 Using a digital phone service ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

..... 44 *Installing the printer on a wireless network (selected models only)...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...45 *Wireless network compatibility.....*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....45 *Information you will need to set up the printer on a wireless network...*

.....
.....
.....

.....
.....
.....
.....

.....45 *Installing the printer on a wireless network.....*

.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....45 *Installing the printer on other computers.....*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....46 *Interpreting the colors of the Wi-Fi indicator light.*

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....47 *Special wireless installation instructions.....*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..47 *Contents 3 Assigning a static IP address.....*

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..48 Changing wireless settings after installation...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

48 Switching between USB and wireless connections (Windows only).....

.....

.....

.....

.....

.....

.....

...49 Switching between USB and wireless connections (Macintosh only).....

.....

.....

.....

.....

.....

.....

.....50 Advanced wireless setup....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..51 Creating an ad hoc wireless network

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. 51 Adding a printer to an existing ad hoc wireless network

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 53 Using WPS (Wi-Fi Protected Setup).....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....

.....
54 Frequently asked questions.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.54 Where do I find my WEP key or WPA passphrase?.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 54 What is an SSID?

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

54 Where do I find my SSID?.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 55 What is a network?

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

. 55 What types of wireless network security are available?

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

55 How do I find out what type of security my network is using?.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 56 How are home networks configured?....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 56 Why do I need an installation cable? .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....

.....

.....

.....

.....

.... 58 How do I attach the installation cable?.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 59 How are infrastructure and ad hoc networks different?.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 59 Finding the signal strength.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

..... 60 How can I improve wireless signal strength? ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 61 Can I use my printer on a USB and a network connection at the same time?....

.....
.....
.....
.....
.....
.....

.... 62 What is a MAC address?.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 62 How do I find the MAC address? .

.....
.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 62 What is an IP address?...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

63 What is TCP/IP?

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
. 63 How do I locate IP addresses?

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... 63 How are IP addresses assigned?.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... 64 What is a key index?..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *64 Loading paper*.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..... *66 Loading paper*.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *66 Loading various paper types*.....

.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...66 Loading original documents on the scanner glass.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.70 Loading original documents into the Automatic Document Feeder.....

.....

.....

.....

.....

.....

.....

.....

...71 Using the automatic paper type sensor.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..73 Printing.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....74 Printing basic documents...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..74 Printing a document.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 74 Printing Web pages..

.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *74 Printing multiple copies of a document...*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

75 Contents 4 Collating printed copies....

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.... 75 Printing the last page first (reverse page order).....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
... 76 Printing multiple pages on one sheet (N-Up)..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.. 76 Printing documents from a memory card or flash drive ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
..... 77 Printing specialty documents.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....

96 Canceling scan jobs.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.96 Copying.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....98 Making copies....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
...98 Copying photos..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....98 Enlarging or reducing images...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
....98 Adjusting copy quality.

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

99 Making a copy lighter or darker....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....99 Collating copies using the printer control..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....100 Repeating an image on one page...

.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
....101 Contents 5 Copying multiple pages on one sheet (N-Up).

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....101 Canceling a copy job..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
102 Faxing.....

.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....103 Sending a fax.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...111 Installing print cartridges.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....111 Removing a used print cartridge .

.....
.....
.....

.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....112 Refilling print cartridges.

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....113 Using genuine Lexmark print cartridges....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..113 Aligning print cartridges ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..114 Cleaning the print cartridge nozzles..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..114 Checking ink levels.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....

...115 Wiping the print cartridge nozzles and contacts .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....116 Preserving the print cartridges .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...117 Cleaning the scanner glass.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....
.....
...117 Cleaning the exterior of the printer.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....117 Ordering supplies...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....118 Ordering print cartridges

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

118 Contents 6 Ordering paper and other supplies.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....119 Resetting to factory settings...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...119 Troubleshooting..

.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

121 Using the printer troubleshooting software (Windows only).....

.....
.....
.....

.....
.....
.....
.....

.....
.....

121 Setup troubleshooting.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

...121 Incorrect language appears on the display..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

....121 Power button is not lit .

.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...122 Software did not install.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...122 Page does not print.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

....123 Solving printer power problems .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

126 Removing and reinstalling the software

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.126 Enabling the USB port in Windows

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....

..127 Wireless troubleshooting.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....128 Wireless troubleshooting checklist

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.128 Printing a network setup page

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
....140 Wi-Fi indicator light is still orange .
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

..142 Wireless print server not installed

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

143 "Communication not available" message displays when printing wirelessly

.....
.....

.....
.....

.....
.....

.143 Communication with printer lost when connected to Virtual Private Network (VPN)...

.....
.....

.....
.....

.....
.....

.....144 Resetting the internal wireless print server to factory default settings

.....
.....
.....
.....
.....
.....
.....
.....

...144 Fax troubleshooting.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....144 Cannot send or receive a fax...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....144 Can send but not receive faxes....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

146 Can receive but not send faxes.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....147 Printer receives a blank fax.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....148 Received fax has poor print quality....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..148 Caller ID information is not displayed..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...149 Fax Error

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....

.....
.....
.....
.....

149 Fax Mode Unsupported.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....149 Remote Fax Error..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.....150 Phone Line Busy .

.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.150 Phone Line Error.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...151 No Answer ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.151 Failed to Connect....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....152 Contents 7 Notices....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

153 Product information....

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....153 Edition notice..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....153 European EC directives conformity statement for radio products..

.....
.....
.....
.....

.....
.....
.....
.....

.....156 Power consumption.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....163 Index....

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....

...168 Contents 8 Safety information Use only the power supply and power supply cord provided with this product or the manufacturer's authorized replacement power supply and power supply cord. Connect the power supply cord to a properly grounded electrical outlet that is near the product and easily accessible.

CAUTION--POTENTIAL INJURY: Do not twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If the power cord is misused, a risk of fire or electrical shock results. Inspect the power cord regularly for signs of misuse.

Remove the power cord from the electrical outlet before inspecting it. Use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. Refer service or repairs, other than those described in the user documentation, to a professional service person. This product is designed, tested, and approved to meet strict global safety standards with the use of specific Lexmark components. The safety features of some parts may not always be obvious. Lexmark is not responsible for the use of other replacement parts. CAUTION--SHOCK HAZARD: Do not use the fax feature during a lightning storm. Do not set up this product or make any electrical or cabling connections, such as the power supply cord or telephone, during a lightning storm. SAVE THESE INSTRUCTIONS. Safety information 9 Introduction Finding information about the printer Publications See the Quick Setup sheet For Initial setup instructions.

Printed Networking Guide / Fax Guide Additional setup instructions. Note: Your printer may not come with these publications. Electronic User's Guide Windows Help Complete instructions for using the printer.



[You're reading an excerpt. Click here to read official LEXMARK X6650 user guide](http://yourpdfguides.com/dref/1261502)
<http://yourpdfguides.com/dref/1261502>

The electronic version installs automatically with the printer software. Additional instructions for using the printer software on a Windows operating system. The Help installs automatically with the programs. 1 Do one of the following: · In Windows Vista, click . · In Windows XP and earlier, click Start. 2 Click All Programs or Programs, and then select the printer program folder from the list. 3 From the program, click Help to view the main page of the Help.

Click Mac Help Note: Your printer may not have support for Macintosh and may not have this Help. to view context-sensitive information. Additional instructions for using the printer software on a Macintosh operating system. The Help installs automatically with the applications. 1 From the Finder desktop, double-click the printer folder.

2 Double-click the application. 3 From the application, click Help on the menu bar to view the main page of the Help. Note: If you have several applications open, then make sure that the application that you want to use is the active application. The correct menu bar does not appear if the application is not active.

Click the main screen to make it the active application.

Click to view context-sensitive information. Introduction 10 Customer support Description Where to find (North America) Where to find (rest of world) Telephone numbers and support hours vary by country or region. Visit our Web site at www.lexmark.com. Select a country or region, and then select the Customer Support link. Note: For additional information about contacting Lexmark, see the printed warranty that came with your printer. Telephone support Call us at · US: 1-800-332-4120 MondayFriday (8:00 AM11:00 PM ET), Saturday (Noon6:00 PM ET) · Canada: 1-800-539-6275 Support in English: MondayFriday (8:00 AM11:00 PM ET), Saturday (Noon6:00 PM ET) Support in French: MondayFriday (9:00 AM7:00 PM ET) · Mexico: 01-800-253-9627 MondayFriday (8:00 AM8:00 PM ET) Note: Support numbers and times may change without notice. For the most recent telephone numbers available, see the printed warranty statement that came with your printer. E-mail support For e-mail support, visit our Web site: www.

[lexmark.com](http://www.lexmark.com). E-mail support varies by country or region, and may not be available in some instances. Visit our Web site at www.lexmark.com. Select a country or region, and then select the Customer Support link. Note: For additional information about contacting Lexmark, see the printed warranty that came with your printer. 1 2 3 4 5 Click SUPPORT. Click Technical Support.

Select your printer family. Select your printer model. From the Support Tools section, click eMail Support. Submit Request. 6 Complete the form, and then click Introduction 11 Limited Warranty Description Limited Warranty Information Lexmark International, Inc.

furnishes a limited warranty that this printer will be free of defects in materials and workmanship for a period of 12 months after the original date of purchase. Where to find (USA) To view the limitations and conditions of this limited warranty, see the Statement of Limited Warranty included with this printer, or set forth at www.lexmark.com. Where to find (rest of world) Warranty information varies by country or region.

See the printed warranty that came with your printer. 1 Click SUPPORT. 2 Click Warranty Information. 3 Click Statement of Limited Warranty for Inkjet & All-In-One Printers. 4 Scroll through the Web page to view the warranty. Record the following information (located on the store receipt and the back of the printer), and have it ready when you contact customer support so that they may serve you faster: . . . Machine Type number Serial number Date purchased

Store where purchased Introduction 12 Setting up the printer Granting access to the software during installation Third-party applications, including antivirus, security, and firewall programs may alert you about the printer software being installed. For your printer to work properly, you must grant access to the printer software. Setting up the printer as a copier only or fax only Use the following instructions if you do not want to connect the printer to a computer. Note: If you want to connect the printer to a computer, use the setup documentation and the printer software CD that came with the printer. 1 Unpack the printer.

Note: Contents, such as the number of print cartridges, may vary by model. 9 8 1 2 3 7 6 5 4 3 2 1 1 2 3 4 Power cord Telephone cord Printer software CD USB cable or installation cable Note: Your printer model may not come with a USB cable. Purchase a USB cable separately. 5 Networking Guide Note: Your printer model may not come with this publication. 6 Fax Guide Note: Your printer model may not come with this publication. 7 8 9 Quick Setup sheet Print cartridges Stick-on overlays for your language Setting up the printer 13 2 Remove tape and packing material from all areas of the printer. 3 Raise the printer control panel. 4 If a stick-on overlay for your language needs to be installed, peel off the covering from the back of the overlays to expose the adhesive. 5 Place the stick-on overlays on the recessed areas of the printer control panel, and then press down on the stick-on overlays. Setting up the printer 14 6 Extend the paper exit tray.

2 1 7 Raise the paper support, and then press down on the paper adjustment lever to extend the paper guides. 8 Load paper, and then pull up the paper adjustment lever to adjust the paper guides. The paper guides should rest against the edges of the paper. 1 2 Setting up the printer 15 9 Connect the power cord to the printer. 2 1 CAUTION--SHOCK HAZARD: Read the safety information included with this product before connecting power or making any cabling connections.

10 If the printer does not automatically turn on, press . 11 If prompted, set the language. 1 2 1 . Press the arrow buttons until the language that you want appears, and then press 12 If prompted, set the country/region. 1 2 1 .

Press the arrow buttons until the country or region that you want appears, and then press Setting up the printer 16 13 Set the date and time. a Using the keypad of the printer control panel, enter the month, day, and year, and then press b Enter the time, and then press to save. c Press the arrow buttons to choose a time format, and then press to save. 14 Set the fax number and fax name. a Enter a fax number, and then press to save. b Enter a fax name, and then press to save. 15 Open the printer, and then press down on the print cartridge carrier levers. to save. 16 Open the color cartridge foil, and then remove the cartridge from the pack. 17 If a storage unit is included, remove the color cartridge from the storage unit.



[You're reading an excerpt. Click here to read official LEXMARK X6650 user guide](http://yourpdfguides.com/dref/1261502)

<http://yourpdfguides.com/dref/1261502>

2 1 Setting up the printer 17 18 Remove the tape from the color print cartridge, insert the cartridge in the right carrier, and then close the color cartridge carrier lid. 19 If a black print cartridge is included in the box contents, open the black cartridge foil, and then remove the cartridge from the pack. Note: You may need to purchase a black print cartridge separately. Setting up the printer 18 20 Remove the tape from the black print cartridge, insert the cartridge in the left cartridge carrier, and then close the black cartridge carrier lid. 21 Close the printer. 22 Press . An alignment page prints. Setting up the printer 19 23 Discard or recycle the alignment page. Notes: · The alignment page may differ from the one shown. · Streaks on the alignment page are normal and do not indicate a problem.

Understanding the parts of the printer 4 5 6 7 8 9 WP 3 2 1 1 IN TIN R F G I 15 10 W PRIN I TING F I 14 11 12 13 Use the 1 2 3 4 5 Paper adjustment lever Paper support Paper guides Paper feed guard Automatic Document Feeder (ADF) To Adjust the paper guides. Load paper. Keep paper straight when feeding. Prevent items from falling into the paper slot. Scan, copy, or fax multiple-page letter-, legal-, and A4-size documents.

Setting up the printer 20 Use the 6 Automatic Document Feeder (ADF) tray To Load original documents in the ADF. Recommended for scanning, copying, or faxing multiple-page documents. Note: Do not load postcards, photos, small items, or thin media (such as magazine clippings) into the ADF. Place these items on the scanner glass. 7 8 9 10 11 12 Automatic Document Feeder (ADF) output tray Hold documents as they exit from the ADF.

Automatic Document Feeder (ADF) paper guide Keep paper straight when feeding into the ADF. Printer control panel Paper exit tray Memory card slots Quick Connect laptop port Operate the printer. Hold paper as it exits. Insert a memory card. Connect a laptop computer to the printer using a USB Note: Your printer model may not have this port. cable. Warning--Potential Damage: Do not touch the USB port except when plugging in or removing a USB cable or installation cable. Card reader light PictBridge port Wi-Fi indicator Note: Your printer model may not have wireless capability and may not have this indicator. Check card reader status. The light blinks to indicate that a memory card is being accessed.

Connect a PictBridge-enabled digital camera or a flash drive to the printer. Check wireless status: 13 14 15 · Off indicates that the printer is turned off, is powering up, or is in Power Saver mode. In Power Saver mode, the power light pulses on and off. · Orange indicates that the printer has not yet been configured for a wireless network. indicates that the printer is configured for an ad hoc connection, but is not communicating with another ad hoc device. · Orange blinking indicates that the printer is configured but is unable to communicate with the wireless network. · Green indicates that the printer is connected to a wireless network. Setting up the printer 21 1 2 5 6 7 3 4 8 9 Use the 1 2 3 Top cover Scanner glass Scanner unit To Access the scanner glass. Scan and copy photos and documents. · Access the print cartridges.

· Remove paper jams. Install, replace, or remove a print cartridge. Connect additional devices, such as a data/fax modem, telephone, or answering machine, to the printer. This connection method may not be available in all countries or regions. Note: Remove the plug to access the port.

4 5 Print cartridge carrier EXT Port EXT 6 LINE Port Connect the printer to an active telephone line to send and receive faxes. The printer must be connected to a telephone line to receive incoming fax calls. Note: Do not connect additional devices to the LINE port, and do not connect a DSL (digital subscriber line), ISDN (integrated services digital network), or cable modem to the printer. LINE 7 Power supply with port Connect the printer to a power source. Setting up the printer 22 Use the 8 Rear USB port To Connect the printer to a desktop computer using a USB cable.

Warning--Potential Damage: Do not touch the USB port except when plugging in or removing a USB cable or installation cable. 9 Internal wireless print server Note: Your printer model may not have wireless capability and may not have this print server. Connect the printer to a wireless network. Using the printer control panel buttons and menus Using the printer control panel The printer control panel contains: · Power on/off button · Two-line display that shows the printer status, messages, and menus · 27 buttons ON COPY SCAN FAX PHOT O The following diagrams explain the sections of the printer control panel: Setting up the printer 23 11 10 9 8 7 123 4 5 6 Press 1 Setup To Access the setup menu and change printer settings. Note: The Copy, Scan, and Photo button lights are off when this button is selected. 2 3 Address Book Access fax numbers from a saved list of numbers. Redial/Pause In Fax mode: · Insert a three-second pause in the number to be dialed to wait for an outside line or get through an automated answering system. Enter a pause only when you have already begun entering the number. · Display the last number dialed. Press the arrow buttons to view the last five numbers dialed.

4 5 Dialtone Keypad Dial the telephone number manually using the keypad before sending the fax. In Copy mode or Photo mode: Enter the number of copies or prints you want to make. In Fax mode: · · · · 6 Display Enter fax numbers. Navigate an automated answering system. Select letters when creating a Speed Dial list. Type numbers to enter or edit the date and time shown on the display. View: · Printer status · Messages · Menus Notes: · The display times out after two minutes of inactivity. Press any button to restore the display. · The display is turned off in Power Saver mode. 7 8 9 Access the photo menu and print photos.

Access the fax menu and send faxes. Access the scan menu and scan documents. Setting up the printer 24 Press 10 11 To Access the copy menu and make copies. · Turn the printer on and off. · Switch to Power Saver mode.

Note: Press to switch to Power Saver mode. Press and hold turn off the printer. 7 6 for two seconds to 1 2 3 4 5 Press 1 To · · · · · · · · · · Decrease a number. Delete a letter or number. Move the cursor one place to the left.

Scroll through menus, submenus, or settings on the display. Select a menu item that appears on the display. Save settings.



[You're reading an excerpt. Click here to read official LEXMARK](http://yourpdfguides.com/dref/1261502)

[X6650 user guide](http://yourpdfguides.com/dref/1261502)

<http://yourpdfguides.com/dref/1261502>

Move one level deeper in a submenu. Feed or eject paper. Press and hold printer. for 3 seconds to feed or eject paper from the 2 3 · Increase a number. · Move the cursor one place to the right. · Scroll through menus or settings on the display. · Return to the previous screen.

· Exit from one menu level to a higher one. Setting up the printer 4 25 Press 5 To · Cancel a print, copy, scan, or fax job in progress. · Exit from a menu level of the Copy, Scan, Fax, Photo, or File Print menu to the top level of a menu. · Exit from a menu level of the Setup menu to the top level of the previous mode. · Clear current settings or error messages, and return to default settings. 6 7 Color / Black Switch to color mode or black-and-white mode. Start a print, scan, or copy job, depending on which mode is selected. Using the printer menus A number of menus are available to make it easy for you to change printer settings: Setting up the printer 26 Menus List Setup menu Maintenance Photo menu Note: The Photo menu is enabled only when you insert a memory device into the printer. Easy Photo · Ink Levels Clean Cartridges Align Cartridges Print Test Page Language Country Date/Time Host Fax Settings Button Beep Power Saver Clear Settings Timeout Address Book Reports Ringing and Answering Fax Printing Dialing and Sending Fax Blocking Device Setup · Print · Paper Size · Photo Size Print Photos Fax Setup · Print Lighter/Darker Photo Effects Paper Size Photo Size Paper Type Layout Quality Print Last 20 Print All Print Date Range Scan Sheet Proof Sheet Network Setup (appears only if the printer has an Save Photos · Computer (appears only if the printer is connected directly to internal wireless print server) a computer) · Print Setup Page · Wi-Fi Protected Setup Wireless Information TCP/IP Network Time File Print Reset Network Adapter Defaults Paper Size Paper Type Photo Print Size Set Defaults · Network (appears only if the printer is connected to a network) · USB Flash Drive · Memory Card Select Computer (appears only if the printer is connected to a network) Defaults Setting up the printer 27 Copy menu Copies Quality Lighter/Darker Resize Original Size Photo Reprint Collate Pages per Sheet Copies per Sheet Content Type Scan menu Scan to Fax menu Fax to Quality PictBridge menu Note: The PictBridge menu is enabled only when you insert a PictBridge-enabled camera into the printer. Photo Size Paper Size Paper Type Layout Quality · Computer · Network (appears only if the printer is connected to a network) · USB Flash Drive · Memory Card Quality Original Size · Standard Fine Superfine Ultrafine Lighter/Darker Original Size · Letter · A4 Schedule Fax · Send Now · Send Later · View Pending Address Book Note: The File Print menu is enabled when you insert a flash drive that contains document files into the printer. The menu is composed of the folders and files stored on the flash drive. Saving settings You can set the default paper size, paper type, and photo print size for the documents and photos that you print. Note: These default settings apply only to print, copy, and scan jobs that you initiate from the printer. 1 From the printer control panel, press Paper Size appears on the display. . 2 Press the arrow buttons until Defaults appears, and then press 3 Press again. 4 Press the arrow buttons to select the default paper size for the printer, and then press 5 Press the arrow buttons until Paper Type appears, and then press . 6 Press the arrow buttons to select the default paper type for the printer, and then press 7 Press the arrow buttons until Photo Print Size appears, and then press . 8 Press the arrow buttons to select the default photo print size for the printer, and then press 9 Press until you exit Setup, or press another mode button. · Changing temporary settings into new default settings The printer has default temporary settings for the menus. The printer reverts to these default temporary settings after two minutes of inactivity or after the printer is turned off: Setting up the printer 28 Temporary settings Copy menu · Copies Resize Lighter/Darker Quality Copies per Sheet Pages per Sheet Original Size Content Type Scan menu · Quality · Original Size · Lighter / Darker · Quality The following Photo options will not time out after two minutes of inactivity or after turning off the power but will return to the default factory settings when a memory card or flash drive is removed. Fax menu Photo menu · Photo Effects Photo Size Layout Quality To change the temporary settings into new default settings 1 From the printer control panel, press . . . 2 Press the arrow buttons until Defaults appears, and then press Use Current appears on the display. 3 Press the arrow buttons until Set Defaults appears, and then press 4 Press 5 Press again.

until you exit Setup, or press another mode button. To disable the settings timeout feature You can disable the settings timeout feature if you do not want the printer to revert to the default temporary settings after two minutes of inactivity or after turning off the printer. 1 From the printer control panel, press . . . 2 Press the arrow buttons until Device Setup appears, and then press 3 Press the arrow buttons until Clear Settings Timeout appears, and then press 4 Press the arrow buttons until Never appears, and then press 5 Press until you exit Setup, or press another mode button. · Setting up the printer 29 Changing the Power Saver timeout You can customize the Power Saver timeout of the printer. The Power Saver timeout is the time it takes for the printer to switch to Power Saver mode when the printer is left idle. Change the Power Saver timeout to avoid interruptions when doing multiple jobs on your printer. 1 From the printer control panel, press . . . 2 Press the arrow buttons until Device Setup appears, and then press 3 Press the arrow buttons until Power Saver appears, and then press 4 Press the arrow buttons to select a Power Saver timeout, and then press Note: If you want to be efficient on power usage, then select the minimum Power Saver timeout from the options.



[You're reading an excerpt. Click here to read official LEXMARK X6650 user guide](http://yourpdfguides.com/dref/1261502)
<http://yourpdfguides.com/dref/1261502>

If you do not want to turn the printer back on from Power Saver mode as often, then select the maximum Power Saver timeout. 5 Press until you exit Setup, or press another mode button. Using the printer software Installing printer software Using Windows 1 Close all open software programs. 2 Insert the installation software CD. If the Welcome screen does not appear after a minute, do one of the following: In Windows Vista a Click .
b In the Start Search box, type D:\setup.exe, where D is the letter of your CD or DVD drive. In Windows XP and earlier a Click Start. b Click Run. c Type D:\setup.exe, where D is the letter of your CD or DVD drive. 3 Follow the instructions on the Welcome screen to set up the printer. Using Macintosh 1 Close all open software applications. 2 Insert the installation software CD. If the Welcome screen does not appear after a minute, click the CD icon on the desktop.

3 Double-click Install. 4 Follow the instructions on the Welcome screen to set up the printer. Setting up the printer 30 Using the World Wide Web 1 Go to the Lexmark Web site at www.lexmark.com. 2 From the home page, navigate through the menu selection, and then click Drivers & Downloads. 3 Choose the printer and the printer driver for your operating system. 4 Follow the instructions on the screens to download the driver and install the printer software. Installing the optional XPS driver (Windows Vista users only) The XML Paper Specification (XPS) driver is an optional printer driver designed to make use of the advanced XPS color and graphics features that are available only for Windows Vista users. To use XPS features, you must install the XPS driver as an additional driver after you install the regular printer software.

Notes: · The XPS driver is supported only in Windows Vista Service Pack 1 or later. · Before installing the XPS driver, you must install the printer on your computer. · To install the XPS driver, you must have administrator privileges on the computer. To extract the driver: 1 Insert the installation software CD, and then click Cancel when the Setup Wizard appears. 2 Click Computer.

3 Double-click the CD or DVD drive icon, and then double-click Drivers. 4 Double-click the xps folder, and then double-click the setupxps file. The XPS driver files are extracted and copied to your computer, and any required Microsoft XPS files are launched. Follow the instructions on the computer screen. To install the XPS driver: 1 Click Control Panel.

2 Under Hardware and Sound, click Printer, and then click Add a Printer. 3 From the Add Printer dialog, click Add a local printer. 4 From the "Use an existing port" drop-down menu, select Virtual printer port for USB, and then click Next. 5 Click Have disk. The Install From Disk dialog appears. 6 Click Browse, and then navigate to the XPS driver files on your computer: a Click Computer, and then double-click (C:). b Double-click the folder that has your printer model number, and then double-click Drivers. c Double-click the xps folder, and then double-click the xps file. The Install From Disk dialog appears. d Click OK.

7 Click Next on the two additional dialogs that appear. For more information on the XPS driver, see the XPS readme file on the installation software CD. The file is located in the xps folder with the setupxps batch file (<CD drive>:\Drivers\xps\readme). Setting up the printer 31 Using the Windows printer software

When you set up the printer using the printer software CD, all the necessary software was installed. You may have chosen to install some additional programs. The following table provides an overview of various software programs and what they can help you do. Note: Your printer may not come with some of these programs or some of the functions of these programs, depending on the features of the printer that you purchased. Use the Lexmark™ Productivity Studio To Scan, copy, fax, e-mail, or print a photo or document. Manage and edit photos. Transfer photos.

Scan documents to PDF format. Create posters and photo greeting cards from your own photos. Adjust settings for the printer. Lexmark Fast Pics Manage, edit, transfer, and print photos and documents. Note: This program is installed automatically with the printer software if you choose not to install the Lexmark Productivity Studio.

Lexmark Toolbar Print black or text-only Web pages to save ink. Schedule automatic printing of Web pages. Access Picnik and edit photos online. Print, scan, or convert local files from Windows. Lexmark Tools for Office Lexmark Fax Solutions Access your favorite settings in Microsoft Office 2007.

Send a fax. Receive a fax in three-in-one printers. Add, edit, or delete contacts in the built-in phone book. Access the Lexmark Fax Setup Utility in four-in-one printers. Use the Lexmark Fax Setup Utility to set the Speed Dial and Group Dial numbers, set Ringing and Answering, and print fax history and status reports. Abbyy Sprint OCR Lexmark Wireless Setup Utility Scan a document and produce text that you can edit with a word-processing program. · Set up the wireless printer on a wireless network. · Change the wireless settings of the printer. Note: This program is installed automatically with the printer software if the printer has wireless capability. Setting up the printer 32 Use the Lexmark Service Center To · Troubleshoot the printer.

· Access the printer maintenance functions. · Contact customer support. Notes: · This program is installed automatically with the printer software. · You may be prompted to install this program from the Web, depending on your printer model. Printing Preferences When you select File Print with a document open and then click Properties, a Printing Preferences dialog appears. The dialog lets you select options for the print job such as the following: Select the number of copies to be printed. Print two-sided copies. Select the paper type. Add a watermark. Enhance images.

Save settings. Note: Printing Preferences is installed automatically with the printer software. If you have not installed these additional programs during initial installation, reinsert the installation software CD, run the installation software, and then select Install Additional Software from the Software Already Installed screen. Using the Macintosh printer software Use the Print dialog Printer Services dialog To Adjust the print settings and schedule print jobs.

· Access the printer utility.

Troubleshoot. Order ink or supplies. Contact Lexmark. Contact us. Check the printer software version installed on the computer.

Applications are also installed with the printer software during installation.



[You're reading an excerpt. Click here to read official LEXMARK X6650 user guide](http://yourpdfguides.com/dref/1261502)
<http://yourpdfguides.com/dref/1261502>

These applications are saved in the printer folder that appears on the Finder desktop after installation. 1 From the Finder desktop, double-click the printer folder. 2 Double-click the icon of the application that you want to use. Use the Lexmark All-In-One Center To · Scan photos and documents. · Customize settings for scan jobs. Setting up the printer 33 Use the Lexmark Fax Setup Utility To · Customize settings for fax jobs. · Create and edit the Speed Dial list. · View the contents of a memory device inserted into a network printer. · Transfer photos and documents from a memory device to the computer over a network.

Lexmark Network Card Reader Lexmark Printer Utility · · · · · Get help with cartridge installation. Print a test page. Print an alignment page. Clean the print cartridge nozzles. Order ink or supplies. Register the printer. Contact customer support. Lexmark Wireless Setup Assistant Set up the printer on a wireless network. Note: Your printer may not come with these applications, depending on the features of the printer that you purchased. Switching between the rear USB port and the Quick Connect laptop port (selected models only) If the printer is connected to a desktop computer through the rear USB port and you decide to connect a laptop computer to the printer through the Quick Connect laptop port, then the Quick Connect laptop port connection overrides the rear USB port connection.

The active print jobs on the desktop computer may be canceled. Pause or cancel active jobs on the desktop computer before switching between ports. Switching from a desktop computer to a laptop computer 1 Pause or cancel active jobs on the desktop computer. 2 Connect a USB cable to the laptop computer and then to the Quick Connect laptop port on the front of the printer. Warning--Potential Damage: Do not plug in or remove the USB cable from the Quick Connect laptop port while a memory device is being accessed by the printer.

3 If you have not yet installed the printer software on the laptop, then install it. Using Windows a Insert the installation software CD. b Wait for the Welcome screen to appear. If the Welcome screen does not appear after a minute, do one of the following: In Windows Vista 1 Click . 2 In the Start Search box, type D:\setup.

exe, where D is the letter of your CD or DVD drive. Setting up the printer 34 In Windows XP and earlier 1 Click Start. 2 Click Run. 3 Type D:\setup.exe, where D is the letter of your CD or DVD drive. c Follow the instructions on the computer screen. Using Macintosh a Insert the installation software CD. b Wait for the Welcome screen to appear. Note: If the Welcome screen does not appear after a minute, then click the CD icon on the desktop. c Double-click Install.

d Follow the instructions on the computer screen. Getting the printer ready to fax CAUTION--SHOCK HAZARD: Do not use the fax feature during a lightning storm. Do not set up this product or make any electrical or cabling connections, such as the power supply cord or telephone, during a lightning storm. Using an RJ11 adapter Country/region · · · · · United Kingdom Ireland Finland Norway Denmark · · · · · Italy Sweden Netherlands France Portugal To connect your printer to an answering machine or other telecommunications equipment, use the telephone line adapter included in the box with the printer. 1 Connect one end of the telephone cord into the Line port of the printer. Setting up the printer 35 2 Connect the adapter to the telephone line that came with the printer. Note: The UK adapter is shown. Your adapter may look different, but it will fit the telephone outlet used in your location. 3 Connect the telephone line of your chosen telecommunications equipment to the left outlet of the adapter. If your telecommunications equipment uses a US-style (RJ11) telephone line, follow these steps to connect the equipment: 1 Remove the plug from the EXT port on the back of the printer.

Note: Once this plug is removed, any country- or region-specific equipment you connect to the printer by the adapter, as shown, will not function properly. Setting up the printer 36 2 Connect your telecommunications equipment directly to the EXT port on the back of the printer. Warning--Potential Damage: Do not touch cables or the printer in the area shown while actively sending or receiving a fax. Country/region · · · · · Saudi Arabia United Arab Emirates Egypt Bulgaria Czech Republic Belgium Australia South Africa Greece · · · · · Israel Hungary Poland Romania Russia Slovenia Spain Turkey To connect an answering machine or other telecommunications equipment to the printer: 1 Remove the plug from the back of the printer. Note: Once this plug is removed, any country- or region-specific equipment that you connect to the printer by the adapter, as shown, will not function properly.

Setting up the printer 37 2 Connect your telecommunications equipment directly to the EXT port on the back of the printer. Warning--Potential Damage: Do not touch cables or the printer in the area shown while actively sending or receiving a fax. Country/region · Germany · Austria · Switzerland There is a plug installed in the EXT port of the printer. This plug is necessary for the proper functioning of the printer. Note: Do not remove the plug.

If you remove it, other telecommunications devices in your home (such as telephones or answering machines) may not work. Choosing a fax connection You can connect the printer with equipment such as a telephone, an answering machine, or a computer modem. If problems occur, see "Setup troubleshooting" on page 121. Note: The printer is an analog device that works best when directly connected to the wall jack. Other devices (such as a telephone or answering machine) can be successfully attached to pass through the printer, as described in the setup steps. If you want a digital connection such as ISDN, DSL, or ADSL, a third-party device (such as a DSL filter) is required. You do not need to attach the printer to a computer, but you do need to connect it to a telephone line to send and receive faxes. Setting up the printer 38 You can connect the printer to other equipment. See the following table to determine the best way to set up the printer. Equipment Benefits Send and receive faxes without using a computer.

See this section "Connecting directly to a telephone wall jack" on page 40 "Connecting to a telephone" on page 43 · The printer · A telephone cord · The printer · A telephone · Two telephone cords · · · · · The printer A telephone An answering machine Three telephone cords The printer A telephone A computer modem Three telephone cords · Use the fax line as a normal telephone line.



[You're reading an excerpt. Click here to read official LEXMARK X6650 user guide](http://yourpdfguides.com/dref/1261502)
<http://yourpdfguides.com/dref/1261502>

· Send and receive faxes without using a computer. Receive both incoming voice messages and "Connecting to an answering faxes. machine" on page 39
Send faxes using the computer or the printer. "Connecting to a computer with a modem" on page 42 Connecting to an answering machine Connect an answering machine to the printer to receive both incoming voice messages and faxes. Note: Setup steps may vary depending on your country or region. For more information on connecting the printer to telecommunications equipment, see the related topic, "Using an RJ11 adapter." 1 Make sure you have the following: · A telephone · An answering machine · Three telephone cords · A telephone wall jack 2 Connect one telephone cord into the LINE port jack of the printer, and then plug it into an active telephone wall Setting up the printer 39 3 Remove the protective plug from the EXT port of the printer. 4 Connect a second telephone cord from the telephone to the answering machine.

5 Connect a third telephone cord from the answering machine to the EXT port of the printer. Connecting directly to a telephone wall jack Connect the printer directly to a telephone wall jack to send and receive faxes without using a computer. 1 Make sure you have a telephone cord and a telephone wall jack. 2 Connect one end of the telephone cord into the LINE port of the printer. Setting up the printer 40 3 Connect the other end of the telephone cord into an active telephone wall jack.

Connecting directly to a telephone wall jack in Germany Connect the printer directly to a telephone wall jack to send and receive faxes without using a computer. 1 Make sure you have a telephone cord (provided with the product) and a telephone wall jack. 2 Connect one end of the telephone cord into the LINE port of the printer. 3 Connect the other end of the telephone cord into the N slot of an active telephone wall jack. 4 If you would like to use the same line for both fax and telephone communication, connect a second telephone line (not provided) between the telephone and the F slot of an active telephone wall jack.

Setting up the printer 41 5 If you would like to use the same line for recording messages on your answering machine, connect a second telephone line (not provided) between the answering machine and the other N slot of the telephone wall jack. Connecting to a computer with a modem Connect the printer to a computer with a modem to send faxes from the software application. Note: Setup steps may vary depending on your country or region. For more information on connecting the printer to telecommunications equipment, see the related topic, "Using an RJ11 adapter." 1 Make sure you have the following: · A telephone · A computer with a modem · Two telephone cords · A telephone wall jack 2 Connect a telephone cord into the LINE port of the printer, and then plug it into an active telephone wall jack. Setting up the printer 42 3 Remove the protective plug from the EXT port of the printer. 4 Connect a second telephone cord from the computer modem to the EXT port of the printer. Connecting to a telephone Connect a telephone to the printer to use the fax line as a normal telephone line. Then set up the printer wherever your telephone is located to make copies or to send and receive faxes without using a computer. Note: Setup steps may vary depending on your country or region.

For more information on connecting the printer to telecommunications equipment, see the related topic, "Using an RJ11 adapter." 1 Make sure you have the following: · A telephone · Two telephone cords · A telephone wall jack 2 Connect one telephone cord to the LINE port of the printer, and then plug it into an active telephone wall jack. Setting up the printer 43 3 Remove the protective plug from the EXT port of the printer. 4 Connect the other telephone cord to a telephone, and then plug it into the EXT port of the printer. Using a digital phone service The fax modem is an analog device. Certain devices can be connected to the printer so that digital telephone services can be used. · If you are using an ISDN telephone service, connect the printer to an analog telephone port (an R-interface port) on an ISDN terminal adapter. For more information and to request an R-interface port, contact your ISDN provider. · If you are using DSL, connect to a DSL filter or router that will support analog use. For more information, contact your DSL provider.

· If you are using a PBX telephone service, make sure you are connecting to an analog connection on the PBX. If none exists, consider installing an analog telephone line for the fax machine. For more information on faxing when using a PBX telephone service, see the related topic, "Setting up to fax while behind a PBX." Setting up the printer 44 Installing the printer on a wireless network (selected models only) Wireless network compatibility Your printer contains an IEEE 802.11g wireless print server.

Your printer is compatible with IEEE 802.11 b/g/n routers that are Wi-Fi certified. If you are having issues with an n router, verify with your router manufacturer that the current mode setting is compatible with g devices, as this setting varies depending on the router brand/model. Information you will need to set up the printer on a wireless network To set up the printer for wireless printing, you need to know: · The name of your wireless network. This is also known as the Service Set Identifier (SSID).

· If encryption was used to secure your network. · The security key (either a WEP key or WPA passphrase) that allows other devices to communicate on the network if encryption was used to secure your network. You can locate your network WEP key or WPA passphrase by accessing your wireless access point or router and checking the security information. If your wireless access point (wireless router) is using Wired Equivalent Privacy (WEP) security, the WEP key should be: · Exactly 10 or 26 hexadecimal characters. Hexadecimal characters are AF, af, and 09. or · Exactly 5 or 13 ASCII characters. ASCII characters are letters, numbers, punctuation, and symbols found on a keyboard. If your wireless access point is using Wi-Fi Protected Access (WPA) security, the WPA passphrase should be: · From 8 to 63 ASCII characters. ASCII characters in a WPA passphrase are case-sensitive. or · Exactly 64 hexadecimal characters.

Hexadecimal characters are A-F, a-f, and 0-9. If your wireless network is not using security, then you will not have a security key. Note: If you do not know the SSID of the network that your computer is connected to, launch the wireless utility of the computer network adapter and look for the network name.



[You're reading an excerpt. Click here to read official LEXMARK](http://yourpdfguides.com/dref/1261502)

[X6650 user guide](http://yourpdfguides.com/dref/1261502)

<http://yourpdfguides.com/dref/1261502>

If you cannot find the SSID or the security information for your network, see the documentation that came with the wireless access point, or contact your system support person. Installing the printer on a wireless network Before you install the printer on a wireless network, make sure that: · Your wireless network is set up and working properly. · The computer you are using is connected to the same wireless network where you want to set up the printer. Installing the printer on a wireless network (selected models only) 45 Using Windows 1 Insert the installation software CD. If the Welcome screen does not appear after a minute, do one of the following: In Windows Vista a Click . b In the Start Search box, type D:\setup.exe, where D is the letter of your CD or DVD drive.

In Windows XP and earlier a Click Start. b Click Run. c Type D:\setup.exe, where D is the letter of your CD or DVD drive. 2 Follow the instructions on the Welcome screen to set up the printer.

Using Macintosh 1 Insert the installation software CD. If the Welcome screen does not appear after a minute, click the CD icon on the desktop. 2 Double-click Install. 3 Follow the instructions on the Welcome screen to set up the printer. Installing the printer on other computers Once the printer is set up on the wireless network, it can be accessed wirelessly by any other computer on the network.

However, you will need to install the printer driver on every computer that will access it. You do not need to configure the printer again, although you will need to run the setup software on each computer to install the driver. Using Windows 1 Insert the installation software CD. 2 Wait for the Welcome screen to appear. If the Welcome screen does not appear after a minute, do one of the following: In Windows Vista a Click . b In the Start Search box, type D:\setup.exe, where D is the letter of your CD or DVD drive. In Windows XP and earlier a Click Start. b Click Run. c Type D:\setup.

exe, where D is the letter of your CD or DVD drive. Installing the printer on a wireless network (selected models only) 46 3 Follow the on-screen instructions for installing a configured printer on a new computer. Using Macintosh 1 Insert the installation software CD. 2 Wait for the Welcome screen to appear. Note:

If the Welcome screen does not appear after a minute, click the CD icon on the desktop. 3 Double-click Install. 4 Follow the on-screen instructions for installing a configured printer on a new computer. Interpreting the colors of the Wi-Fi indicator light The colors of the Wi-Fi indicator light show the network status of the printer. · Off means one of the following: The printer is turned off or is powering up. The printer is not connected to a wireless network and is in Power Saver mode.

In Power Saver mode, the power light pulses on and off. · Orange means one of the following: The printer has not yet been configured for a wireless network. The printer is configured for an ad hoc connection, but it is not currently communicating with another ad hoc device. · Blinking orange means one of the following: The printer is out of the range of the wireless access point (wireless router). The printer is trying to communicate with the wireless access point, but the wireless access point is turned off or not working properly.

Either the configured printer or the wireless access point has been turned off and back on, and the printer is trying to establish communications with the network. The wireless settings of the printer may no longer be valid. · Green means that the printer is connected to a wireless network and is ready for use. ·

Blinking green means that the printer internal print server is being updated. Special wireless installation instructions The following instructions apply to customers using a LiveBox, AliceBox, N9UF Box, FreeBox, or Club Internet.

Before you begin · Make sure your box is wireless-enabled and activated to work on a wireless network. For more information about configuring the box to work wirelessly, see the documentation that came with your box. · Make sure your box is turned on and that your computer is on and connected to your wireless network. Installing the printer on a wireless network (selected models only) 47 Adding the printer to your wireless network 1 Set up your printer using the setup instructions provided. 2 If there is an associate/registration button on the back of your box, press it when you are prompted to select a network. Note: After pressing the associate/register button, you have five minutes to complete the printer installation. 3 Return to the computer screen, and select the network you want to connect to. If you want to use the network shown, select Connect to <network name>, and then click Continue. If you do not want to use the network shown: a Select Connect to another network, and then click Continue. b Select the network you want to use from the list of available networks, and then click Continue.

4 Type the Network key, and then click Continue. Note: Your WEP, WPA, or WPA2 key may be obtained from the bottom of the box, the user's guide that came with the box, or from the box Web page. If you have already changed the key for your wireless network, use the key you created. 5 Follow the instructions on your screen to complete installation. Assigning a static IP address The printer will be assigned an IP address automatically through DHCP on most wireless networks. If the printer is not automatically assigned an IP address, the installation software will prompt you to manually assign an IP address to the printer.

This will occur if there is no server or router capable of automatically assigning DHCP addresses on your network. For more information, contact your system support person. Changing wireless settings after installation To change wireless settings on the printer, such as the configured network, the security key, or other settings: Using Windows 1 Do one of the following: · In Windows Vista, click . · In Windows XP and earlier, click Start.

2 Click All Programs or Programs, and then select the printer program folder from the list. 3 Click Tools Lexmark Wireless Setup Utility. Note: If the cable is not already connected, you may be prompted to connect the printer to the computer again using the installation cable as part of the setup process. 4 Follow the prompts on the computer screen to reinstall the software, and then make the changes that you want. Installing the printer on a wireless network (selected models only) 48 Using Macintosh 1 From the Finder desktop, double-click the printer folder.

2 Double-click Lexmark Wireless Setup Assistant. 3 Follow the instructions on the computer screen. Switching between USB and wireless connections (Windows only) You can change the way you access your printer depending on your needs.



[You're reading an excerpt. Click here to read official LEXMARK X6650 user guide](http://yourpdfguides.com/dref/1261502)
<http://yourpdfguides.com/dref/1261502>

The procedures below assume that you have configured your printer for one type of connection. See related topics on troubleshooting specific connection types if you encounter difficulties during configuration.

Using the printer wirelessly Select the connection type that describes how you currently access your printer: If the printer is currently set up locally (using USB connection) 1 Do one of the following: · In Windows Vista, click . · In Windows XP and earlier, click Start. 2 Click All Programs or Programs, and then select the printer program folder from the list. 3 Click Tools Lexmark Wireless Setup Utility. 4 Follow the instructions on the Welcome screen. Note: There is no need to remove the USB cable connecting the printer to the computer during wireless configuration. Using the printer locally (USB) Select the connection type that describes how you currently access your printer: If the printer is currently set up for wireless 1 Do one of the following: · In Windows Vista, click . · In Windows XP and earlier, click Start. 2 Click All Programs or Programs, and then select the printer program folder from the list. 3 Click Tools Lexmark Wireless Setup Utility.

4 Follow the on-screen instructions, attaching the USB cable when prompted to do so. 5 When prompted to choose a wireless network, select Choose Another Network. 6 Select Don't use wireless. 7 Follow the on-screen instructions to complete the setup. Installing the printer on a wireless network (selected models only) 49 Switching between USB and wireless connections (Macintosh only) You can change the way you access your printer depending on your needs. The procedures below assume that you have configured your printer for one type of connection. See related topics on troubleshooting specific connection types if you encounter difficulties during configuration. Using the printer wirelessly If the printer is currently set up locally (using USB connection) 1 From the Finder desktop, double-click the printer folder. 2 Double-click Lexmark Wireless Setup Assistant. 3 Follow the on-screen instructions for configuring the printer wirelessly.

Note: There is no need to remove the USB cable connecting the printer to the computer during wireless configuration. Using the printer locally (USB) If the printer is currently set up for wireless 1 Attach one end of a USB cable to the USB port on the back of the printer. Attach the other end to a USB port on the computer. 2 Add the printer: In Mac OS X version 10.5 a From the menu bar, click System Preferences.

b Click Print & Fax under the Hardware section. c Click +. d Select the printer from the list and click Add. In Mac OS X version 10.4 or earlier a From the Finder desktop, choose Go Applications Utilities depending on the operating system version you are using.

The Printer List dialog appears. Print Center or Printer Setup Utility, b Choose the printer you want to use. c Click Add. The Printer Browser appears. d Select your printer. e Click Add. 3 A second print queue will be created. Remove the wireless queue if you do not want to switch back to accessing the printer over a wireless connection. Installing the printer on a wireless network (selected models only) 50 Advanced wireless setup Creating an ad hoc wireless network The recommended way to set up your wireless network is to use a wireless access point (wireless router). A network set up this way is called an infrastructure network.

If you have an infrastructure network, you should configure the printer for use on that network. Note: The printer can communicate on only one wireless network at a time. Configuring the printer for an ad hoc wireless network will keep it from working on any other wireless network, either ad hoc or infrastructure. You can set up an ad hoc network if you: · Do not have an access point or wireless router · Do not already have a wireless network (but do have a wireless adapter for your computer) · Want to set up a standalone network between the printer and a computer with a wireless network adapter In Windows Vista 1 Click . 2 Click Control Panel. 3 Click Network and Internet. 4 Under Network and Sharing Center, click Connect to a Network. 5 In the Connect to a Network dialog, click Set up a wireless ad-hoc (computer-to-computer) network, and then click Next. 6 Follow the instructions in the "Set up a wireless ad hoc network" wizard. As part of the setup: a Create a network name or SSID for the network between the computer and your printer.

b Write down the name of your network. Be sure to use the exact spelling and capitalization. c Go to the Security Type list, select WEP, and then create a WEP key. WEP keys must be: · Exactly 10 or 26 hexadecimal characters. Hexadecimal characters are A-F, af, and 0-9. or · Exactly 5 or 13 ASCII characters. ASCII characters are letters, numbers, and symbols found on a keyboard d Write down the password for your network. Be sure to use the exact spelling and capitalization. Windows Vista will enable the ad hoc network for you. It will appear in the "Connect to a network" dialog under "Available networks," indicating that the computer is configured for the ad hoc network.

7 Close the Windows Control Panel and any remaining windows. 8 Insert the installation software CD, and follow the directions for wireless installation. Note: Do not connect the installation or network cables until instructed to do so by the setup software. 9 When the available networks are displayed, provide the network name and the security information you created in step 6. The installer will configure the printer for use with your computer. 10 Store a copy of your network name and security information in a safe place for future reference. Installing the printer on a wireless network (selected models only) 51 In Windows XP 1 Click Start. 2 Click Control Panel. 3 Click Network and Internet Connections. 4 Click Network Connections.

5 Right-click the icon for your wireless network connection. 6 Click Enable, if it appears in the pop-up menu. Note: If Enable does not appear, your wireless connection is already enabled. 7 Right-click the Wireless Network Connection icon. 8 Click Properties. 9 Click the Wireless Networks tab. Note: If the Wireless Networks tab does not appear, your computer has third-party software that controls your wireless settings. You must use that software to set up the ad hoc wireless network. For more information, see the documentation for the third-party software to learn how to create an ad hoc network. 10 Select the Use Windows to configure my wireless network settings check box.

11 Under Preferred Networks, delete any existing networks. a Select the network to be removed. b Click Remove to delete the network from the list. 12 Click Add to create an ad hoc network. 13 In the Network Name (SSID) box, type the name you want to give your wireless network.



[You're reading an excerpt. Click here to read official LEXMARK X6650 user guide](http://yourpdfguides.com/dref/1261502)

<http://yourpdfguides.com/dref/1261502>