



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG 32LB580V. You'll find the answers to all your questions on the LG 32LB580V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG 32LB580V
User guide LG 32LB580V
Operating instructions LG 32LB580V
Instructions for use LG 32LB580V
Instruction manual LG 32LB580V

Printing specification		Drawn	Checked	Approved
Signature		DanG.Park	Mina.Woo	Jongok.Kim
MMMMYYYY		Jan29/2014	Jan29/2014	Jan29/2014

1. Model Description				
Model name	LB58-2	Brand name	LG	Part number
2nd, 3rd Suffix	EU/VS	Product name	LB580V	MFL66027042 (Revision number) (1405-HE/VS)

2. Printing Specification	
1. Trim size (Format)	148 mm x 210 mm (A5)
2. Printing colors	
• Cover	1 Color (Black)
• Inside	1 Color (Black)
3. Book (Paper)	
• Cover	Uncoated, wood-free paper 150 g/m ²
• Inside	Uncoated, wood-free paper 60 g/m ²
4. Binding	Perfect binding
5. Language	ENG/GER/FRA/ITA/SPA/POR/NEO/GRC/SLN (8)
6. Number of pages	236

*This part contains Eco-hazardous substances (Pb, Cd, Hg, Cr6+, PBB, PBDE, etc.) within LG standard level.
Details should be followed Eco-SCM management standard (LG56-A 25X).
Especially, Part should be followed and controlled the following specification.
(1) Eco-hazardous substances test report should be submitted when Part certification test and First Mass Production.
(2) Especially, Don't use or contain lead(Pb) and cadmium(Cd) in ink.

3. Origin Notification			
LGDM :	Printed in Kazakhstan	LGKR :	Printed in Korea
LGSAZ :	Printed in Brazil	LGMA :	Printed in Poland
LGEGG :	Printed in Egypt	LGEMX :	Printed in Mexico
LGIL :	Printed in India	LGDMX :	Printed in Mexico
LGDN :	Printed in Indonesia	LGND :	Printed in China
LGSA :	Printed in Algeria	LGTH :	Printed in Thailand
		LGVN :	Printed in Vietnam
		LGWR :	Printed in Poland

4. Changes				
	Mar19/2014	DanG.Park	ENLE201618	Manual Drawing Update
No. Number	MMMMYYYY	Signature	ECO Number	Change Contents



[You're reading an excerpt. Click here to read official LG 32LB580V user guide](http://yourpdfguides.com/dref/5580527)
<http://yourpdfguides.com/dref/5580527>

Manual abstract:

A-2 ... A-23 Blank Front (Eng) 2 ... 21 22 Front (Ger) 2 ... 21 22 Front (Fre) 2 ... 21 22 Front (Ita) 2 ... 29 30 Front (Spa) 2 ... 21 22 Front (Por) 2 ... 21 22 Front (Ned) 2 ... 21 22 Front (Grk) 2 ... 21 22 Front (Sln) 2 ... 21 22 Part number Total pages : : MFL68027042 236 pages Back ... B-1 B-2 B-5 OWNER'S MANUAL * LED TV LB49** LB61** LB57** LB58** * LG LED TV applies LCD screen with LED backlights. Please read this manual carefully before operating your set and retain it for future reference. *vixá Slovenščina LANGUAGE B-1 SPECIFICATIONS COMMON SETTING UP THE TV A-3 SETTING UP THE TV Image shown may differ from your TV. @@@@When installing the wall mounting bracket, use the Rubber. @@@@Yy If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction. LNB Satellite IN (*Not Provided) English Connect the TV to a satellite dish to a satellite socket with a satellite RF cable (75 Ω). *vixá yy Please be sure to connect the TV to the AC-DC power adapter before connecting the TV's power plug to a wall power outlet. Français English Transmits the video and audio signals from an external device to the TV set. Connect the external device and the TV set with the euro scart cable as shown. For the best picture and audio quality, connect digital devices using an HDMI cable.**

Some separate cable is not provided. For more information of external device's connection, refer to the manual provided with each device. NOTE yy The external device connection may differ from the model. Yy Connect external devices to the TV regardless of the order of the TV port. Yy If you record a TV program on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR.

For more information of recording, refer to the manual provided with the connected device. Yy Refer to the external equipment's manual for operating instructions. Yy If you connect a gaming device to the TV, use the cable supplied with the gaming device. Yy In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear.

Yy In PC mode, some resolution settings may not work properly depending on the graphics card. Please read this manual carefully before operating your set and retain it for future reference. For more information about licenses, visit [www. ENGLISH OPEN SOURCE SOFTWARE NOTICE](http://www.englishopen.com) To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit [http://opensource](http://opensource.com). In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product. EXTERNAL CONTROL DEVICE SETUP To obtain the external control device setup information, please visit [www. SAFETY INSTRUCTIONS 3 SAFETY INSTRUCTIONS](http://www.safetyinstructions.com) Please read these safety precautions carefully before using the product.

ENGLISH WARNING Do yy not place the TV and/or remote control in the following environments: --A location exposed to direct sunlight --An area with high humidity such as a bathroom --Near any heat source such as stoves and other devices that produce heat --Near kitchen counters or humidifiers where they can easily be exposed to steam or oil --An area exposed to rain or wind --Near containers of water such as vases Otherwise, this may result in fire, electric shock, malfunction or product deformation. Do yy not place the product where it might be exposed to dust. This plug must remain readily attached and operable when TV is in use. Do yy not touch the power plug with wet hands. Additionally, if the cord pin is wet or covered with dust, dry the power plug completely or wipe dust off. you may be electrocuted due to excess moisture. Make sure to connect Mains cable to compliant AC mains socket with yy Grounded earth pin. (Except for devices which are not grounded on earth.) Otherwise possibility you may be electrocuted or injured. Insert power cable plug completely into wall socket otherwise if not secured yy completely into socket, fire ignition may break out.

Ensure the power cord does not come into contact with hot objects such as yy a heater. this may cause a fire or an electric shock hazard. Do yy not place a heavy object, or the product itself, on power cables. Otherwise, this may result in fire or electric shock. 4 SAFETY INSTRUCTIONS Bend antenna cable between inside and outside building to prevent rain yy from flowing in.

This may cause water damaged inside the Product and could give an electric shock. When mounting TV onto wall make sure to neatly install and isolate cabling yy from rear of TV as to not create possibility of electric shock /fire hazard. ENGLISH Des icca nt Do yy not plug too many electrical devices into a single multiple electrical outlet. Otherwise, this may result in fire due to over-heating. Do yy not drop the product or let it fall over when connecting external devices.

Otherwise, this may result in injury or damage to the product. Keep the anti-moisture packing material or vinyl packing out of the reach of yy children. anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital. additionally , vinyl packing can cause suffocation. Keep it out of the reach of children. Do yy not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury. Dispose of used batteries carefully to ensure that a small child does not yy consume them. Please seek Doctor- Medical Attention immediately if child consumes batteries.

Do yy not insert any metal objects/conductors (like a metal chopstick/cutlery/ screwdriver) between power cable plug and input Wall Socket while it is connected to the input terminal on the wall. @@ you may be electrocuted. @@@@ fire or electric shock accident can occur. @@You may be injured or the product can be damaged. @@ yy You may be electrocuted. @@It may cause a fire or a burn by a spark. @@ fire or electric shock accident can occur. Contact the service centre for check, calibration or repair. @@--The product has been impacted by shock --The product has been damaged --Foreign objects have entered the product --The product produced smoke or a strange smell This may result in fire or electric shock.



[You're reading an excerpt. Click here to read official LG 32LB580V user guide](http://yourpdfguides.com/dref/5580527)
<http://yourpdfguides.com/dref/5580527>

Unplug the TV from AC mains wall socket if you do not intend to use the TV for a long period of time.

Accumulated dust can cause fire hazard and insulation deterioration can cause electric leakage/shock/fire. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. Do not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall. CAUTION Install the product where no radio wave occurs.

There should be enough distance between an outside antenna and power lines to keep the former from touching the latter even when the antenna falls. this may cause an electric shock. 6 SAFETY INSTRUCTIONS Do not install the product on places such as unstable shelves or inclined surfaces. Also avoid places where there is vibration or where the product cannot be fully supported. Otherwise, the product may fall or flip over, which may cause injury or damage to the product.

If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury. If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop. Only use the attachments / accessories specified by the manufacturer. When installing the antenna, consult with a qualified service technician. If not installed by a qualified technician, this may create a fire hazard or an electric shock hazard. We recommend that you maintain a distance of at least 2 to 7 times the diagonal screen size when watching TV. If you watch TV for a long period of time, this may cause blurred vision. Only use the specified type of battery.

This could cause damage to the remote control. ENGLISH Do not mix new batteries with old batteries. This may cause the batteries to overheat and leak. batteries should not be exposed to excessive heat. For example, keep away from direct Sunlight, open fireplace and electric heaters. do not place non-rechargeable batteries in charging device. Make sure there are no objects between the remote control and its sensor. Signal from Remote Control can be interrupted due to external/internal lighting eg Sunlight, fluorescent lighting. If this occurs turn off lighting or darken viewing area. When connecting external devices such as video game consoles, make sure the connecting cables are long enough.

Otherwise, the product may fall over, which may cause injury or damage the product. Do not turn the product On/Off by plugging-in or unplugging the power plug to the wall outlet. (Do not use the power plug for switch.) It may cause mechanical failure or could give an electric shock. This is known as image sticking.

The warranty does not cover the product for image sticking. 1. Find the eyebolts position, remove the bolts first. 2. Mount the wall brackets with the bolts to the wall. 3. Make sure to keep the rope horizontal with the flat surface. 4. Connect the power cord to a wall outlet.

CAUTION Make sure that children do not climb on or hang on the TV. Brackets, bolts and ropes are not provided. You can obtain additional accessories from your local dealer. We recommend the use of LG's wall mount bracket. When you do not use LG's wall mount bracket, please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table. Separate purchase (Wall Mounting Bracket) Model VESA (A x B) Standard screw Number of screws Wall mount bracket Model VESA (A x B) Standard screw Number of screws Wall mount bracket 22LB49** 75 x 75 M4 X L10 4 LSW140B 32/39LB57** 32/39LB58** 200 x 200 M6 4 LSW240B MSW240 60LB58** 60LB61** 400 x 400 M6 4 LSW440B 28LB49** 100 x 100 M4 X L10 4 LSW140B 42/47/50LB57** 42/47/50/55LB58** 47/50/55LB61** 400 x 400 M6 4 LSW440B MSW240 ENGLISH 10 cm 10 cm 10 cm 10 cm Model VESA (A x B) Standard screw Number of screws Wall mount bracket A B 18 ASSEMBLING AND PREPARING CAUTION Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur. If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury.

Use an authorised LG wall mount and contact the local dealer or qualified personnel. Do not over tighten the screws as this may cause damage to the TV and void your warranty. Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty. Screw length from outer surface of back cover should be under 8mm. (only LB49**) Wall mount Pad NOTE Use the screws that are listed on the VESA standard screw specifications. The wall mount kit includes an installation manual and necessary parts. The wall mount bracket is not provided. You can obtain additional accessories from your local dealer. The length of screws may differ depending on the wall mount. Make sure to use the proper length. For more information, refer to the manual supplied with the wall mount. When attaching a wall mounting bracket to the TV, insert the wall mount spacers into the TV wall mount holes to adjust the vertical angle of the TV. (Only 42LB57**, 42LB58**) ENGLISH Back Cover Wall mount Pad Back Cover Standard screw : M4 x L10 Max. 8mm Wall Mount Spacer REMOTE CONTROL 19 REMOTE CONTROL The descriptions in this manual are based on the buttons on the remote control.

Please read this manual carefully and use the TV correctly. To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the and ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse. Or ENGLISH CAUTION Do not mix old and new batteries, as this may damage the remote control.

The remote control will not be included for all sales market. Make sure to point the remote control toward the remote control sensor on the TV. INFO Views the information of the current programme and screen. PAGE Moves to the previous or next screen. OPT 1 1 TELETEXT BUTTONS These buttons are used for teletext. (Only Italy) (Depending on model) REC/ Starts to record and displays record menu. (2 Colour buttons These access special functions in some menus. (Space) Opens an empty space on the screen keyboard. VIEW Moves to the previous or next screen. Views the information of the current programme and screen.

1 Colour buttons These access special functions in some menus. REC/ Starts to record and displays record menu. (Only Italy) (Depending on model) REC/ SLEEP AD APP/ USING THE USER GUIDE / MAINTENANCE 21 USING THE USER GUIDE User Guide allows you to more easily access the detailed TV information.



[You're reading an excerpt. Click here to read official LG 32LB580V user guide](#)

<http://yourpdfguides.com/dref/5580527>

1 Press the SMART button to access the Smart Home menu. Initialization of App User Guide MAINTENANCE Cleaning your TV Clean your TV regularly to keep the best performance and to extend the product lifespan. ENGLISH CAUTION yy Make sure to turn the power off and disconnect the power cord and all other cables first. Yy When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges. @@@@Then wipe immediately with a dry cloth. @@@@Yy Do not use any chemicals as this may damage the product. Yy

Do not spray liquid onto the surface.

If water enters the TV, it may result in fire, electric shock, or malfunction. Power cord Remove the accumulated dust or dirt on the power cord regularly. 22 TROUBLESHOOTING / SPECIFICATIONS TROUBLESHOOTING Problem Cannot control the TV with the remote control. no image display and no sound is produced. The TV turns off suddenly.

Solution yy Check the remote control sensor on the product and try again. Yy Check if there is any obstacle between the product and the remote control. To , yy Check if the batteries are still working and properly installed (to). Yy Check if the product is turned on. Yy Check if the power cord is connected to a wall outlet.

Yy Check if there is a problem in the wall outlet by connecting other products. yy Check the power control settings. The power supply may be interrupted. Yy Check if the Automatic Standby (Depending on model) / Sleep Timer / Time Power Off is activated in the TIME settings. Yy If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity. Yy Turn the TV off/on using the remote control. yy Reconnect the HDMI cable. Yy Restart the PC with the TV on.) Because band channel used by the country could be different, the user can not change or adjust the yy operating frequency and this product is set for the regional frequency table. This device should be installed and operated with minimum distance 20 cm between the device and yy your body.

And this phrase is for the general statement for consideration of user environment. MENU ENTER BACK EXIT L/R SELECT FREEZE RATIO Télécommande et piles (AAA) FRANÇAIS Gestion des câbles 2EA (Uniquement LB57**, LB58**ZA/ZB/ZG/ZJ, LB61**) Manuel d'utilisation Support de câble Base du support (Uniquement LB49**-ZH) Base du support (Uniquement LB49**-ZB/ZG) Base du support (Uniquement LB57**, LB58**ZA/ZB/ZG/ZJ, LB61**)

Corps du support / Base du support (Uniquement LB58**-ZM) Cordon d'alimentation (Uniquement LB57**, LB58**, LB61**) ASSEMBLAGE ET PRÉPARATION 11 FRANÇAIS Adaptateur CC / Cordon d'alimentation (Uniquement LB49**) Vis du support 2 EA, M4 x L10 (Uniquement 28LB49**-ZH) Vis du support 4EA, M4 x L14 (Uniquement 39/42/47/50/55LB57**, 39/42/47/50/55LB58**ZA/ZB/ZG/ZJ, 42/47/50/55/60LB58**-ZM, LB61**) Vis du support 2EA, M4 x L20 (Uniquement 32/39LB58**ZM) 4EA, M4 x L20 (Uniquement 32LB57**, 32LB58**-ZA/ZB/ZG/ZJ) Vis du support 4EA, M4 x L20

(Uniquement LB58**-ZM) Entretoises pour montage mural 2EA (Uniquement 42LB57**, 42LB58**) Bande caoutchouc 2EA (Uniquement LB58**-ZM) 12 ASSEMBLAGE ET PRÉPARATION Achat séparé Des articles vendus séparément peuvent faire l'objet de remplacements ou de modifications sans préavis dans le but d'améliorer la qualité du produit. ASSEMBLAGE ET PRÉPARATION 17 Fixation du support mural Prenez les précautions nécessaires pour fixer le support mural en option à l'arrière de la TV. 5 dBm Izhodna moč (največ) SLOVENŠČINA Ker je v državi lahko uporabljen drug pasovni kanal, uporabnik ne more spremeniti ali prilagoditi yy delovne frekvence, ta izdelek pa je nastavljen v skladu s podatki v tabeli z regionalnimi frekvencami. 0197 0197

SPECIFICATIONS B-1 SPECIFICATIONS Product specifications may be changed without prior notice due to upgrade of product functions. 0 mm 0 °C to 40 °C Less than 80 % -20 °C to 60 °C Less than 85 % Digital TV (Depending on model) Analogue TV (Depending on model) PAL/SECAM B/G/I/D/K SECAM L/L' VHF, UHF, CATV Television system DVB-T(DVB-T/T2*) DVB-C DVB-S/S2* VHF, UHF C-Band*, Ku-Band* DVB-S/S2 : 6,000 DVB-T/T2/C & Analogue TV : 1,500 75 Ω Programme coverage Maximum number of storable programmes External antenna impedance * Only DVB-T2/C/S2 support models. please contact LG First. If you have any inquiries or comments, please contact LG customer information centre. LG Customer Information Centre Country Service Country Service 0 810 144 131 015 200 255 0032 15 200255 07001 54 54 0900 543 5454 800 187 40 801 54 54 54 808 78 54 54 031 228 3542 0850 111 154 902 500 234 54 Record the model number and serial number of the TV. Refer to the label on the back cover and quote this information to your dealer when requiring any service.



[You're reading an excerpt. Click here to read official LG 32LB580V user guide](http://yourpdfguides.com/dref/5580527)

<http://yourpdfguides.com/dref/5580527>