




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG 32LK330. You'll find the answers to all your questions on the LG 32LK330 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG 32LK330
User guide LG 32LK330
Operating instructions LG 32LK330
Instructions for use LG 32LK330
Instruction manual LG 32LK330

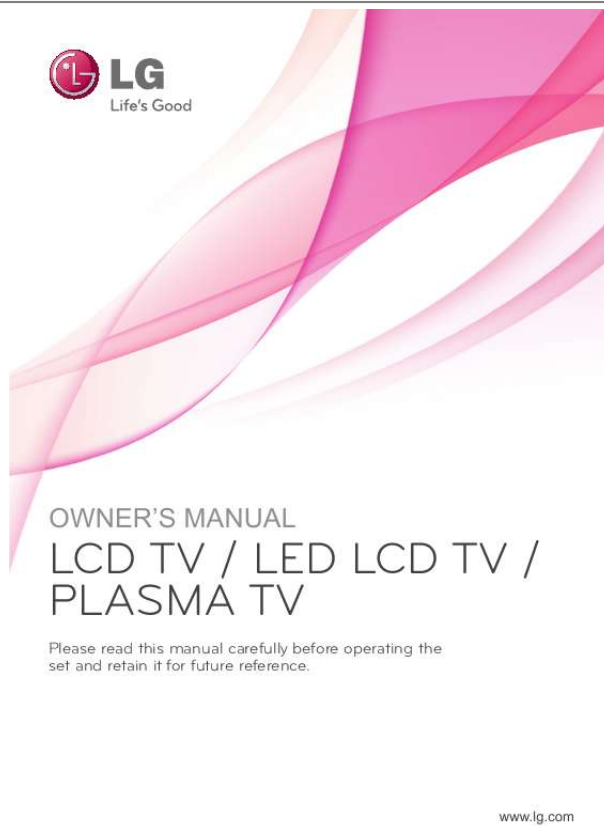

[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)
<http://yourpdfguides.com/dref/3926032>

[to a wall plug] [Figure 3] [to the TV] [Cross Section of Ferrite Core] 4 Use the ferrite core to reduce the electromagnetic interference in the LAN cable. Wind the LAN cable once on the small ferrite core and thrice on the big ferrite core. Place the ferrite core close to the TV. [to the TV] A B [Figure 4] [to an External device] A B - If there is one ferrite core, follow as shown in Figure 1. - If there are two ferrite cores, follow as shown in Figures 1 and 2. - If there are three ferrite cores, follow as shown in Figures 1 and 3.

- If there are four ferrite cores, follow as shown in Figures 1, 2 and 4. - If there are five ferrite cores, follow as shown in Figures 1, 3 and 4. y For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. (Except for 42PT25**, 60PV25**, 42/50PT35**, 50PV35**, 50/60PZ25**, 42/50PW45**, 50/60PZ55**, 22/26/32LK33**, 32/37/42LK43**, 32/42/47LK53**, 42/50PT45**) [Cross Section of Ferrite Core] *A *B 10 mm 18 mm ASSEMBLING AND PREPARING 9 Separate purchase Separate purchase items can be changed or modified for quality improvement without any notification. Contact your dealer for buying these items.

This device only works with compatible LG Plasma TV, LED LCD TV or LCD TV. Only Plasma TV Only LCD / LED LCD TV 3D Glasses (AG-S230, AG-S250, AG-S270 : Only 3D Models) 3D Glasses (AG-P110, AG-F110 : Only 3D Models) ENGLISH ENG Parts and buttons NOTE y TV can be placed in standby mode in order to reduce the power consumption. And TV should be turned off if it will not be watched for some time, as this will reduce energy consumption. y The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost. CAUTION y Do not step on the glass stand or subject it to any impact.

It may break, causing possible injury from fragments of glass, or the TV may fall. y Do not drag the TV. The floor or the product may be damaged. 10 ASSEMBLING AND PREPARING y Image shown may differ from your TV. Only 50/60PZ25**, 42/50PW45**, 50/60PZ55**, 42/50PT45** Screen PCMCIA Card Slot USB input HDMI IN Remote control and intelligent1 sensors Power Indicator y Red In Standby mode y Off TV turns on AV (Audio and Video) IN Speakers Touch buttons2 ENGLISH ENG 1 2 (Only 50/60PZ250T, 42/50PW450T, 42/50PW451T, 50/60PZ550T) Connection panel (See p.81) Button Turns the power on or off Changes the input source Description Accesses the main menus, or saves your input and exits the menus Selects the highlighted menu option or confirms an input Adjusts the volume level Scrolls through the saved programmes Intelligent sensor - Adjusts the image quality corresponding to the surrounding environment. Touch Button - You can use the desired button function by touching. ASSEMBLING AND PREPARING 11 y Image shown may differ from your TV. Only 60PV25**, 42/50PT35**, 50PV35**, 42PT25** Screen PCMCIA Card Slot USB input HDMI IN Remote control and intelligent1 sensors Power Indicator y Red In Standby mode y Off TV turns on AV (Audio and Video) IN Speakers Touch buttons2 ENGLISH ENG (Only 50PV350T) Connection panel (See p.81) Button Turns the power on or off Changes the input source Description Accesses the main menus, or saves your input and exits the menus Selects the highlighted menu option or confirms an input Adjusts the volume level Scrolls through the saved programmes 1 2 Intelligent sensor - Adjusts the image quality corresponding to the surrounding environment.

Touch Button - You can use the desired button function by touching. 12 ASSEMBLING AND PREPARING y Image shown may differ from your TV. Only 22/26/32LK33**, 32/37/42LK43**, 32/42/47LK53** (Except for 32/42/47LK530T) (Only 22/26/32LK33**) (Only 32/37/42LK43**, 32/42/47LK53**) Screen (Only 22LK33**) (Only 26/32LK33**) (Only 32/37/42LK43**) (Only 32/42/47LK53**) 1 2 3 4 Speakers No. 1 2 3 4 Description USB input PCMCIA Card Slot HDMI IN (Except for 22LK33**) Headphone Socket ENGLISH ENG 1 Remote control and intelligent1 sensors Power Indicator (Can be adjusted using the Power Indicator in the OPTION menu.) Connection panel (See p.81) (Except for 22/26/32LK33**) Button Turns the power on or off Changes the input source Accesses the main menus, or saves your input and exits the menus Selects the highlighted menu option or confirms an input Adjusts the volume level Scrolls through the saved programmes Description Intelligent sensor - Adjusts the image quality corresponding to the surrounding environment. (Only 32/42/47LK53**) ASSEMBLING AND PREPARING 13 y Image shown may differ from your TV. Only 19/22/26LV25**, 19/22LV23**, 22/26LV55** Screen USB input PCMCIA Card Slot HDMI IN (Only 26LV25**, 26LV55**) Headphone Socket Remote control and intelligent1 sensors Speakers (Only 19/22/26LV25**, 19/22LV23**) Power Indicator (Can be adjusted using the Power, hold the TV as shown in the following illustration. Rear y When transporting the TV, do not expose the TV to jolts or excessive vibration. y When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.

Stand Body Stand Base 3 Secure the TV and the stand with the 4 screws. Make sure to assemble the front and rear side of the stand. Front CAUTION y Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten. ASSEMBLING AND PREPARING 17 (Only 22LK33**) 1 Lay the TV with the screen side down on a flat surface.

(Only 26/32LK33**, 32/37/42LK43**, 32/42/47LK53**, 32/37/42LK45**, 32/42LK55**) 1 Lay the TV with the screen side down on a flat surface. CAUTION y Lay a foam mat or soft protective cloth on the surface to protect the screen from damage. CAUTION y Lay a foam mat or soft protective cloth on the surface to protect the screen from damage. 2 Assemble the parts of the Stand Body with the Stand Base of the TV.

Stand Body Stand Base ENGLISH ENG 3 Secure the TV and the stand with the 4 screws. CAUTION y Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten. 18 ASSEMBLING AND PREPARING (Only 19/22/26LV25**, 22/26LV55**, 19/22LV23**) 1 Lay the TV with the screen side down on a flat surface. (Only 32LV25**, 32/42LV34**, 32/37/40/42/47LV35**, 32/37/42/47LV45**, 32/42/47/55LV45**) 1 Lay the TV with the screen side down on a flat CAUTION y Lay a foam mat or soft protective cloth on the surface to protect the screen from damage. surface. CAUTION y Lay a foam mat or soft protective cloth on the surface to protect the screen from damage. 2 Assemble the parts of the Stand Body with the Stand Base of the TV. 2 Assemble the parts of the Stand Body with the Stand Base of the TV. (M4x6) Stand Base Stand Body Only 32LV25** Stand Body Stand Base 3 Secure the TV and the stand with the 2 screws.



[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)

<http://yourpdfguides.com/dref/3926032>

Stand Body Except for 32LV25** Stand Base (M4x16) ENGLISH ENG 3 Secure the TV and the stand with the 4 screws. CAUTION y Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten. CAUTION y Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten. ASSEMBLING AND PREPARING 19 Not using the Desk Type Stand y Image shown may differ from your TV. (Only 42PT25**, 60PV25**, 42/50PT35**, 50PV35**, 50/60PZ25**, 42/50PW45**, 50/60PZ55**, 42/50PT45**) y Push the supplied protection cover into the opening at the bottom of the TV until it locks in place. y Attach the protection cover tape. - This will protect the opening from accumulating dust and dirt. - When installing the wall mounting bracket, use the Protection cover.

(Only 26/32LK33**, 32/37/42LK43**, 32/42/47LK53**, 32/37/42LK45**, 32/42LK55**) 1 Push the supplied protection cover into the opening at the bottom of the TV until clicking sound. Protection cover Protection cover tape (Only 22LK33**) Protection cover 1 Lay the TV with the screen side down on a flat surface. ENGLISH ENG 2 Remove the 2 screws and pull the stand away from the TV. 3 Push the supplied protection cover into the opening at the bottom of the TV until it locks in place. This will protect the opening from accumulating dust and dirt.

Protection cover 20 ASSEMBLING AND PREPARING Mounting on a table y Image shown may differ from your TV. Securing the TV to a table y Image shown may differ from your TV. (Only 26/32LK33**, 32/37/42LK43**, 32/37/42LK45**, 32/42LK53**, 32/42LK55**, 32LV25**, 32/37LV35**, 32LW45**, 32/37LV45**, 32LV34**) Fix the TV to a table to prevent from tilting forward, damage, and potential injury. Mount the TV on a table, and then insert and tighten the supplied screw on the rear of the stand. 1 Lift and tilt the TV into its upright position on a table.

- Leave a 10 cm (minimum) space from the wall for proper ventilation. 10 cm 10 cm 10 cm 10 cm 2 Connect the power cord to a wall outlet. ENGLISH ENG

CAUTION y Do not place the TV near or on sources of heat, as this may result in fire. WARNING y To prevent TV from falling over, the TV should be securely attached to the floor/ wall per installation instructions. Tipping, shaking, or rocking the TV may cause injury. NOTE y Swivel 20 degrees to the left or right and adjust the angle of the TV to suit your view. (Except for 22LK33**, 19/22/26LV25**, 22/26LV55**, 19/22LV23**) ASSEMBLING AND PREPARING 21 Securing the TV to a wall y Image shown may differ from your TV. Using the Kensington security system (This feature is not available for all models.) y Image shown may differ from your TV. The Kensington security system connector is located at the rear of the TV.

For more information of installation and using, refer to the manual provided with the Kensington security system or visit <http://www.kensington.com>. Connect the Kensington security system cable between the TV and a table. 1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV. - If there are bolts inserted at the eye-bolts position, remove the bolts first. 2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV. ENGLISH ENG 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface.

Mounting on a wall Attach a wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor.

When you attach the TV to other building materials, please contact qualified personnel. LG recommends that wall mounting be performed by a qualified professional installer. CAUTION y Make sure that children do not climb on or hang on the TV. NOTE y Use a platform or cabinet that is strong and large enough to support the TV securely.

10 cm 10 cm 10 cm 10 cm 22 ASSEMBLING AND PREPARING Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table. Separate purchase (Wall Mounting Bracket) Model 42PT25** 42/50PT35** 50PV35** 50PZ25** 42/50PW45** 50PZ55** 42/50PT45** VESA (A x B) 400 x 400 Standard screw M6 Number of screws 4 Wall mount PSW400B, bracket PSW400BG, DSW400BG 60PV25** 60PZ25** 60PZ55** Model VESA (A x B) Standard screw Number of screws Wall mount bracket 42LV34** 400 x 400 M6 4 LSW400BX, LSW400BXG 600 x 400 M8 4 PSW600B, PSW600BG CAUTION y Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur. y If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury.

Use an authorized LG wall mount bracket and contact the local dealer or qualified personnel. y Do not over tighten the screws as this may cause damage to the TV and void your warranty. y Use the screws and wall mount bracket that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty. Model 26/32LK33** 32LK43** 32LK45** 32LK53** 32LK55** 32LV25** 32LV35** 32LV45** 32LW45** 32LV34** VESA (A x B) 100 x 100 200 x 100 Standard screw M4 M4 Number of screws 4 4 Wall mount LSW100B, LSW100BG bracket 22LK33** 19/22/26LV25** 22/26LV55** 19/22LV23** ENGLISH ENG NOTE y Use the screws that are listed on the VESA standard screw specifications. y The wall mount kit includes an installation manual and necessary parts. y The length of screws may differ depending on the wall mount. Make sure to use the proper length. y For more information, refer to the manual supplied with the wall mount bracket. Model 37/42LK43** 37/42LK45** 42LK55** 42/47LK53** 37LV35** 37LV45** VESA (A x B) 200 x 200 Standard screw M6 Number of screws 4 Wall mount LSW200B, bracket LSW200BG 40/42/47LV35** 42/47LV45** 42/47/55LV45** 400 x 400 M6 4 LSW400B, LSW400BG, ASSEMBLING AND PREPARING 23 Tidying cables y Image shown may differ from your TV.

(Only 42PT25**, 60PV25**, 42/50PT35**, 50PV35**, 50/60PZ25**, 42/50PW45**, 50/60PZ55**, 42/50PT45**) (Only 22LK33**, 19/22/26LV25**, 22/26LV55**, 19/22LV23**) 1 After connecting the cables as necessary, install Cable Holder as shown and bundle the cables. 1 Install the Power Cord Holder and Power Cord. It will help prevent the power cable from being removed by accident. Cable Holder Power Cord Holder 2 Gather and bind the cables with the Cable Holder. Install the LAN cable as shown to reduce the electromagnetic wave (Only 50PV350T, 50/60PZ250T, 42/50PW450T, 42/50PW451T, 50/60PZ550T). (Only 26/32LK33**, 32/37/42LK43**, 32/37/42LK45**, 32/42/47LK53**, 32/42LK55**) 1 Gather and bind the cables with the cable management clip. ENGLISH ENG 2 Fix the cable management clip firmly to the TV. CAUTION Cable Holder y Do not move the TV by holding the Cable Holder & Power Cord Holder, as the Cable holders may break, and injuries and damage to the TV may occur.



[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)

<http://yourpdfguides.com/dref/3926032>

Cable Management Clip NOTE y Do not move the TV by holding the cable management clip, as the cable management clip may break, and injuries and damage to the TV may occur. 24 ASSEMBLING AND PREPARING (Only 32LV25**, 32/37/40/42/47LV35**, 32/42/47/55LW45**, 32/37/42/47LV45**, 32/42LV34**) Positioning your display y Image shown may differ from your TV.

(Only 22LK33**) Adjust the position of the panel in various ways for maximum comfort. · Tilt range 1 Gather and bind the cables with the Cable Holder on the TV back cover. Cable Holder ENGLISH ENG Connection of TV y Image shown may differ from your TV. (Only 19/22/26LV25**, 22/26LV55**, 19/22LV23**) DC Adapter 1 Connect the antenna cable to the antenna input port on the TV. 2 Connect the DC adapter plug to the power input jack on the TV.

3 Connect the power cord to the DC adapter first, then plug the power cord into the wall power outlet. REMOTE CONTROL 25 REMOTE CONTROL The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly. To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching and ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control to the remote control sensor on the TV. To remove the batteries, perform the installation actions in reverse. CAUTION y Do not mix old and new batteries, as this may damage the remote control. (POWER) Turns the TV on or off. ENERGY SAVING (See p.66) Adjusts the brightness of the screen to reduce energy consumption. AV MODE (See p.43) Selects an AV mode. INPUT (See p.43) Changes the input source; Turns the TV on.

TV/RAD Selects Radio, TV and DTV programme. LIGHT Illuminates the remote control buttons. ENGLISH ENG Number buttons Enters numbers. LIST (See p.38) Accesses the saved programme list. Q.VIEW Returns to the previously viewed programme. 26 REMOTE CONTROL +Adjusts the volume level. MARK Selects a menu or option. FAV (See p.38) Accesses your favourite programme list. 3D(Only 3D Models)(See p.48) Used for viewing 3D video. RATIO (See p.41) Resizes an image. MUTE Mutes all sounds. P Scrolls through the saved programmes. PAGE Moves to the previous or next screen. CHAR/NUM Switches between Letter and Number input modes. DELETE Deletes letters and numbers.

ENGLISH ENG REMOTE CONTROL 27 GUIDE Shows programme guide. Home Accesses the main menus. Q. MENU (See p.45) Accesses the quick menus. Navigation buttons (up/down/left/right) Scrolls through menus or options. OK Selects menus or options and confirms your input. BACK Returns to the previous level. INFO (See p.39) Views the information of the current programme and screen.

EXIT Clears all on-screen displays and return to TV viewing. Coloured buttons These buttons are used for teletext (on TELETEXT models only), Programme edit. 3D SETTING(Only 3D Models) Use this to view 3D video. ENGLISH ENG TELETEXT BUTTONS (See p.89) These buttons are used for teletext. For further details, see the 'Teletext' section. 28 REMOTE CONTROL SUBTITLE Recalls your preferred subtitle in digital mode. Control buttons(, , ,) Controls the MY MEDIA menus, or the SIMPLINK compatible devices (USB,SIMPLINK). FREEZE Freezes the current frame while using the TV, AV, Component, RGB-PC, or HDMI input source. SIMPLINK (See p.88) Accesses the AV devices connected to the TV; Opens the SIMPLINK menu. AD Switches the Audio Description On or Off. RATIO (See p.41) Resizes an image. ENGLISH ENG WATCHING TV 29 WATCHING TV Connecting an antenna Connect an antenna to watch TV while referring to the following. To prevent damage do not connect to the mains outlet until all connections are made between the devices. Turning the TV on for the first time When you turn the TV on for the first time, the Initial setting screen appears. Select a language and customize the basic settings. 1 Connect the power cord to a power outlet. 2 In Standby mode, press (POWER) to turn the TV on.

The Initial setting screen appears if you turn the TV on for the first time. Connect the TV to a wall antenna socket with an RF cable (75). NOTE y You can also access Factory Reset by accessing OPTION in the main menus. 3 Follow the on-screen instructions to customize your TV settings according to your preferences. ENGLISH ENG Language Selects a language to display. Selects Home Use for the home environment. Sets the power indicator. (When you select Home Use from Mode Setting - only LED LCD TV) Selects a country to display. (Depending on model) Selects the time zone and daylight saving. (When Russia is selected for Country) Set the password.

(When France is selected for Country) Scans and saves available programmes automatically. Mode Setting Wall Antenna Socket Power Indicator Country NOTE y For optimum picture quality, adjust antenna direction. y In poor signal areas, to achieve better picture quality it may be necessary to install a signal amplifier to the antenna. y If the image quality is poor with an antenna connected, aim the antenna to the correct direction. y An antenna cable and converter are not supplied. Time Zone Set Password Auto Tuning 30 WATCHING TV NOTE y For those countries without confirmed DTV broadcasting standards, some DTV features might not work, depending on the DTV broadcasting environment. y When France is selected for Country, password is not '0', '0', '0', '0' but '1', '2', '3', '4'. Managing programmes Automatically setting up programme (Except for 22/26/32LK335C, 32/37/42LK455C, 19/22/26/32LV255C, 32/37/42/47LV355C) Selecting Antenna, Use this to automatically find and store all available programmes. When you start auto programming, all previously stored service information will be deleted. 4 When the basic settings are complete, press OK.

1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. NOTE y If you do not complete the Initial setting, it will appear whenever the TV turns on. y Disconnect the power cord from the power outlet when you do not use the TV for a long period of time. 3 Press the Navigation buttons to scroll to Auto Tuning and press OK.

Antenna and press OK. 4 Press the Navigation buttons to scroll to 5 Select Start to start automatic tuning. 6 When you are finished, press EXIT. The TV scans and saves available programmes automatically. When you return to the previous menu, press BACK.

ENGLISH ENG 5 To turn the TV off, press (POWER). NOTE y If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned. y You can store up to 1,000 programmes. The number of programmes that you can store differs depending on the broadcasting signal environment. y Automatic Numbering: Decide whether to use the programme numbers as sent by broadcasting stations for tuning.



[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)
<http://yourpdfguides.com/dref/3926032>

y When select Italy in the Country menu, if the pop up is displayed when the conflicted programme after Auto Tuning, select a broadcaster for conflicting programme number to solve. y In the following country, DVB cable can be used : Germany, Netherlands, Sweden, Switzerland, Denmark, Austria, Finland, Norway, Slovenia, Hungary, Ukraine, Ireland, Poland, Romania, Spain, Bulgaria, Russia, Lithuania, Estonia, Latvia. (The supported country can be added.)
y In the following country, Digital TV can not be used : Bosnia, Kazakhstan. (Only Plasma TV).

Watching TV 1 In Standby mode, press (POWER) to turn the TV on. 2 Press INPUT and select Antenna. 3 To turn the TV off, press (POWER). The TV switches to Standby mode. WATCHING TV 31 Selecting Cable, 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 3 Press the Navigation buttons to scroll to Auto Tuning and press OK. 4 Press the Navigation buttons to scroll to Cable and press OK. 5 Press the Navigation buttons to scroll to Comhem or Other Operators and press OK. 6 Press the Navigation buttons to scroll to Quick or Full and press OK.

7 Press the Navigation buttons or Number buttons to scroll make appropriate adjustments (Except for Full mode) and press OK. 8 Select Start to start automatic tuning. 9 When you are finished, press EXIT. The TV scans and saves available programmes automatically. When you return to the previous menu, press BACK.

y Acquired certification SO : Sweden(Comhem, Canal Digital), Denmark(YouSee, Canal Digital, Stofa), Norway(Canal Digital), Netherlands(Ziggo, UPC Digitaal), Ukraine(Volia-Cable), Germany(KDG), Switzerland(CableCom, UPC), Austria(UPC Digital), Hungary(UPC Digital), Ireland(UPC Digital), Poland(UPC Digital), Romania(UPC Digital), Russia(OnLime)(The acquired certification SO can be added.) y If there are not any Service Operator that you want, select Other Operators. y If you select "Other Operators", or the selected country supports "Other Operators" only, it may take some time to search all the channels, or it may not search some of the channels. y If some of the channels do not appear, follow the steps below: 1. SETUP -> Auto Tuning -> Cable -> Setting 2.

Switch Home Tuning from "Off" to "On" 3. Input additional values such as the frequency, symbol rate, modulation, and network ID. (You can ask your cable service provider for the above information.) The following values are needed in order to search all available programmes quickly and correctly. The commonly used values are provided as "default". However, for correct settings, please inquire of the cable service provider. When running Auto Tuning in DVB cable mode, selecting Full will search through all frequencies to find available channels. In the case when the programme is not searched by selecting the Default, perform the searching by selecting the Full. However, in the case when the programme is searched by selecting the Full, the Auto Tuning time can be taken too much. If some channels are not detected when Full is selected, select the In detail checkbox and then try tuning again.

· Frequency : Enter a user-defined frequency. · Symbol rate : Enter a user-defined symbol rate (Symbol rate: Speed at which a device such as modem sends symbols to a channel). · Modulation : Enter a user-defined modulation. (Modulation: Loading of audio or video signals onto carrier). · Network ID : Unique identifier allocated for each user. · Start Frequency : Enter a user-defined start frequency range. · End Frequency : Enter a user-defined end frequency range.

ENGLISH ENG NOTE y If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned. y When you select the Cable, the Cable Service Operator selection screen can differ or not exist by the Cable situation of the applicable country. y The popup window to select Service Operator is only shown initially for the 3 cases when you accessing the Initial Setting menu, when you change from Antenna to Cable or when you access the menu after changing the Country.

y When you want to select Service Operator aside from the above 3 cases, you can do so by selecting Setup->Cable DTV Setting-> Service Operator. 32 WATCHING TV Automatically setting up programme (Only 22/26/32LK335C, 32/37/42LK455C, 19/22/26/32LV255C, 32/37/42/47LV355C) Use this to automatically find and store all available programmes. When you start auto programming, all previously stored service information will be deleted. Cable DTV Setting (In Cable mode only) (Except for 22/26/32LK335C, 32/37/42LK455C, 19/22/26/32LV255C, 32/37/42/47LV355C) The range that a user can select from the Service Operator menu differs depending on number of Service Operator supported by each country, and if number of supported Service Operator for each country is 1, corresponding function becomes nonactivation. 1 Press Home to access the main menus.

2 Press the Navigation buttons to scroll to SETUP and press OK. 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 3 Press the Navigation buttons to scroll to Auto Tuning and press OK. 4 Select Start to start automatic tuning.

5 When you are finished, press EXIT. ENGLISH ENG The TV scans and saves available programmes automatically. When you return to the previous menu, press BACK. 3 Press the Navigation buttons to scroll to Cable DTV Setting and press OK. 4 Press the Navigation buttons to scroll to Service Operator or Channel Auto update and press OK. NOTE y If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned. y The number of programmes that you can store differs depending on the broadcasting signal environment. y If you wish to keep on auto tuning select Start using the button. Then, press the OK button. Otherwise select Close.

y When select Italy in the Country menu, if the pop up is displayed when the conflicted programme after Auto Tuning, select a broadcaster for conflicting programme number to solve. 5 Select your desired Source. 6 When you are finished, press EXIT. When you return to the previous menu, press BACK. y If you select Cable, you can see Cable DTV Setting menu. y When Channel Auto Update is On, you can update information for all the programmes that can be updated, including the programme currently being watched. y When Channel Auto Update is Off, you can only update information for the programme currently being watched. y You can not select the Cable DTV Setting when the service operator is set to "Ziggo". WATCHING TV 33 Manually setting up programme (In digital mode) Manual Tuning lets you manually add a programme to your programme list. (Except for 22/26/32LK335C, 32/37/42LK455C, 19/22/26/32LV255C, 32/37/42/47LV355C) Selecting Antenna, Manually setting up programme (In digital mode) Manual Tuning lets you manually add a programme to your programme list.



[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)
<http://yourpdfguides.com/dref/3926032>

(Only 22/26/32LK335C, 32/37/42LK455C, 19/22/26/32LV255C, 32/37/42/47LV355C) Selecting DTV, 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 3 Press the Navigation buttons to scroll to Manual Tuning and press OK.

and press OK. 3 Press the Navigation buttons to scroll to Manual Tuning and press OK. and press OK. 4 Press the Navigation buttons to scroll to DTV 5 Scroll through the programme types, and then add or delete programmes. 4 Press the Navigation buttons to scroll to DTV 5 Scroll through the programme types, and then add or delete programmes.

6 When you are finished, press EXIT. NOTE When you return to the previous menu, press BACK. 6 When you are finished, press EXIT. NOTE When you return to the previous menu, press BACK. y If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned. y You can select SBAND when the country is set to "Norway, Latvia." Selecting Cable, y If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned. y You can select SBAND when the country is set to "Norway, Latvia." Selecting Cable DTV, ENGLISH ENG 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK.

1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 3 Press the Navigation buttons to scroll to Manual Tuning and press OK. DTV and press OK. 3 Press the Navigation buttons to scroll to Manual Tuning and press OK. DTV and press OK. 4 Press the Navigation buttons to scroll to Cable 5 Make appropriate adjustments. 6 When you are finished, press EXIT. 4 Press the Navigation buttons to scroll to Cable 5 Scroll through the programme types, and then add or delete programmes. When you return to the previous menu, press BACK.

6 When you are finished, press EXIT. NOTE When you return to the previous menu, press BACK. NOTE y If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned. y Symbol rate : Enter a user-defined symbol rate (Symbol rate: Speed at which a device such as modem sends symbols to a channel). y Modulation : Enter a user-defined modulation.

(Modulation: Loading of audio or video signals onto carrier). y You can not select the Cable DTV when the service operator is set to "Ziggo" or "Other Operators" of Netherlands. y If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned. y Symbol rate : Enter a user-defined symbol rate (Symbol rate: Speed at which a device such as modem sends symbols to a channel). y Modulation : Enter a user-defined modulation.

(Modulation: Loading of audio or video signals onto carrier). 34 WATCHING TV Manually setting up programme (In analogue mode) Manual Tuning lets you manually tune and arrange the stations in whatever order you desire. Assigning a station name You can assign a station name with five characters to each programme number. 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 3 Press the Navigation buttons to scroll to Manual Tuning and press OK. 3 Press the Navigation buttons to scroll to Manual Tuning and press OK. 4 Press the Navigation buttons to scroll to TV or Cable TV and press OK.

4 Press the Navigation buttons to scroll to TV or Cable TV. 5 Scroll through the programme types, and then add or delete programmes. 5 Press the Navigation buttons to scroll to Name and press OK. 6 Press the Navigation buttons to scroll to TV System. 6 Press the Navigation buttons to scroll Select the position and make your choice of the second character, and so on. You can use an the alphabet A to Z, the number 0 to 9, +/ -, and blank and press OK. 7 Press the Navigation buttons to scroll to V/UHF or Cable. 8 Press the Navigation buttons or Number buttons to scroll to the desired channel number. 7 Press the Navigation buttons to scroll to Close and press OK. ENGLISH ENG 9 Press the Navigation buttons to scroll to commence searching. 8 Press the Navigation buttons to scroll to Store and press OK 10 Press the Navigation buttons to scroll to Store and press OK. 9 When you are finished, press EXIT. 11 When you are finished, press EXIT. When you return to the previous menu, press BACK. When you return to the previous menu, press BACK. NOTE y If the TV scans a blocked programme, you will be prompted to enter your password to keep the programme scanned. y L : SECAM L/L' (France) y BG : PAL B/G, SECAM B/G (Europe / East Europe / Asia / New Zealand / M.East / Africa) y I : PAL I (U.K. / Ireland / Hong Kong / South Africa) y DK : PAL D/K, SECAM D/K (East Europe / China / Africa / CIS) y To store another channel, repeat steps 5 to 10.

WATCHING TV 35 Fine Tuning Normally fine tuning is only necessary if reception is poor. Booster (Depending on model) If reception is poor select Booster to On. When the signal is strong, select Off. 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. 3 Press the Navigation buttons to scroll to Manual Tuning and press OK. 4 Press the Navigation buttons to scroll to TV or Cable TV. 3 Press the Navigation buttons to scroll to Booster and press OK.

5 Press the Navigation buttons to scroll to Fine. 4 Select On or Off. 6 Fine tune for the best picture and sound. 7 Press the Navigation buttons to scroll to Store and press OK Editing your programme list When a programme number is skipped, it means that you will be unable to select it using P ^, v button during TV viewing. If you wish to select the skipped programme, directly enter the programme number with the NUMBER buttons or select it in the Programme edit menu. This function enables you to skip the stored programmes. You can change the programme number using "Move"function, if "Automatic Numbering" is unchecked when you start Auto Tuning. (Except for 22/26/32LK335C, 32/37/42LK455C, 19/22/26/32LV255C, 32/37/42/47LV355C) 8 When you are finished, press EXIT. When you return to the previous menu, press BACK. ENGLISH ENG 1 Press Home to access the main menus.

2 Press the Navigation buttons to scroll to SETUP and press OK. 3 Press the Navigation buttons to scroll to Programme Edit and press OK. 4 Press the Navigation buttons to select a programme to be stored or skipped. 5 When you are finished, press EXIT. When you return to the previous menu, press BACK.



[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)

<http://yourpdfguides.com/dref/3926032>

36 WATCHING TV In DTV/RADIO mode (Except for 22/26/32LK335C, 32/37/42LK455C, 19/22/26/32LV255C, 32/37/42/47LV355C) Skipping a programme number In TV mode Deleting a programme 1 Press the Navigation buttons to scroll to select a programme number to be deleted. 1 Press the Navigation buttons to scroll to select a programme number to be skipped. 2 Press Red button to turn the programme number. 2 Press Blue button to turn the programme number. NOTE y The selected programme is deleted, all the following programmes are shifted up one.

3 Press Blue button to release. NOTE y When programmes are to be skipped, the skipped programme shows in blue and these programmes will not be selected by the P ^ or v buttons during TV viewing. y If you wish to select a skipped programme, directly enter the programme number with the NUMBER buttons or select it in the programme edit or EPG. Moving a programme 1 Press the Navigation buttons to scroll to select a programme number to be moved.

2 Press the Green button to turn the programme number and press the Navigation buttons. 3 Press Green button to release. ENGLISH ENG Locking a programme number 1 Press the Navigation buttons to scroll to select a programme number to be locked. Skipping a programme number 1 Press the Navigation buttons to scroll to select a programme number to be skipped. 2 Press Yellow button to turn the programme number. 2 Press Blue button to turn the programme number.

3 Press Yellow button to release. NOTE y It can be registered as Lock programme even when Lock System is turned Off. 3 Press Blue button to release. NOTE y When programmes are to be skipped, the skipped programme shows in blue and these programmes will not be selected by the P buttons during TV viewing.

y If you wish to select a skipped programme, directly enter the programme number with the NUMBER buttons or select it in the programme edit. WATCHING TV 37 Auto Sort (Except for 22/26/32LK335C, 32/37/42LK455C, 19/22/26/32LV255C, 32/37/42/47LV355C) 1 Press the Navigation buttons to start Auto Sort and press OK. CI [Common interface] Information y This feature is not available in all countries. This function enables you to watch some encrypted services (pay services). If you remove the CI Module, you cannot watch pay services. When the module is inserted into the CI slot, you can access the module menu.

To purchase a module and smart card, contact your dealer. Do not repeatedly insert or remove a CI module from the TV. This may cause a malfunction. When the TV is turned on after inserting a CI Module, you may not have any sound output. This may be incompatible with the CI module and smart card.

CI (Common Interface) functions may not be possible depending upon the country broadcasting circumstances. When using a CAM(Conditional Access Module), please make sure it meets fully the requirements of either DVB-CI or CI plus. NOTE y After activating Auto Sort once, you can no longer edit programmes. Locking a programme number 1 Press the Navigation buttons to scroll to select a programme number to be locked. 2 Press Yellow button to turn the programme number.

3 Press Yellow button to release. NOTE y It can be registered as Lock programme even when Lock System is turned Off. ENGLISH ENG 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to SETUP and press OK. Selecting favourite programme 3 Press the Navigation buttons to scroll to CI Information and press OK. 1 Press the Navigation buttons to scroll to select your desired programme. 4 Select the desired item: Module information, smart card information, language, or software download etc and press OK. 2 Press the FAV to add corresponding programme to Favourite list of current Favourite group. 5 When you are finished, press EXIT. NOTE 3 Press FAV to release.

Selecting favourite programme group y This OSD is only for illustration and the menu options and screen format will vary according to the Digital pay services provider. y It is possible for you to change CI (Common Interface) menu screen and service by consulting your dealer. 1 Press the Navigation buttons to scroll to select your desired programme. 2 Press the Q.MENU to display a pop-up window where Favourite group can be changed. 3 Press the Navigation buttons to scroll to select a Favourite group and press OK. 38 WATCHING TV Selecting the programme list You can check which programmes are stored in the memory by displaying the programme list. Paging through a programme list 1 Press the P buttons to turn the pages. 2 Press LIST to return normal TV viewing. Displaying programme LIST Displaying the favourite programme list 1 Press LIST to access the Programme List.

2 Press Blue button to turn the programme edit. NOTE y You may find some blue programmes. These have been set up to be skipped by auto programming or in the programme edit mode. y Some programmes with the channel number shown in the programme LIST indicate there is no station name assigned. 1 Press FAV to access the Favourite Programme List.

2 When you are finished, press EXIT. Button Description Blue button Turn the programme edit. Yellow button OK < or > Current channel is registered/cancelled as preferred channel on currently selected Group. Selects a programme to view Favourite group is changed. ENGLISH ENG Selecting a programme in the programme list 1 Press Navigation buttons to select programme.

2 Press OK to switch to the chosen programme number. NOTE y Press TV/RAD. (The mode will be switched between TV, DTV, and Radio from the programme you are currently watching.) WATCHING TV 39 EPG (Electronic Programme Guide) (In digital mode) This system has an Electronic Programme Guide (EPG) to help your navigation through all the possible viewing options. The EPG supplies information such as programme listings, start and end times for all available services. In addition, detailed information about the programme is often available in the EPG (the availability and amount of these programme details will vary, depending on the particular broadcaster). This function can be used only when the EPG information is broadcast by broadcasting companies. You must set the Clock in the Time menu, before using EPG function. The EPG displays the programme details for 8 days. > or Shows next programme information.

Shows other programme information. (Only Plasma TV) Tyra 2 TV2 28 Sep. 2008 21:00~00:00 Record Remind Close OK A pop-up window for record/remind settings appear. Select Timer Record/Remind setting mode. or (Only LCD TV/LED LCD TV) ? Do you want to set a reminder for the selected programme? Bob The Builder Special DTV 1 ABC TV Sydney 28 Sep. 2008 21:00~00:00 Yes No DTV 1 TV ONE Pr. Change Next Watch Good Morning 21:00 00:00 Show/Game Show 16:9 720p ENGLISH ENG ... HE-AAC Sarah Bradley, Steve Gray and Brendon Pongia present the latest in fashion, the arts, entertainment, lifestyle and cooking, with regular and special guests.



[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)
<http://yourpdfguides.com/dref/3926032>

Sarah Bradley, Steve Gray and Brendon Pongia present the latest in fashion, the arts, entertainment, lifestyle and cooking, with regular and special guests. OK Up Down A pop-up window for remind settings appear. Select Timer Remind setting mode. <> y Press INFO to show current programme information. Displayed with a TV or DTV Programme.

Displayed with a Radio Programme. Displayed with a MHEG Programme. HE-AAC C Switch on/off EPG 1 Press GUIDE to switch on or off EPG. Displayed with a HE-AAC Programme. Aspect ratio of broadcasting programme.

Aspect ratio of broadcasting programme. Displayed with a Teletext Programme. Displayed with a Subtitle Programme. Displayed with a Scramble Programme. Displayed with a Dolby Digital Programme. Select a programme 1 Press Navigation buttons or P desired programme. Programme Guide to select That '70s show DTV 1 YLE TV1 25 Nov. 2008 09:45~10:15 25 Nov. 2008 10:05 ALL 1 YLE TV1 2 YLE TV2 4 TV..

5 YLE FST 6 CNN FAV Favourite Mode NOW NEXT That '70s show Your World Today Displayed with a Dolby Digital PLUS Programme. 576i/p, 720p, 1080i/p : Resolution of broadcasting programme Broadcasted programme with the icon may not be displayed in Monitor Out depending on the information of the programme. Legenen om Den.... Naturtimmen Lyssna Keno World Business Fantomen Kritiskt ABC Watch/Schedule Manual Timer TV/RAD RADIO Schedule List INFO i Information 40 WATCHING TV NOW/NEXT Guide Mode You can view a programme being broadcasted and one scheduled to follow. Button Red button Yellow button Blue button OK <> P GUIDE BACK EXIT TV/RAD INFO Description Change EPG mode. Enter Manual Timer mode. Enter Schedule List mode.

When 'Now' is selected, it is moved to selected programme and EPG disappears When 'Next' is selected, a reservation pop-up window appears. Select NOW or NEXT Programme. Select the Broadcast Programme. Page Up/Down. Switch off EPG.

Select DTV or RADIO Programme. Detail information on or off. Extended Description Box Button INFO <> GUIDE EXIT Description The detail information on or off. Text Up/Down. Select Timer Record/Remind setting mode.

Switch off EPG. Record/Remind Setting Mode (Only Plasma TV) Sets a start or end time, programme for recording, and sets a start time, programme for the reminder with the end time grayed out. This function is available only when recording equipment that use pin8 recording signalling has been connected to the TV-OUT(AV1) terminal, using a SCART cable. Recording function is only supported in the Digital mode and not in the Analogue mode. Button BACK Yellow button Blue button OK <> Description Switch off Manual Timer mode. Change to Guide mode. Change to Schedule List mode. Save Timer Record/Remind. Select Type, Start Time, End Time or Programme. Select Remind or Record function setting.

8 Day Guide Mode Button Red button Green button Yellow button Blue button Description Change EPG mode. Enter Date setting mode. Enter Manual Timer mode. Enter Schedule List mode. When 'Currently broadcasting programme is selected, it is moved to selected programme and EPG disappears When Future broadcasting programme is selected, a reservation pop-up window appears. Select Programme. Select the Broadcast Programme. P GUIDE BACK EXIT TV/RAD INFO Page Up/Down. Switch off EPG. Select DTV or RADIO Programme.

Detail information on or off. ENGLISH ENG OK <> or Remind Setting Mode (Only LCD TV/LED LCD TV) Button BACK OK Navigation button Yellow button Blue button Description Switch off Manual Timer mode. Appear Repeat Option popup. Select the date to schedule. Change to Guide mode. Change to Schedule List mode. Date Change Mode Button Green button BACK OK <> GUIDE EXIT Description Switch off Date setting mode. Change to the selected date. Select a date. Switch off EPG.

WATCHING TV 41 Schedule List Mode If you've created a schedule list, a scheduled programme is displayed at the scheduled time even when you are watching a different programme at the time. Button Yellow button Blue button GUIDE OK P BACK Description Change to Manual Timer mode. Change to Guide mode. Select your desired Option (Modify/ Delete/Delete All). Select programme. Page Up/Down. Switch off Schedule List. - 16:9: Resizes images to fit the screen width. - Just Scan: Displays video images in the original size without removing parts at the edge of the image. Using additional options Adjusting aspect ratio Resize an image to view at its optimal size by pressing RATIO while you are watching TV.

Just Scan ENGLISH ENG NOTE y If you select Just Scan, you may see image noises at the edge of the original signal. NOTE y You can also change the image size by pressing Q. MENU or accessing Aspect Ratio in the Picture menus. y For Zoom Setting, select 14:9, Zoom and Cinema Zoom in Ratio Menu. After completing Zoom Setting, the display goes back to Q.Menu. y You can only select 4:3, 16:9 (Wide), 14:9, Zoom/Cinema Zoom in Component mode. y You can only select 4:3, Original, 16:9 (Wide), 14:9, Zoom/Cinema Zoom in HDMI mode. y You can only select 4:3, 16:9 (Wide) in RGB-PC, HDMI-PC mode only. y In DTV/HDMI/Component (over 720p) mode, Just Scan is available.

y In Analogue/DTV/AV/Scart mode, Full Wide is available. - Original: When your TV receives a wide screen signal it will automatically change to the picture format broadcasted. Original 42 WATCHING TV - Full Wide: When TV receives the wide - Zoom: Enlarges an image to fit the screen width. The top and bottom of the image may not appear. screen signal, it will let you adjust the picture horizontally or vertically, in a linear proportion, to fill the entire screen fully.

4:3 and 14:9 video is supported in full screen without any video distortion through DTV input. Full Wide NOTE y If you access, Aspect Ratio in the quick menus, - Press the Navigation buttons to stretch an image vertically. - Press the Navigation buttons to move the zoom focus up or down. - 4:3: Resizes images to the previous standard 4:3. - Cinema Zoom: Enlarges an image in the cinemascope ratio, 2.

35:1. y To change the ratio of the cinema zoom, press the Navigation buttons and its range is from 1 to 16. y To move the zoom focus up or down, press the Navigation buttons. ENGLISH ENG - 14:9 : You can view a picture format of 14:9 or a general TV programme in the 14:9 mode. The 14:9 screen is viewed in the same way as in 4:3, but is moved to the up and down. NOTE y If you enlarge or reduce an image, the image may be distorted. WATCHING TV 43 Changing AV modes Each AV mode has the optimized image and sound settings. Press AV MODE repeatedly to select an appropriate mode. Using the input list Selecting an input source 1 Press INPUT to access the input sources. - The connected device displays on each input source.

Off Mode Description Changes to the previously customized settings Use the optimized image and sound settings for the cinematic look Use the optimized image and sound setting for dynamic action sports Use the optimized image and sound settings for fast gaming When playing a video game using PlayStation or Xbox, it is recommended to use the Game mode.



[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)
<http://yourpdfguides.com/dref/3926032>

When in Game mode, functions related to picture quality will be optimized for playing games. NOTE y You can also access the input source list by selecting INPUT in the main menus. Cinema or Cinema Sport Game 2 Press Navigation buttons to scroll to one of the input sources and press OK. y Image shown may differ from your TV. Input List Move OK Antenna USB AV1 AV2 AV3 Component RGB HDMI1 HDMI2 HDMI3 ENGLISH ENG SIMPLINK Input Label Exit

NOTE y If you select Off in AV mode, the picture and image which you initially set will be selected. Input source Description Antenna or Select it when watching the DTV/RADIO/ Cable TV. USB AV Component RGB HDMI Select it when using USB depends on connector. Select it when watching the VCR or external equipment. Select it when using the DVD or the Digital set-top box depends on connector.

Select it when using PC depends on connector. Select it when using DVD, PC or Digital set-top box depend on connector. 44 WATCHING TV The connected input sources display in black and the disconnected input sources in grey. - To add an input label, press the Blue button. You can easily identify a device connected to each input source - To access the SIMPLINK, press the Red button.

If you select "SIMPLINK and On", the pop-up window for the HDMI input will not display.(Only LCD TV/LED LCD TV). Locking the buttons on the TV (Child Lock) Lock the buttons on the TV to prevent any unwanted operations or accidents by children. 1 Press Home to access the main menus. 2 Press the Navigation buttons to scroll to LOCK and press OK. 3 Press Navigation buttons to scroll to Key Lock and press OK. 4 Select On to activate the Key lock feature. Adding an Input label Add a label to an input source so that you can easily identify a device connected to each input source. y Image shown may differ from your TV. Input Label - To deactivate the Key lock feature, select Off. 5 When you are finished, press EXIT. When you return to the previous menu, press BACK. NOTE y The TV is programmed to remember the last setting after you turn the TV off. y If you turn the TV off with the Key Lock feature activated, press the , INPUT, P or Number buttons on the remote control. y If you press any button on the TV with the Key lock feature activated, Key Lock appears on the screen.

ENGLISH ENG AV1 AV2 AV3 Component RGB Close 1 Press INPUT to access the input sources. 2 Press the Blue button. 3 Press the Navigation buttons to scroll to one of the input sources. 4 Press the Navigation buttons to scroll to one of the input labels. 5 When you are finished, press EXIT. When you return to the previous menu, press BACK. WATCHING TV 45 Using the quick menu Customize the frequently using menus. NOTE y The available menus and options may differ from the input source that you are using. 1 Press Q. MENU to access the quick menus.

2 Press Navigation buttons to scroll through the following menus and press OK. 3 Press Navigation buttons to scroll to the option you want. y Image shown may differ from your TV. Aspect Ratio 1 8 7 6 5 Exit 16:9 2 3 4 4 When you are finished, press Q. MENU.

ENGLISH ENG 1 Menu Aspect Ratio 2 Clear Voice II Description Changes the image size (16:9, Just Scan, Original, Full Wide, 4:3, 14:9, Zoom, Cinema Zoom) By differentiating the human sound range from others, it helps users listen to human voices better. Changes the image mode (Vivid, Standard, APS, Cinema, Cinema, Bright Room, Sport, Game, Photo, Expert1, Expert2) Changes the sound mode (Standard, Music, Cinema, Sport, Game) 3 Picture Mode (Depending on model) 4 Sound Mode 5 Audio or Changes the sound output. Audio Language Sleep Timer Skip Off/On USB Device Sets the length of time until the TV to turns off Sets the Skip Off/On. Ejects a USB device when a USB device is connected 6 7 8 46 WATCHING TV Using the customer support Testing Software Update To download software through the digital terrestrial broadcasting system. - Download starts when "Yes" is selected.

At this time, progressing pop-up window does not display. - Download progress status can be checked from Software Update menu. Software Update On 1 Press Home to access the main menus. 2 Press the Red button to scroll Customer Support. Software downloading progress. Ver. 00.00.01 Ver.00.

00.00 4% 3 Press the Navigation buttons to scroll Software Update. Close 4 Press the Navigation buttons to scroll to On and press OK. - If you select On, a user confirm message box will be displayed to notify that new software is found. - TV is restarted when download is completed. Rebooting now. 5 When you are finished, press EXIT. When you return to the previous menu, press BACK. ENGLISH ENG When setting "Software Update" - Occasionally, a transmission of updated digital software information will result in the following menu on the TV screen. Software update is available.

Would you like to download now? Yes No NOTE y During Progress of a Software Update, please note the following: - Power to the TV must not be interrupted. - The antenna must not be disconnected. - After Software Update, you can confirm the updated software version in Software Update menu. - It may take hours to download the software, so make sure that the power stays on during the download. - The software is downloaded only in Standby mode or in MUX with Software Update Service, and stops when the power cord is unplugged or when viewing MUX without Software Update Service.

- When you return to Standby mode or MUX with Software Update Service, the software download will resume from where it stopped. ? - Simple Update : for current update stream ? A new software update is available at 00/00/0 00:00. Do you want to update the software when available? Yes No - Schedule Update : for scheduled update stream - When the Software Update menu is "Off", the message to change it to "On" appears. WATCHING TV 47 Testing the Picture / Sound To execute picture and sound tests. Using the product or service information To check the product or service information 1 Press Home to access the main menus.

2 Press the Red button to scroll Customer Support. 1 Press Home to access the main menus. 2 Press the Red button to scroll Customer Support. 3 Press the Navigation buttons to scroll Picture Test or Sound Test. 3 Press the Navigation buttons to scroll Product/ Service Info.. You can check the various product/Service information based on your model. When you are finished, press EXIT. When you return to the previous menu, press BACK. 4 Press the Navigation buttons to scroll to Yes and press OK.

5 When you are finished, press EXIT. When you return to the previous menu, press BACK. 4 Using Signal Test To view information on the Manufacturer, Model/ Type, Serial Number and Software Version.



[You're reading an excerpt. Click here to read official LG 32LK330 user guide](http://yourpdfguides.com/dref/3926032)

<http://yourpdfguides.com/dref/3926032>