



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG 42LB550V. You'll find the answers to all your questions on the LG 42LB550V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG 42LB550V
User guide LG 42LB550V
Operating instructions LG 42LB550V
Instructions for use LG 42LB550V
Instruction manual LG 42LB550V

Printing specification		Drawn	Checked	Approved
Signature	Yunil Hong	Milos Vebec	Jongok Kim	
MMMDYYYY	Jan13/2014	Jan13/2014	Jan13/2014	

1. Model Description

Model name	: 38LB551V-2C	Brand name	: LG	Part number	: MFL6000002
2nd, 3rd Suffix	: EU/US	Product name	: LB551V	(Revision number)	: (84814E/00)

2. Printing Specification

1. Trim size (Format) : 148 mm x 210 mm (A5)

2. Printing colors

- * Cover : 1 Color (Black)
- * Inside : 1 Color (Black)

3. Book (Paper)

- * Cover : Coated, Snow white paper 150 g/㎡
- * Inside : Uncoated, wood-free paper 60 g/㎡

4. Bindery : Perfect binding

5. Language : ENG/DEU/FRA/ITA/SPA/POR/NEDE/GRI/SLN (9)

6. Number of pages : 255

*This part contains Eco-hazardous substances (Pb, Cd, Hg, Cr6+, PBB, PBDE, etc.) within LG standard level.
Details should be followed Eco-SCM management standard (LG56-A-252N).
Especially, Part should be followed and controlled the following specification.
(1) Eco-hazardous substances test report should be submitted when Part certification test and First Mass Production.
(2) Especially, Don't use or contain lead(Pb) and cadmium(Cd) in ink.

3. Origin Notification

LGDM :	Printed in Kazakhstan	LGKR :	Printed in Korea	LGEB :	Printed in Mexico
LGDAZ :	Printed in Brazil	LGMA :	Printed in Poland	LGESY :	Printed in China
LGEEG :	Printed in Egypt	LGMX :	Printed in Mexico	LGTH :	Printed in Thailand
LGIL :	Printed in India	LGND :	Printed in China	LGVN :	Printed in Vietnam
LGPN :	Printed in Indonesia	LGRA :	Printed in Russia	LGWR :	Printed in Poland
LGAS :	Printed in Algeria				

4. Changes

Rev. Number	MMMDYYYY	Signature	ECO Number	Change Contents
△				
△				
△				
△				
△				
△				
△				
△				
△				
△				
△				



[You're reading an excerpt. Click here to read official LG 42LB550V user guide](http://yourpdfguides.com/dref/5574749)
<http://yourpdfguides.com/dref/5574749>

Manual abstract:

A-2 ... A-16 ENG Cover 2 ... 27 Blank GER Cover 2 ... 27 Blank FRE Cover 2 ... 27 Blank ITA Cover 2 ... 37 Blank SPA Cover 2 ... 27 Blank POR Cover 2 ... 27 Blank DUT Cover 2 ... 27 Blank GRE Cover 2 ... 27 Blank SLV Cover 2 ... 27 Blank Part number Total pages : : MFL68003802 288 pages SPECIFICATIONS ... Back Cover B-1 B-2 B-7 Blank Blank (ENG) OWNER'S MANUAL LED TV* LB55** LB56** LB62** * LG LED TV applies LCD screen with LED backlights. Please read this manual carefully before operating your set and retain it for future reference. vuká Slovenščina LANGUAGE B-1 SPECIFICATIONS B-6 REGULATORY COMMON SETTING UP THE TV A-3 SETTING UP THE TV Image shown may differ from your TV. @@@@ nOTE yy Use a signal splitter to use more than 2 TVs. @@@@*Not

Provided English Connect the TV to a satellite dish to a satellite socket with a satellite RF cable (75 Ω). (Nur 3D-Modelle) AUDIO / VIDEO English Transmits the video and audio signals from an external device to the TV set. Connect the external device and the TV set with the euro scart cable as shown. Yy When watching digital TV in 3D imaging mode, only 2D out signals can be output through the SCART cable. For the best picture and audio quality, connect the external device and the TV with the HDMI cable as shown. Some separate cable is not provided.

For more information of external device's connection, refer to the manual provided with each device. NOTE yy The external device connection may differ from the model. Yy Connect external devices to the TV regardless of the order of the TV port. Yy If you record a TV programme on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device.

Yy Refer to the external equipment's manual for operating instructions. Yy If you connect a gaming device to the TV, use the cable supplied with the gaming device. Yy In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear. Yy In PC mode, some resolution settings may not work properly depending on the graphics card.

Please read this manual carefully before operating your set and retain it for future reference. For more information about licenses, visit [www. Dolby](http://www.dolby.com) and the double-D symbol are trademarks of Dolby Laboratories. ENGLISH ENG The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. visit [divx. Com](http://divx.com) for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu.

Com for more information on how to complete your registration. "DivX Certified® to play DivX® video up to HD 1080p , including premium content. □ "DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. □ "Covered by one or more of the following U. s. Patents : 7,295,673; 7,460,668; 7,515,710; 7,519,274" OPEN SOURCE SOFTWARE NOTICE To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to [opensource@lge. com](mailto:opensource@lge.com).

This offer is valid for three (3) years from the date on which you purchased the product.

SAFETY INSTRUCTIONS 3 SAFETY INSTRUCTIONS Please read these safety precautions carefully before using the product. ENGLISH ENG WARNING yy Do not place the TV and/or remote control in the following environments: -- location exposed to direct sunlight A -- area with high humidity such as a bathroom An -Near any heat source such as stoves and other devices that produce heat -Near kitchen counters or humidifiers where they can easily be exposed to steam or oil -- area exposed to rain or wind An -Near containers of water such as vases Otherwise, this may result in fire, electric shock, malfunction or product deformation. Yy Do not place the product where it might be exposed to dust. This plug must remain readily attached and operable when TV is in use. Yy Do not touch the power plug with wet hands.

Additionally, if the cord pin is wet or covered with dust, dry the power plug completely or wipe dust off. you may be electrocuted due to excess moisture. Yy Make sure to connect Mains cable to compliant AC mains socket with Grounded earth pin. (Except for devices which are not grounded on earth.) Otherwise possibility you may be electrocuted or injured.

Yy Insert power cable plug completely into wall socket otherwise if not secured completely into socket, fire ignition may break out. Yy Ensure the power cord does not come into contact with hot objects such as a heater. this may cause a fire or an electric shock hazard. Yy Do not place a heavy object, or the product itself, on power cables. Otherwise, this may result in fire or electric shock. Yy Bend antenna cable between inside and outside building to prevent rain from flowing in. This may cause water damaged inside the Product and could give an electric shock. 4 SAFETY INSTRUCTIONS yy When mounting TV onto wall make sure to neatly install and isolate cabling from rear of TV as to not create possibility of electric shock /fire hazard. ENGLISH ENG yy Do not plug too many electrical devices into a single multiple electrical outlet. Otherwise, this may result in fire due to over-heating.

Yy Do not drop the product or let it fall over when connecting external devices. Otherwise, this may result in injury or damage to the product. Yy Keep the anti-moisture packing material or vinyl packing out of the reach of children.



[You're reading an excerpt. Click here to read official LG 42LB550V user guide](http://yourpdfguides.com/dref/5574749)

<http://yourpdfguides.com/dref/5574749>

anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital. additionally , vinyl packing can cause suffocation. Keep it out of the reach of children. Yy Do not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury. Yy Dispose of used batteries carefully to ensure that a small child does not consume them.

Please seek Doctor- Medical Attention immediately if child consumes batteries. Yy Do not insert any metal objects/conductors (like a metal chopstick/cutlery/screwdriver) between power cable plug and input Wall Socket while it is connected to the input terminal on the wall. Additionally, do not touch the power cable right after plugging into the wall input terminal. you may be electrocuted. (Depending on model) yy Do not put or store inflammable substances near the product.

There is a danger of combustion/explosion or fire due to careless handling of the inflammable substances. Yy Do not drop metallic objects such as coins, hair pins, chopsticks or wire into the product, or inflammable objects such as paper and matches. If a foreign object is dropped into the product, unplug the power cord and contact the service centre. Yy Do not spray water on the product or scrub with an inflammable substance (thinner or benzene). fire or electric shock accident can occur.

Yy Do not allow any impact, shock or any objects to fall into the unit, and do not drop anything onto the screen. You may be injured or the product can be damaged. SAFETY INSTRUCTIONS 5 yy Never touch this product or antenna during a thunder or lighting storm. you may be electrocuted. ENGLISH ENG yy Never touch the wall outlet when there is leakage of gas, open the windows and ventilate. It may cause a fire or a burn by a spark. Yy Do not disassemble, repair or modify the product at your own discretion. fire or electric shock accident can occur. Contact the service centre for check, calibration or repair. Yy If any of the following occur, unplug the product immediately and contact your local service centre.

-- product has been impacted by shock The -- product has been damaged The -Foreign objects have entered the product -- product produced smoke or a strange smell The This may result in fire or electric shock. Yy Unplug the TV from AC mains wall socket if you do not intend to use the TV for a long period of time. Accumulated dust can cause fire hazard and insulation deterioration can cause electric leakage/shock/fire. Yy Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. Yy Do not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall. CAUTION yy Install the product where no radio wave occurs. Yy There should be enough distance between an outside antenna and power lines to keep the former from touching the latter even when the antenna falls. this may cause an electric shock. Yy Do not install the product on places such as unstable shelves or inclined surfaces.

Also avoid places where there is vibration or where the product cannot be fully supported. Otherwise, the product may fall or flip over, which may cause injury or damage to the product. 6 SAFETY INSTRUCTIONS yy If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury. ENGLISH ENG yy If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product.

When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop. Yy Only use the attachments / accessories specified by the manufacturer. Yy When installing the antenna, consult with a qualified service technician. If not installed by a qualified technician, this may create a fire hazard or an electric shock hazard. Yy We recommend that you maintain a distance of at least 2 to 7 times the diagonal screen size when watching TV. If you watch TV for a long period of time, this may cause blurred vision. Yy Only use the specified type of battery. This could cause damaduct feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with product. Yy The panel is a high technology display product with resolution of two million to six million pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product. This phenomenon also occurs in third-party products and is not subject to exchange or refund. Yy You may find different brightness and color of the panel depending on your vg 3D contens for a long time when they are tired. Yy Elderly -- elderly may perceive less 3D effect compared to the youth.

Do not sit closer to the TV than the The recommended distance. Cautions when using the 3D glasses yy Make sure to use LG 3D glasses. Otherwise, you may not be able to view 3D videos properly. Yy Do not use 3D glasses instead of your normal glasses, sunglasses or protective goggles. Yy Using modified 3D glasses may cause eye strain or image distortion. Yy Do not keep your 3D glasses in extremely high or low temperatures. it will cause deformation. Yy The 3D glasses are fragile and are easily scratched. Always use a soft, clean piece of cloth when wiping the lenses. Do not scratch the lenses of the 3D glasses with sharp objects or clean/wipe them with chemicals.

ASSEMBLING AND PREPARING 11 NOTE yy Image shown may differ from your TV. Yy Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual. Yy The available menus and options may differ from the input source or product model that you are using. Yy New features may be added to this TV in the future. Yy The TV can be placed in standby mode in order to reduce the power consumption.

And the TV should be turned off if it will not be watched for some time, as this will reduce energy consumption. Yy The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost. ENGLISH ENG ASSEMBLING AND PREPARING Unpacking Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

CAUTION yy Do not use any unapproved items to ensure the safety and product life span. Yy Any damages or injuries by using unapproved items are not covered by the warranty. Yy Some models have a thin film attached on to the screen and this must not be removed. NOTE yy The items supplied with your product may vary depending on the model. Yy Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.



[You're reading an excerpt. Click here to read official LG 42LB550V user guide](http://yourpdfguides.com/dref/5574749)

<http://yourpdfguides.com/dref/5574749>

Yy For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2. @@@@Contact your dealer for buying these items. These devices only work with certain models.

@@@@@@@@@@@@@@@@@@@@@TV off Settings Close Input List Turns the power off.

@@@@@@@@@@@@@@@@@@@@@Yy Hold the top and bottom of the TV frame firmly. @@Yy When transporting a large TV, there should be at least 2 people. @@@@@@@@@@@@@@@@@@@@@@2 Mount the wall brackets with the bolts to the wall. @3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface. CAUTION yy Make sure that children do not climb on or hang on the TV. NOTE yy

Use a platform or cabinet that is strong and large enough to support the TV securely. yy Brackets, bolts and ropes are not provided. You can obtain additional accessories from your local dealer. 18 ASSEMBLING AND PREPARING Mounting on a wall Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor.

When you attach the TV to other building materials, please contact qualified personnel. IG recommends that wall mounting be performed by a qualified professional installer. B A ENGLISH ENG CAUTION yy Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur. Yy If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury.

Use an authorized LG wall mount and contact the local dealer or qualified personnel. Yy Do not over tighten the screws as this may cause damage to the TV and void your warranty. Yy Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty. 10 cm 10 cm 10 cm 10 cm Make sure to use screws and wall mount bracket that meet the VESA standard.

Standard dimensions for the wall mount kits are described in the following table. NOTE yy Use the screws that are listed on the VESA standard screw specifications. Yy The wall mount kit includes an installation manual and necessary parts. Yy The wall mount bracket is not provided. You can obtain additional accessories from your local dealer. Yy The length of screws may differ depending on the wall mount. Make sure to use the proper length. Yy For more information, refer to the manual supplied with the wall mount. Separate purchase(Wall Mounting Bracket) Model VESA (A x B) Standard screw 32/39LB56** 42/47/50/55LB56** 32LB55** 42/49LB55** 32LB62** 42/49/55LB62** 200 x 200 M6 400 x 400 M6 4 LSW440B MSW240 Number of screws 4 LSW240B Wall mount bracket MSW240 Model VESA (A x B) Standard screw Wall mount bracket 60LB56** 400 x 400 M6 NOTE yy Only 42LB55**, 42LB56**, 42LB62** Number of screws 4 LSW440B Wall Mount Spacers REMOTE CONTROL 19 REMOTE CONTROL The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse. ENGLISH ENG CAUTION yy Do not mix old and new batteries, as this may damage the remote control. Make sure to point the remote control toward the remote control sensor on the TV. PAGE Moves to the previous or next screen. teletext buttons (INFO TEXT / T. OPT) These buttons are used for teletext. Views the information of the current programme and screen. Starts to record and displays record menu.

□ (Only Time MachineReady supported model) Control buttons () Controls the MY MEDIA menus, Time MachineReady control or the SIMPLINK compatible devices (USB, SIMPLINK or Time MachineReady). 1 Colour buttons These access special functions in some menus. PAGE Moves to the previous or next screen. teletext buttons (INFO TEXT / T. OPT) These buttons are used for teletext.

Views the information of the current programme and screen. Starts to record and displays record menu. □ (Only Time MachineReady supported model) Control buttons () Controls the MY MEDIA menus, Time MachineReady control or the SIMPLINK compatible devices (USB, SIMPLINK or Time MachineReady). 1 Colour buttons These access special functions in some menus. □ (: Red, : Green, : Yellow, : Blue) EXIT AD REC/ 1 SETTINGS 21 SETTINGS Automatically Setting Up Programme SETTINGS SETUP Auto Tuning yy Depending on input signal, available range of picture modes may differ.

@@For normal images, the effects may not be dramatic. Yy The ISF function is only available on some models. eNGLISH ENG Automatically tunes the programmes. @@Yy Auto Tuning only finds programmes that are currently broadcasting. @@@@First select a Picture Mode of your choice.

@@@@@@@@@Yy Colour Gamut : Selects the range of colours that can be expressed. @@@@Yy Colour Management System : This is a system that experts use when they adjust colour with a test pattern. They can select from six colour areas (Red / Green / Blue / Cyan / Magenta / Yellow) without affecting other colours. For normal images, adjustments may not result in noticeable colour changes. Yy Depending on input signal or other picture settings, the range of detailed items for adjustment may differ.

To adjust picture with Picture Wizard SETTINGS PICTURE Picture Wizard III [Depending on model] Calibrates and adjusts for optimum picture quality using the remote control and the Picture Wizard without expensive pattern devices or help from a specialist. To select Picture Mode SETTINGS PICTURE

Picture Mode Select the picture mode optimized for the viewing environment or the programme. Yy Eco/APS: [Depending on model] The Energy Saver feature changes settings on the TV to reduce power consumption. Yy Cinema/Game: Displays the optimum picture for movie, game. Yy Sports : Optimizes the video image for high and dynamic actions by emphasizing primary colours such as white, grass, or sky blue. Expert 1, 2 : Menu for adjusting picture quality yy that allows experts and amateurs to enjoy the best TV viewing. This is the adjustment menu provided for ISF-certified picture tuning professionals. (ISF logo can only be used on ISF-certified TVs.) ISFccc: Imaging Science Foundation Certified Calibration Control 22 SETTINGS To set additional picture options ENGLISH ENG SETTINGS PICTURE Picture Option Picture Mode To use Energy Saving feature SETTINGS PICTURE Energy Saving [Depending on model] Adjusts detailed setting for images. Yy Noise Reduction : Eliminates noise in the picture.

Yy MPEG Noise Reduction : Eliminates noise generated while creating digital picture signals. Yy Black Level : Adjusts the brightness and contrast of the screen to suit the black level of the input picture by using the blackness (black level) of the screen. Yy Real Cinema : Optimizes the screen for movie viewing. Yy Motion Eye Care/SUPER Energy Saving : [Depending on model] Saves power consumption by adjusting the brightness corresponding to the movement of the image on the screen.



[You're reading an excerpt. Click here to read official LG 42LB550V user guide](http://yourpdfguides.com/dref/5574749)

Yy Depending on input signal or other picture settings, the range of detailed items for adjustment may differ. reduces power consumption by adjusting screen brightness. Yy Auto : [Depending on model] The TV sensor detects the ambient lighting and automatically adjusts the screen brightness. Yy Screen Off : Screen is turned off and only sound is played. Press any button except Power button on the remote control to turn the screen back on. To use TV speaker SETTINGS AUDIO Sound Out TV Speaker [Depending on model] Sound is output through the TV speaker. to use TruMotion SETTINGS PICTURE TruMotion [Depending on model] Corrects images to display smoother motion sequences. Yy Smooth : De-judder/De-blur working on higher range in auto mode. Yy Clear : De-judder/De-blur working on middle range in auto mode. Auto means Juddering and blurring range that depend on input video status is controlled by TruMotion mode. To use External Speaker SETTINGS AUDIO Sound Out External Speaker (Optical) [Depending on model] Sound is output through the speaker connected to the optical port. Item Audio Input MPEG Dolby Digital Dolby Digital Plus HE-AAC All Digital Audio Output PCM Dolby Digital Dolby Digital PCM Auto PCM SETTINGS 23 To connect and use LG audio device SETTINGS AUDIO Sound Out LG Sound Sync (Optical) [Depending on model] Connect LG audio device with the logo to the optical digital audio output port. LG audio device allows you to enjoy rich powerful sound easily. To use Headphone SETTINGS AUDIO Sound Out Headphone yy If you switch to another input, the SIMPLINK device will stop. Yy If a third-party device with the HDMI-CEC function is also used, the SIMPLINK device may not work normally. Yy [Depending on model] If you select or play media from a the device with a home theatre function, the HT Speaker(Speaker) is automatically connected.

Be sure to connect with an optical cable (sold separately) to use the HT Speaker(Speaker) function. ENGLISH ENG [Depending on model] Sound is output through the headphone connected to the earphone/headphone port. SIMPLINK function description yy Direct Play : Plays the multimedia device on the TV instantly. Yy Select multimedia device : Selects the desired device via the SIMPLINK menu to control it from the TV screen instantly. Yy Disc playback : Manages the multimedia device with the TV remote control. Yy Power off all devices : When you power off the TV, all connected devices are turned off. Yy Sync Power on: When the equipment with SIMPLINK function connected HDMI terminal starts to play, the TV will automatically turn on. Yy Speaker : [Depending on model] Select speaker either on the home theatre unit or the TV. to synchronize audio and video SETTINGS AUDIO AV Sync. Adjust [Depending on model] Synchronizes video and audio directly when they do not match.

yy If you set AV Sync. Adjust to ON, you can adjust the sound output (TV speakers or SPDIF) to the screen image. To use SIMPLINK [Depending on model] SIMPLINK is a feature that enables you to control and manage various multimedia devices conveniently via the SIMPLINK menu. 1 Connect the TV's HDMI IN terminal and the SIMPLINK device's HDMI output terminal using an HDMI cable. Yy [Depending on model] For home theatre units with a SIMPLINK function, connect HDMI terminals as above, and use an optical cable to connect Optical Digital Audio Out from the TV to Optical Digital Audio In of the SIMPLINK device.

4 In SIMPLINK menu window, selects the device you want to control. Yy This function is only compatible with devices with the SIMPLINK logo. Yy To use the SIMPLINK function, you need to use a high-speed HDMI® cable (with CEC (Consumer Electronics Control) feature added). high-speed HDMI® cables have the No. 13 pin connected for information exchange between devices.

When France is selected for Country, password is not '0000' but '1234'. When France is selected for Country, password cannot be set to '0000'. To return Factory Reset SETTINGS OPTION Factory Reset All stored information is deleted and TV settings are reset. The TV turns itself off and back on, and all settings are reset. Yy When Lock System is in place, a pop-up window appears and asks for password yy Do not turn off the power during initialization. When you see a message that the USB device has been removed, separate the device from the TV. Yy Once a USB device has been selected for removal, it can no longer be read. Remove the USB storage device and then re-connect it. Using a USB storage device - warning yy If the USB storage device has a built-in auto recognition program or uses its own driver, it may not work. Yy Some USB storage devices may not work or may work incorrectly.

Yy Use only USB storage devices formatted with the Windows FAT32 or NTFS File System. Yy For external USB HDDs, it is recommended that you use devices with a rated voltage of less than 5 V and a rated current of less than 500 mA. Yy It is recommended that you use USB memory sticks of 32 GB or less and USB HDDs of 1 TB or less. Yy If a USB HDD with power-saving function does not work properly, turn the power off and on. For more information, refer to the user manual of the USB HDD. Yy Data in the USB storage device can be damaged, so be sure to back up important files to other devices. Data maintenance is the user's responsibility and the manufacturer is not responsible for data loss. Psb (PowerDivX) yy Internal supported subtitle formats: XSUB (Supports internal subtitles generated from DivX6) SETTINGS / TO SEE WEB MANUAL / EXTERNAL CONTROL DEVICE SETUP 25 Supported Audio Formats yy File type : mp3 [Bit rate] 32 Kbps - 320 Kbps [Sample freq. ENGLISH ENG EXTERNAL CONTROL DEVICE SETUP To obtain the external control device setup information, please visit www. Supported Photo Formats yy Category : 2D (jpeg, jpg, jpe) [Available file type] SOF0: Baseline, SOF1: Extend Sequential, SOF2: Progressive [Photo size] Minimum: 64 x 64, Maximum: Normal Type: 15360 (W) x 8640 (H), Progressive Type: 1920 (W) x 1440 (H) yy Category : BMP [Photo size] Minimum : 64 x 64, Maximum : 9600 x 6400 yy Category : PNG [Available file type] Interlace, Non-Interlace [Photo size] Minimum : 64 x 64, Maximum : Interlace : 1200 x 800, Non-Interlace : 9600 x 6400 yy BMP and PNG format files may be slower to display than JPEG. 26 MAINTENANCE MAINTENANCE Cleaning your TV Clean your TV regularly to keep the best performance and to extend the product lifespan. ENGLISH ENG CAUTION yy Make sure to turn the power off and disconnect the power cord and all other cables first. Yy When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges. Screen, frame, cabinet and stand yy To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth. Yy To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent.



[You're reading an excerpt. Click here to read official LG 42LB550V user guide](http://yourpdfguides.com/dref/5574749)

<http://yourpdfguides.com/dref/5574749>

Then wipe immediately with a dry cloth. CAUTION yy Avoid touching the screen at all times, as this may result in damage to the screen. Yy Do not push, rub, or hit the screen surface with your fingernail or a sharp object, as this may result in scratches and image distortions. Yy Do not use any chemicals as this may damage the product. Yy Do not spray liquid onto the surface.

If water enters the TV, it may result in fire, electric shock, or malfunction. Power cord Remove the accumulated dust or dirt on the power cord regularly. TROUBLESHOOTING 27 TROUBLESHOOTING Problem Cannot control the TV with the remote control. Solution yy Check the remote control sensor on the product and try again. Yy Check if there is any obstacle between the product and the remote control. Yy Check if the batteries are still working and properly installed (to , to). Yy Check if the product is turned on. Yy Check if the power cord is connected to a wall outlet. Yy Check if there is a problem in the wall outlet by connecting other products. yy Check the power control settings.

The power supply may be interrupted. Yy Check if the Automatic Standby (Depending on model) / Sleep Timer / Off Time feature is activated in the TIME settings. Yy If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity. e^{ENGLISH} ENG No image display and no sound is produced. The TV turns off suddenly. When connecting to the PC yy Turn the TV off/on using the remote control. Yy Restart the PC with the TV on. B

A A B *A < 10 mm = *B < 18 mm = 12 ASSEMBLAGE ET PRÉPARATION Télécommande et piles, batteries (AAA) Manuel d'utilisation Cordon d'alimentation FRANÇAIS ENG Base du support (Uniquement LB55**, LB56**-ZE / ZC, LB62**-ZA / ZB) Base du support (Uniquement LB56**-ZT / ZQ, LB62**-ZE) Vis du support 4EA, M4 x L14 (Uniquement 42/49LB55**, 39/42/47/50/55/60LB56**, 42/49/55LB62**) Vis du support 4EA, M4 x L20 (Uniquement 32LB55**, 32LB56**, 32LB62**) Entretoises pour fixation murale 2EA (Uniquement 42LB55**, 42LB56**, 42LB62**) Rangement des câbles 2EA Attache-câble (selon le modèle) Lunettes de cinéma 3D Le nombre de lunettes 3D peut varier suivant le modèle et le pays. 18 ASSEMBLAGE ET PRÉPARATION Fixation du support mural Prenez les précautions nécessaires pour fixer le support mural en option à l'arrière de la TV.

@ @ @ @ @ @ @ @ @ @ @ @ If video is not switched automatically into 3D, manually convert the settings to view 3D images.

97 Component port connecting information Component ports on the TV Y Y Video output ports on DVD player Y Y Y Signal 480i / 576i 480p / 576p 720p / 1080i 1080p PB PB B-Y Cb Pb PR PR R-Y Cr Pr Component O O O O (50 Hz / 60 Hz only) 1920 x 1080 HDMI-PC supported mode (Use HDMI IN 1 for PC mode) Resolution 640 x 350 720 x 400 640 x 480 800 x 600 1024 x 768 1152 x 864 1360 x 768 1280 x 1024 1920 x 1080 Horizontal Frequency (kHz) 31. 00 (Except for 32LB55*B, 32LB55*U, 32LB56*B, 32LB56*U, 32LB62*U) B-6 REGULATORY REGULATORY LG Recycling Policy (Only EU) LG Electronics offers a customized e-waste take-back & recycling service that meets local needs and requirements in the countries where e-waste regulations are in place, and also provides product and packaging take-back & recycling service voluntarily in some countries. LG Electronics evaluates products' recyclability at the design step using LG's recyclability evaluation tool, with the goal of improving recyclability where practicable. @ @ @ @ @ lg. @ @ @ @ @ g.

When on holiday, yy Putting the television into standby mode, will reduce energy consumption, but will still draw some power, yy Reducing the brightness of the screen will reduce energy use. Disposal of waste batteries (Applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local authority, your household waste disposal service or the shop where you purchased the product. LGE announced the 'LG Declaration for a Cleaner Environment' in 1994, and this ideal has served as a Guiding managerial principle ever since. The Declaration is a foundation that has allowed us to undertake Environmentally friendly activities in careful consideration of economic, environmental, and social aspects. We promote activities for environmental preservation, and we specifically develop our products to embrace the Concept of environmentfriendly through whole process from getting raw materials, production, transportation, usage and end-of-life. These environmental characteristics are endorsed by the award of the European Commission as approval of the product environmental status for energy saving. Facilities for recycling and a host of other features. The full list of criteria and more information on the eco label can be found at the web-site address : <http://www>.

печних речовин yy The equipment complies with requirements of the Technical Regulation, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment. Isolator (Only Sweden, Norway) yy "Equipment connected to the protective earthing of the building installation through the mains connection or through other equipment with a connection to protective earthing - and to a cable distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a cable distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see EN 60728-11)" yy "Utrustning som är kopplad till skyddsjord via jordat vägguttag och/eller via annan utrustning och samtidigt är kopplad till kabel-TV nät kan i vissa fall medföra risk för brand. If you have any inquiries or comments, please contact LG customer information centre.



[You're reading an excerpt. Click here to read official LG 42LB550V user guide](http://yourpdfguides.com/dref/5574749)
<http://yourpdfguides.com/dref/5574749>

Customer Information Centre Country Service Country Service 0 810 144 131 015 200 255 0032 15 200255 07001 54 54 0900 543 5454 800 187 40 801 54
54 54 808 78 54 54 031 228 3542 0850 111 154 902 500 234 54 Record the model number and serial number of the TV. Refer to the label on the back cover
and quote this information to your dealer when requiring any service. .



[You're reading an excerpt. Click here to read official LG 42LB550V
user guide](#)

<http://yourpdfguides.com/dref/5574749>