



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG 42LB630V. You'll find the answers to all your questions on the LG 42LB630V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG 42LB630V
User guide LG 42LB630V
Operating instructions LG 42LB630V
Instructions for use LG 42LB630V
Instruction manual LG 42LB630V

Printing specification		Drawn	Checked	Approved
Signature	Daria Park	Miss Woo	Jongok Kim	
MMYYYY	Feb 17 2014	Feb 17 2014	Feb 17 2014	

1. Model Description			
Model name	LB67-2	Brand name	LG
2nd, 3rd Suffix	EU	Product name	LB670V
		Part number	MFL66027012
		(Revision number)	(1402-RE V00)

2. Printing Specification	
1. Trim size (Format)	148 mm x 210 mm (A5)
2. Printing colors	
• Cover	1 Color (Black)
• Inside	1 Color (Black)
3. Book (Paper)	
• Cover	Uncoated, wood-free paper 150 g/m ²
• Inside	Uncoated, wood-free paper 60 g/m ²
4. Bindery	Perfect binding
5. Language	ENG/GER/FRA/ITA/SPA/POR/IND/GRC/SLN (9)
6. Number of pages	356

This part contains Eco-hazardous substances (Pb, Cd, Hg, Cr⁶⁺, PBB, PBDE, etc.) within LG standard level.
Details should be followed Eco-SCM management standard (LG56-A-25X).
Especially, Part should be followed and controlled the following specification.
(1) Eco-hazardous substances test report should be submitted when Part certification test and First Mass Production.
(2) Especially, Don't use or contain lead(Pb) and cadmium(Cd) in ink.

3. Origin Notification			
LGEM :	Printed in Kazakhstan	LGKR :	Printed in Korea
LGES :	Printed in Brazil	LGMA :	Printed in Poland
LGEG :	Printed in Egypt	LGMX :	Printed in Mexico
LGIL :	Printed in India	LGCH :	Printed in China
LGIV :	Printed in Indonesia	LGTH :	Printed in Thailand
LGPR :	Printed in Russia	LGVN :	Printed in Vietnam
LGAS :	Printed in Agens	LGWR :	Printed in Poland

4. Changes			

No. Number	MMYYYY	Signature	EOD Number	Change Contents



[You're reading an excerpt. Click here to read official LG 42LB630V user guide](http://yourpdfguides.com/dref/5579642)
<http://yourpdfguides.com/dref/5579642>

Manual abstract:

A-2 ... A-45 A-46 Front (Eng) 2 ... 31 Blank Front (Ger) 2 ... 31 Blank Front (Fre) 2 ... 31 Blank Front (Ita) 2 ... 43 Blank Front (Spa) 2 ... 31 Blank Front (Por) 2 ... 31 Blank Front (Dut) 2 ... 31 Blank Front (Grk) 2 ... 31 Blank Front (Sln) 2 ... 31 Blank Part number Total pages : : MFL68027012 356 pages Back ... B-1 B-2 B-8 Blank OWNER'S MANUAL LED TV* * LG LED TV applies LCD screen with LED backlights. click! User Guide Please read this manual carefully before operating your set and retain it for future reference.

Com P/N0 : MFL68027012(1402-REV00) Printed in Korea A-2 TABLE OF CONTENTS TABLE OF CONTENTS A-3 SETTING UP THE TV A-3 A-8 A-9 Attaching the stand Attaching the Sound Bar Supporter Tidying cables A-11 MAKING CONNECTIONS A-11 A-13 A-14 A-17 A-18 A-21 A-23 A-25 A-28 A-28 A-30 A-32 A-34 A-37 Antenna connection Satellite dish connection HDMI connection - ARC (Audio Return Channel) DVI to HDMI connection Component connection Composite connection MHL connection Audio connection - Digital optical audio connection USB connection CI module connection Headphone connection Euro Scart connection COMMON LANGUAGE LIST English Deutsch Français Italiano Español Português Nederlands Ελληνικά Slovenščina

LANGUAGE B-1 SPECIFICATIONS COMMON SETTING UP THE TV A-3 SETTING UP THE TV Image shown may differ from your TV. @@@@M4 x L14 M4 x L20 (Only 32LB65**ZA) 4EA A-4 SETTING UP THE TV 2 2 1 2 M4 x L14 1 4EA M4 x L14 2 4EA LB63**ZL, LB65**ZK M4 x L20 (Only 32LB65**ZK) 1 A stand base 32/39LB65**ZE/ZN 1 1 2 B stand base 1 2 1 1 Attach the stand to the TV using the upper mounting hole on the back of the TV. @@4EA M4 x L20 Stand Body Stand Base SETTING UP THE TV A-5 2 42/47/50/55/60LB65**ZE/ZN 1 1 4EA M4 x L20 3 Stand Body Stand

Base 2 2EA M4 x L20 A-6 SETTING UP THE TV 3 3 1 2 4EA M4 x L14 LB73**ZD/ZE 1 1 Attach the stand to the TV using the upper mounting hole on the back of the TV. @@4 Stand Front B Stand Supporter A Stand Supporter 2 4EA M4 x L10 4EA M4 x L14 SETTING UP THE TV A-7 LB86**, LB87** 3 1 Sound Bar Stand Assy Right Stand Assy Left 4EA M4 x L14 4EA M4 x L14 4 2 Screw Cover A-8 SETTING UP THE TV CAUTION yy When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches. Yy Make sure that the screws are inserted correctly and fastened securely. (If they are not fastened securely enough, the TV may tilt forward after being installed.) Do not use too much force and over tighten the screws; otherwise screw may be damaged and not tighten correctly. Attaching the Sound Bar Supporter (In case of mounting on a wall)

LB86**, LB87** 1 Sound Bar Sound Bar Supporter Right NOTE yy Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.

Yy Screw Cover will protect the opening from accumulating dust and dirty. Yy Rubber will protect the opening from accumulating dust and dirt. When installing the wall mounting bracket, use the Rubber. (Only LB65**ZE/ZN) Sound Bar Supporter Left 4EA M4 x L14 2 Rubber SETTING UP THE TV A-9 3 NOTE yy Remove the sound bar supporter before installing the stand by performing the stand attachment in reverse. Yy The Screw Cover will protect the opening from accumulating dust and dirty.

Tidying cables Image shown may differ from your TV. 1 2 Gather and bind the cables with the cable holder. (Depending on model) Fix the Cable Management firmly to the TV. (Only 32LB65**ZA) 4EA M4 x L14 4 Screw Cover Cable Management (Only LB63**ZA, 39/42/47/50/55/60LB65**ZA, LB67**, LB68**, LB69**, LB72**, LB73**ZA) Cable Holder CAUTION yy When attaching the sound bar supporter to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches. Yy Make sure that the screws are inserted correctly and fastened securely. (If they are not fastened securely enough, the TV may tilt forward after being installed.) Do not use too much force and over tighten the screws; otherwise screw may be damaged and not tighten correctly. Yy The sound bar supporter only uses for wall mounting. Cable Management A-10 SETTING UP THE TV

(Only 32LB65**ZK) (Only 70LB65**) Cable Holder Cable Management Cable Management (Only LB63**ZL, 39/42/47/50/55/60/70LB65**ZK/ZL) Cable Holder (Only LB73**ZD/ZE) Cable Holder Cable Management (Only LB86**, LB87**) Cable Management (Only LB65**ZE/ZN) Cable Holder Cable Management CAUTION Cable Holder yy Do not move the TV by holding the cable holders, as the cable holders may break, and injuries and damage to the TV may occur. Yy Technologies audio TNT prizes en charge : MPEG, Dolby Digital, Dolby Digital Plus, HE-AAC (*Not Provided) English Connect the TV to a wall antenna socket with an RF cable (75 Ω). nOTE yy Use a signal splitter to use more than 2 TVs. Yy If the image quality is poor, install a signal amplifier properly to improve the image quality. Yy If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction. 13/18V 700mA Max LNB Satellite IN (*Not Provided) English Connect the TV to a satellite dish to a satellite socket with a satellite RF cable (75 Ω). A-14 MAKING CONNECTIONS HDMI connection (Only LB86**, LB87**) (Only LB63**, LB65**, LB67**, LB68**, LB69**, LB72**, LB73**) DVD/ Blu-Ray / HD Cable

Box / HD STB / PC (*Not Provided) (*Not Provided) HDMI English Transmits the digital video and audio signals from an external device to the TV.

Connect the external device and the TV with the HDMI cable as shown. choose any HDMI input port to connect. It does not matter which port you use. DVD/ Blu-Ray / HD Cable Box / HD STB / PC HDMI NOTE yy It is recommended to use the TV with the HDMI connection for the best image quality. Yy Use the latest High Speed HDMI™ Cable with CEC (Customer Electronics Control) function. Yy High Speed HDMI™ Cables are tested to carry an HD signal up to 1080p and higher. 1KHZ/48KHZ/88KHZ/96KHZ/176KHZ/ 192KHZ) MAKING CONNECTIONS A-17 ARC (Audio Return Channel) English An yy external audio device that supports SIMPLINK and ARC must be connected using HDMI IN 1 (ARC) or HDMI/DVI IN 1 (ARC) port. When connected with a high-speed yy HDMI cable, the external audio device that supports ARC outputs optical SPDIF without additional optical audio cable and supports the SIMPLINK function. DVD/ Blu-Ray / HD Cable Box / HD STB / PC English Transmits the digital video signal from an external device to the TV.

Connect the external device and the TV with the HDMI cable as shown. choose any HDMI input port to connect. It does not matter which port you use. DVD/ Blu-Ray / HD Cable Box / HD STB / PC HDMI NOTE yy It is recommended to use the TV with the HDMI connection for the best image quality. Yy Use the latest High Speed HDMI™ Cable with CEC (Customer Electronics Control) function. Yy High Speed HDMI™ Cables are tested to carry an HD signal up to 1080p and higher. 1KHZ/48KHZ/88KHZ/96KHZ/176KHZ/ 192KHZ) MAKING CONNECTIONS A-17 ARC (Audio Return Channel) English An yy external audio device that supports SIMPLINK and ARC must be connected using HDMI IN 1 (ARC) or HDMI/DVI IN 1 (ARC) port. When connected with a high-speed yy HDMI cable, the external audio device that supports ARC outputs optical SPDIF without additional optical audio cable and supports the SIMPLINK function. DVD/ Blu-Ray / HD Cable Box / HD STB / PC English Transmits the digital video signal from an external device to the TV.

Connect the external device and the TV with the HDMI cable as shown. choose any HDMI input port to connect. It does not matter which port you use. DVD/ Blu-Ray / HD Cable Box / HD STB / PC HDMI NOTE yy It is recommended to use the TV with the HDMI connection for the best image quality. Yy Use the latest High Speed HDMI™ Cable with CEC (Customer Electronics Control) function. Yy High Speed HDMI™ Cables are tested to carry an HD signal up to 1080p and higher. 1KHZ/48KHZ/88KHZ/96KHZ/176KHZ/ 192KHZ) MAKING CONNECTIONS A-17 ARC (Audio Return Channel) English An yy external audio device that supports SIMPLINK and ARC must be connected using HDMI IN 1 (ARC) or HDMI/DVI IN 1 (ARC) port. When connected with a high-speed yy HDMI cable, the external audio device that supports ARC outputs optical SPDIF without additional optical audio cable and supports the SIMPLINK function. DVD/ Blu-Ray / HD Cable Box / HD STB / PC English Transmits the digital video signal from an external device to the TV.



[You're reading an excerpt. Click here to read official LG 42LB630V](http://yourpdfguides.com/dref/5579642)

[user guide](http://yourpdfguides.com/dref/5579642)

<http://yourpdfguides.com/dref/5579642>

Connect the external device and the TV with the DVI-HDMI cable as shown.

It does not matter which port you use. Yy Depending on the graphics card, DOS mode may not work if a HDMI to DVI Cable is in use. Yy When using the HDMI/DVI cable, only Single link is supported. DVD / Blu-Ray / HD Cable Box GREEN GREEN English WHITE VIDEO Transmits analog video and audio signals from an external device to the TV. Connect the external device and the TV with a component cable as shown.

NOTE yy If cables are not installed correctly, it could cause this image to display in black and white or with distorted colours. DVD / Blu-Ray / HD Cable Box / VCR VIDEO L (MONO) AUDIO R A-24 MAKING CONNECTIONS (Only LB63**, LB65**, LB67**, LB68**, LB69**, LB72**, LB73**) English Transmits analog video and audio signals from an external device o the TV. Connect the external device and the TV with the composite cable as shown. MHL connection MHL passive cable (*Not Provided) Mobile phone English Mobile High-definition Link (MHL) is an interface for transmitting digital audiovisual signals from mobile phones to television sets. NOTE Connect the mobile phone to the HDMI IN yy 3 (MHL) or HDMI/DVI IN 4 (MHL) port to view the phone screen on the TV.

The MHL passive cable is needed to yy connect the TV and a mobile phone. This only works for the MHL-enabled yy phone. Some applications can be operated by the yy remote control. For some mobile phones supporting MHL, yy you can control with the magic remote control. Remove the MHL passive cable from the yy TV when: --the MHL function is disabled --your mobile device is fully charged in standby mode A-26 MAKING CONNECTIONS Deutsch Mobile High-definition Link (MHL) ist eine digitale Schnittstelle, welche audiovisuelle Signale vom Mobiltelefon an ein TV-Gerät überträgt. Connexion audio optique numérique OPTICAL AUDIO IN Digital Audio System English You may use an optional external audio system instead of the built-in speaker.

Connect the external device and the TV with the optical audio cable as shown. NOTE yy Do not look into the optical output port. Looking at the laser beam may damage your vision. Yy Audio with ACP (Audio Copy Protection) function may block digital audio output.

Connect a USB storage device such as a USB flash memory, external hard drive, or a USB memory card reader to the TV and access the SmartShare menu to use various multimedia files. nOTE yy Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly. Yy Connect the external power source if your USB is needed. English View the encrypted (pay) services in digital TV mode. This feature is not available in all countries. NOTE yy Check if the CI module is inserted into the PCMCIA card slot in the right direction. If the module is not inserted properly, this can cause damage to the TV and the PCMCIA card slot. Yy If the TV does not display any video and audio when CI+ CAM is connected, please contact to the Terrestrial/Cable/ Satellite Service Operator. English Transmits the headphone signal from the TV to an external device.

Connect the external device and the TV with the headphone as shown. NOTE AUDIO menu items are disabled when yy connecting a headphone. Optical Digital Audio Out is not available yy when connecting a headphone.) English (*Not Provided) Transmits the video and audio signals from an external device to the TV set. Connect the external device and the TV set with the euro scart cable as shown.

Yy When watching digital TV in 3D imaging mode, only 2D out signals can be output through the SCART cable. (Only 3D models) yy If you set the 3D mode to On while a scheduled recording is performed on digital TV, monitor out signals cannot be output through the SCART cable, and the recording cannot be performed. For more information of external device's connection, refer to the manual provided with each device. NOTE yy The external device connection may differ from the model. Yy Connect external devices to the TV regardless of the order of the TV port.

Yy If you record a TV program on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device. Yy Refer to the external equipment's manual for operating instructions. Yy If you connect a ignition may break out. Ensure the power cord does not come into contact with hot objects such as yy a heater. this may cause a fire or an electric shock hazard. Do yy not place a heavy object, or the product itself, on power cables. Otherwise, this may result in fire or electric shock. SAFETY INSTRUCTIONS 5 Bend antenna cable between inside and outside building to prevent rain yy from flowing in. This may cause water damaged inside the Product and could give an electric shock.

When mounting TV onto wall make sure to neatly install and isolate cabling yy from rear of TV as to not create possibility of electric shock /fire hazard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop. Only use the attachments / accessories specified by the manufacturer. Yy When installing the antenna, consult with a qualified service technician. If yy not installed by a qualified technician, this may create a fire hazard or an electric shock hazard. We recommend that you maintain a distance of at least 2 to 7 times the yy diagonal screen size when watching TV. If you watch TV for a long period of time, this may cause blurred vision. Only use the specified type of battery. Yy This could cause damage to the remote control. ENGLISH Do yy not mix new batteries with old batteries.

This may cause the batteries to overheat and leak. batteries should not be exposed to excessive heat. For example, keep away from direct Sunlight , yy open fireplace and electric heaters . do yy not place non-rechargeable batteries in charging device. Make sure there are no objects between the remote control and its sensor.

Yy Signal from Remote Control can be interrupted due to external/internal yy lighting eg Sunlight, fluorescent lighting. If this occurs turn off lighting or darken viewing area. When connecting external devices such as video game consoles, make yy sure the connecting cables are long enough. Otherwise, the product may fall over, which may cause injury or damage the product. Do yy not turn the product On/Off by plugging-in or unplugging the power plug to the wall outlet.

(Do not use the power plug for switch.) It may cause mechanical failure or could give an electric shock. 8 SAFETY INSTRUCTIONS Please follow the installation instructions below to prevent the product from yy overheating. --The distance between the product and the wall should be more than 10 cm. --Do not install the product in a place with no ventilation (e. --Do not install the product on a carpet or cushion.



[You're reading an excerpt. Click here to read official LG 42LB630V user guide](http://yourpdfguides.com/dref/5579642)

<http://yourpdfguides.com/dref/5579642>

--Make sure the air vent is not blocked by a tablecloth or curtain. Otherwise, this may result in fire. Take care not to touch the ventilation openings when watching the TV for long periods as the ventilation openings may become hot. This does not affect the operation or performance of the product.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. ENGLISH Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. Do not press strongly upon the panel with a hand or sharp object such as nail, pencil or pen, or make a scratch on it, as it may cause damage to screen. Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary or permanent distortion/damage to screen. When cleaning the product and its components, unplug the power first and wipe it with a soft cloth. Applying excessive force may cause scratches or discoloration. Do not spray with water or wipe with a wet cloth. never use glass cleaner, car or industrial shiner, abrasives or wax, benzene, alcohol etc.

, which can damage the product and its panel. Otherwise, this may result in fire, electric shock or product damage (deformation, corrosion or breakage). As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by SWITCH. When unplugging the cable, grab the plug and unplug it, by pulling at the plug. Don't pull at the cord to unplug the power cord from the power board, as this could be hazardous.

When moving the product, make sure you turn the power off first. Then, unplug the power cables, antenna cables and all connecting cables. The TV set or power cord may be damaged, which may create a fire hazard or cause electric shock. SAFETY INSTRUCTIONS 9 When moving or unpacking the product, work in pairs because the product is heavy. Otherwise, this may result in injury.

Contact the service centre once a year to clean the internal parts of the product. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. If the product feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with product. ENGLISH The panel is a high technology display product with resolution of two million to six million pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product. This phenomenon also occurs in third-party products and is not subject to exchange or refund.

You may find different brightness and color of the panel depending on your viewing position(left/right/top/down). This phenomenon occurs due to the characteristic of the panel.

It is not related with the product performance, and it is not malfunction. , broadcasting channel logo, on-screen menu, scene from a video game) for a prolonged time may cause damage to the screen, resulting in retention of the image, which is known as image sticking. The warranty does not cover the product for image sticking. Avoid displaying a fixed image on your television's screen for a prolonged period (2 or more hours for LCD, 1 or more hours for Plasma). Also, if you watch the TV at a ratio of 4:3 for a long time, image sticking may occur on the borders of the panel. This phenomenon also occurs in third-party products and is not subject to exchange or refund. @@@@ it varies depending on the product. @@@@ double images or discomfort in viewing may be experienced. @@It is advised to take frequent breaks than the average adult. @@@@-- Consult your doctor when the symptoms persist.

@@@@ Do not sit closer to the TV than the recommended distance. @@Otherwise, you may not be able to view 3D videos properly. @@@@ Do not keep your 3D glasses in extremely high or low temperatures. it will cause deformation. The 3D glasses are fragile and are easily scratched.

Always use a soft, clean piece of cloth when wiping the lenses. @@@@@Yy New features may be added to this TV in the future. @@@@Yy The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost.

ENGLISH 1 2 3 4 INSTALLATION PROCEDURE Open the package and make sure all the accessories are included. Attach the stand to the TV set.

connect an external device to the TV set. Make sure the network connection is available. You can use the TV network functions only when the network connection is made. * If the TV is turned on for the first time after it was shipped from the factory, initialization of the TV may take up to one minute.

ASSEMBLING AND PREPARING Unpacking Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item. CAUTION Do not use any unapproved items to ensure the safety and product life span. Yy Any damage or injuries caused by using unapproved items are not covered by the warranty. Yy Some models have a thin film attached on to the screen and this must not be removed.

NOTE Yy The items supplied with your product may vary depending on the model. Yy Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions. Yy For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port. MENU ENTER ENTER BACK EXIT L/R SELECT BACK FREEZE EXIT L/R SELECT FREEZE RATIO RATIO Remote Control, Batteries (AAA) (Depending on model) The remote control will not be included for all sales market. 27) Owner's Manual Tag On Tag on Cinema 3D Glasses The number of 3D glasses may differ depending on the model or country. 23) 16 ASSEMBLING AND PREPARING Separate purchase Separate purchase items can be changed or modified for quality improvement without any notification. Contact your dealer to buy these items. These devices only work with certain models.

AG-F***DP Dual Play Glasses AN-VC5** Video Call Camera AG-F*** Cinema 3D Glasses AN-MR500 Magic Remote ENGLISH LG Audio Device Tag on Compatibility AG-F***DP Dual Play Glasses AG-F*** Cinema 3D Glasses AN-MR500 Magic Remote AN-VC5** Video Call Camera LG Audio Device Tag On LB63** LB65** LB67**, LB68**, LB69**, LB72**, LB73**, LB86**LB87** The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies.



[You're reading an excerpt. Click here to read official LG 42LB630V](#)

[user guide](#)

<http://yourpdfguides.com/dref/5579642>

ASSEMBLING AND PREPARING 17 Parts and buttons A type : LB63**-ZA, LB65**-ZA Screen B type : LB63**-ZL, LB65**-ZK Screen ENGLISH Speakers Speakers Remote control and Intelligent1 sensors Power Indicator Joystick Button2 Remote control and Intelligent1 sensors Power Indicator Joystick Button2 C type : LB65**-ZE/ZN Screen D type : LB67**, LB68**, LB69**, LB72**, LB73**-ZA Screen Speakers Speakers Remote control and Intelligent1 sensors Power Indicator Joystick Button2 Remote control and Intelligent1 sensors Power Indicator Joystick Button2 18 ASSEMBLING AND PREPARING E type : LB73**-ZE/ZD Screen F type : LB86**, LB87** Built-in Camera (Only LB87**) ENGLISH Screen Speakers Speakers Remote control and Intelligent1 sensors Power Indicator Joystick Button2 LG Logo light Remote control and Intelligent1 sensors Joystick Button2 1 Intelligent sensor - Adjusts the image quality and brightness based on the surrounding environment. 2 Joystick Button - This button is located below the TV screen. NOTE yy You can set the LG Logo Light or Power Indicator Light to on or off by selecting OPTION in the main menus. (Depending on model) ASSEMBLING AND PREPARING 19 Using the Joystick button You can simply operate the TV functions, pressing or moving the joystick button up, down, left or right.

Basic Functions Power On When the TV is turned off, place your finger on the joystick button and press it once and release it.

@@@@@@@@@)moving the joystick button up, down, left or right. @@@@Yy When transporting a large TV, there should be at least 2 people. @@@@@@Yy Before moving or lifting the TV, disconnect the power cord and all cables. Yy When holding the TV, the screen should face away from you to avoid damage.

Yy When transporting the TV, do not expose the TV to jolts or excessive vibration. Yy When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right. Yy Do not apply excessive pressure to cause flexing /bending of frame chassis as it may damage screen. Yy When handling the TV, be careful not to damage the protruding joystick button. Yy Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area. ASSEMBLING AND PREPARING 21 Mounting on a table 1 Lift and tilt the TV into its upright position on a table. -- □ Leave a 10 cm (minimum) space from L the wall for proper ventilation. Securing the TV to a wall (This feature is not available for all models.) ENGLISH 10 cm 10 cm m 10 c 10 cm 10 cm 1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.

-- If there are bolts inserted at the eyebolts position, remove the bolts first. 2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV. 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface. 2 Connect the power cord to a wall outlet. CAUTION yy Do not place the TV near or on sources of heat, as this may result in fire or other damage. Using the Kensington security system (This not available for all models.) Image shown may differ from your TV. Yy The Kensington security system connector is located at the rear of the TV.

For more information of installation and using, refer to the manual provided with the Kensington security system or visit <http://www>. Connect the Kensington security system cable between the TV and a table. CAUTION yy Make sure that children do not climb on or hang on the TV. NOTE yy Use a platform or cabinet that is strong and large enough to support the TV securely. yy Brackets , bolts and ropes are not provided.

You can obtain additional accessories from your local dealer. 22 ASSEMBLING AND PREPARING Mounting on a wall Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor. When you attach the TV to other building materials, please contact qualified personnel. LG recommends that wall mounting be performed by a qualified professional installer. Make sure to use screws and wall mount bracket that meet the VESA standard.

Standard dimensions for the wall mount kits are described in the following table. Separate purchase(Wall Mounting Bracket) Model 32/39LB65** 42/47/55LB63** 42/47/50/55LB65** 49/55LB86** 49/55LB87** 400 x 400 M6 4 LSW440B MSW240 ENGLISH 10 cm 10 cm 10 cm 10 cm VESA (A x B) Standard screw Number of screws Wall mount bracket Model 200 x 200 M6 4 LSW240B MSW240 VESA (A x B) Standard screw Number of screws Wall mount bracket 60LB65** 70LB65** 42/47/50/55LB67** 42/47/55/60/65LB68** 42/47/55LB69** 42/47/55/60/65LB72** 42/47/55/60/65LB73** 60LB86** 60LB87** 400 x 400 600 x 400 M6 4 LSW440B M6 4 LSW640B Wall mount bracket MSW240 LSW240B LSW440B LSW640B A B ASSEMBLING AND PREPARING 23 CAUTION yy Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur. Yy If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorised LG wall mount and contact the local dealer or qualified personnel. Yy Do not over tighten the screws as this may cause damage to the TV and void your warranty. Yy Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty. Using Built-in Camera (Only LB87**) You can make a Skype video call or use the motion recognition function using the built-in camera of the TV. This TV does not support the use of an external camera.

ENGLISH NOTE yy Before using the built-in camera, you must recognize the fact that you are legally responsible for the use or misuse of the camera by the relevant national laws including the criminal law. Yy The relevant laws include the Personal Information Protection law which regulates the processing and transferring of personal information and the law which regulates the monitoring by camera in a workplace and other places. yy When using the built-in camera , avoid questionable , illegal , or immoral situations. Other than at public places or events, consent to be photographed may be required. We suggest avoiding the following situations: (1) Using the camera in areas where the use of camera is generally prohibited such as restroom, locker room, fitting room and security area. (2) Using the camera while causing the infringement of privacy. (3) Using the camera while causing the violation of the relevant regulations or laws. NOTE yy Use the screws that are listed on the VESA standard screw specifications. Yy The wall mount kit includes an installation manual and necessary parts. Yy The wall mount bracket is not provided.

You can obtain additional accessories from your local dealer. Yy The length of screws may differ depending on the wall mount. Make sure to use the proper length. Yy For more information, refer to the manual supplied with the wall mount.



[You're reading an excerpt. Click here to read official LG 42LB630V](http://yourpdfguides.com/dref/5579642)

[user guide](http://yourpdfguides.com/dref/5579642)

<http://yourpdfguides.com/dref/5579642>

Yy When attaching a wall mounting bracket to the TV, insert the wall mount spacers into the TV wall mount holes to adjust the vertical angle of the TV. (Only 42LB63**, 42LB65**) Wall Mount Spacer 24 ASSEMBLING AND PREPARING Preparing Built-in Camera 1 Pull up the slide at the back of the TV. 3 Push down the built-in camera when you are not using it. ENGLISH Angle Adjustment Lever Slide 7 5 7 5 Name of Parts of Built-in Camera NOTE yy Remove the protective film before using the built-in camera. Camera Lens Protective Film 2 You can adjust the angle of the camera with the angle adjustment lever on the back of the built-in camera. <Side View> 7 5 Microphones 7 5 7 5 Checking the Camera's Shooting Range 1 Press the (Smarthome) button on the remote control to display the Launcher menu.

2 Select CAMERA and then press the Wheel(OK) button. Lever Lens NOTE yy The optimal distance from the camera to use the motion recognition function is between 1. REMOTE CONTROL 25 REMOTE CONTROL The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly. To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the and ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse. Or ENGLISH CAUTION yy Do not mix old and new batteries, as this may damage the remote control. Yy The remote control will not be included for all sales market. Make sure to point the remote control toward the remote control sensor on the TV.

Views the information of the current programme and INFO screen. PAGE Moves to the previous or next screen. 1 TELETEXT BUTTONS These buttons are used for teletext. REC/ Starts to record and displays record menu. (Only Time Machine Ready supported model) 2) Controls the Premium contents, Control buttons (Time MachineReady or SmartShare menus or the SIMPLINK compatible devices (USB or SIMPLINK or Time MachineReady). 2 Colour buttons These access special functions in some menus. (Depending on model) Views the information of the current programme and screen. (Space) Opens an empty space on the screen keyboard. 2 INFO Views the information of the current programme and screen. (Depending on model) 2 3D Used for viewing 3D video. (Depending on model) PAGE Moves to the previous or next screen. 3 Colour buttons These access special functions in some menus. : Red, : Green, : Yellow, : Blue) (4 TELETEXT BUTTONS These buttons are used for teletext.) (Depending on model)) Controls the Premium contents, Time Control buttons (MachineReady or SmartShare menus or the SIMPLINK compatible devices (USB or SIMPLINK or Time MachineReady). REC/ Starts to record and displays record menu.

OPT APP/ REC/ SUBTITLE AD TV/RAD MAGIC REMOTE FUNCTIONS 27 MAGIC REMOTE FUNCTIONS This item is not included for all models. To replace batteries, open the battery cover, replace batteries (1.5 V AA) and ends to the label inside the compartment, and close the matching battery cover. Be sure to point the remote control toward the remote control sensor on the TV. To remove the batteries, perform the installation actions in reverse.

ENGLISH CAUTION yy Do not mix old and new batteries, as this may damage the remote control. Navigation buttons (up/down/left/right) Press the up, down, left or right button to scroll the menu. If you press , , or buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right. Wheel(OK) Press the center of the Wheel button to select a menu. You can change programmes and scroll the menu by using the Wheel button. Coloured buttons These access special functions in some menus. (Depending on model) * Pressing and holding the / INPUT button will display a menu to select an external device that is connected to the TV. (Depending on model) 28 MAGIC REMOTE FUNCTIONS How to deregister the Magic Remote ENGLISH Voice recognition(Depending on model) Network connection is required to use the voice recognition function. Speak when the voice display window appears on the left of the TV screen.

□ The voice recognition may fail when you speak too fast or too slow. □ Use the Magic Remote no further than 10 cm from your face. □ The recognition rate may vary depending on the user's characteristics (voice, pronunciation, intonation and speed) and the environment (noise and TV volume). (BACK) (Smart home) Press the (BACK) and (Smarthome) buttons at the same time, for five seconds, to unpair the Magic Remote with your TV. »□ Pressing and holding the P (EXIT to LIVE) button will let you cancel and re-register Magic Remote at once. How to use Magic Remote yy Shake the Magic Remote slightly to the right and left (Smarthome), or press / INPUT, buttons to make the pointer appear on the screen. Registering Magic Remote BACK How HOME to register the Magic Remote »»The pointer will appear when you turn the Wheel button. (Depending on model) To use the Magic Remote, first pair it with your TV. 1 Put batteries into the Magic Remote and turn the TV on. 2 □ oint the Magic Remote at your P TV and press the Wheel (OK) on the remote control. »» the TV fails to register the If Magic Remote, try again after turning the TV off and back on. P MY APPS yy If the pointer has not been used for a certain period of time or Magic Remote is placed on a flat surface, then the pointer will disappear. Yy If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen. □ yy The Magic Remote depletes batteries faster than a normal remote due to the additional features. MAGIC REMOTE FUNCTIONS / USING THE USER GUIDE 29 Precautions to Take when Using the Magic Remote U □ yy se the remote control within the specified range (within 10 m).

You may experience communication failures when using the device outside the coverage area or if there are obstacles within the coverage area. Y □ yy ou may experience communication failures depending on the accessories. T □ yy he Magic Remote may not work properly if a wireless router (AP) is within 1 meter of the TV. Your wireless router should be more than 1 m away from the TV. Do yy not disassemble or heat the battery.

Do yy not drop the battery. avoid avoid extreme shocks to the battery. Inserting the battery the wrong way may yy result in explosion. USING THE USER GUIDE User Guide allows you to more easily access the detailed TV information. 1 Press the (Smarthome) button on the remote control to display the Launcher menu. 2 Select User Guide and press Wheel(OK). @@@@Screen, frame, cabinet and stand yy To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth. Yy To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent.



[You're reading an excerpt. Click here to read official LG 42LB630V user guide](http://yourpdfguides.com/dref/5579642)
<http://yourpdfguides.com/dref/5579642>

Then wipe immediately with a dry cloth. CAUTION yy Avoid touching the screen at all times, as this may result in damage to the screen.

yy Do not push, rub, or hit the screen surface with your fingernail or a sharp object, as this may result in scratches and image distortions. yy Do not use any chemicals as this may damage the product. yy Do not spray liquid onto the surface. @@@@ no image display and no sound is produced. The TV turns off suddenly. @@yy Check if there is any obstacle between the product and the remote control. To , yy Check if the batteries are still working and properly installed (to). yy Check if the product is turned on. yy Check if the power cord is connected to a wall outlet. yy Check if there is a problem in the wall outlet by connecting other products.

yy Check the power control settings. The power supply may be interrupted. yy Check if the Automatic Standby(Depending on model) / Sleep Timer / Timer Power Off is activated in the Timers settings. yy If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity. yy Turn the TV off/on using the remote control.

yy Reconnect the HDMI cable. yy Restart the PC with the TV on. When connecting to the PC (HDMI/ DVI), 'No signal' or 'Invalid Format' is displayed.) 10dBm or Lower Because band channel used by the country could be different, the user can not change or adjust the yy operating frequency and this product is set for the regional frequency table. This device should be installed and operated with minimum distance 20 cm between the device and yy your body.

And this phrase is for the general statement for consideration of user environment. Com 2 TABLE DES MATIÈRES TABLE DES MATIÈRES 29 3 3 LICENCES INFORMATIONS SUR LES LOGICIELS LIBRES CONFIGURATION DU PÉRIPHÉRIQUE DE CONTRÔLE EXTERNE CONSIGNES DE SÉCURITÉ - Visionnage d'images 3D (modèles 3D uniquement) UTILISATION DU GUIDE DE L'UTILISATEUR MAINTENANCE Nettoyage de votre TV - Écran, cadre, boîtier et support - Cordon d'alimentation 30 30 30 30 FRANÇAIS 3 30 31 DÉPANNAGE SPÉCIFICATIONS 4 10 12 12 12 16 17 19 20 21 22 23 24 24 24 PROCÉDURE D'INSTALLATION ASSEMBLAGE ET PRÉPARATION Déballage Achat séparé Pièces et boutons - Utilisation du bouton du joystick Soulever et déplacer la TV Installation sur une table Fixation du support mural Utilisation de la caméra intégrée - Préparation de la caméra intégrée - Nom des pièces de la caméra intégrée - Vérification de la plage de prise de vue de la caméra AVERTISSEMENT yy Si vous ignorez ces messages d'avertissement, vous risquez d'être gravement blessé, de provoquer un accident ou d'entraîner la mort. 25 27 28 28 29 TÉLÉCOMMANDE FONCTIONS DE LA MAGIC REMOTE Enregistrement de la Magic remote Comment utiliser la magic remote Consignes relatives à l'utilisation de la magic remote ATTENTION yy Si vous ignorez ces messages de sécurité, vous risqueriez de vous blesser légèrement ou d'endommager le produit. A-4) Corps du support / Base du support (Uniquement LB65** -ZE/ZN) (Voir p. 22 ASSEMBLAGE ET PRÉPARATION Fixation du support mural Prenez les précautions nécessaires pour fixer le support mural en option à l'arrière de la TV. AG-F***DP Occhiali Dual play AN-VC5** Telecamera per videochiamate AG-F*** Occhiali 3D Cinema AN-MR500 Telcomando Magic Remote Tag on Dispositivo audio LG Compatibilità AG-F***DP Occhiali Dual play AG-F*** Occhiali 3D Cinema AN-MR500 Telcomando Magic Remote AN-VC5** Telecamera per videochiamate Dispositivo audio LG Tag On LB63** LB65** LB67**, LB68**, LB69**, LB72**, LB73**, LB86** • • LB87** ITALIANO • • • • • Il nome del modello o il design può cambiare in base all'aggiornamento delle funzioni del prodotto, al produttore e alle politiche. 5 MHz Izhodna moč (največ) Izhodna moč (največ) 10 dBm ali manj Ker je v državi lahko uporabljen drug pasovni kanal, uporabnik ne more spremeniti ali prilagoditi yy delovne frekvence, ta izdelek pa je nastavljen v skladu s podatki v tabeli z regionalnimi frekvencami. 0197 0197 SLOVENŠČINA SPECIFICATIONS B-1 SPECIFICATIONS Product specifications may be changed without prior notice due to upgrame of product functions. 0 mm 0 °C to 40 °C Less than 80 % -20 °C to 60 °C Less than 85 % Analogue TV PAL/SECAM B/G/I/D/K SECAM L/L' Programme coverage VHF: E2 to E12, UHF : E21 to E69, CATV: S1 to S20, HYPER: S21 to S47 Maximum number of storable programmes External antenna impedance DVB-S/S2 : 6,000 DVB-T/T2/C & Analogue TV : 1,500 75 Ω Please contact LG First. If you have any inquiries or comments, please contact LG customer information centre.

LG Customer Information Centre Country Service Country Service 0 810 144 131 015 200 255 0032 15 200255 07001 54 54 0900 543 5454 800 187 40 801 54 54 54 808 78 54 54 031 228 3542 0850 111 154 902 500 234 54 Record the model number and serial number of the TV. Refer to the label on the back cover and quote this information to your dealer when requiring any service. .



[You're reading an excerpt. Click here to read official LG 42LB630V user guide](#)
<http://yourpdfguides.com/dref/5579642>