




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG 42LB652V. You'll find the answers to all your questions on the LG 42LB652V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG 42LB652V
User guide LG 42LB652V
Operating instructions LG 42LB652V
Instructions for use LG 42LB652V
Instruction manual LG 42LB652V

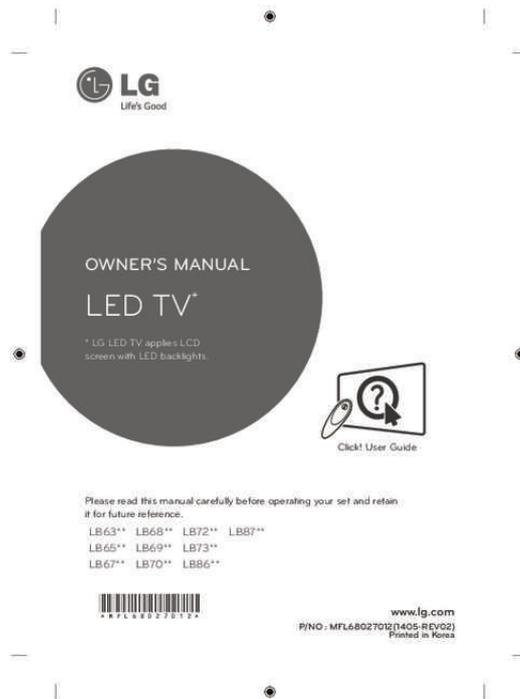

[You're reading an excerpt. Click here to read official LG 42LB652V user guide](http://yourpdfguides.com/dref/5589627)
<http://yourpdfguides.com/dref/5589627>

Manual abstract:

@@M4 x L14 M4 x L20 (Only 32LB65**ZA) 4EA A-4 SETTING UP THE TV 2 2 4EA M4 x L14 4EA LB63**-ZL, LB65**-ZK M4 x L14 M4 x L20 (Only 32LB65**ZK) 1 A stand base 32/39LB65**-ZE/ZN 1 B stand base 1 2 4EA M4 x L20 1 1 Attach the stand to the TV using the upper mounting hole on the back of the TV. @@Stand Body Stand Base SETTING UP THE TV A-5 2 42/47/50/55/60LB65**-ZE/ZN 1 4EA M4 x L20 1 3 Stand Body Stand Base 2 2EA M4 x L20 A-6 SETTING UP THE TV 3 3 1 4EA M4 x L14 2 LB70**, LB72**, LB73**-ZD/ZE 1 Attach the stand to the TV using the upper mounting hole on the back of the TV. @@1 4 Stand Front B Stand Supporter A Stand Supporter 2 4EA M4 x L10 4EA M4 x L14 SETTING UP THE TV A-7 LB86**, LB87** 3 1 Sound Bar Stand Assy Right Stand Assy Left 4EA M4 x L14 4EA M4 x L14 4 2 Screw Cover A-8 SETTING UP THE TV CAUTION When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches. @@@@The Screw Cover will protect the opening from accumulating dust and dirt. The Rubber will protect the opening from accumulating dust and dirt. When installing the wall mounting bracket, use the Rubber. (Only LB65**-ZE/ZN) Sound Bar Supporter Left 4EA M4 x L14 2 Rubber SETTING UP THE TV A-9 3 CAUTION When attaching the sound bar supporter to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches. @@@@The sound bar supporter only uses for wall mounting. After assembling the Sound Bar Wall Mount Brackets, do not adjust the angle of the TV while holding the Sound Bar or hanging onto the Sound Bar. When lifting the product, or moving it, make sure that two or more people safely lift it and set it upright on a flat surface.

When there are two people, one person should stand on the right side of the product and the other person should stand on the left side to lift it. When moving the product, hold the top and bottom corners. When lifting the product, or moving it, do not hold the Sound Bar. If you hold the Sound Bar when lifting the product, or moving it, the Sound Bar may be damaged. <When lifting the product> 4EA M4 x L14 4 Screw Cover <When moving the product> A-10 SETTING UP THE TV NOTE Remove the sound bar supporter before installing the stand by performing the sound bar supporter attachment in reverse. The Screw Cover will protect the opening from accumulating dust and dirt. Tidying cables Image shown may differ from your TV. 1 2 Gather and bind the cables with the Cable Holder. (Depending on model) Fix the Cable Management (Only 32LB65**ZA) Cable Management (Only LB63**ZA, 39/42/47/50/55/60LB65**ZA, LB67**, LB68**, LB69**, LB73**-ZA) Cable Holder Cable Management (Only 32LB65**ZK) Cable Management SETTING UP THE TV A-11 (Only LB63**-ZL, 39/42/47/50/55/60/70LB65**ZK/ZL) Cable Holder (Only LB70**, LB72**, LB73**-ZD/ZE) Cable Holder Cable Management Cable Management (Only LB86**, LB87**) (Only LB65**-ZE/ZN) Cable Holder Cable Management CAUTION Cable Holder (Only 70LB65**) Cable Holder Do not move the TV by holding the cable holders, as the cable holders may break, and injuries and damage to the TV may occur. Technologies audio TNT prises en charge : MPEG, Dolby Digital, Dolby Digital Plus, HE-AAC (*Not Provided) English Connect the TV to a wall antenna socket with an NOTE Use a signal splitter to use more than 2 TVs.

If the image quality is poor, install a signal amplifier properly to improve the image quality. If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction. Français Connectez la TV à une parabole satellite ou à une prise satellite à l'aide d'un câble satellite RF Italiano Collegare la TV a un'antenna satellitare e a una Español Para conectar la TV a una antena parabólica, enchufe un cable de RF de satélite a una toma de MAKING CONNECTIONS A-15 HDMI connection (Only LB86**, LB87**) (Only LB63**, LB65**, LB67**, LB68**, LB69**, LB70**, LB72**, LB73**) DVD/ Blu-Ray / HD Cable Box / HD STB / PC (*Not Provided) (*Not Provided) HDMI English Transmits the digital video and audio signals from an external device to the TV. Connect the external device and the TV with the HDMI cable as shown. choose any HDMI input port to connect. It does not matter which port you use. DVD/ Blu-Ray / HD Cable Box / HD STB / PC HDMI NOTE It is recommended to use the TV with the HDMI connection for the best image quality. Use the latest High Speed HDMI™ Cable with CEC (Customer Electronics Control) function. High Speed HDMI™ Cables are tested to carry an HD signal up to 1080p and higher. English An external audio device that supports SIMPLINK and ARC must be connected using HDMI IN 1 (ARC) or HDMI/DVI IN 1 (ARC) port.

HDMI cable, the external audio device that supports ARC outputs optical SPDIF without additional optical audio cable and supports the SIMPLINK function. DVD / Blu-Ray / HD Cable Box / HD STB / PC English Transmits the digital video signal from an external device to the TV. Connect the external device and the TV with the DVI-HDMI cable as shown. It does not matter which port you use. Depending on the graphics card, DOS mode may not work if a HDMI to DVI Cable is in use. When using the HDMI/DVI cable, only Single link is supported. DVD / Blu-Ray / HD Cable Box GREEN GREEN English WHITE VIDEO Transmits analog video and audio signals from an external device to the TV. Connect the external device and the TV with a component cable as shown. NOTE If cables are not installed correctly, it could cause this image to display in black and white or with distorted colours. OPOMBA VIDEO L (MONO) AUDIO R DVD / Blu-Ray / HD Cable Box / VCR MAKING CONNECTIONS A-25 (Only LB63**, LB65**, LB67**, LB68**, LB69**, LB70**, LB72**, LB73**) English Transmits analog video and audio signals from an external device o the TV.

Connect the external device and the TV with the composite cable as shown. MHL passive cable (*Not Provided) Mobile phone English for transmitting digital audiovisual signals from mobile phones to television sets. NOTE Connect the mobile phone to the HDMI IN 3 (MHL) or HDMI/DVI IN 4 (MHL) port to view the phone screen on the TV. The MHL passive cable is needed to connect the TV and a mobile phone. This only works for the MHL-enabled phone. Some applications can be operated by the remote control. For some mobile phones supporting MHL, you can control with the magic remote control. Remove the MHL passive cable from the TV when: - the MHL function is disabled - your mobile device is fully charged in standby mode MAKING CONNECTIONS A-27 Deutsch Schnittstelle, welche audiovisuelle Signale vom Mobiltelefon an ein TV-Gerät überträgt. Connexion audio optique numérique OPTICAL AUDIO IN Digital Audio System English You may use an optional external audio system instead of the built-in speaker.



[You're reading an excerpt. Click here to read official LG 42LB652V](http://yourpdfguides.com/dref/5589627)

[user guide](http://yourpdfguides.com/dref/5589627)

<http://yourpdfguides.com/dref/5589627>

Connect the external device and the TV with the optical audio cable as shown.

*NOTE Do not look into the optical output port. Looking at the laser beam may damage your vision. Audio with ACP (Audio Copy Protection) function may block digital audio output. This feature is not available in all countries. NOTE Check if the CI module is inserted into the PCMCIA card slot in the right direction. If the module is not inserted properly, this can cause damage to the TV and the PCMCIA card slot. If the TV does not display any video and audio when CI+ CAM is connected, please contact to the Terrestrial/Cable/ Satellite Service Operator.) English (*Not Provided) Transmits the video and audio signals from an external device to the TV set. Connect the external device and the TV set with the euro scart cable as shown. Mode, only 2D out signals can be output through the SCART cable.*

(Only 3D models) If you set the 3D mode to On while a scheduled recording is performed on digital TV, monitor out signals cannot be output through the SCART cable, and the recording cannot be performed. For more information of external device's connection, refer to the manual provided with each device. NOTE The external device connection may differ from the model. Connect external devices to the TV regardless of the order of the TV port. If you record a TV programme on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device. Refer to the external equipment's manual for operating instructions. If you connect a gaming device to the TV, use the cable supplied with the gaming device. In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear.

In PC mode, some resolution settings may not work properly depending on the graphics card. @Com 2 TABLE OF CONTENTS TABLE OF CONTENTS ENGLISH 3 LICENSES 29 USING THE USER GUIDE 3 OPEN SOURCE SOFTWARE NOTICE 30 30 30 30 MAINTENANCE Cleaning your TV - Screen, frame, cabinet and stand - Power cord 3 EXTERNAL CONTROL DEVICE SETUP 30 TROUBLESHOOTING 4 10 SAFETY INSTRUCTIONS - Viewing 3D Imaging (Only 3D models) 31 SPECIFICATIONS 12 INSTALLATION PROCEDURE 12 12 16 17 19 20 21 22 23 24 24 24 ASSEMBLING AND PREPARING Unpacking Separate purchase Parts and buttons - Using the Joystick button Lifting and moving the TV Mounting on a table Mounting on a wall Using Built-in Camera - Preparing Built-in Camera - Name of Parts of Built-in Camera - Checking the Camera's Shooting Range WARNING If you ignore the warning message, you may be seriously injured or there is a possibility of accident or death. 25 REMOTE CONTROL 27 28 28 29 MAGIC REMOTE FUNCTIONS Registering Magic Remote How to use Magic Remote Precautions to Take when Using the Magic Remote CAUTION If you ignore the caution message, you may be slightly injured or the product may be damaged. NOTE The note helps you understand and use the product safely. Please read the note carefully before using the product.

LICENSES / OPEN SOURCE SOFTWARE NOTICE / EXTERNAL CONTROL DEVICE SETUP 3 LICENSES Supported licensee of combustion/explosion or fire due to careless handling of the inflammable substances. Do not drop metallic objects such as coins, hair pins, chopsticks or wire into the product, or inflammable objects such as paper and matches. If a foreign object is dropped into the product, unplug the power cord and contact the service centre. Do not spray water on the product or scrub with an inflammable substance (thinner or benzene). fire or electric shock accident can occur.

6 SAFETY INSTRUCTIONS Do not allow any impact, shock or any objects to fall into the unit, and do not drop anything onto the screen. You may be injured or the product can be damaged. ENGLISH Never touch this product or antenna during a thunder or lightning storm. you may be electrocuted. Never touch the wall outlet when there is leakage of gas, open the windows and ventilate. It may cause a fire or a burn by a spark. Do not disassemble, repair or modify the product at your own discretion. fire or electric shock accident can occur. Contact the service centre for check, calibration or repair. If any of the following occur, unplug the product immediately and contact your local service centre.

- The product has been impacted by shock - The product has been damaged - Foreign objects have entered the product - The product produced smoke or a strange smell This may result in fire or electric shock. Unplug the TV from AC mains wall socket if you do not intend to use the TV for a long period of time. Accumulated dust can cause fire hazard and insulation deterioration can cause electric leakage/shock/fire. Apparatus shall not be temporary or permanent distortion/damage to screen. When cleaning the product and its components, unplug the power first and wipe it with a soft cloth. applying excessive force may cause scratches or discolouration. Do not spray with water or wipe with a wet cloth. never use glass cleaner , car or industrial shiner , abrasives or wax , benzene , alcohol etc. , which can damage the product and its panel. Otherwise, this may result in fire, electric shock or product damage (deformation, corrosion or breakage).

As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by SWITCH. When unplugging the cable, grab the plug and unplug it, by pulling at the plug. Don't pull at the cord to unplug the power cord from the power board, as this could be hazardous. When moving the product, make sure you turn the power off first. Then, unplug the power cables, antenna cables and all connecting cables. The TV set or power cord may be damaged, which may create a fire hazard or cause electric shock. SAFETY INSTRUCTIONS 9 When moving or unpacking the product, work in pairs because the product is heavy. Otherwise, this may result in injury. ENGLISH Contact the service centre once a year to clean the internal parts of the product. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

If the product feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with product. The panel is a high technology display product with resolution of two million to six million pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product.



[You're reading an excerpt. Click here to read official LG 42LB652V](http://yourpdfguides.com/dref/5589627)

[user guide](http://yourpdfguides.com/dref/5589627)

<http://yourpdfguides.com/dref/5589627>

2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV. 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the 2 Connect the power cord to a wall outlet.

CAUTION Do not place the TV near or on sources of heat, as this may result in fire or other damage. Using the Kensington security system (This not available for all models.) Image shown may differ from your TV. The Kensington security system connector is located at the rear of the TV. For more information of installation and using, refer to the manual provided with the Kensington security system or visit <http://www>. Connect the Kensington security system cable between the TV and a table. **CAUTION** Make sure that children do not climb on or hang on the TV. **NOTE** Use a platform or cabinet that is strong and large enough to support the TV securely. brackets , bolts and ropes are not provided. You can obtain additional accessories from your local dealer.

22 **ASSEMBLING AND PREPARING** Mounting on a wall Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table. **ENGLISH** Separate purchase(Wall Mounting Bracket) LG recommends that wall mounting be performed We recommend the use of LG's wall mount bracket. When you do not use LG's wall mount bracket, please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. Model 32/39LB65** 42/47/55LB63** 42/47/50/55LB65** 49/55LB86** 49/55LB87** 400 x 400 M6 4 LSW440B MSW240 VESA (A x B) Standard screw Number of screws Wall mount bracket Model 200 x 200 M6 4 LSW240B MSW240 10 cm 10 cm 10 cm 10 cm VESA (A x B) Standard screw Number of screws Wall mount bracket 60LB65** 70LB65** 42/47/50/55LB67** 42/47/55/60/65LB68** 42/47/55LB69** 42/47/55LB70** 42/47/55/60/65LB72** 42/47/55/60/65LB73** 60LB86** 60LB87** 400 x 400 600 x 400 M6 4 LSW440B M8 4 LSW640B Wall mount bracket MSW240 LSW240B LSW440B LSW640B **A B ASSEMBLING AND PREPARING** 23 Using Built-in Camera **CAUTION** Disconnect the power first, and then move or install the TV.

Otherwise electric shock may occur. If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorised LG wall mount and contact the local dealer or qualified personnel. Do not over tighten the screws as this may cause damage to the TV and void your warranty. Use the screws and wall mounts that meet the VESA standard.

Any damages or injuries by misuse or using an improper accessory are not covered by the warranty. (Only LB87**) You can make a Skype video call or use the motion recognition function using the built-in camera of the TV. This TV does not support the use of an external camera. **ENGLISH NOTE** Before using the built-in camera, you must recognize the fact that you are legally responsible for the use or misuse of the camera by the relevant national laws including the criminal law. The relevant laws include the Personal Information Protection law which regulates the processing and transferring of personal information and the law which regulates the monitoring by camera in a workplace and other places. When using the built-in camera, avoid questionable, illegal, or immoral situations. Other than at public places or events, consent to be photographed may be required. We suggest avoiding the following situations: (1) Using the camera in areas where the use of camera is generally prohibited such as restroom, locker room, fitting room and security area. (2) Using the camera while causing the infringement of privacy. (3) Using the camera while causing the violation of the relevant regulations or laws.

NOTE Use the screws that are listed on the VESA standard screw specifications. The wall mount kit includes an installation manual and necessary parts. The wall mount bracket is not provided. You can obtain additional accessories from your local dealer. The length of screws may differ depending on the wall mount. Make sure to use the proper length. For more information, refer to the manual supplied with the wall mount. When attaching a wall mounting bracket to the TV, insert the wall mount spacers into the TV wall mount holes to adjust the vertical angle of the TV. (Only 42LB63**, 42LB65**) Wall Mount Spacer 24 **ASSEMBLING AND PREPARING** Preparing Built-in Camera 1 Pull up the slide at the back of the TV. 3 Push down the built-in camera when you are not using it.

ENGLISH Angle Adjustment Lever Slide Name of Parts of Built-in Camera **NOTE** Remove the protective film before using the built-in camera. Camera Lens Protective Film 2 You can adjust the angle of the camera with the angle adjustment lever on the back of the built-in camera. <Side View> Microphones 7 5 Checking the Camera's Shooting Range Lever Lens @ @2 Select CAMERA and then press the Wheel(OK) button. **NOTE** The optimal distance from the camera to use the motion recognition function is between 1. **REMOTE CONTROL** 25 **REMOTE CONTROL** The descriptions in this manual are based on the buttons on the remote control.

Please read this manual carefully and use the TV correctly. To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching and ends to the label inside the compartment, and close the battery the cover. To remove the batteries, perform the installation actions in reverse. Or **ENGLISH** **CAUTION** Do not mix old and new batteries, as this may damage the remote control.

The remote control will not be included for all sales market. Make sure to point the remote control toward the remote control sensor on the TV. 1 4 7 2 5 8 0 3 6 9 Views the information of the current programme and INFO screen. PAGE Moves to the previous or next screen. 1 1 1 **TELETEXT BUTTONS** These buttons are used for teletext. REC/ Starts to record and displays record menu. (Only Time Machine Ready supported model) 2) Controls the Premium contents, Control buttons (Time MachineReady or SmartShare menus or the SIMPLINK compatible devices (USB or SIMPLINK or Time MachineReady). 2 Colour buttons These access special functions in some menus. (Depending on model) Views the information of the current programme and screen. (Space) Opens an empty space on the screen keyboard.

2 **INFO** Views the information of the current programme and screen. (Depending on model) 2 3D Used for viewing 3D video. (Depending on model) PAGE Moves to the previous or next screen. 3 Colour buttons These access special functions in some menus. : Red, : Green, : Yellow, : Blue) (4 **TELETEXT BUTTONS** These buttons are used for teletext.) (Depending on model)) Controls the Premium contents, Time Control buttons (MachineReady or SmartShare menus or the SIMPLINK compatible devices (USB or SIMPLINK or Time MachineReady).



[You're reading an excerpt. Click here to read official LG 42LB652V user guide](http://yourpdfguides.com/dref/5589627)
<http://yourpdfguides.com/dref/5589627>

REC/ Starts to record and displays record menu. OPT APP/ REC/ SUBTITLE AD TV/RAD MAGIC REMOTE FUNCTIONS 27 MAGIC REMOTE FUNCTIONS This item is not included for all models. To replace batteries, open the battery cover, replace batteries (1.5 V AA) matching and ends to the label inside the compartment, and close the battery cover.

Be sure to point the remote control toward the remote control sensor on the TV. To remove the batteries, perform the installation actions in reverse. ENGLISH CAUTION Do not mix old and new batteries, as this may damage the remote control. Navigation buttons (up/down/left/right) Press the up, down, left or right button to scroll the menu. If you press , , or buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control.

To display the pointer on the screen again, shake Magic Remote to the left and right. Wheel(OK) Press the center of the Wheel button to select a menu. You can change programmes and scroll the menu by using the Wheel button. Coloured buttons These access special functions in some menus. (Depending on model) * Pressing and holding the / INPUT button will display a menu to select an external device that is connected to the TV.

28 MAGIC REMOTE FUNCTIONS How to deregister the Magic Remote ENGLISH Voice recognition(Depending on model) Network connection is required to use the voice recognition function. Speak when the voice display window appears on the left of the TV screen. The voice recognition may fail when you speak too fast or too slow. Use the Magic Remote no further than 10 cm from your face. The recognition rate may vary depending on the user's characteristics (voice, pronunciation, intonation and speed) and the environment (noise and TV volume). (BACK) (Home) » Pressing and holding the (EXIT to LIVE) button will let you cancel and re-register Magic Remote at once. Press the (BACK) and (Home) buttons at the same time, for five seconds, to unpair the Magic Remote with your TV. How to use Magic Remote Shake the Magic Remote slightly to the right and left or press (Home), / INPUT, buttons to make the pointer appear on the screen. » The pointer will appear when you turn the Wheel button. (Depending on model) Registering Magic Remote How to register the Magic Remote To use the Magic Remote, first pair it with your TV.

1 Put batteries into the Magic Remote and turn the TV on. 2 Point the Magic Remote at your TV and press the Wheel (OK) on the remote control. » If the TV fails to register the Magic Remote, try again after turning the TV off and back on. If the pointer has not been used for a certain period of time or Magic Remote is the pointer will disappear. If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen. The Magic Remote depletes batteries faster than a normal remote due to the additional features. MAGIC REMOTE FUNCTIONS / USING THE USER GUIDE 29 Precautions to Take when Using the Magic Remote Use the remote control within the specified range (within 10 m). You may experience communication failures when using the device outside the coverage area or if there are obstacles within the coverage area. You may experience communication failures depending on the accessories. The Magic Remote may not work properly if a wireless router (AP) is within 1 meter of the TV.

Your wireless router should be more than 1 m away from the TV. Do not disassemble or heat the battery. Do not drop the battery. avoid avoid extreme shocks to the battery. Inserting the battery the wrong way may result in explosion.

USING THE USER GUIDE User Guide allows you to more easily access the detailed TV information. @@ 2 Select User Guide and press Wheel(OK). @@@@ When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges. Screen, frame, cabinet and stand To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth. To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent.

Then wipe immediately with a dry cloth. CAUTION Avoid touching the screen at all times, as this may result in damage to the screen. @@ Do not use any chemicals as this may damage the product. Do not spray liquid onto the surface. @@@@ no image display and no sound is produced. The TV turns off suddenly. Solution Check the remote control sensor on the product and try again. Check if there is any obstacle between the product and the remote control. To , Check if the batteries are still working and properly installed (to). Check if the product is turned on.

Check if the power cord is connected to a wall outlet. Check if there is a problem in the wall outlet by connecting other products. check the power control settings. The power supply may be interrupted. Check if the Automatic Standby(Depending on model) / Sleep Timer / Timer Power Off is activated in the Timers settings. If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity. Turn the TV off/on using the remote control. reconnect the HDMI cable. Restart the PC with the TV on. When connecting to the PC (HDMI/ DVI), 'No signal' or 'Invalid Format' is displayed.) 10dBm or Lower Because band channel used by the country could be different, the user can not change or adjust the operating frequency and this product is set for the regional frequency table. This device should be installed and operated with minimum distance 20 cm between the device and your body. And this phrase is for the general statement for consideration of user environment. Com 2 TABLE DES MATIÈRES TABLE DES MATIÈRES 29 3 LICENCES 30 30 30 30 UTILISATION DU GUIDE DE L'UTILISATEUR 3 INFORMATIONS SUR LES LOGICIELS LIBRES MAINTENANCE Nettoyage de votre TV - Écran, cadre, boîtier et support - Cordon d'alimentation FRANÇAIS 3 CONFIGURATION DU PÉRIPHÉRIQUE DE CONTRÔLE EXTERNE 30 DÉPANNAGE 31 4 10 SPÉCIFICATIONS CONSIGNES DE SÉCURITÉ - Visionnage d'images 3D (modèles 3D uniquement) 12 PROCÉDURE D'INSTALLATION 12 12 16 17 19 20 21 22 23 24 24 24 ASSEMBLAGE ET PRÉPARATION Déballage Achat séparé Pièces et boutons - Utilisation du bouton du joystick Soulever et déplacer la TV Installation sur une table Fixation du support mural Utilisation de la caméra intégrée - Préparation de la caméra intégrée - Nom des pièces de la caméra intégrée - Vérification de la plage de prise de vue de la caméra AVERTISSEMENT Si vous ignorez ces messages d'avertissement, vous risquez d'être gravement blessé, de provoquer un accident ou d'entraîner la mort.



[You're reading an excerpt. Click here to read official LG 42LB652V user guide](http://yourpdfguides.com/dref/5589627)
<http://yourpdfguides.com/dref/5589627>

25 TÉLÉCOMMANDE ATTENTION 27 28 29 FONCTIONS DE LA MAGIC REMOTE Enregistrement de la Magic remote Comment utiliser la magic remote Consignes relatives à l'utilisation de la magic remote Si vous ignorez ces messages de sécurité, vous risqueriez de vous blesser légèrement ou d'endommager le produit.

A-4) Corps du support / Base du support (Uniquement LB65**-ZE/ZN) (Voir p. 22 ASSEMBLAGE ET PRÉPARATION Fixation du support mural le support mural en option à l'arrière de la TV. Si vous n'utilisez pas le support mural LG, veuillez utiliser un support mural permettant Veillez à utiliser des vis et un support mural conformes aux normes VESA. OPT : rumeni in : modri gumb) APP/ 4 REC/ SUBTITLE AD TV/RAD Ready ((USB ali SIMPLINK ali za Ready Ready) Time) 27 in (samo modeli Preklopi med oddajanjem (an(gor/dol/levo/desno) (odvisno od modela) ali z zaslona in daljinski upravljalnik kazalca na zaslonu stesite daljinski upravljalnik Magic levo in Prikaz daljinskega upravljalnika K * Dostop do menija univerzalnega preklapljate programe ali kanale * Odprejo posebne funkcije v neka(: rumeni in : : modri gumb) (odvisno od modela) modela) * 28 (odvisno od modela) Za uporabo funkcije prepoznavanja glasu je daljinskim upravljalnikom Magic in in Ko se na levi strani televizijskega » boste Prepoznavanje glasu morda ne znova registrirali daljinski Uspešnost prepoznavanja je odvisna Daljinski upravljalnik Magic stesite nekoliko v desno in levo ali pritisnite gumba » od modela) uporabljate ali daljinski 1 Vstavite baterije v daljinski upravljalnik Magic in vklopite 2 Daljinski upravljalnik Magic usmerite proti televizorju in pritisnite gumb K » Magic ne morete registrirati izklopite in še enkrat Kazalec se bo premaknil na porablja daljinski upravljalnik 29 Daljinski upravljalnik uporabljajte znotraj 1 Pritisnite gumb 2 Izberite na daljinskem in pritisnite Daljinski upravljalnik Magic morda ne usmerjevalnik (AP) od televizorja oddaljen Baterije ne razstavljajte in izpostavlajte Baterije ne razstavljajte in je ne s tipko modela) () na 30 upravljati z daljinskim na Ne vidite slike in ne na Televizor se nenadoma V (odvisno od modela) Pri povezavi z SPECIFIKACIJE 31 B Standard Standard pon 5150 do 5250 MHz pon izven EU) - 10 dBm ali manj 0197 SPECIFICATIONS B-1 SPECIFICATIONS Product specifications may be changed without prior notice due to upgrade of product functions. 0 mm 0 °C to 40 °C Less than 80 % -20 °C to 60 °C Less than 85 % Analogue TV PAL/SECAM B/G/I/D/K SECAM L/L' Programme coverage VHF: E2 to E12, UHF : E21 to E69, CATV: S1 to S20, HYPER: S21 to S47 Maximum number of storable programmes External antenna impedance DVB-S/S2 : 6,000 DVB-T/T2/C & Analogue TV : 1,500 Please contact LG First. If you have any inquiries or comments, please contact LG customer information centre. LG Customer Information Centre Country Service Country Service 0 810 144 131 015 200 255 0032 15 200255 07001 54 54 0900 543 5454 800 187 40 801 54 54 54 808 78 54 54 031 228 3542 0850 111 154 902 500 234 54 Record the model number and serial number of the TV. Refer to the label on the back cover and quote this information to your dealer when requiring any service. .



[You're reading an excerpt. Click here to read official LG 42LB652V user guide](http://yourpdfguides.com/dref/5589627)
<http://yourpdfguides.com/dref/5589627>