



**Manual abstract:**

A-2 ... .. A-38 Front (ENG) 2 ... .. 27 Blank Front (Ger) 2 ... .. 27 Blank Front (Fre) 2 ... .. 27 Blank Front (Ita) 2 ... .. 31  
32 Front (Spa) 2 ... .. 27 Blank Front (Por) 2 ... .. 27 Blank Front (Ned) 2 ... .. 27 Blank Front (Grk) 2 ... .. 27 Blank Front (Slv) 2  
... .. 27 Blank Part number Total pages : : MFL68484514 300 pages Back Cover B-1 B-2 Blank Blank Blank (Eng) OWNER'S MANUAL \* LED TV  
UB80\*\* UB82\*\* UB83\*\* \* LG LED TVs are LCD TVs with LED backlighting. Please read this manual carefully before operating your set and retain it for  
future reference. vuká Slovenščina LANGUAGE B-1 SPECIFICATIONS COMMON SETTING UP THE TV A-3 SETTING UP THE TV Image shown may  
differ from your TV. UB83\*\* ZG 1 A stand base Attaching the stand UB80\*\*, UB82\*\* B stand base 1 A Stand Base 1 B Stand Base 2 1 1 Attach the stand to  
the TV using the upper mounting hole on the back of the TV. 2 Attach the stand to the TV using the lower connection on the back of the TV. 2 1 Attach the  
stand to the TV using the upper mounting hole on the back of the TV. 2 Attach the stand to the TV using the lower connection on the back of the TV. 2 2 M4 x  
L21 4EA M4 x L20 4EA A-4 SETTING UP THE TV UB83\*\* ZB 1 2 Stand Body (L) Stand Body (R) Stand Base 1 2 M4 x L20 4EA 1 Attach the stand to the TV  
using the upper mounting hole on the back of the TV. 2 Attach the stand to the TV using the lower connection on the back of the TV. NOTE yy Be sure to check  
the Stand Body (L), (R), when installing on the stand base.

3 M4 x L20 4EA SETTING UP THE TV / MAKING CONNECTIONS A-5 CAUTION yy When attaching the stand to the TV set, place the screen facing down  
on a cushioned table or flat surface to protect the screen from scratches. Yy Make sure that the screws are inserted correctly and fastened securely. (If they  
are not fastened securely enough, the TV may tilt forward after being installed. ) Do not use too much force and over tighten the screws; otherwise screw may  
be damaged and not tighten correctly. MAKING CONNECTIONS This section on MAKING CONNECTIONS mainly uses diagrams for the UB83\*\* ZB  
models.

Antenna connection NOTE yy Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse. ANTENNA / CABLE  
IN Tidying cables Image shown may differ from your TV. 1 Gather and bind the cables with the Cable Holder and the Cable Management. 2 Fix the Cable  
Management firmly to the TV. (\*Not Provided) English Connect the TV to a wall antenna socket with an RF cable (75 Ω).

nOTE yy Use a signal splitter to use more than 2 TVs. Yy If the image quality is poor, install a signal amplifier properly to improve the image quality. Yy If  
the image quality is poor with an antenna connected, try to realign the antenna in the correct direction. yy An antenna cable and converter are not supplied.

Yy Supported DTV Audio: MPEG, Dolby Digital, Dolby Digital Plus, HE-AAC Cable Holder Cable management CAUTION yy Do not move the TV by  
holding the cable holder, as the cable holder may break, and injuries and damage to the TV may occur. (\*Not Provided) English Connect the TV to a satellite  
dish to a satellite socket with a satellite RF cable (75 Ω). 2) 2 (ARC) (\*Not Provided) HDMI DVD / Blu-Ray / HD Cable Box / HD STB / PC 3 (MHL) DVI IN  
MAKING CONNECTIONS A-9 English Transmits the digital video and audio signals from an external device to the TV. Connect the external device and the  
TV with the HDMI cable as shown. choose any HDMI input port to connect. It does not matter which port you use.

NOTE yy It is recommended to use the TV with the HDMI connection for the best image quality. Yy Use the latest High Speed HDMI™ Cable with CEC  
(Customer Electronics Control) function. Yy High Speed HDMI™ Cables are tested to carry an HD signal up to 1080p and higher. ARC (Audio Return  
Channel) English An yy external audio device that supports SIMPLINK and ARC must be connected using HDMI(4K@60Hz)/DVI IN 2 (ARC) port. When  
connected with a high-speed yy HDMI cable, the external audio device that supports ARC outputs optical SPDIF without additional optical audio cable and  
supports the SIMPLINK function. SPEAKER (\*Not Provided) OUT English Transmits the headphone signal from the TV to an external device. Connect the  
external device and the TV with the headphone as shown. NOTE yy AUDIO menu items are disabled when connecting a headphone. Yy Optical Digital Audio  
Out is not available when connecting a headphone. DVD / Blu-Ray / HD Cable Box / HD STB / PC English Transmits the digital video signal from an  
external device to the TV.

Connect the external device and the TV with the DVI-HDMI cable as shown. It does not matter which port you use. NOTE yy Depending on the graphics card,  
DOS mode may not work if a HDMI to DVI Cable is in use. Yy When using the HDMI/DVI cable, only Single link is supported. (\*Not Provided) YELLOW L  
RED RED RED R RED GREEN BLUE AUDIO DVD / Blu-Ray / HD Cable Box WHITE WHITE WHITE RED RED GREEN GREEN VIDEO BLUE BLUE  
A-20 MAKING CONNECTIONS English Transmits analogue video and audio signals from an external device to the TV.

Connect the external device and the TV with a component cable(or component gender cable) as shown. NOTE yy If cables are not installed correctly, it could  
cause this image to display in black and white or with distorted colours. (\*Not Provided) VIDEO YELLOW DVD / Blu-Ray / HD Cable Box / VCR L (MONO)  
AUDIO R WHITE RED A-22 MAKING CONNECTIONS English Transmits analog video and audio signals from an external device to the TV. Connect the  
external device and the TV with the composite cable as shown. (4K@60Hz)/ MHL passive cable (\*Not Provided) Mobile phone English Mobile High-  
definition Link (MHL) is an interface for transmitting digital audiovisual signals from mobile phones to television sets.

Retirez le câble passif MHL du téléviseur yy uniquement si : --la fonction MHL est désactivée, --votre périphérique mobile est complètement chargé et en  
mode veille NOTE Connect the mobile phone to the yy HDMI(4K@60Hz)/DVI IN 3 (MHL) port to view the phone screen on the TV. The MHL passive cable is  
needed to yy connect the TV and a mobile phone. This only works for the MHL-enabled yy phone. Some applications can be operated by yy the remote control.

For yy some mobile phones supporting MHL, you can control with the Magic Remote. Remove the MHL passive cable from the yy TV when: --the MHL  
function is disabled --your mobile device is fully charged in standby mode A-24 MAKING CONNECTIONS Italiano Mobile High-definition Link (MHL) è  
un'interfaccia per la trasmissione di segnali audiovisivi digitali dai cellulari ai TV.



**[You're reading an excerpt. Click here to read official LG 55UB820V user guide](http://yourpdfguides.com/dref/5591896)**  
<http://yourpdfguides.com/dref/5591896>

Digital Audio System OPTICAL DIGITAL AUDIO OUT (\*Not Provided) OPTICAL AUDIO IN English You may use an optional external audio system instead of the built-in speaker. Connect the external device and the TV with the optical audio cable as shown. NOTE yy Do not look into the optical output port. Looking at the laser beam may damage your vision.

Yy Audio with ACP (Audio Copy Protection) function may block digital audio output. English Connect a USB storage device such as a USB flash memory, external hard drive, or a USB memory card reader to the TV and access the SmartShare menu to use various multimedia files. nOTE yy Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly. Yy Connect the external power source if your USB is needed. English View the encrypted (pay) services in digital TV mode. This feature is not available in all countries. NOTE yy Check if the CI module is inserted into the PCMCIA CARD SLOT in the right direction. If the module is not inserted properly, this can cause damage to the TV and the PCMCIA card slot. Yy If the TV does not display any video and audio when CI+ CAM is connected, please contact to the Terrestrial/Cable/ Satellite Service Operator.

(Nur 3D-Modelle) English Transmits the video and audio signals from an external device to the TV set. Connect the external device and the TV set with the euro scart cable (or Scart gender cable) as shown. Yy When watching digital TV in 3D imaging mode, only 2D out signals can be output through the SCART cable. English Connect various external devices to the TV and switch input modes to select an external device. For more information of external device's connection, refer to the manual provided with each device.

available external devices are: HD receivers , DVD players , VCRs , audio systems , USB storage devices , PC , gaming devices , and other external devices. NOTE yy The external device connection may differ from the model. Yy Connect external devices to the TV regardless of the order of the TV port. Yy If you record a TV programme on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device.

Yy Refer to the external equipment's manual for operating instructions. Yy If you connect a gaming device to the TV, use the cable supplied with the gaming device. Yy In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear. Yy In PC mode, some resolution settings may not work properly depending on the graphics card. Yy If Ultra HD content is played on your PC, video or audio may become disrupted intermittently depending on your PC's performance. OWNER'S MANUAL \* LED TV \* LG LED TVs are LCD TVs with LED backlighting. Please read this manual carefully before operating your set and retain it for future reference. Com 2 TABLE OF CONTENTS TABLE OF CONTENTS 3 3 LICENSES OPEN SOURCE SOFTWARE NOTICE EXTERNAL CONTROL DEVICE SETUP SAFETY INSTRUCTIONS - Viewing 3D Imaging (Only 3D models) ENGLISH 26 26 26 26 MAINTENANCE Cleaning your TV - Screen, frame, cabinet and stand - Power cord 3 26 27 TROUBLESHOOTING SPECIFICATIONS 4 10 12 12 12 15 16 17 18 19 20 INSTALLATION PROCEDURE ASSEMBLING AND PREPARING Unpacking Separate purchase Parts and buttons - Using the Joystick button Lifting and moving the TV Mounting on a table Mounting on a wall 21 23 24 24 25 REMOTE CONTROL MAGIC REMOTE FUNCTIONS Registering Magic Remote How to use Magic Remote Precautions to Take when Using the Magic Remote WARNING yy If you ignore the warning message, you may be seriously injured or there is a possibility of accident or death. 25 USING THE USER GUIDE CAUTION yy If you ignore the caution message, you may be slightly injured or the product may be damaged.

NOTE yy The note helps you understand and use the product safely. Please read the note carefully before using the product. IICENSES / OPEN SOURCE SOFTWARE NOTICE / EXTERNAL CONTROL DEVICE SETUP 3 LICENSES Supported licenses may differ by model. For more information about licenses, visit www. ENGLISH OPEN SOURCE SOFTWARE NOTICE To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on w

You may be injured or the product can be damaged. Never touch this product or antenna during a thunder or lightning storm. yy You may be electrocuted. ENGLISH Never touch the wall outlet when there is leakage of gas, open the yy windows and ventilate. It may cause a fire or a burn by a spark. Do yy not disassemble, repair or modify the product at your own discretion. fire or electric shock accident can occur.

Contact the service centre for check, calibration or repair. If yy any of the following occur, unplug the product immediately and contact your local service centre. --The product has been impacted by shock --The product has been damaged --Foreign objects have entered the product --The product produced smoke or a strange smell This may result in fire or electric shock. Unplug the TV from AC mains wall socket if you do not intend to use the yy TV for a long period of time. Accumulated dust can cause fire hazard and insulation deterioration can cause electric leakage/shock/fire.

Apparatus shall not be exposed to dripping or splashing and no objects yy filled with liquids, such as vases, shall be placed on the apparatus. Do yy not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall. CAUTION Install the product where no radio wave occurs. Yy There should be enough distance between an outside antenna and power yy lines to keep the former from touching the latter even when the antenna falls. this may cause an electric shock. SAFETY INSTRUCTIONS 7 Do yy not install the product on places such as unstable shelves or inclined surfaces. Also avoid places where there is vibration or where the product cannot be fully supported. Otherwise, the product may fall or flip over, which may cause injury or damage to the product. If yy you install the TV on a stand, you need to take actions to prevent the product from overturning.

Otherwise, the product may fall over, which may cause injury. If yy you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product.



[You're reading an excerpt. Click here to read official LG 55UB820V user guide](http://yourpdfguides.com/dref/5591896)  
<http://yourpdfguides.com/dref/5591896>

When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop. Only use the attachments / accessories specified by the manufacturer. **Yy** When installing the antenna, consult with a qualified service technician. If **yy** not installed by a qualified technician, this may create a fire hazard or an electric shock hazard. We recommend that you maintain a distance of at least 2 to 7 times the **yy** diagonal screen size when watching TV. If you watch TV for a long period of time, this may cause blurred vision. **Yy** This could cause damage to the remote control.

**ENGLISH** Do **yy** not mix new batteries with old batteries. This may cause the batteries to overheat and leak. batteries should not be exposed to excessive heat. For example, keep away from direct Sunlight **yy** , open fireplace and electric heaters . do **yy** not place non-rechargeable batteries in charging device. Make sure there are no objects between the remote control and its sensor. **Yy** Signal from Remote Control can be interrupted due to external/internal **yy** lighting eg Sunlight, fluorescent lighting. If this occurs turn off lighting or darken viewing area. When connecting external devices such as video game consoles, make **yy** sure the connecting cables are long enough. Otherwise, the product may fall over, which may cause injury or damage the product. Do **yy** not turn the product On/Off by plugging-in or unplugging the power plug to the wall outlet. (Do not use the power plug for switch. ) It may cause mechanical failure or could give an electric shock. **8 SAFETY INSTRUCTIONS** Please follow the installation instructions below to prevent the product from **yy** overheating. --The distance between the product and the wall should be more than 10 cm. --Do not install the product in a place with no ventilation (e. --Do not install the product on a carpet or cushion. --Make sure the air vent is not blocked by a tablecloth or curtain. Otherwise, this may result in fire. Take care not to touch the ventilation openings when watching the TV for **yy** long periods as the ventilation openings may become hot.

This does not affect the operation or performance of the product. Periodically examine the cord of your appliance, and if its appearance indicates damage or **yy** deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. **ENGLISH** Protect the power cord from physical or mechanical abuse, such as being **yy** twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. Do **yy** not press strongly upon the panel with a hand or sharp object such as nail, pencil or pen, or make a scratch on it, as it may cause damage to screen. Avoid touching the screen or holding your finger(s) against it for long **yy** periods of time. Doing so may produce some temporary or permanent distortion/damage to screen. When cleaning the product and its components, unplug the power first and **yy** wipe it with a soft cloth. applying excessive force may cause scratches or discolouration. Do not spray with water or wipe with a wet cloth. never use glass cleaner , car or industrial shiner , abrasives or wax , benzene , alcohol etc. , which can damage the product and its panel. Otherwise, this may result in fire, electric shock or product damage (deformation, corrosion or breakage). As **yy** long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by SWITCH. When unplugging the cable, grab the plug and unplug it, by pulling at the **yy** plug.

Don't pull at the cord to unplug the power cord from the power board, as this could be hazardous. When moving the product, make sure you turn the power off first. Then, **yy** unplug the power cables, antenna cables and all connecting cables. The TV set or power cord may be damaged, which may create a fire hazard or cause electric shock. **SAFETY INSTRUCTIONS 9** When moving or unpacking the product, work in pairs because the product **yy** is heavy. Otherwise, this may result in injury. Contact the service centre once a year to clean the internal parts of the **yy** product. Servicing is required **yy** when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. If **yy** the product feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with product. **ENGLISH** The panel is a high technology display product with resolution of two **yy** million to six million pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product. This phenomenon also occurs in third-party products and is not subject to exchange or refund. You may find different brightness and color of the panel depending on your **yy** viewing position(left/right/top/down).

This phenomenon occurs due to the characteristic of the panel. It is not related with the product performance, and it is not malfunction. , broadcasting channel logo, on-screen menu, scene from a video **yy** game) for a prolonged time may cause damage to the screen, resulting in retention of the image, which is known as image sticking. The warranty does not cover the product for image sticking. Avoid displaying a fixed image on your television's screen for a prolonged period (2 or more hours for LCD, 1 or more hours for Plasma). Also, if you watch the TV at a ratio of 4:3 for a long time, image sticking may occur on the borders of the panel. This phenomenon also occurs in third-party products and is not subject to exchange or refund. Generated Sound **yy** "Cracking" noise: A cracking noise that occurs when watching or turning off the TV is generated by plastic thermal contraction due to tempera-ture and humidity. This noise is common for products where thermal deformation is required. Electrical circuit humming/panel buzzing: A low level noise is generated from a high-speed switching circuit, which supplies a large amount of current to operate a product.

it varies depending on the product. This generated sound does not affect the performance and reliability of the product. @@@@ double images or discomfort in viewing may be experienced. @@It is advised to take frequent breaks than the average adult. @@@@-- Consult your doctor when the symptoms persist.

@@@@Do not sit closer to the TV than the recommended distance. @@Otherwise, you may not be able to view 3D videos properly. @@U sing modified 3D glasses may cause eye strain or image distortion. D o not keep your 3D glasses in extremely high or low temperatures.



[You're reading an excerpt. Click here to read official LG 55UB820V user guide](http://yourpdfguides.com/dref/5591896)  
<http://yourpdfguides.com/dref/5591896>

it will cause deformation.

The 3D glasses are fragile and are easily scratched. Always use a soft, clean piece of cloth when wiping the lenses. Do not scratch the lenses of the 3D glasses with sharp objects or clean/wipe them with chemicals. 12 INSTALLATION PROCEDURE / ASSEMBLING AND PREPARING NOTE yy Image shown may differ from your TV. Yy Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual. Yy The available menus and options may differ from the input source or product model that you are using. Yy New features may be added to this TV in the future. Yy The TV can be placed in standby mode in order to reduce the power consumption. And the TV should be turned off if it will not be watched for some time, as this will reduce energy consumption. Yy The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost.

ENGLISH 1 2 3 4 INSTALLATION PROCEDURE Open the package and make sure all the accessories are included. Attach the stand to the TV set. connect an external device to the TV set. Make sure the network connection is available. You can use the TV network functions only when the network connection is made. ASSEMBLING AND PREPARING Unpacking Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item. CAUTION yy Do not use any unapproved items to ensure the safety and product life span. Yy Any damage or injuries caused by using unapproved items are not covered by the warranty. Yy Some models have a thin film attached on to the screen and this must not be removed. NOTE yy The items supplied with your product may vary depending on the model. Yy Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions. Yy For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port. MENU ENTER ENTER BACK EXIT L/R SELECT BACK EXIT L/R SELECT FREEZE FREEZE RATIO RATIO Remote Control, Batteries (AAA) (Depending on model) The remote control will not be included for all sales market. 23) Owner's Manual Power Cord Cinema 3D Glasses The number of 3D glasses may differ depending on the model or country. A-3) NOTE How to use the ferrite core (Depending on model) yy Use the ferrite core to reduce the electromagnetic interference in the LAN cable. Wind the LAN cable once on the ferrite core. Place the ferrite core close to the TV. [Cross Section of Ferrite Core] [to the TV] [to an External device] Ferrite core ASSEMBLING AND PREPARING 15 Separate purchase Separate purchase items can be changed or modified for quality improvement without any notification. Contact your dealer to buy these items. These devices only work with certain models. AG-F\*\*\*DP Dual Play Glasses AN-VC5\*\* Video Call Camera AG-F\*\*\* Cinema 3D Glasses AN-MR500 Magic Remote ENGLISH LG Audio Device Compatibility AG-F\*\*\*DP Dual Play Glasses AG-F\*\*\* Cinema 3D Glasses AN-MR500 Magic Remote AN-VC5\*\* Video Call Camera LG Audio Device UB82\*\* UB80\*\* UB83\*\* ..... The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies. 16 ASSEMBLING AND PREPARING Parts and buttons A type : UB83\*\*-ZB Screen C type : UB83\*\*-ZG Screen ENGLISH Speakers Speakers Remote control and Intelligent1 sensors Power Indicator Joystick Button2 Remote control and Intelligent1 sensors Power Indicator Joystick Button2 B type : UB80\*\*, UB82\*\* Screen Speakers Remote control and Intelligent1 sensors Power Indicator Joystick Button2 1 Intelligent sensor - Adjusts the image quality and brightness based on the surrounding environment. 2 Joystick Button - This button is located behind the TV screen. ASSEMBLING AND PREPARING 17 NOTE yy You can set the Power Indicator Light to on or off by selecting OPTION in the main menus. ENGLISH Using the Joystick button You can simply operate the TV functions, pressing or moving the joystick button up, down, left or right. Basic Functions Power On When the TV is turned off, place your finger on the joystick button and press it once and release it.

When the TV is turned on, place your finger on the joystick button and press it once for a few seconds and release it. (However, if the Menu button is on the screen, pressing and holding the joystick button will let you exit the Menu. ) If you place your finger over the joystick button and move it left or right, you can adjust the volume level you want. If you place your finger over the joystick button and move it up or down, you can scrolls through the saved programmes you want. Power Off Volume Control Programmes Control NOTE yy When your finger over the joystick button and push it to the up, down, left or right, be careful not to press the joystick button. If you press the joystick button first, you can not adjust the volume level and saved programmes. Adjusting the Menu When the TV is turned on, press the joystick button one time. You can adjust the Menu items ( , , ) moving the joystick button up, down, left or right. TV off Settings Close Input List Turns the power off. 18 ASSEMBLING AND PREPARING Lifting and moving the TV Please note the following advice to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.

Yy When transporting a large TV, there should be at least 2 people. Yy When transporting the TV by hand, hold the TV as shown in the following illustration. ENGLISH CAUTION yy Avoid touching the screen at all times, as this may result in damage to the screen. Yy It is recommended to move the TV in the box or packing material that the TV originally came in. Yy Before moving or lifting the TV, disconnect the power cord and all cables.

Yy When holding the TV, the screen should face away from you to avoid damage. Yy When transporting the TV, do not expose the TV to jolts or excessive vibration. Yy When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right. Yy Do not apply excessive pressure to cause flexing / bending of frame chassis as it may damage screen. Yy When handling the TV, be careful not to damage the protruding joystick button.

Yy Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area. ASSEMBLING AND PREPARING 19 Mounting on a table 1 Lift and tilt the TV into its upright position on a table. -- □ Leave a 10 cm (minimum) space from L the wall for proper ventilation. Securing the TV to a wall (This feature is not available for all models. ) ENGLISH 10 cm 10 cm m 10 c 10 cm 10 cm 1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.



[You're reading an excerpt. Click here to read official LG 55UB820V user guide](http://yourpdfguides.com/dref/5591896)  
<http://yourpdfguides.com/dref/5591896>

-- If there are bolts inserted at the eyebolts position, remove the bolts first. 2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV. 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope.

Make sure to keep the rope horizontal with the flat surface. 2 Connect the power cord to a wall outlet. CAUTION yy Do not place the TV near or on sources of heat, as this may result in fire or other damage. CAUTION yy Make sure that children do not climb on or hang on the TV. NOTE yy Use a platform or cabinet that is strong and large enough to support the TV securely. yy Brackets , bolts and ropes are not provided. You can obtain additional accessories from your local dealer. 20 ASSEMBLING AND PREPARING Mounting on a wall Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor. When you attach the TV to other building materials, please contact qualified personnel. IG recommends that wall mounting be performed by a qualified professional installer.

We recommend the use of LG's wall mount bracket. When you do not use LG's wall mount bracket, please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. MSW240 Wall mount bracket LSW240B LSW440B ENGLISH A B CAUTION yy Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur. Yy If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury.

Use an authorised LG wall mount and contact the local dealer or qualified personnel. Yy Do not over tighten the screws as this may cause damage to the TV and void your warranty. Yy Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty. 10 cm 10 cm 10 cm 10 cm Make sure to use screws and wall mount bracket that meet the VESA standard.

Standard dimensions for the wall mount kits are described in the following table. Separate purchase(Wall Mounting Bracket) Model VESA (A x B) Standard screw Number of screws Wall mount bracket 49/55UB83\*\* 49/55UB82\*\* 400 x 400 M6 4 LSW440B MSW240 42UB82\*\* 40UB80\*\* 200 x 200 M6 4 LSW240B MSW240 NOTE yy Use the screws that are listed on the VESA standard screw specifications. Yy The wall mount kit includes an installation manual and necessary parts. Yy The wall mount bracket is not provided. You can obtain additional accessories from your local dealer. Yy The length of screws may differ depending on the wall mount. Make sure to use the proper length. Yy For more information, refer to the manual supplied with the wall mount. REMOTE CONTROL 21 REMOTE CONTROL The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse. Or ENGLISH CAUTION yy Do not mix old and new batteries, as this may damage the remote control. Yy The remote control will not be included for all sales market. Make sure to point the remote control toward the remote control sensor on the TV. (Depending on model) Views the information of the current programme and screen. (Space) Opens an empty space on the screen keyboard. Views the information of the current programme and screen. PAGE Moves to the previous or next screen.

(OPT) These buttons are used for teletext. (Depending on model) REC/ Starts to record and displays record menu. (Only Time Machine Ready supported model) LIVE TV Returns to LIVE TV. Control buttons ( ) Controls the Premium contents, Time MachineReady or SmartShare menus or the SIMPLINK compatible devices Ready (USB or SIMPLINK or Time Machine ). 4 Coloured buttons These access special functions in some menus.

(Space) Opens an empty space on the screen keyboard. Moves to the previous or next screen. Views the information of the current programme and screen. ( 1 Coloured buttons These access special functions in some menus. : Red, : Green, : Yellow, : Blue) 2 TELETEXT BUTTONS These buttons are used for teletext.

( ) Controls the Premium contents, Time Control buttons ( MachineReady or SmartShare menus or the SIMPLINK compatible devices (USB or Ready SIMPLINK or Time Machine ). REC/ Starts to record and displays record menu. MENU REC/ SLEEP AD APP/ MAGIC REMOTE FUNCTIONS 23 MAGIC REMOTE FUNCTIONS This item is not included for all models. To replace batteries, open the battery cover, replace batteries (1.5 V AA) matching and ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control toward the remote control sensor on the TV. To remove the batteries, perform the installation actions in reverse. ENGLISH CAUTION yy Do not mix old and new batteries, as this may damage the remote control. Navigation buttons (up/down/left/right) Press the up, down, left or right button to scroll the menu. If you press , , or buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control.

To display the pointer on the screen again, shake Magic Remote to the left and right. Wheel(OK) Press the center of the Wheel button to select a menu. You can change programmes and scroll the menu by using the Wheel button. Coloured buttons These access special functions in some menus. (Depending on model) \* Pressing and holding the / INPUT button will display a menu to select an external device that is connected to the TV. (Depending on model) 24 MAGIC REMOTE FUNCTIONS How to deregister the Magic Remote ENGLISH Voice recognition(Depending on model) Network connection is required to use the voice recognition function. Speak when the voice display window appears on the left of the TV screen. □ The voice recognition may fail when you speak too fast or too slow. □ Use the Magic Remote no further than 10 cm from your face. □ The recognition rate may vary depending on the user's characteristics (voice, pronunciation, intonation and speed) and the environment (noise and TV volume).

(BACK) (Home) Press the (BACK) and (Home) buttons at the same time, for five seconds, to unpair the Magic Remote with your TV. »»□ Pressing and holding the P (EXIT to LIVE) button will let you cancel and re-register Magic Remote at once. How to use Magic Remote yy Shake the Magic Remote slightly to the right and left or press (Home), / INPUT, buttons to make the pointer appear on the screen. »»The pointer will appear when you turn the Wheel button. (Depending on model) Registering Magic Remote BACK How HOME to register the Magic Remote To use the Magic Remote, first pair it with your TV. (Wheel) P 1 Put batteries into the Magic Remote and turn the TV on.



[You're reading an excerpt. Click here to read official LG 55UB820V user guide](http://yourpdfguides.com/dref/5591896)

<http://yourpdfguides.com/dref/5591896>

2 Point the Magic Remote at your TV and press the Wheel (OK) on the remote control. BACK HOME P MY APPS » the TV fails to register the Magic Remote, try again after turning the TV off and back on. MY APPS yy If the pointer has not been used for a certain period of time or Magic Remote is placed on a flat surface, then the pointer will disappear. Yy If the pointer is not responding smoothly, you can reset the pointer by moving it to the edge of the screen. Yy The Magic Remote depletes batteries faster than a normal remote due to the additional features. MAGIC REMOTE FUNCTIONS / USING THE USER GUIDE 25 Precautions to Take when Using the Magic Remote U Yy se the remote control within the specified range (within 10 m). You may experience communication failures when using the device outside the coverage area or if there are obstacles within the coverage area. Y Yy you may experience communication failures depending on the accessories. T Yy he Magic Remote may not work properly if a wireless router (AP) is within 1 meter of the TV. Your wireless router should be more than 1 m away from the TV. Do yy not disassemble or heat the battery. Do yy not drop the battery. avoid avoid extreme shocks to the battery. Inserting the battery the wrong way may yy result in explosion.

USING THE USER GUIDE User Guide allows you to more easily access the detailed TV information. 1 Press the (Home) button to access the Home menu. Initialization of App Legal Documents User Guide ENGLISH 26 MAINTENANCE / TROUBLESHOOTING MAINTENANCE Cleaning your TV Clean your TV regularly to keep the best performance and to extend the product lifespan. ENGLISH CAUTION yy Make sure to turn the power off and disconnect the power cord and all other cables first. Yy When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges. Screen, frame, cabinet and stand yy To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth. Yy To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a dry cloth. CAUTION yy Avoid touching the screen at all times, as this may result in damage to the screen. Yy Do not push, rub, or hit the screen surface with your fingernail or a sharp object, as this may result in scratches and image distortions.

Yy Do not use any chemicals as this may damage the product. Yy Do not spray liquid onto the surface. If water enters the TV, it may result in fire, electric shock, or malfunction. @@@@ no image display and no sound is produced. The TV turns off suddenly. @@@@To , yy Check if the batteries are still working and properly installed ( to ). Yy Check if the product is turned on. Yy Check if the power cord is connected to a wall outlet. Yy Check if there is a problem in the wall outlet by connecting other products. yy Check the power control settings. The power supply may be interrupted. Yy Check if the Automatic Standby (Depending on model) / Sleep Timer / Off Time is activated in the TIME settings. Yy If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity. Yy Turn the TV off/on using the remote control. yy Reconnect the HDMI cable. Yy Restart the PC with the TV on. When connecting to the PC (HDMI/ DVI), 'No signal' or 'Invalid Format' is displayed. ) 10 dBm or lower yy Because band channel used by the country could be different, the user can not change or adjust the operating frequency and this product is set for the regional frequency table. Yy This device should be installed and operated with minimum distance 20 cm between the device and your body. And this phrase is for the general statement for consideration of user environment.

Com 2 TABLE DES MATIÈRES TABLE DES MATIÈRES 3 3 LICENCES INFORMATIONS SUR LES LOGICIELS LIBRES CONFIGURATION DU PÉRIPHÉRIQUE DE CONTRÔLE EXTERNE CONSIGNES DE SÉCURITÉ - Visionnage d'images 3D (modèles 3D uniquement) 26 26 26 26 MAINTENANCE Nettoyage de votre TV - Écran, cadre, boîtier et support - Cordon d'alimentation 3 26 27 DÉPANNAGE SPÉCIFICATIONS FRANÇAIS 4 10 12 12 12 15 16 17 18 19 20 PROCÉDURE D'INSTALLATION ASSEMBLAGE ET PRÉPARATION Déballage Achat séparé Pièces et boutons - Utilisation du bouton du joystick Soulever et déplacer la TV Installation sur une table Fixation du support mural 21 23 24 24 25 TÉLÉCOMMANDE FONCTIONS DE LA MAGIC REMOTE Enregistrement de la Magic remote Comment utiliser la magic remote Consignes relatives à l'utilisation de la magic remote AVERTISSEMENT yy Si vous ignorez ces messages d'avertissement, vous risquez d'être gravement blessé, de provoquer un accident ou d'entraîner la mort. A-5) Corps du support / Base du support (Uniquement UB83\*\*-ZB) (Voir p. 20 ASSEMBLAGE ET PRÉPARATION Fixation du support mural Prenez les précautions nécessaires pour fixer le support mural en option à l'arrière de la TV. Si vous n'utilisez pas le support mural LG, veuillez utiliser un support mural permettant une fixation solide de l'appareil au mur et offrant suffisamment d'espace pour permettre la connexion de périphériques externes. AG-F\*\*\*DP Occhiali Dual play AN-VC5\*\* Telecamera per videochiamate AG-F\*\*\* Occhiali 3D Cinema AN-MR500 Telecomando Magic Remote Dispositivo audio LG Compatibilità AG-F\*\*\*DP Occhiali Dual play AG-F\*\*\* Occhiali 3D Cinema AN-MR500 Telecomando Magic Remote AN-VC5\*\* Telecamera per videochiamate Dispositivo audio LG UB82\*\* UB80\*\* UB83\*\* ••ITALIANO •••••Il nome del modello o il design può cambiare in base all'aggiornamento delle funzioni del prodotto, al produttore e alle politiche. Cuando no use el soporte de montaje en pared de LG, use uno en el que se pueda asegurar adecuadamente el dispositivo a la pared, con espacio suficiente para poder conectar otros dispositivos externos. 5 MHz Izhodna moč (največ) 10 dBm ali manj Ker je v državi lahko uporabljen drug pasovni kanal, uporabnik ne more spremeniti ali prilagoditi yy delovne frekvence, ta izdelek pa je nastavljen v skladu s podatki v tabeli z regionalnimi frekvencami. 0197 0197 SLOVENŠČINA SPECIFICATIONS B-1 SPECIFICATIONS Product specifications may be changed without prior notice due to upgrade of product functions. 0 mm 0 °C to 40 °C Less than 80 % -20 °C to 60 °C Less than 85 % Analogue TV PAL/SECAM B/G/I/D/K SECAM L/L' VHF: E2 to E12, UHF: E21 to E69, CATV: S1 to S20, HYPER: S21 to S47 Programme coverage Maximum number of storable programmes External antenna impedance DVB-S/S2: 6,000 DVB-T/T2/C & Analogue TV: 1,500 75 Ω Please contact LG First.



[You're reading an excerpt. Click here to read official LG 55UB820V user guide](http://yourpdfguides.com/dref/5591896)  
<http://yourpdfguides.com/dref/5591896>

*If you have any inquiries or comments, please contact LG customer information centre.*

*LG Customer Information Centre Country Service Country Service 0 810 144 131 015 200 255 0032 15 200255 07001 54 54 0900 543 5454 800 187 40 801  
54 54 54 808 78 54 54 031 228 3542 0850 111 154 902 500 234 54 Record the model number and serial number of the TV. Refer to the label on the back  
cover and quote this information to your dealer when requiring any service. .*



[You're reading an excerpt. Click here to read official LG 55UB820V  
user guide](#)

<http://yourpdfguides.com/dref/5591896>