




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG AG-S360. You'll find the answers to all your questions on the LG AG-S360 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual LG AG-S360**  
**User guide LG AG-S360**  
**Operating instructions LG AG-S360**  
**Instructions for use LG AG-S360**  
**Instruction manual LG AG-S360**

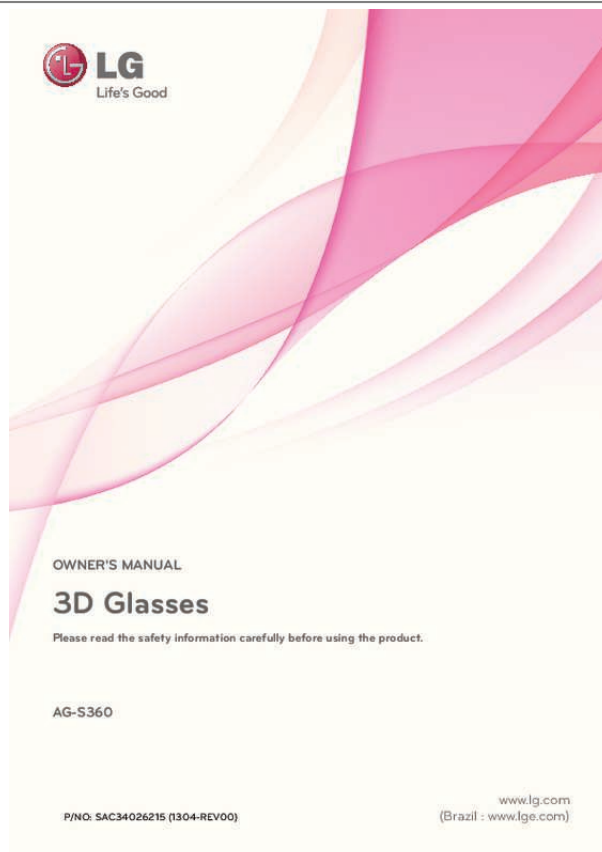

[You're reading an excerpt. Click here to read official LG AG-S360 user guide](http://yourpdfguides.com/dref/5446257)  
<http://yourpdfguides.com/dref/5446257>

**Manual abstract:**

AG-S360 P/NO: SAC34026215 (1304-REV00) www.lg.com (Brazil : www.lge.com) ABOUT THE PRODUCT The AG-S360 is a pair of 3D glasses that use radio frequency (RF) (2.4 GHz) wireless communication. □□ Connect them to any TV compatible with RF glasses and enjoy vivid 3D images. □□ Watch 3D movies and view 3D photos with 3D glasses. □□ When using 3D glasses for the first time, make sure the coin cell battery is inserted correctly. ACCESSORIES ENGLISH 3D Glasses (Body, Leg) Nose Pad (for users wearing regular eyeglasses) Coin Cell Battery (CR2025) Manual CD Quick Guide □ Cleaning Pad ! @@@@ @@@@3.

During pairing, the LED indicator flashes green and red alternately. 4. When pairing is complete, the LED indicator goes off and the 3D glasses are ready to use. 5. It is unnecessary to pair the 3D glasses with the same 3D TV again.

2. After the green LED indicator flashes three times, the glasses are ready to pair. 3. Turn the 3D TV on and activate 3D mode. 4.

Place your 3D glasses within the recommended pairing distance and turn them on. @@@@ @@@@The red LED indicator flashes three times. The red LED flashes three times. The red LED flashes for one minute and turns off automatically. When the LED indicator turns green, release the power button. The green LED indicator flashes three times and turns off. @@@@The product is automatically turned off if there is no 3D signal for more than one minute. -

ENGLISH Press the power button for at least eight seconds. The Auto Off function automatically turns the power off when there is no signal between the TV and glasses for more than one minute. You cannot watch 3D images when the Auto Off function automatically turns the power off.

This can happen when the distance or angle between the TV and glasses is out of range; when there is a barrier between the TV and glasses; or when the TV is switched from 3D to 2D mode. ! NOTE □□Make sure to turn off the 3D glasses when they are not in use. @@@@ @@@@Risk of explosion if battery is replaced by an incorrect type. @@@@ @@@@This may result in electric shock or fire. Do not use your glasses near a humidifier or kitchen counter. This may result in electric shock or fire. Do not disassemble, repair or modify the glasses or its parts. @@Some people may find that the glasses do not fit. @@@@Do not watch 3D images near fragile objects or objects that can be knocked over easily. If you mistake 3D images for reality, you could knock over a nearby object or injure yourself when moving your body.

Only use this product for watching 3D images. Do not use 3D glasses as sunglasses. Do not spray cleaner directly onto the surface of the glasses. This may result in discoloration and cracks and cause the coating on the lenses to peel off. Do not let water come into contact with the product when cleaning it. This may result in electric shock or fire. The lenses of the glasses can be easily scratched. Use a soft cloth when cleaning them. Foreign particles on the cloth may cause scratches. Make sure to shake off any dust before using it.

13 14 15 Do not scratch the surface of the lenses with sharp objects or wipe them with chemicals. Do not drop, bend, or allow the glasses to come into contact with other objects. When watching 3D images, stay within the reception range. @@@@ @@@@Children should be closely supervised when they use 3D glasses. They should stop using the glasses if they experience fatigue, twitching of the eye or face muscles or other involuntary movements. Do not use the 3D glasses with the nose pad if you are not wearing regular eyeglasses. Otherwise, this may hurt your eyes. Use a coin cell battery with the same specifications as the one provided. @@@@ @@@@The battery may be dead. Q.

The product does not work. Replace the battery with a new one. A. Check the 3D settings on the TV. ENGLISH Q. The red LED indicator keeps flashing. A.

The coin cell battery is at the end of its life. Replace the battery with a new one. ! @500:1 34 % or more 120 fields/sec 3.

8 ms or less 0.5 ms or less 26 g Coin Cell Battery: 165 mA/h, 3.0 V (CR2025) Continuous Operating Time: 150 hours or less 0 °C to 40 °C -20 °C to 45 °C □□The images used and specifications stated in this owner's manual are subject to change to improve the performance of □□The continuous operating time may vary depending on the wireless environment and the operating conditions. Warranty Period: 1 year (2 years for Europe) If you find a technical defect or problem in the course of normal use during the warranty period, please contact your dealer. This warranty applies only to the purchaser in the region where the product was purchased.

5.



[You're reading an excerpt. Click here to read official LG AG-S360 user guide](http://yourpdfguides.com/dref/5446257)

<http://yourpdfguides.com/dref/5446257>