




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG AN-MR400. You'll find the answers to all your questions on the LG AN-MR400 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG AN-MR400
User guide LG AN-MR400
Operating instructions LG AN-MR400
Instructions for use LG AN-MR400
Instruction manual LG AN-MR400

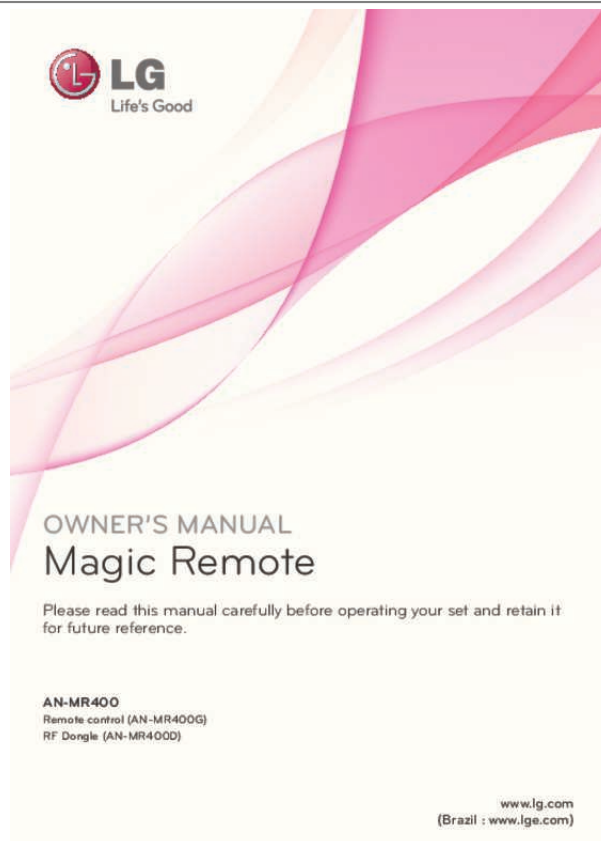

[You're reading an excerpt. Click here to read official LG AN-MR400 user guide](http://yourpdfguides.com/dref/5078522)
<http://yourpdfguides.com/dref/5078522>

Manual abstract:

@@ To display the pointer again, shake the Magic Remote control from side to side. /Q.MENU Wheel (OK) POWER Turns the TV on or off. □, □, □, □ Navigation (up/down/left/right) Scrolls through menus or options. Returns to the previous screen. BACK SMART /Q.MENU Accesses the Smart Home menu.

Voice recognition Network connection is required to use /Q.MENU the voice recognition function. 1.

Press the Voice recognition button. 2. @@* Use the Magic remote control no further than 10 cm from your face. The voice recognition may fail when you speak too fast or too slow. The recognition rate may vary depending on the user's characteristics (voice, pronunciation, intonation, and speed) and the environment (noise and TV volume).

Used for viewing 3D video. /Q.MENU /Q.MENU Accesses the Universal Control Menu. Accesses the quick menu.

/Q.MENU /Q.MENU MUTE Mutes all sounds. VOL/ (+/-) Adjusts the volume level. CH/P(□/□) Scrolls through the saved channels. /Q.MENU * Image shown may differ from your product. @@@@□ To replace batteries, open the battery cover, replace Alkaline batteries (1.5 V AA) matching and ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control at the remote control sensor on the TV.

@@ Don't mix old or used batteries with new ones. @@@@1 Locate the designated Velcro attachment location on the TV. Then tear off the protection paper and attach the Velcro. @@@@ This may cause communication failures. @@ Your wireless router should be more than 1 m away from the TV. □ Do not disassemble or heat the battery. □ Do not drop the battery. Avoid avoid extreme shocks to the battery. @@3 Attach the RF Dongle to the velcro as shown above and then turn on the TV. 4 Turn your TV on and wait 20 seconds.

Now, register the Magic Remote Control with your TV. * If the RF Dongle for the wireless media box is attached, attach the RF Dongle for the Magic Remote Control on the below right of the back of the TV. 4 REGISTERING To use the Magic Remote Control, pair it with your TV first. HOW TO USE How to register the Magic Remote Control 1 □ ut batteries into the Magic Remote P Control and turn the TV on. @@@@* □ hake the Magic Remote Control slightly to the right S and left to make the pointer appear on the center of screen.

* □ If the pointer has not been used for a certain period of I time, it will disappear. * □ he wheel also functions as the 'OK' button when T pressed. @@* □ ou can just move your wrist to move the pointer Y instead of moving your whole arm. @@ You may wish to use rechargeable batteries. .



[You're reading an excerpt. Click here to read official LG AN-MR400 user guide](http://yourpdfguides.com/dref/5078522)

<http://yourpdfguides.com/dref/5078522>