




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG BP325. You'll find the answers to all your questions on the LG BP325 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG BP325
User guide LG BP325
Operating instructions LG BP325
Instructions for use LG BP325
Instruction manual LG BP325

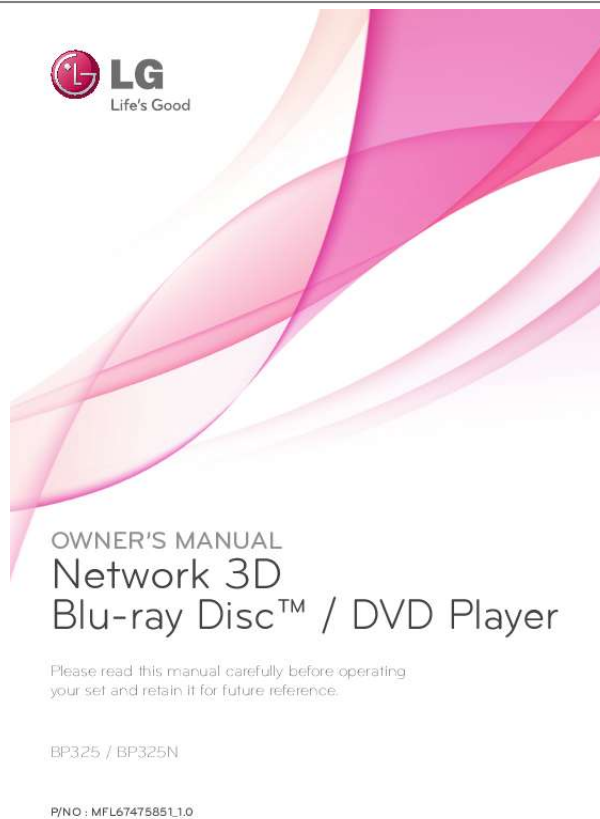

[You're reading an excerpt. Click here to read official LG BP325 user guide](http://yourpdfguides.com/dref/5477836)

<http://yourpdfguides.com/dref/5477836>

Manual abstract:

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus. **WARNING:** Do not install this equipment in a confined space such as a book case or similar unit. **CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. @@@@Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service centre. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon.

Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible. **NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or rear of the apparatus. **CAUTION:** Only use the AC adapter supplied with this device.

Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty. **Getting Started** This device is equipped with a portable battery or accumulator. Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points.

Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like. Disposal of your old appliance 1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. 2. All electrical and electronic products shall be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 3.

The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. 4.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. Disposal of waste batteries/accumulators 3 1. When this crossed-out wheeled bin symbol is attached to batteries/ accumulators of Your product it means they are covered by European Directive 2006/66/EC. 2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead. 3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

4. The correct disposal of Your old batteries/ accumulators will help to prevent potential negative consequences for the environment, animal and human health. 5. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product. 1 Getting Started 4 Getting Started 1 Getting Started LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC and 2009/125/ EC.

European Standards Centre: Krijgsman 1, 1186 DM Amstelveen, The Netherlands yy Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product. Notes on Copyrights yy Because AACS (Advanced Access Content System) is approved as content protection system for Blu-ray Disc format, similar to use of CSS (Content Scramble System) for DVD format, certain restrictions are imposed on playback, analog signal output, etc., of AACS protected contents. The operation of this product and restrictions on this product may vary depending on your time of purchase as those restrictions may be adopted and/or changed by AACS after the production of this product. yy Furthermore, BD-ROM Mark and BD+ are additionally used as content protection systems for Blu-ray Disc format, which imposes certain restrictions including playback restrictions for BD-ROM Mark and/or BD+ protected contents. To obtain additional information on AACS, BDRom Mark, BD+, or this product, please contact an authorized Customer Service Centre. yy Many BD-ROM/DVD discs are encoded with copy protection. Because of this, you should only connect your player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected discs. yy This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi. Reverse engineering or disassembly is prohibited.

yy Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, BD-ROM discs, DVDs, CDs and other materials may subject you to civil and/ or criminal liability. **Getting Started 5 Important Notice for TV colour system** The colour system of this player differs according to currently playing discs. For example, when the player plays the disc recorded in the NTSC colour system, the image is output as an NTSC signal. Only the multi system colour TV can receive all signals output from the player. yy If you have a PAL colour system TV, you will see just distorted images when using discs or video contents recorded in NTSC. yy The multi system colour TV changes the colour system automatically according to input signals. In case that the colour system is not changed automatically, turn it off and then on to see normal images on screen. yy Even if the disc recorded in NTSC colour system are well displayed on your TV, these may not be recorded correctly on your recorder.



[You're reading an excerpt. Click here to read official LG BP325 user guide](http://yourpdfguides.com/dref/5477836)

<http://yourpdfguides.com/dref/5477836>

yy Watching a 3D content for a long period time may cause dizziness or tiredness. yy It is not recommended to watch a movie in 3D mode for infirm, child and pregnant woman. yy If you are experiencing headache, tiredness or dizziness while viewing content in 3D, it is strongly recommended to stop the playback and rest until you feel normal. 1 Getting Started Caution >> 6 Table of Contents Table of Contents 1 Getting Started 3 System Setting 24 Settings 24 – Initial Setup 25 – Adjust the setup settings 25 – [DISPLAY] Menu 27 – [LANGUAGE] Menu 27 – [AUDIO] Menu 29 – [LOCK] Menu 30 – [NETWORK] Menu 30 – [OTHERS] Menu 2 Safety Information 8 Introduction 8 – Playable discs and symbols used in this manual 9 – About the “7” symbol display 9 – Compatibility notes 10 – File requirement 11 – AVCHD (Advanced Video Codec High Definition) 12 – Certain system requirements 12 – Regional code 12 – System select 13 Remote control 14 Front panel 14 Rear panel 4 Operating 32 32 32 32 33 33 34 34 34 35 35 35 35 36 36 36 37 37 38 38 38 39 39 40 40 40 41 41 42 General Playback – Using [HOME] menu – Playing a disc – Playing a file on disc/USB device – Playing Blu-ray 3D disc – Enjoying BD-Live™ – Basic operations for video and audio content – Basic operations for photo content – Using the disc menu – Resume playback – Last scene memory Advanced Playback – Repeat playback – Repeating a specific portion – Viewing content information – Changing content list view – Selecting a subtitle file – Options while viewing a photo – Listening to music while slide show On-screen display – Displaying content information onscreen – Playing from selected time – Selecting a subtitle language – Hearing a different audio – Watching from a different angle – Changing the TV Aspect Ratio – Changing subtitle Code Page – Changing the Picture Mode Using the Premium 2 Connecting 15 15 16 17 18 18 19 20 20 20 23 23 Connecting the AC adapter Connecting to your TV – What is SIMPLINK? – Resolution setting Connecting to an amplifier – Connecting to an amplifier via HDMI output – Connecting to an amplifier via digital audio output Connecting to your home network – Wired network connection – Wired network setup USB device connection – Playback content in the USB device Table of Contents 7 5 Troubleshooting 43 Troubleshooting 43 – General 44 – Network 45 – Picture 45 – Customer support 45 – Open source software notice 1 6 Appendix 46 Controlling a TV with the supplied remote control 46 – Setting up the remote to control your TV 47 Network software update 47 – Network update notification 47 – Software update 49 Area code list 50 Language code list 51 Trademarks and licenses 53 Audio output specifications 55 Specifications 56 Maintenance 56 – Handling the unit 56 – Notes on discs 57 Important information relating to network services 2 3 4 5 6 8 Getting Started Introduction 1 Getting Started Playable discs and symbols used in this manual Media/Term Logo Symbol Description yy Discs such as movies that can be purchased or rented. yy “Blu-ray 3D” discs and “Blu-ray 3D ONLY” discs. yy BD-R/RE discs that are recorded in BDAV format. yy BD-R/RE discs that contain Movie, Music or Photo files. yy ISO 9660+JOLIET, UDF and UDF Bridge format yy Discs such as movies that can be purchased or rented. yy Movie mode and.asf”, “.wmv”, “.m4v” (DRM free), “.vob”, “.3gp”, “.flv” Codec Format DIVX3.xx, DIVX4.xx, DIVX5.xx, DIVX6.xx (standard playback only), XVID, MPEG1 SS, H.264/MPEG-4 AVC, MPEG2 PS, MPEG2 TS, VC-1 SM (WMV3) Audio Format Dolby Digital, DTS, MP3, WMA, AAC, AC3 Subtitle SubRip (.srt / .txt), SAMI (.smi), SubStation Alpha (.ssa/.txt), MicroDVD (.sub/.txt), VobSub (.sub), SubViewer 1.0 (.sub), SubViewer 2.0 (.sub/.txt), TMPlayer (.txt), DVD Subtitle System (.txt) Disc, USB Music files File Location Disc, USB File Extension “.mp3”, “.wma”, “.wav”, “.m4a” (DRM free), “.flac” Sampling Frequency within 32 - 48 kHz (WMA), within 16 - 48 kHz (MP3) Bitrate within 32 - 192 kbps (WMA), within 32 - 320 kbps (MP3) Note Some wav files are not supported on this player. Photo files File Location Disc, USB File Extenc/v (SCAN): Searches backward or forward. C/V (SKIP): Goes to the next or previous chapter / track / file. M (PAUSE): Pauses playback. z (PLAY): Starts playback. Z (STOP): Stops playback. •••••c•••••HOME (n): Displays or exits the [Home Menu]. INFO/MENU (m): Displays or exits On-Screen Display. Direction buttons: Selects an option in the menu. Remove the battery cover on the rear of the Remote Control, and insert the R03 (size AAA) battery with 4 and 5 matched correctly. ENTER (b): Acknowledges menu selection.

BACK (I): Exits the menu or returns to the previous screen. DISC MENU: Accesses menu on a disc. •••••d•••••REPEAT (h): Repeats a desired section or sequence. AUDIO (I): Selects an audio language. SUBTITLE (I): Selects a subtitle language. TITLE/POP-UP: Displays the DVD title menu or BD-ROM’s pop-up menu, if available. Colored (R, G, Y, B) buttons: Use to navigate BD-ROM menus. They are also used for [MOVIE], [PHOTO], [MUSIC] and [Premium] menu. 1 Getting Started Battery installation 14 Getting Started Front panel 1 Getting Started a Disc Tray b Display Window c Remote Sensor d B (OPEN / CLOSE) e 1 (POWER) f USB Port Rear panel a DC IN 12V (AC adapter input) b LAN port c HDMI OUT d DIGITAL AUDIO OUT (COAXIAL) Connecting 15 Connecting the AC adapter Connect the unit to the power supply with the supplied AC adapter. Rear of the unit Connecting to your TV If you have a HDMI TV or monitor, you can connect it to this player using a HDMI cable (Type A, High Speed HDMI™ Cable). Connect the HDMI jack on the player to the HDMI jack on a HDMI compatible TV or monitor. Rear of the unit 2 Connecting HDMI cable TV Plug into a power source. yy Contact an electrical parts distributor for assistance in selecting a suitable AC plug adapter or AC cord set. yy This AC adapter is manufactured by APD Group Yang Ming Industrial.



[You're reading an excerpt. Click here to read official LG BP325 user guide](http://yourpdfguides.com/dref/5477836)

<http://yourpdfguides.com/dref/5477836>

Only use the AC adapter supplied with this device.

Do not use a power supply from another device or manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty. Set the TV's source to HDMI (refer to TV's Owner's manual). Caution >> Please refer to the manuals of your TV, Stereo System or other devices as necessary to make the best connections. Note , 16 Connecting Additional information for HDMI yy When you connect a HDMI or DVI compatible device make sure of the following: -- Try switching off the HDMI/DVI device and this player.

Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this player. What is SIMPLINK? Some functions of this unit are controlled by the TV's remote control when this unit and LG TV's with SIMPLINK are connected through HDMI connection. Controllable functions by LG TV's remote control; Play, Pause, Scan, Skip, Stop, Power Off, etc. Refer to the TV owner's manual for the details of SIMPLINK function. LG TV's with SIMPLINK function has the logo as shown above. Depending on the disc type or playing status, some SIMPLINK operation may differ from your purpose or not work. 2 Connecting -- The connected device's video input is set correctly for this unit. -- The connected device is compatible with 720x576p, 1280x720p, 1920x1080i or 1920x1080p video input. yy Not all HDCP-compatible HDMI or DVI devices will work with this player. -- The picture will not be displayed properly with non-HDCP device.

yy If a connected HDMI device does not accept the audio output of the player, the HDMI device's audio sound may be distorted or may not output. yy When you use HDMI connection, you can change the resolution for the HDMI output. (Refer to "Resolution Setting" on page 17) yy Select the type of video output from the HDMI OUT jack using [HDMI Color Setting] option on the [Setup] menu (see page 26). yy Changing the resolution when the connection has already been established may result in malfunctions. To solve the problem, turn off the player and then turn it on again. yy When the HDMI connection with HDCP is not verified, TV screen is changed to black screen. In this case, check the HDMI connection, or disconnect the HDMI cable. yy If there are noises or lines on the screen, please check the HDMI cable (length is generally limited to 4.5 m). Note , Note , Connecting 17 Resolution setting The player provides several output resolutions for HDMI OUT jack.

You can change the resolution using [Setup] menu. 1. Press HOME (n). 2. Use a/d to select the [Setup] and press ENTER (b). The [Setup] menu appears. 3. Use w/s to select [DISPLAY] option then press d to move to the second level. 4. Use w/s to select the [Resolution] option then press ENTER (b) to move to the third level.

yy If your TV does not accept the resolution you have set on the player, you can set resolution to 576p as follows: 1. Press B to open the disc tray. 2. Press Z (STOP) for more than 5 seconds. yy When you set the resolution to 576i with HDMI connection, actual resolution is outputted to 576p. yy If you select a resolution manually and then connect the HDMI jack to TV and your TV does not accept it, the resolution setting is set to [Auto]. yy If you select a resolution that your TV does not accept, the warning message will appear. After resolution change, if you cannot see the screen, please wait 20 seconds and the resolution will automatically revert back to the previous resolution. yy The 1080p video output frame rate may be automatically set to either 24 Hz or 50 Hz depending both on the capability and preference of the connected TV and based on the native video frame rate of the content on the BD-ROM disc. Note , 2 Connecting 5.

Use w/s to select the desired resolution then press ENTER (b) to confirm your selection. 18 Connecting Connecting to an amplifier Make one of the following connections, depending on the capabilities of your existing equipment. yy HDMI audio connection yy Digital audio connection (page 19) Connecting to an amplifier via HDMI output Connect the player's HDMI OUT jack to the corresponding in jack on your amplifier using a HDMI cable. Rear of the unit 2 Connecting Since many factors affect the type of audio output, see "Audio output specifications" for details (pages 53). About digital multi-channel sound A digital multi-channel connection provides the best sound quality. For this, you need a multichannel Audio/Video Receiver that supports one or more of the audio formats supported by your player. Check the logos on the front of the Audio/ Video receiver and the manual. (PCM Stereo, PCM Multi-Ch, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and/or DTS-HD) HDMI cable Receiver/Amplifier HDMI cable TV Connect the amplifier's HDMI output jack to HDMI input jack on your TV using a HDMI cable if your amplifier has HDMI output jack. You will need to activate the player's digital output. (See "[AUDIO] Menu" on pages 27) Connecting 19 Connecting to an amplifier via digital audio output Connect the player's COAXIAL OUT jack to the corresponding in jack on your amplifier using an optional digital audio cable.

Rear of the unit 2 Connecting Coaxial cable Receiver/Amplifier You will need to activate the player's digital output. (See "[AUDIO] Menu" on pages 27.) 20 Connecting Connecting to your home network This player can be connected to a local area network (LAN) via the LAN port on the rear panel. By connecting the unit to a broadband home network, you have access to services such as software updates, BD-Live interactivity and on-line content services. Broadband service 2 Connecting Wired network connection Using a wired network provides the best performance, because the attached devices connect directly to the network and are not subject to radio frequency interference.

Please refer to the documentation for your network device for further instructions. Connect the player's LAN port to the corresponding port on your Modem or Router using a commercially available LAN or Ethernet cable. yy When plugging or unplugging the LAN cable, hold the plug portion of the cable. When unplugging, do not pull on the LAN cable but unplug while pressing down on the lock. yy Do not connect a modular phone cable to the LAN port.

yy Since there are various connection configurations, please follow the specifications of your telecommunication carrier or internet service provider. Router Note , Rear of the unit Wired network setup If there is a DHCP server on the local area network (LAN) via wired connection, this player will automatically be allocated an IP address. After making the physical connection, a small number of home networks may require the player's network setting to be adjusted. Adjust the [NETWORK] setting as follow. Preparation Before setting the wired network, you need to connect the broadband internet to your home network.



[You're reading an excerpt. Click here to read official LG BP325 user guide](http://yourpdfguides.com/dref/5477836)

<http://yourpdfguides.com/dref/5477836>

Connecting 1. Select [Connection Setting] option in the [Setup] menu then press ENTER (b). 21 Advanced Setting If you want to set the network settings manually, use w/s to select [Advanced Setting] on the [Network Setting] menu and press ENTER (b). 1. Use w/s/a/d to select the IP mode between [Dynamic] and [Static].

Normally, select [Dynamic] to allocate an IP address automatically. 2. Read the preparations for the network settings and then press ENTER (b) while [Start] is highlighted. 2 Connecting Network will automatically be connected to the unit. If there is no DHCP server on the network and you want to set the IP address manually, select [Static] then set [IP Address], [Subnet Mask], [Gateway] and [DNS Server] using w/s/a/d and numerical buttons. If you make a mistake while entering a number, press CLEAR to clear the highlighted part. 2. Select [Next] and press ENTER (b) to apply network settings. Note., Network connection status is displayed on the screen. 3.

Press ENTER (b) while [Close] is highlighted to finish the wired network settings. 22 Connecting Notes on network connection yy Many network connection problems during set up can often be fixed by re-setting the router or modem. After connecting the player to the home network, quickly power off and/ or disconnect the power cable of the home network router or cable modem. Then power on and/or connect the power cable again. subscriber agreement with your ISP, you may not be able to use the internet connection feature contained in this player or you may be limited to the number of devices you can connect at the same time.

(If your ISP limits subscription to one device, this player may not be allowed to connect when a PC is already connected.) yy The use of a "Router" may not be allowed or its usage may be limited depending on the policies and restrictions of your ISP. For details, contact your ISP directly. 2 Connecting yy Depending on the internet service provider (ISP), the number of devices that can receive internet service may be limited by the applicable terms of service. For details, contact your ISP.

yy Our company is not responsible for any malfunction of the player and/or the internet connection feature due to communication errors/malfunctions associated with your broadband internet connection, or other connected equipment. yy The features of BD-ROM discs made available through the Internet Connection feature are not created or provided by our company, and our company is not responsible for their functionality or continued availability. Some disc related material available by the Internet Connection may not be compatible with this player. If you have questions about such content, please contact the producer of the disc. yy Some internet contents may require a higher bandwidth connection. yy Even if the player is properly connected and configured, some internet contents may not operate properly because of internet congestion, the quality or bandwidth of your internet service, or problems at the provider of the content. yy Some internet connection operations may not be possible due to certain restrictions set by the Internet service provider (ISP) supplying your broadband Internet connection. yy Any fees charged by an ISP including, without limitation, connection charges are your responsibility. yy A 10 Base-T or 100 Base-TX LAN port is required for wired connection to this player. If your internet service does not allow for such a connection, you will not be able to connect the player.

yy You must use a Router to use xDSL service. yy A DSL modem is required to use DSL service and a cable modem is required to use cable modem service. Depending on the access method of and Connecting 23 USB device connection This player can play movie, music and photo files contained in the USB device.

Playback content in the USB device 1. Insert a USB device to the USB port until it fits into place. yy This player supports USB flash drive/ external HDD formatted in FAT32 and NTFS when accessing files (music, photo, movie). However, for Blu-ray contents, only FAT32 format is supported. Use the USB flash drive/ external HDD formatted in either FAT32 or NTFS when enjoying Blu-ray contents. yy The USB device can be used for the local storage for enjoying BD-Live discs with Internet. yy This unit can support up to 4 partitions of the USB device.

yy Do not extract the USB device during operation (play, etc.). yy A USB device which requires additional program installation when you have connected it to a computer, is not supported. yy USB device: USB device that supports USB1.1 and USB2.

0. yy Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages. yy Regular back up is recommended to prevent data loss. yy If you use a USB extension cable, USB HUB or USB Multi-reader, the USB device may not be recognized.

yy Some USB device may not work with this unit. yy Digital camera and mobile phone are not supported. yy USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device. Note., 2 Connecting When you connect the USB device on the HOME menu, the player plays a music file contained in the USB storage device automatically. If the USB storage device is containing various types of files, a menu for the file type selection will appear. File loading may takes few minutes depending on the number of content stored in the USB storage device. Press ENTER (b) while [Cancel] is selected to stop loading. 2. Press HOME (n).

3. Select [Movie], [Photo] or [Music] using a/d, and press ENTER (b). 4. Select the [USB] option using w/s, and press ENTER (b). 5. Select a file using w/s/a/d, and press PLAY or ENTER (b) to play the file. 6. Withdraw the USB device carefully. 24 System Setting Settings Initial Setup When you turn on the unit for the first time, the initial setup wizard appears on the screen. Set the display language and network settings on the initial setup wizard.

1. Press 1 (POWER). The initial setup wizard appears on the screen. 2. Use w/s/a/d to select a display language and press ENTER (b). 4. Check all the settings that you have set in the previous steps. Press ENTER (b) while [Finish] is highlighted to finish the initial setup settings. If there is any settings to be changed, use a/d to select [Previous] and press ENTER (b). 3 System Setting 3.

Read and prepare the preparations for the network settings and then press ENTER (b) while [Start] is highlighted. If wired network is connected, the network connection setting will automatically be finished. For details on network settings, refer to "Connecting to your Home Network" on page 20. System Setting 25 Adjust the setup settings You can change the settings of the player in the [Setup] menu. 1. Press HOME (n). [DISPLAY] Menu TV Aspect Ratio Select a TV aspect ratio option according to your TV type. [4:3 Letter Box] Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture.



[You're reading an excerpt. Click here to read official LG BP325 user guide](http://yourpdfguides.com/dref/5477836)
<http://yourpdfguides.com/dref/5477836>

Preparation In order to playback Blu-ray 3D title in stereoscopic 3D mode, you need to: C yy heck your TV is 3D capable and has HDMI input(s). W yy ear 3D glasses to enjoy the 3D experience if it is necessary. C yy heck whether the BD-ROM title is the Bluray 3D disc or not. C yy onnect an HDMI cable (Type A, High Speed HDMI™ Cable) between the player's HDMI output and TV's HDMI input. 1. Press HOME (n), and set the [3D Mode] option on the [Setup] menu to [On] (page 26). 2. Press B (OPEN/CLOSE), and place a disc on the disc tray. 3. Press B (OPEN/CLOSE) to close the disc tray. The playback starts automatically.

4. Refer to the owner's manual of your 3D-ready TV for the further instruction. You may need to adjust the display settings and focus on your TV's setting for the improved 3D effect. yy Watching a 3D content for a long period time may cause dizziness or tiredness. yy It is not recommended to watch a movie in 3D mode for infirm, child and pregnant woman. yy If you are experiencing headache, tiredness or dizziness while viewing contents in 3D, it is strongly recommended to stop the playback and rest until you feel normal. Enjoying BD-Live™ e BD-ROM supporting BD-Live that has a network extension function allows you to enjoy more functions such as downloading new movie trailers by connecting this unit to the internet. 1. Check the network connection and settings (page 20). 2.

Insert a USB storage device to the USB port on the front panel. A USB storage device is needed to download bonus content. 3. Press HOME (n), and set the [BD-LIVE connection] option on the [Setup] menu (page 30). @@4.

Insert a BD-ROM with BD-Live. The operations are differ depending on the disc. Refer to the manual supplied with the disc.

@@@@@@@@@@@@@@@@@@@@@If you want to display the disc menu while playback, press DISC MENU. @@@@@"MZ (Resume Stop)" appears on the screen briefly, press z (PLAY) to resume playback (from the scene point).

If you press Z (STOP) twice or unload the disc, "Z(Complete Stop)" appears on the screen. The unit will clear the stopped point. yy The resume point may be cleared when a button is pressed (for example; 1 (POWER), B (OPEN/CLOSE), etc). yy On BD-ROM discs with BD-J, the resume playback function does not work. yy If you press Z (STOP) once during BD-ROM interactive title playback, the unit will be in Complete Stop mode. Advanced Playback Repeat playback erotu y During playback, press REPEAT (h) repeatedly to select a desired repeat mode. Blu-ray Disc / DVD / Movie files jA- – Selected portion will be repeated continually. (page 36) jChapter – The current chapter will be played back repeatedly. jTitle – The current title will be played back repeatedly. jAll – All the tracks or files will be played back repeatedly.

To return to normal playback, press REPEAT (h) repeatedly to select [Off]. Audio CDs/Music files ;Track – The current track or file will be played back repeatedly. :All – All the tracks or files will be played back repeatedly. l – The tracks or files will be played back in random order. l:All – All the tracks or files will be played back repeatedly in random order. kA-B – Selected portion will be repeated continually. (Audio CD only) To return to normal playback, press CLEAR. yy If you press V once during Repeat Chapter/Track playback, the repeat playback cancels. yy This function may not work on some disc or title.

Note ,, 4 Operating Last scene memory er This unit memorizes the last scene from the last disc that is viewed.

The last scene remains in memory even if you remove the disc from the unit or switch off the unit. If you load a disc that has the scene memorized, the scene is automatically recalled. yy Last Scene Memory function for a previous disc is erased once a different disc is played. yy This function may not work depending on the disc. yy On BD-ROM discs with BD-J, the last scene memory function does not work.

yy This unit does not memorize settings of a disc if you switch off the unit before commencing to play it. Note ,, Note ,, 36 Operating Repeating a specific portion eroty This player can repeat a portion you have selected. 1. While playback, press REPEAT (h) to select [A-] at the beginning of the portion you wish to repeat. 2.

Press ENTER (b) at the end of the portion. Your selected portion will be repeated continually. 3. To return to normal playback, press REPEAT (h) repeatedly to select [Off]. yy You cannot select a portion less than 3 seconds. yy This function may not work on some disc or title. Changing content list view yui On the [Movie], [Music] or [Photo] menu, you can change the content list view. Method 1 Press red (R) coloured button repeatedly. Note ,, 4 Operating Viewing content information y The player can display the content information. 1.

Select a file using w/s/a/d. 2. Press INFO/MENU (m) to display the option menu. 3. Select the [Information] option using w/s, and press ENTER (b). The file information appears on the screen. While movie playback, you can display the file information by pressing TITLE/POP-UP. The information displayed on the screen may not correct comparing actual content information. Note ,, Method 2 1. On the content list, press INFO/MENU (m) to display the option menu.

2. Use w/s to select the [View Change] option. 3. Press ENTER (b) to change the content list view. Operating 37 Selecting a subtitle file y If the subtitle file name is different from the movie file name, you need to select the subtitle file on the [Movie] menu before playing the movie.

1. Use w/s/a/d to select the subtitle file you wish to play in the [Movie] menu. 2. Press ENTER (b). Options while viewing a photo i You can use various options during viewing a photo in full screen.

1. While viewing a photo in full screen, press INFO/MENU (m) to display the option menu. 2. Select an option using w/s. Press ENTER (b) again to deselect the subtitle file. Selected subtitle file will be displayed when you play the movie file. If you press Z (STOP) while playback, the subtitle selection is cancelled. a Current photo/Total number of photos – Use a/d to view previous/next photo. b Slide Show – Press ENTER (b) to start or pause slide show. c Music Select – Select the background music for the slide show (page 38).

d Music – Press ENTER (b) to start or pause background music. e Rotate – Press ENTER (b) to rotate the photo clockwise. f Zoom – Press ENTER (b) to display the [Zoom] menu. g Effect – Use a/d to select a transition effect between photos in a slide show. h Speed – Use a/d to select a delaying speed between photos in a slide show. 3. Press BACK (1) to exit the option menu. 4 Operating Note ,, 38 Operating Listening to music while slide show i You can display photo files while listening to music files. 1. While viewing a photo in full screen, press INFO/ MENU (m) to display the option menu.

2. Use w/s to select [Music Select] option, and press ENTER (b) to display the [Music Select] menu.



[You're reading an excerpt. Click here to read official LG BP325 user guide](http://yourpdfguides.com/dref/5477836)

<http://yourpdfguides.com/dref/5477836>

3. Use w/s to select a device, and press ENTER (b). 4.

Use w/s to select a file or a folder you wish to play. On-screen display You can display and adjust various information and settings about the content. Displaying content information on-screen ero y 1. While playback, press INFO/MENU (m) to show various playback information. 4 Operating Select g and press ENTER (b) to display the upper directory.

5. Use d to select [OK], and press ENTER (b) to complete music selection. a Title – current title number/total number of titles b Chapter – current chapter number/total number of chapters c Time – elapsed playing time/total playback time d Audio – selected audio language or channel e Subtitle – selected subtitle. f Angle – selected angle/total number of angles g TV Aspect Ratio – selected TV aspect Ratio h Picture Mode – selected picture mode Operating 39 2. Select an option using w/s. 3. Use a/d to adjust the selected option value. 4. Press BACK (1) to exit the on-screen display. yy If no button is pressed for a few seconds, the on-screen display disappears.

yy A title number cannot be selected on some discs. yy Available items may differ depending on discs or titles. yy If an interactive Blu-ray Disc is playing back, some setting information is displayed on the screen but prohibited to be changed. Playing from selected time ero y 1. Press INFO/MENU (m) during playback. The time search box shows the elapsed playing time. 2. Select the [Time] option and then input the required start time in hours, minutes, and seconds from left to right. For example, to find a scene at 2 hours, 10 minutes, and 20 seconds, enter “21020”. Press a/d to skip the playback 60 seconds forward or backward.

3. Press ENTER (b) to start playback from selected time. yy This function may not work on some disc or titles. yy This function may not work depending on the file type. Note ,, Note ,, 4 Operating Selecting a subtitle language ero y 1.

During playback, press INFO/MENU (m) to display the on-screen display. 2. Use w/s to select the [Subtitle] option. 3. Use a/d to select desired subtitle language.

4. Press BACK (1) to exit the on-screen display. yy Some discs allow you to change subtitle selections only via the disc menu. If this is the case, press TITLE/POP-UP or DISC MENU button and choose the appropriate subtitle from the selections on the disc menu. yy You can select the [Subtitle] option on the on-screen display directly by pressing SUBTITLE (J) button. Note ,, 40 Operating Hearing a different audio ero y 1. During playback, press INFO/MENU (m) to display the on-screen display. 2. Use w/s to select the [Audio] option. 3.

Use a/d to select desired audio language, audio track or audio channel. yy Some discs allow you to change audio selections only via the disc menu. In this case, press TITLE/POP-UP or DISC MENU button and choose the appropriate audio from the selections on the disc menu. yy Immediately after you have switched sound, there may be a temporary discrepancy between the display and actual sound. Changing the TV Aspect Ratio ero y You can change the TV aspect ratio setting while playback. 1. During playback, press INFO/MENU (m) to display the On-Screen display. 2. Use w/s to select the [TV Aspect Ratio] option. 3.

Use a/d to select desired option. 4. Press BACK (1) to exit the On-Screen display. Even if you change the value of the [TV Aspect Ratio] option in on-screen display, the [TV Aspect Ratio] option in the [Setup] menu is not changed. Note ,, Note ,, 4 Operating yy On BD-ROM disc, the multi audio format (5.

1CH or 7.1CH) is displayed with [MultiCH] in the on-screen display. yy You can select the [Audio] option on the onscreen display directly by pressing AUDIO (I) button. Watching from a different angle ero If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback. 1.

During playback, press INFO/MENU (m) to display the On-Screen display. 2. Use w/s to select the [Angle] option. 3. Use a/d to select desired angle. 4. Press BACK (1) to exit the On-Screen display. Operating 41 Changing subtitle Code Page y If the subtitle is displayed in broken letter, you can change the subtitle code page to view the subtitle file properly. 1. During playback, press INFO/MENU (m) to display the playback menu.

2. Use w/s to select the [Code Page] option. 3. Use a/d to select desired code option. Changing the Picture Mode ero y You can change the [Picture mode] option while playback. 1. During playback, press INFO/MENU (m) to display the On-Screen display. 2. Use w/s to select the [Picture Mode] option. 3.

Use a/d to select desired option. 4. Press BACK (1) to exit the On-Screen display. Setting the [User setting] option 1. During playback, press INFO/MENU (m) to display the on-screen display.

2. Use w/s to select the [Picture Mode] option. 3. Use a/d to select the [User setting] option, and press ENTER (b). 4.

Press BACK (1) to exit the on-screen display. 4 Operating 4. Use w/s/a/d to adjust the [Picture Mode] options. Select [Default] option then press ENTER (b) to reset the all video adjustments. 5. Use w/s/a/d to select the [Close] option, and press ENTER (b) to finish setting. 42 Operating Using the Premium You can use various content services via Internet with the Premium feature. 1. Check the network connection and settings (page 20). 2.

Press HOME (n). 3. Select the [Premium] using a/d, and press ENTER (b). 4. Select an on-line service using w/s/a/d, and press ENTER (b). 4 Operating yy Detailed information of each service, contact to the content provider or visit support link of the service. yy The content of Premium services and service related information, including user interface, is subject to changes. Please refer to the web site of each service for most upto-date information. yy When you are first time to access [Premium] feature, current country setting appears. If you want to change the country setting, select [Edit] and press ENTER (b).

Note ,, Troubleshooting 43 Troubleshooting General Symptom The Power does not turned on. The unit does not start playback. Cause & Solution yy Plug the power cord into the wall outlet securely. yy Insert a playable disc. (Check the disc type, colour system, and regional code.

) yy Place the disc with the playback side down. yy Place the disc on the disc tray correctly inside the guide. yy Clean the disc. yy Cancel the Rating function or change the rating level. The angle cannot be changed.

Cannot play movie, photo or music files. The remote control does not work properly. yy Multi-angles are not recorded on the DVD Video being played. yy The files are not recorded in a format that the unit can play. yy The unit does not support the codec of the movie file. yy The remote control is not pointed at the remote sensor of the unit. yy The remote control is too far from the unit. yy There is an obstacle in the path of the remote control and the unit. yy The battery in the remote control is exhausted. The unit is plugged in, but the power will not turn on or off.



[You're reading an excerpt. Click here to read official LG BP325 user guide](http://yourpdfguides.com/dref/5477836)

<http://yourpdfguides.com/dref/5477836>

The unit is not operating normally. You can reset the unit as follows. yy Unplug the power cord, wait at least five seconds, and then plug it in again. 5 Troubleshooting 44 Troubleshooting Network Symptom BD-Live feature does not work. Cause & Solution yy The connected USB storage may not have enough space. Connect the USB storage with at least 1GB free space. yy Ensure that the unit is correctly connected to the local area network and can access the internet (see page 20). yy Your broadband speed may not fast enough to use the BD-Live features. Contact your Internet Service Provider (ISP) and increase the broadband speed is recommended. yy The [BD-LIVE connection] option in the [Setup] menu is set to [Prohibited]. Set the option to [Permitted]. Streaming video services (such as YouTube™, etc.) are often stopped or “buffer” during playback. yy Your broadband service speed may not be fast enough to stream video services. Contact your Internet Service Provider (ISP) and increase the broadband speed is recommended. 5 Troubleshooting Troubleshooting 45 Picture Symptom There is no picture. Cause & Solution yy Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen. yy Connect the video connection securely. yy Check the [HDMI Color Setting] in the [Setup] menu is set to the appropriate item that conforms to your video connection. yy Your TV may not support the resolution you have set on the player. Change the resolution that your TV accepts. yy The player’s HDMI OUT jack is connected to a DVI device that does not support copyright protection. Picture noise appears. yy You are playing a disc recorded in a colour system that is different from your TV. yy Set the resolution which your TV accepts. Blu-ray 3D disc playback does not output 3D views. yy Connect the player to your TV with HDMI cable (Type A, High Speed HDMI™ Cable). yy Your TV may not support “HDMI 3D mandatory format”. yy The [3D Mode] option in the [Setup] menu is set to [Off]. Set the option to [On].

Customer support You can update the Player using the latest software to enhance the products operation and/or add new features. To obtain the latest software for this player (if updates have been made), please visit <http://www.lg.com/global/support> or contact LG Electronics customer care centre. 5 Troubleshooting Open source software notice To obtain the corresponding source code under GPL, LGPL and other open source licenses, please visit <http://opensource.lge.com>. All referred license terms, warranty disclaimers and copyright notices are available to download with the source code. 46 Appendix Controlling a TV with the supplied remote control You can control your TV using the buttons below. Setting up the remote to control your TV You can operate your TV with the supplied remote control.

If your TV is listed in the table below, set the appropriate manufacturer code. 1. While holding down 1 (TV POWER) button, and press the manufacturer code for your TV with the numerical buttons (see the table below). Manufacturer LG Zenith GoldStar Code number 1(Default), 2 1, 3, 4 1, 2 6, 7 8, 9 4 By pressing 1 (TV POWER) PR/CH +/- VOL +/- AV/INPUT You can Turn the TV on or off. Scan up or down through memorized channels.

Adjust the volume of the TV Switch the TV’s input source between the TV and other input sources. Samsung Sony Hitachi 2. Release the 1 (TV POWER) button to complete setting. Depending on your TV, some or all buttons may not function on the TV, even after entering the correct manufacturer code. When you replace the batteries of the remote, the code number you have set may be reset to the default setting.

Set the appropriate code number again. 6 Appendix Depending on the unit being connected, you may not be able to control your TV using some of the buttons. Note ,, Appendix 47 Network software update Network update notification From time to time, performance improvements and/or additional features or services may be made available to units that are connected to a broadband home network. If there is new software available and the unit is connected to a broadband home network, the player will inform you about the update as follows. Software update You can update the player using the latest software to enhance the products operation and/or add new features. You can update the software by connecting the unit directly to the software update server. yy Before updating the software in your player, remove any disc and USB Device from the player. yy Before updating the software in your player, turn the player off and then turn it back on. yy During the software update procedure, do not turn off the player or disconnect AC power, or do not press any button. yy If you cancel the update, turn off the power and turn it on for stable performance.

yy This unit cannot be updated to previous software version. 1. Check the network connection and settings (page 20). 2. Select [Software] option in the [Setup] menu then press ENTER (b). 3. Select [Update] option, and press ENTER (b). Note ,, Option 1 1. The update menu will appear on the screen when you turn off the player. 2.

Use a/d to select a desired option and then press ENTER (b). [OK] [Cancel] Starts the software update. Exits the update menu and turns the power off. 6 Appendix Option 2 If the software update is available from the update server, the “Update” icon appears in the Home menu. Press blue (B) coloured button to start the update procedure.

The player will check for the newest update. yy Pressing ENTER (b) while checking for the update will end the process. yy If there is no update available, the Message, “No update is found.” appears. Press ENTER (b) to return to the [Home Menu].

Note ,, 48 Appendix 4. If newer version exists, the message “Do you want to download it?” appears. 5. Select [OK] to start update. (Selecting [Cancel] will end the update.) 6. The player starts downloading the newest update from the server. (Downloading will takes several minutes depending on your home network condition) 7. When downloading is completed, the message, “Download is complete. Do you want to update?” appears.

8. Select [OK] to start updating. (Selecting [Cancel] will end the update and downloaded file will not be re-usable. To update software the next time, the software update procedure has to be started from the beginning again.) Do not turn off the power during the software update. Caution >> If the software includes the driver update, disc tray may open during the process. 9. When update is completed, the power will be turned automatically in a few seconds. 10. Turn the power back on.

The system now operates with the new version. Note ,, 6 Appendix The Software Update function may not work properly depending on your internet environment. In this case, you can obtain the latest software from the authorized LG Electronics Service Centre then update your player.



[You're reading an excerpt. Click here to read official LG BP325 user guide](http://yourpdfguides.com/dref/5477836)
<http://yourpdfguides.com/dref/5477836>

