



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG CM 1930. You'll find the answers to all your questions on the LG CM 1930 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual LG CM 1930**  
**User guide LG CM 1930**  
**Operating instructions LG CM 1930**  
**Instructions for use LG CM 1930**  
**Instruction manual LG CM 1930**



[You're reading an excerpt. Click here to read official LG CM 1930 user guide](http://yourpdfguides.com/dref/5390034)  
<http://yourpdfguides.com/dref/5390034>

**Manual abstract:**

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a builtin installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to. **CAUTION:** This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service centre. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

**CAUTION concerning the Power Cord** Most appliances recommend they be placed upon a dedicated circuit; That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous.

Any of these conditions could result in electric shock or fire.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service centre. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. @@To disconnect power from the mains, pull out the mains cord plug. @@@@To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste.

It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like. **CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus. Disposal of your old appliance 1. □ When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. 3 1 Getting Started 2. □ electrical and electronic products All should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 3. □ correct disposal of your The old appliance will help prevent potential negative consequences for the environment and human health. 4.

□ more detailed information about For disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. CM1930-DU\_AESPLK\_ENG.indd 3 2013-03-15 2:07:15 4 Getting Started Disposal of waste batteries/accumulators 1. When this crossed-out wheeled bin symbol is attached to batteries/ accumulators of Your product it means they are covered by European Directive 2006/66/EC. 2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more than 0.0005% of mercury,0.002% of cadmium or 0.004% of lead. 3.

All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health. 5. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

1 Getting Started LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU. @@@@MP3, Notebook, etc) Radio Listens to the radio.

USB Listens to music from your USB device. Alarm Sets alarm which go off at desired time. USB Direct Recording Records music to your USB device.

Accessories Please check and identify the supplied accessories. Remote Control (1) Battery (2) FM antenna (1) CM1930-DU\_AESPLK\_ENG.indd 6 2013-03-15 2:07:16 Getting Started 7 Compatible USB Devices yy MP3 Player : Flash type MP3 player. yy USB Flash Drive : Devices that support USB 2.0 or USB 1.1. yy The USB function of this unit does not support all USB devices. 1 Getting Started USB device requirement yy Devices which require additional program installation when you have connected it to a computer, are not supported. yy Do not extract the USB device while in operation. yy For a large capacity USB, it may take longer than a few minute to be searched.

T yy o prevent data loss, back up all data. yy If you use a USB extension cable or USB hub, the USB device is not recognized. yy Using NTFS file system is not supported. (Only FAT(16/32) file system is supported.) yy This unit is not supported when the total number of files is 1 000 or more. yy External HDD, Card readers, Locked devices, or hard type USB devices are not supported. yy USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device. yy Some USB may not work with this unit. CM1930-DU\_AESPLK\_ENG.

indd 7 2013-03-15 2:07:16 8 Getting Started •••••a •••••1(Power ON/OFF) : Switches the unit ON or OFF. B(Open/Close) : Opens and closes the disc tray. PRESET/FOLDER W/S : -- Searches for a folder of MP3/ WMA files. When a CD/ USB containing MP3/ WMA files in several folders is being played, press PRESET/FOLDER W/S to select the folder you want to play. -- Choose a preset number for a radio station.

**FUNCTION :** Selects the function and input source. @ : Mutes the sound. VOL+/- : Adjusts speaker volume. PROGRAM/MEMORY : -- Stores radio stations. -- Creates a playlist you want to listen to.

**EQ :** Chooses sound impressions. •••••c •••••**SLEEP :** Sets the system to turn off automatically at a specified time. (Dimmer : The display window will be darkened by half.) **CLOCK :** Sets the clock and checks the time. **INFO :** Sees informations about your music. MP3 files often come with ID3 tags. The tag gives the Title, Artist, Album or Time information. **TIMER :** With the **TIMER** function you can turn CD, USB play and **TUNER** reception on or off at a desired time.



[You're reading an excerpt. Click here to read official LG CM 1930 user guide](http://yourpdfguides.com/dref/5390034)  
<http://yourpdfguides.com/dref/5390034>

PTY : Searches radio stations by radio type. SET/RDS : - Confirms the setting.

- RDS (Radio Data System) (Refer to the page 17). Remote Control 1 Getting Started Battery Installation REC : Starts recording. •••••b•••••  
REPEAT(MENU) : Listens to your tracks/files repeatedly or randomly. Z ENTER : Stops playback or recording. @@TUN./+ : Selects the radio station.  
d/M(Play/Pause) : - Starts or pauses playback. @@ Y/U (Skip/Search) - Searches backward or forward. - Skips to the previous/next track/file. TUN.  
-/+ Tunes in the desired radio station. FUNC.(Function) Selects the fun go to the next track/file. Playing less than 2 seconds, press Skip to the C on the remote  
control or Y next/previous on the unit to go to the previous track/file track/file. @@@@A program can contain 64 tracks/files.  
1. Insert a CD or a USB and wait for it to be ordered. 2. Press PROGRAM/MEMORY on the remote control in stop status. @@@@A (Refer to the  
page 12) 1.

Connect the external device to the PORT. IN connector of the unit. 2. Turn the power on by pressing I/I!. @@on the unit. @@@@To cancel it, press @  
again or change the volume level. @@on the unit until FM appears in the display window. The last received station is tuned in. @@@@Before tuning, make  
sure to turn down the volume. 1.

Press FUNCTION on the remote control or FUNC. on the unit until FM appears in the display window. @@3. Press PROGRAM/MEMORY. A preset number  
will blink in the display window. @@5. Press PROGRAM/MEMORY. The station is stored. 6. Repeat steps 2 to 5 to store other stations.

@@This will change the tuner from stereo to mono. @@“ERASE” will blink in the display window. @@This shows information about the radio station being  
listened to. Press SET/RDS repeatedly to cycle through the various data types. : PS □ (Programme Service Name) The name of the channel will appear in the  
display PTY □ (Programme Type Recognition) The prous sound sources to USB.

1. Connect the USB device to the unit. @@on the unit. @@All tracks/files recording - You can record to USB after stop. @@@@2.

Use C/V to select the bit rate. 3. Press REC again to select the recording speed. 4. Press C/V to select a desired recording speed. @@Y (Audio CD Only) X2  
SPEED - □ ou can just record the music file. @@(MP3/WMA CD Only) yy During recording MP3/WMA, there is no sound. @@@@If not, an incomplete file  
may be made and not deleted on PC. @@yy Multi card reader device or External HDD can not be used for USB recording. yy A file is recorded by about 512  
Mbyte when you record for a long term.

yy It'll be stored as follows. AUDIO CD MP3/WMA The other source\* Note ,, 3 Operating 5. Press REC to finish the setting. \* : TUNER, PORTABLE and the  
like. The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an  
infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes. Be responsible Respect copyrights  
CM1930-DU\_AESPLLK\_ENG.indd 20 2013-03-15 2:07:19 4 Troubleshooting Troubleshooting 21 Troubleshooting Problem No Power. Cause & Correction

yy The power cord is not plugged in. Plug in the power cord.

yy Check whether electricity failed. Check the condition by operating other electronic devices. yy Check whether you select the right function. Press FUNC.  
and check the selected function.

No sound. yy Speaker cables are not connect correctly. Connect the speaker cables correctly. yy The volume is set to minimum. Use the VOLUME./+ to adjust  
the volume.

yy An unplayable disc is inserted. Insert a playable disc. The unit does not start playback. yy No disc is inserted. Insert a disc. yy The disc is dirty. Clean the  
disc. (Refer to the page 23) yy The disc is inserted upside down. Place the disc with the label or printed side facing upwards. yy The antenna is positioned  
poorly.

Adjust its position. 4 Troubleshooting yy The signal strength of the radio station is too weak. Tune to the station manually. Radio stations cannot be tuned in  
properly. yy No stations have been preset or preset stations have been cleared (when being tuned by scanning preset channels). Preset some radio stations,  
see page 16 for details. yy The remote control is not pointed at the remote sensor of the unit. Point the remote control at the remote sensor of the unit. yy The  
remote control is too far from the unit. Operate the remote control within about 16 ft (5 m).

@@Remove not work properly. the obstacle. yy The batteries in the remote control are exhausted. @@@@Input Power Net Dimensions (WxHxD) Net  
Weight (1EA) 1 Way 1 Speaker 8Ω 5W 10 W 140 x 226 x 157 mm 1.1 kg • Design and specifications are subject to change without notice.

CM1930-DU\_AESPLLK\_ENG.indd 22 2013-03-15 2:07:19 Appendix 23 Maintenance Handling the Unit When shipping the unit Please save the original  
shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory. Notes  
on Discs Handling Discs Never stick paper or tape on the disc. Storing Discs After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight. Keeping the exterior surfaces clean  
Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic  
products in contact with the unit for a long period of time. Cleaning Discs Do not use strong solvents such as alcohol, benzine, thinner, commercially  
available cleaners, or anti-static spray intended for old vinyl records. Cleaning the unit To clean the player, use a soft, dry cloth. If the surfaces are extremely  
dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage  
the surface of the unit. Trademarks and Licenses 5 Appendix Maintaining the Unit The unit is a high-tech, precision device. If the optical pick-up lens and disc  
drive parts are dirty or worn, the picture quality could be diminished.

For details, please contact your nearest authorized service centre. CM1930-DU\_AESPLLK\_ENG.indd 23 2013-03-15 2:07:19

CM1930-DU\_AESPLLK\_ENG.indd 24 2013-03-15 2:07:19 .



[You're reading an excerpt. Click here to read official LG CM 1930 user guide](http://yourpdfguides.com/dref/5390034)  
<http://yourpdfguides.com/dref/5390034>