



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG CM1530. You'll find the answers to all your questions on the LG CM1530 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG CM1530
User guide LG CM1530
Operating instructions LG CM1530
Instructions for use LG CM1530
Instruction manual LG CM1530



[You're reading an excerpt. Click here to read official LG CM1530 user guide](http://yourpdfguides.com/dref/5078524)
<http://yourpdfguides.com/dref/5078524>

Manual abstract:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product. **WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.** **WARNING:** Do not install this equipment in a confined space such as a book case or similar unit. **CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a builtin installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to. **CAUTION:** This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. shall the unit require maintenance, contact an authorized service centre. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service centre. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible. Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points.

Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like. **CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus. disposal of your old appliance 1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. 3 1 Getting Started 2. 3. 4. 5.

4. 5. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product. 1 Getting Started LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC and 2009/125/EC. Contact office for compliance of this product: LG Electronics Inc. eU Representative, Krijgsman 1, 1186 DM Amstelveen, The Netherlands Please note that this is NOT a Customer Service contact point.

For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product. cM1530-DU_ADEULLK_ENG. Indd 4 2012-12-11 10:24:54 Table of Contents 5 Table of Contents 1 Getting Started 3 Operating 13 13 13 14 14 14 14 15 15 15 15 16 16 16 17 17 17 17 Basic Operations – CD/ USB Operations – Selecting a folder Other Operations – Programmed Playback – Displaying file information (ID3 TAG) – Turn off the sound temporarily Radio Operations – Listening to the radio – Improving poor FM reception – Presetting the Radio Stations – Deleting all the saved stations – Seeing information about a Radio station – Using the Auto Station Programme Memory(ASPM) – Deleting all saved RDS stations Sound adjustment – Setting the surround mode Listening to music from your external device Auto Power Down 1 2 Safety Information 6 Unique Features 6 Accessories 6 Playable file Requirement 6 – MP3/WMA music file requirement 7 – Compatible USB Devices 7 – USB device requirement 8 Remote Control 9 Front Panel 10 Back Panel 2 3 2 Connecting 11 11 11 12 12 12 Connecting to speakers – Connecting the speakers to the unit Antenna Connection Optional Equipment Connection – USB Connection – PORT. iN Connection 4 5 4 Troubleshooting 18 Troubleshooting 5 Appendix 19 Trademarks and Licenses 20 Specifications 21 Maintenance 21 – Handling the Unit 21 – Notes on Discs CM1530-DU_ADEULLK_ENG.

Indd 5 2012-12-11 10:24:54 6 Getting Started Unique Features 1 Getting Started Playable file Requirement MP3/WMA music file requirement MP3/ WMA file compatibility with this unit is limited as follows. (MP3, Notebook, etc) Radio Listens to the radio. USB Listens to music from your USB device. The USB function of this unit does not support all USB devices. Do not extract the USB device while in operation. To prevent data loss, back up all data. The USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device. Some USB may not work with this unit. The button is not available for any function.

-- Searches for a section within a track/file. The button is not available for any function. MP3 files often come with ID3 tags. The tag gives the Title, Artist, Album or Time information. IN Listens to music from your portable device. USB Port Plays the audio files by connecting the USB device. Antenna Connection Be sure to fully extend the FM wire antenna. Please use the speakers far away from either TV screen or PC monitor. () to the USB port on the front of the unit. pORT.

Note, yy Removing the USB Device from the unit 1. 2. Remove the USB device from the unit. 2. Select the CD or USB function by pressing FUNCTION on the remote control or FUNC. Select a track/file you want to play by pressing Cc/vV on the remote control or C/V on the unit. To Stop Playback Pause Do this Press Z ENTER on the remote control or I on the unit. During playback, press vV on the remote control or V on the unit to go to the next track/file.



[You're reading an excerpt. Click here to read official LG CM1530 user guide](http://yourpdfguides.com/dref/5078524)

<http://yourpdfguides.com/dref/5078524>

@@@@@@@@@@@@) yy USB and CD Folders/Files are recognized as below. Directory *ROOT File File_03 File_04 File_05 File_06 File_07 File_08 File_09 File_10 File_01 File_02 yy Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.

Yy *ROOT : the first screen you can see when a computer recognize the USB is "ROOT" yy Folders will be presented as the following order; FAT(USB) : FILE_01 -> FILE_02 -> FILE_03 -> FILE_04 -> FILE_05 -> FILE_06 -> FILE_07 -> FILE_08 -> FILE_09 -> FILE_10 CD : FILE_01 -> FILE_02 -> FILE_03 -> FILE_04 -> FILE_05 -> FILE_08 -> FILE_09 -> FILE_06 -> FILE_07 -> FILE_10 Note ,, 3 Operating CM1et surround sound fields. You can select a desired sound mode by using EQ. The displayed items for the Equalizer may be different depending on sound sources and effects. On Display AUTO EQ Description Sets the sound equalizer on the mode that is the most similar to the genre which is included in the MP3 ID3 tag of song files. This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual pop,classic, jazz or rock concert.

You can enjoy the sound without equalizer effect. Reinforces the treble, bass and surround sound effect. Listening to music from your external device The unit can be used to play the music from many types of external device. (Refer to the page 12) 1. Connect the external device to the PORT.

Turn the external device and start playing music. @@@@Maybe you need to reset the surround mode, after switching the input, sometimes even after the sound track changed. Cause & Correction yy The power cord is not plugged in. Check the condition by operating other electronic devices. Use the Volume Knob to adjust the volume. 4 Troubleshooting The unit does not start playback. Place the disc with the label or printed side facing upwards. Yy The signal strength of the radio station is too weak. Yy No stations have been preset or preset stations have been cleared (when being tuned by scanning preset channels). Preset some radio stations, see page15 for details.

Yy The remote control is not pointed at the remote sensor of the unit. Point the remote control at the remote sensor of the unit. Yy The remote control is too far from the unit. Operate the remote control within about 16 ft (5 m). The remote control does yy There is an obstacle in the path of the remote control and the unit. Replace the battery with new one. 8 kg yy Design and specifications are subject to change without notice. cM1530-DU_ADEULLK_ENG. Indd 20 2012-12-11 10:24:59 Appendix 21 Maintenance Handling the Unit When shipping the unit Please save the original shipping carton and packing materials.

@@Notes on Discs Handling Discs Never stick paper or tape on the disc.

Storing Discs After playing, store the disc in its case. @@@@Wiping with strong pressure may damage the surface. @@Cleaning Discs Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for old vinyl records. Cleaning the unit To clean the player, use a soft, d.



[You're reading an excerpt. Click here to read official LG CM1530 user guide](http://yourpdfguides.com/dref/5078524)
<http://yourpdfguides.com/dref/5078524>