




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG DP132. You'll find the answers to all your questions on the LG DP132 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG DP132
User guide LG DP132
Operating instructions LG DP132
Instructions for use LG DP132
Instruction manual LG DP132

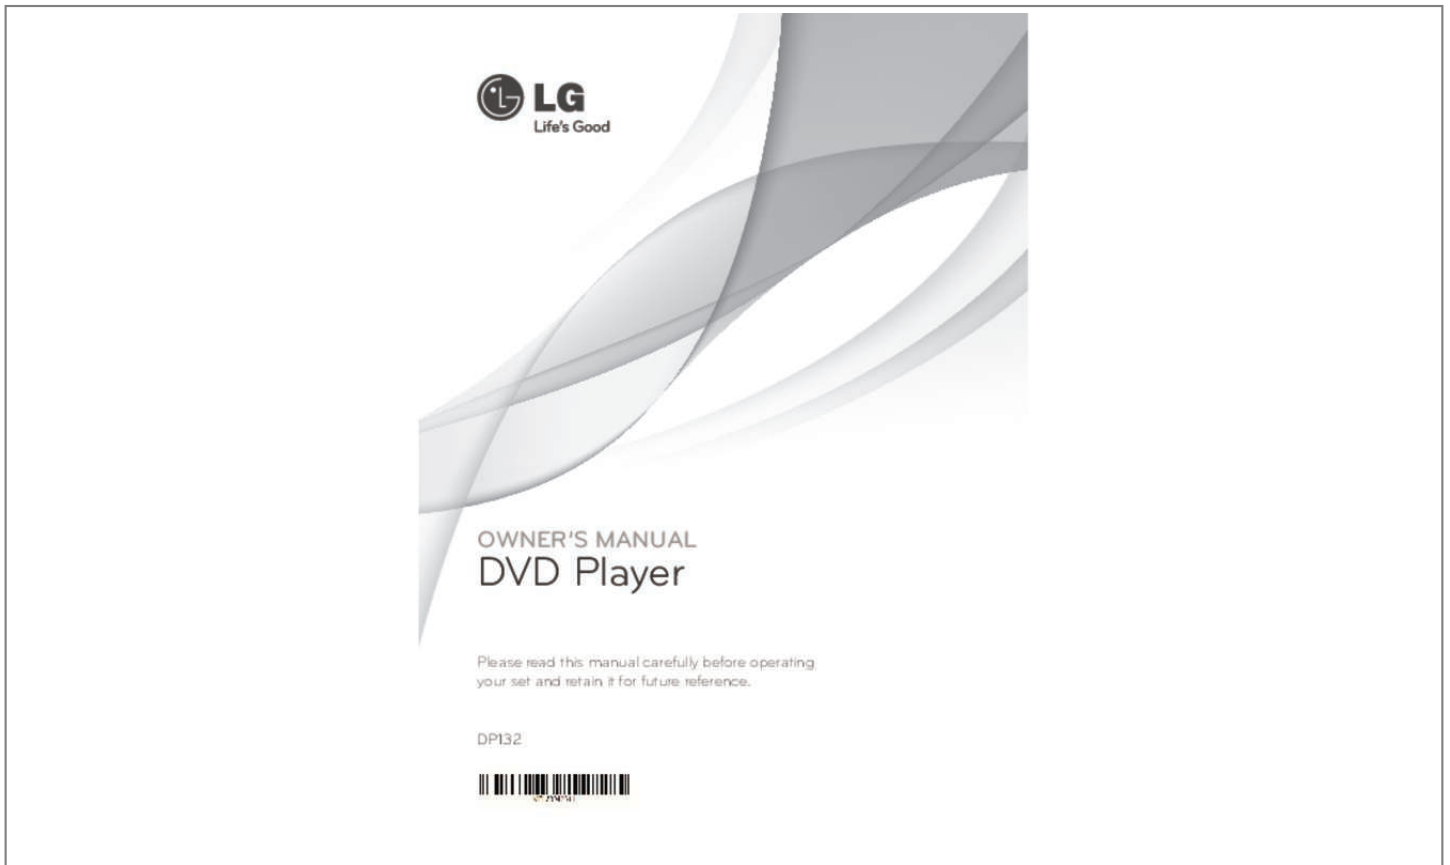

[You're reading an excerpt. Click here to read official LG DP132 user guide](http://yourpdfguides.com/dref/5434095)

<http://yourpdfguides.com/dref/5434095>

Manual abstract:

DPI32 2 Getting Started Safety Information 1 Getting Started CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product. WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. WARNING: Do not install this equipment in a confined space such as a book case or similar unit. CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. @@@@Do not overheat. @@@@Do not overload wall outlets.

Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible. Getting Started This device is equipped with a portable battery or accumulator. Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points.

Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. @@@@patents and other intellectual property rights. @Reverse engineering or disassembly is prohibited. yy Under the U.S. @@@@4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. 1 Getting Started 4 Getting Started Disposal of waste batteries/ accumulators Notes on Discs yy Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface.

Never stick paper or tape on the disc. yy After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight. 1 Getting Started 1. When this crossed-out wheeled bin symbol is attached to batteries/ accumulators of Your product it means they are covered by European Directive 2006/66/EC. 2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.

3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health. 5.

For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product. Notes on the Unit yy Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory. yy To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution.

Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit. yy The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center. LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU. Contact office for compliance of this product : LG Electronics Inc.

@@@@@yy Do not extract the USB device during operation (play, etc.). @@yy USB device: USB device that supports USB1.1 and USB2.

0. yy Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages. yy Regular back up is recommended to prevent data loss. @@yy Some USB device may not work with this unit. yy Digital camera and mobile phone are not supported. yy USB Port of the unit cannot be connected to PC. @@@@@@Go to vod. divx.com for more information on how to complete your registration. [Register]: Displays the registration code of your unit. @@@@@The password will be cleared. Rating Select a rating level. The lower the level, the stricter the rating. @@@@@1.

While playback, press DISPLAY to show various playback information. 2. Select an option using w/s. 3. Use a/d to adjust the selected option value. 4. Press DISPLAY to exit the On-Screen display. Current title number/total number of titles Current chapter number/total number of chapters Elapsed playing time Selected total time of current title/file Selected audio language or channel Selected subtitle Selected angle/total number of angles Playing a File yui 1. Press OPEN/CLOSE (B) to place a disc on the disc tray, or connect the USB device. 2. Select a file using w/s/a/d, and press PLAY (z) or ENTER (b) to play the file. RETURN (x) TITLE Changes between Disc and USB Device. Changes the mode. (Music : Photo : Movie) 4 Operating 14 Operating General Operation To Playback Pause Stop Do this Press PLAY (z) Press PAUSE/STEP (M) Press STOP (Z) Advanced Playback Movie ry To Display disc menu Play repeatedly Do this Press DVD MENU. (DVD Only) Press REPEAT during playback.

To select an option to be repeated, Press REPEAT repeatedly.



You're reading an excerpt. Click here to read official LG DP132 user guide

<http://yourpdfguides.com/dref/5434095>

•DVD: Chapter/ Title/ Off •MOVIE: Track/ All/ Off Play frame-by- Press PAUSE/STEP (M) while frame Video file playback and press PAUSE/STEP (M) repeatedly to play Frame-by-Frame playback. Repeat a specific portion Press A-B at the beginning of the portion you wish to repeat and again at the end of the portion. To return to normal playback, press A-B to select [Off]. Set the desired Searches for the starting point starting time of of entered time code. Press playback DISPLAY then select clock icon. Press OPTION and enter a time using w/s/a/d. Select [OK] then press ENTER(b). For example, to find a scene at 1 hour, 10 minutes, and 20 seconds, enter "11020" and press ENTER (b). @@The page language code will appear.

@@Fast forward or Press c or v during fast reverse playback. @@yy Press STOP (Z) once: Displayed MZ on the screen (Resume Stop) yy Press STOP (Z) twice: Displayed Z on the screen (Complete Stop) System Select You must select the appropriate system mode for your TV system. Remove any disc that might be in the unit, press and hold PAUSE/STEP (M) for more than five seconds to be able to select a system (PAL, NTSC, AUTO). Leave the unit in Stop mode for about five minutes, then the screen saver appears. If the Screen Saver is displayed for five minutes, the unit automatically turns V Senegal MX MC Singapore MN Slovak Republic MA Slovenia NP South Africa NL South Korea AN Spain NZ Sri Lanka NG Sweden NO Switzerland OM Taiwan PK Thailand PA Turkey PY Uganda PH Ukraine PL United States PT Uruguay RO Uzbekistan Vietnam RU Zimbabwe SA SN SG SK SI ZA KR ES LK SE CH TW TH TR UG UA US UY UZ VN ZW 6 Appendix El Salvador Ethiopia Appendix 19 Language Code List Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu].

Language Code Afar Afrikaans Albanian Amharic Arabic Armenian Assamese Aymara Azerbaijani Bashkir Basque Bengali; Bangla Bhutani Bihari Breton Bulgarian Burmese Byelorussian Chinese Croatian Czech Danish Dutch English Esperanto Estonian Faroese Fiji Finnish 6565 6570 8381 6577 6582 7289 6583 6588 6590 6665 6985 6678 6890 6672 6682 6671 7789 6669 9072 7282 6783 6865 7876 6978 6979 6984 7079 7074 7073 Language Code French Frisian Galician Georgian German Greek Greenlandic Guarani Gujarati Hausa Hebrew Hindi Hungarian Icelandic Indonesian Interlingua Irish Italian Japanese Kannada Kashmiri Kazakh Kirghiz Korean Kurdish Laotian Latin Latvian, Lettish Lingala 7082 7089 7176 7565 6869 6976 7576 7178 7185 7265 7387 7273 7285 7383 7378 7365 7165 7384 7465 7578 7583 7575 7589 7579 7585 7679 7665 7686 7678 Language Code Lithuanian Macedonian Malagasy Malay Malayalam Maori Marathi Moldavian Mongolian Nepali Norwegian Oriya Panjabi Pashto, Pushto Persian Polish Portuguese Quechua Rumanian Russian Samoan Sanskrit Scots Gaelic Serbian Serbo-Croatian Shona 7684 7775 7771 7783 7776 7773 7782 7779 7778 7869 7879 7982 8065 8083 7065 8076 8084 8185 8279 8285 8377 8365 7168 8382 8372 8378 Language Code Sindhi Singhalese Slovak Slovenian Spanish Sudanese Swahili Swedish Tagalog Tajik Tamil Telugu Thai Tonga Turkish Turkmen Twi Ukrainian Urdu Uzbek Vietnamese Volapük Welsh Wolof Xhosa Yiddish Yoruba Zulu 8368 8373 8375 8376 6983 8385 8387 8386 8476 8471 8465 8469 8472 8479 8482 8475 8487 8575 8582 8590 8673 8679 6789 8779 8872 7473 8979 9085 Nauru 7865 Rhaeto-Romance 8277 6 Appendix 20 Appendix Specifications Power requirements Power consumption Dimensions (W x H x D) Net Weight (Approx.) Operating temperature Operating humidity Laser Signal system Bus Power Supply (USB) VIDEO OUTPUT ANALOG AUDIO OUTPUT AC 200-240 V, 50 / 60 Hz 9W (250 x 37.5 x 203) mm 0.9 Kg 5 °C to 35 °C 5 % to 90 % Semiconductor laser PAL / NTSC DC 5 V 0 200 mA 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1 2.

0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1 Trademarks and Licenses Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation. DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. 6 Appendix Design and specifications are subject to change without prior notice. .



[You're reading an excerpt. Click here to read official LG DP132 user guide](http://yourpdfguides.com/dref/5434095)

<http://yourpdfguides.com/dref/5434095>