




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG DP432H. You'll find the answers to all your questions on the LG DP432H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG DP432H
User guide LG DP432H
Operating instructions LG DP432H
Instructions for use LG DP432H
Instruction manual LG DP432H

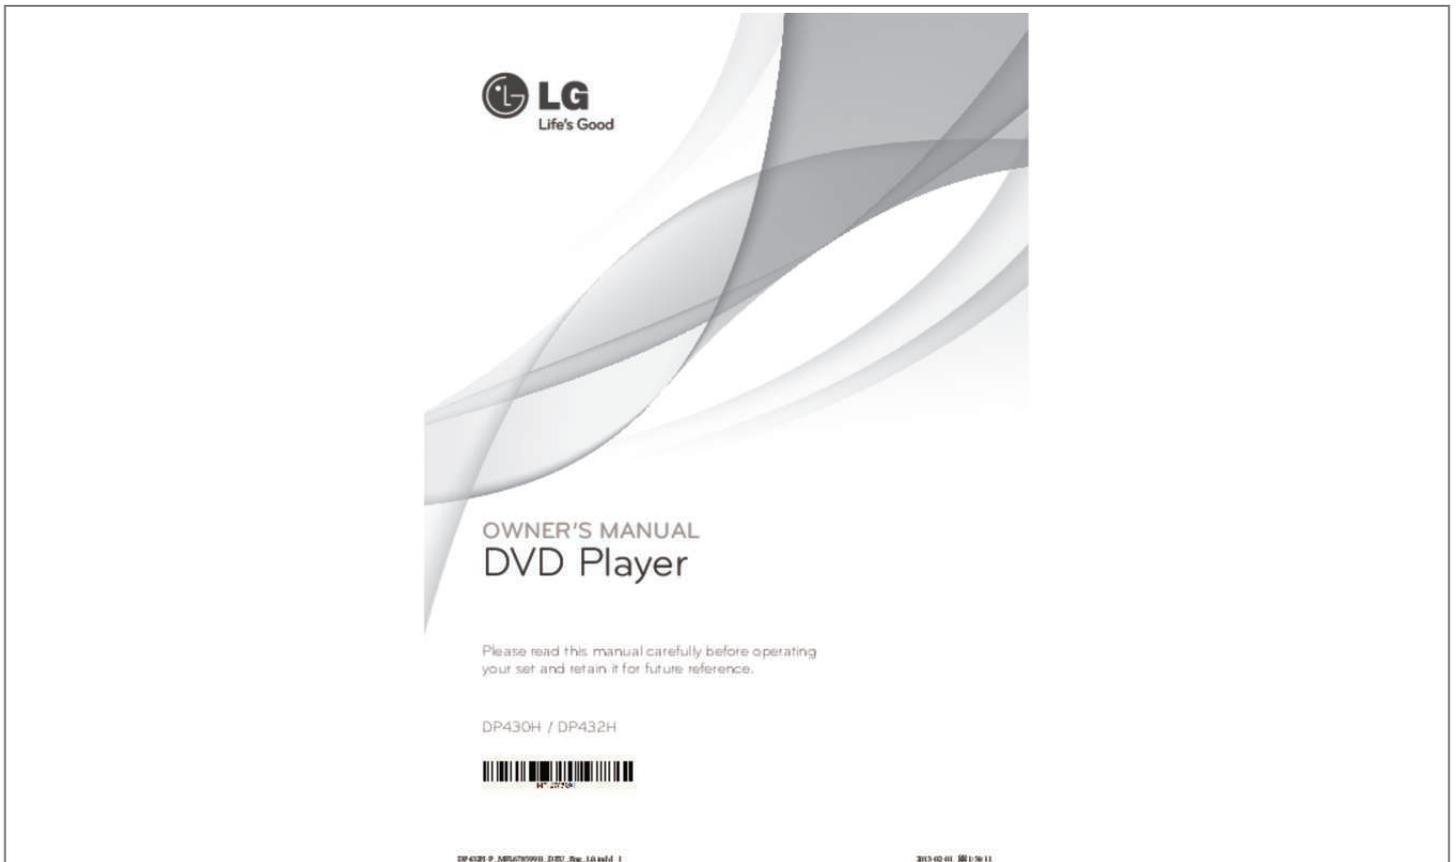

[You're reading an excerpt. Click here to read official LG DP432H user guide](http://yourpdfguides.com/dref/5078529)

<http://yourpdfguides.com/dref/5078529>

Manual abstract:

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a builtin installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to. **CAUTION:** This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord Most appliances recommend they be placed upon a dedicated circuit; That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. @@@@Do not dispose of batteries or battery together with other waste. @@The battery shall not be exposed to excessive heat such as sunshine, fire or the like. **CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus. 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. 3 1 Getting Started Disposal of waste batteries/ accumulators 1. When this crossed-out wheeled bin symbol is attached to batteries/ accumulators of Your product it means they are covered by European Directive 2006/66/EC. 2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more than 0.0005% of mercury,0.002% of cadmium or 0.

004% of lead. 3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health. 5. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product. Notes on Copyrights yy This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights.

Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited. yy Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, DVDs, CDs and other materials may subject you to civil and/or criminal liability.

Disposal of your old appliance 1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. 2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 3.

The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU. Contact office for compliance of this product : LG Electronics Inc. @@@@Never stick paper or tape on the disc. yy After playing, store the disc in its case. @@@@yy To clean the unit, use a soft, dry cloth. @@@@yy The unit is a high-tech, precision device. @@@@DVD-RW (8 cm / 12 cm disc) -- VR mode, Video mode and finalized only -- DVD-RW discs that contain Video, Audio or Photo files. DVD+RW (8 cm / 12 cm disc) -- Video mode and finalized only -- DVD+RW discs that contain Video, Audio or Photo files. Audio CD (8 cm / 12 cm disc) CD-R/RW (8 cm / 12 cm disc) -- CD-R/RW discs that contain audio titles, Video, Audio or Photo files.

About the "7" Symbol Display "7" may appear on your TV display during operation and indicates that the function explained in this owner's manual is not available on that specific media. Symbols Used in this Manual A section whose title has one of the following symbols are applicable only to the disc or file represented by the symbol. r t y u i DVD-Video, DVD±R/RW Audio CDs Video files contained in the USB/Disc (USB: DP432H only) Audio files contained in the USB/Disc (USB: DP432H only) Photo files contained in the USB/Disc (USB: DP432H only) Supplied Accessories RCA to SCART cable (1) Remote control (1) You have to set the disc format option to [Mastered] in order to make the discs compatible with the players when formatting rewritable discs. When setting the option to Live System, you cannot use it on player. (Mastered/Live File System: Disc format system for windows Vista) Note ., Battery (1)

Regional Code This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled same as the rear of the unit or "ALL". DP432H-P_MFL67859911_DEU_Eng_1.0.indd 6 2013-02-01 1:54:13 Getting Started 7 File Compatibility Overall Available File extensions: ".avi", ".mpg", ".mpeg", ".mp3", ".wma", ".jpg", ".

jpeg" yy The file name is limited to 35 characters. yy Depending on the size and number of the files, it may take several minutes to read the contents on the media.



You're reading an excerpt. Click here to read official LG DP432H user guide
<http://yourpdfguides.com/dref/5078529>

Maximum Files/Folder: Less than 600 (total number of files and folders) CD-R/RW, DVD±R/RW Format: ISO 9660 Photo Files Photo size: Less than 2M recommended. yy Progressive and lossless compression photo image files are not supported. 1 Getting Started Notes of USB Device (DP432H only) yy This unit supports USB device with FAT16 or FAT32 format.

yy Do not extract the USB device during operation (play, etc.). yy A USB device which requires additional program installation when you have connected it to a computer, is not supported. yy USB device: USB device that supports USB1.1 and USB2.0. yy Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages. yy Regular back up is recommended to prevent data loss. yy If you use a USB extension cable, USB HUB, USB Multi-reader, or External HDD, the USB device may not be recognized.

yy Some USB device may not work with this unit. yy Digital camera and mobile phone are not supported. yy USB Port of the unit cannot be connected to PC. The unit cannot be useU_Eng_1.0.indd 9 2013-02-01 1:54:13 10 Connecting Connecting to your TV Connecting RCA to SCART Cable 2 Connecting Rear of the Unit RCA to SCART cable VIDEO IN L Connecting Component Video Cable Connect the COMPONENT/PROGRESSIVE SCAN OUTPUT jacks on the unit to the corresponding input jacks on the TV using Component video cable, such as Y with green, Pb with blue, and Pr with red. Using the RCA to SCART cable, connect the RCA cable ends to the corresponding VIDEO/AUDIO OUTPUT jacks on the unit and connect the scart cable to the scart socket on the TV. Rear of the Unit Component Cable TV TV Y PB COMPONENT VIDE yy You should still connect the AUDIO cable between the unit and TV. DP432H-P_MFL67859911_DEU_Eng_1.0.

indd 10 2013-02-01 1:54:14 Connecting 11 Connecting HDMI Cable Connect the HDMI OUTPUT on the unit to the HDMI IN on compatible TV with HDMI cable. (Type A, High Speed HDMI™ Cable) Resolution Setting You can change the resolution using RESOLUTION button. yy The unit is able to provide a 1080p full or ENTER (b) to play the track. On-Screen Display ry You can display and adjust various information and settings about the content. 1. While playback, press DISPLAY to show various playback information. 2. Select an option using w/s. 3. Use a/d and numerical button to adjust the selected option value.

4. Press DISPLAY to exit the On-Screen display. Current title number/total number of titles Current chapter number/total number of chapters Elapsed playing time Selected total time of current title/file Selected audio language or channel Selected subtitle Selected angle/total number of angles Playing a File yui 1. Press OPEN/CLOSE (B) to place a disc on the disc tray, or connect the USB device. (USB: DP432H only) 2. Select a file using w/s/a/d, and press PLAY (z) or ENTER (b) to play the file. RETURN (x) TITLE Changes between Disc and USB Device. Changes the mode. (Music : Photo : Movie) 4 Operating DP432H-P_MFL67859911_DEU_Eng_1.0.

indd 15 2013-02-01 1:54:15 16 Operating General Operation To Playback Pause Stop Do this Press PLAY (z) Press PAUSE/STEP (M) Press STOP (Z) Advanced Playback Movie ry To Display disc menu Play repeatedly Do this Press DVD MENU. (DVD Only) Press REPEAT during playback. To select an option to be repeated, Press REPEAT repeatedly. •DVD: Chapter/ Title/ Off •MOVIE: Track/ All/ Off Play frame-by- Press PAUSE/STEP (M) while frame Video file playback and press PAUSE/STEP (M) repeatedly to play Frame-by-Frame playback. Repeat a specific portion Press A-B at the beginning of the portion you wish to repeat and again at the end of the portion. To return to normal playback, press A-B to select [Off]. @@Press playback DISPLAY then select clock icon. Enter a time then press ENTER(b). @@If you enter the wrong number, press CLEAR to enter again. @@Press SEARCH to recall or clear position.

@@@The page language code will appear. @@@@If the Screen Saver is displayed for five minutes, the unit automatically turns itself off. Turn off the unit, then the unit memorize the lastly viewed scene even if disc is inserted again after removal or unit is turned on after off with same disc. (DVD/ Audio CD only) 4 Operating Screen Saver Last Scene Memory DP432H-P_MFL67859911_DEU_Eng_1.0.

indd 16 2013-02-01 1:54:16 Operating 17 Slow down the While the playback is paused, playing speed press v repeatedly to play (Forward only) various speeds of slow motion. Press PLAY (z) to continue play at normal speed. @@@@To select an item to be repeated, Press REPEAT repeatedly. @@@@To clear a music file(s) from the program list, select the music file you want to clear then press CLEAR in program edit mode. To clear all music file(s) from the program list, select [Clear All] then press ENTER (b) in program edit mode.

Display file information (ID3 TAG) While playing a MP3 file containing file information, you can display the information by pressing DISPLAY repeatedly. yy Depending on the MP3 files, information may not be displayed on the screen. 4 Operating DP432H-P_MFL67859911_DEU_Eng_1.0.indd 17 2013-02-01 1:54:16 18 Operating Photoi To View photo files as a slide show Adjust slide show speed Do this Use w/s/a/d to highlight () icon then press ENTER (b) to start slide show. You can change slide show speed using a/d when (J) icon is highlighted. Rotate a photo Use w/s to rotate the photo in full screen counterclockwise or clockwise while viewing a photo in full screen. Watch an While viewing a photo in full enlarged Photo screen, press ZOOM repeatedly to select zoom mode. ZOOM: 100% : 200% : 300% : 400% : 100% w/s/a/d: Move through the zoomed photo. @@@@The power is on, but the unit does not work.

@@No disc is inserted. An unplayable disc is inserted. @@Insert a disc. Insert a playable disc. (Check the disc type and regional code.) Change the rating level. Point the remote control at the remote sensor of the unit. Operate the remote control closer to the unit. Wipe the disc from the center to out with a clean cloth. Do not use strong solvents.

(alcohol, benzine, thinner, commercially available cleaners) Select the appropriate video input mode on the TV. Connect the video cable securely. The remote control The remote control is not does not work properly. pointed at the remote sensor on the unit. The remote control is too far from the unit. Poor picture quality and sound distortion. Fingerprints and dust are stained on the disc. No picture. The TV is not set to receive the signal from the unit. The video cable is not connected securely.

5 Troubleshooting The TV does not accept the Press RESOLUTION repeatedly to select resolution that is set on the unit. appropriate resolution. No sound. The equipment connected with the audio cable is not set to receive the signal from the unit. The AUDIO options are set to the wrong position. Select the correct input mode of the audio amplifier. Set the AUDIO settings to the correct position. DP432H-P_MFL67859911_DEU_Eng_1.0.indd 19 2013-02-01 1:54:16 20 Appendix Area Code List Choose an area code from this list.



[You're reading an excerpt. Click here to read official LG DP432H user guide](http://yourpdfguides.com/dref/5078529)

<http://yourpdfguides.com/dref/5078529>

Area Code Area Code Area Code Area Code Afghanistan Argentina Australia Austria Belgium Bhutan Bolivia Brazil Cambodia Canada Chile China Colombia Congo Costa Rica Croatia Czech Republic Denmark Ecuador Egypt AF Fiji AR Finland AU France AT Germany BE Great Britain BT Greece BO Greenland BR Hong Kong KH Hungary CA India CL Indonesia CN Israel CO Italy CG Jamaica CR Japan HR Kenya CZ Kuwait DK Libya EC Luxembourg EG Malaysia SV Maldives ET Mexico FJ Monaco FI Mongolia FR Morocco DE Nepal GB Netherlands GR Antilles GL New Zealand HK Nigeria HU Norway IN Oman ID Pakistan IL Panama IT Paraguay JM Philippines JP Poland KE Portugal KW Romania LY Russian LU Federation MY Saudi Arabia MV Senegal MX MC Singapore MN Slovak Republic MA Slovenia NP South Africa NL South Korea AN Spain NZ Sri Lanka NG Sweden NO Switzerland OM Taiwan PK Thailand PA Turkey PY Uganda PH Ukraine PL United States PT Uruguay RO Uzbekistan Vietnam RU Zimbabwe SA SN SG SK SI ZA KR ES LK SE CH TW TH TR UG UA US UY UZ VN ZW 6 Appendix El Salvador Ethiopia DP432H-P_MFL67859911_DEU_Eng_1.0.indd 20 2013-02-01 1:54:16

Appendix 21 Language Code List Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu]. Language Code Afar Afrikaans Albanian Amharic Arabic Armenian Assamese Aymara Azerbaijani Bashkir Basque Bengali; Bangla Bhutani Bihari Breton Bulgarian Burmese Byelorussian Chinese Croatian Czech Danish Dutch English Esperanto Estonian Faroese Fiji Finnish 6565 6570 8381 6577 6582 7289 6583 6588 6590 6665 6985 6678 6890 6672 6682 6671 7789 6669 9072 7282 6783 6865 7876 6978 6979 6984 7079 7074 7073 Language Code French Frisian Galician Georgian German Greek Greenlandic Guarani Gujarati Hausa Hebrew Hindi Hungarian Icelandic Indonesian Interlingua Irish Italian Japanese Kannada Kashmiri Kazakh Kirghiz Korean Kurdish Laotian Latin Latvian, Lettish Lingala 7082 7089 7176 7565 6869 6976 7576 7178 7185 7265 7387 7273 7285 7383 7378 7365 7165 7384 7465 7578 7583 7575 7589 7579 7585 7679 7665 7686 7678 Language Code Lithuanian Macedonian Malagasy Malay Malayalam Maori Marathi Moldavian Mongolian Nepali Norwegian Oriya Panjabi Pashto, Pushto Persian Polish Portuguese Quechua Rumanian Russian Samoan Sanskrit Scots Gaelic Serbian Serbo-Croatian Shona 7684 7775 7771 7783 7776 7773 7782 7779 7778 7869 7879 7982 8065 8083 7065 8076 8084 8185 8279 8285 8377 8365 7168 8382 8372 8378 Language Code Sindhi Singhalese Slovak Slovenian Spanish Sudanese Swahili Swedish Tagalog Tajik Tamil Telugu Thai Tonga Turkish Turkmen Twi Ukrainian Urdu Uzbek Vietnamese Volapük Welsh Wolof Xhosa Yiddish Yoruba Zulu 8368 8373 8375 8376 6983 8385 8387 8386 8476 8471 8465 8469 8472 8479 8482 8475 8487 8575 8582 8590 8673 8679 6789 8779 8872 7473 8979 9085 Nauru 7865 Rhaeto-Romance 8277 6 Appendix DP432H-P_MFL67859911_DEU_Eng_1.0.indd 21 2013-02-01 1:54:16 22 Appendix Specifications Power requirements Power consumption Dimensions (W x H x D) Net Weight (Approx.) Operating temperature Operating humidity Laser Signal system Bus Power Supply (USB) VIDEO OUTPUT COMPONENT / PROGRESSIVE SCAN OUTPUT AC 200 - 240 V, 50 / 60 Hz 9W (360 x 40 x 207) mm 1.26 kg 5 °C to 35 °C 5 % to 90 % Semiconductor laser PAL / NTSC DC 5 V 0 200 mA (DP432H only) 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1 (Y) 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1, (Pb)/(Pr) 0. 7 V (p-p), 75 Ω, RCA jack x 2 19 pin (Type A, HDMI™ Connector) 2.0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1 0.5 V (p-p), 75 Ω, RCA jack x1 Trademarks and Licenses Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. “DVD Logo” is a trademark of DVD Format/Logo Licensing Corporation. 6 Appendix HDMI OUTPUT (video/audio) ANALOG AUDIO OUTPUT DIGITAL AUDIO OUTPUT (COAXIAL) DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. Design and specifications are subject to change without prior notice. DP432H-P_MFL67859911_DEU_Eng_1.0.indd 22 2013-02-01 1:54:16 DP432H-P_MFL67859911_DEU_Eng_1.0.indd 23 2013-02-01 1:54:16 DP432H-P_MFL67859911_DEU_Eng_1.0.indd 24 2013-02-01 1:54:16 .



[You're reading an excerpt. Click here to read official LG DP432H user guide](http://yourpdfguides.com/dref/5078529)
<http://yourpdfguides.com/dref/5078529>