



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG HR822T. You'll find the answers to all your questions on the LG HR822T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual LG HR822T**  
**User guide LG HR822T**  
**Operating instructions LG HR822T**  
**Instructions for use LG HR822T**  
**Instruction manual LG HR822T**



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)

<http://yourpdfguides.com/dref/4546507>

**Manual abstract:**

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a builtin installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to. **CAUTION: CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN.** @@@@To prevent direct exposure to laser beam, do not try to open the enclosure. **CAUTION** concerning the Power Cord Most appliances recommend they be placed upon a dedicated circuit; That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets.

Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service centre. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible. 1 Getting Started 4 Getting Started This device is equipped with a portable battery or accumulator. Disposal of waste batteries/accumulators 1. When this crossed-out wheeled bin symbol is attached to batteries/ accumulators of Your product it means they are covered by European Directive 2006/66/EC.

2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead. 3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 4. The correct disposal of Your old batteries/ accumulators will help to prevent potential negative consequences for the environment, animal and human health. 5.

For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product. 1 Getting Started Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like. **CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus. Disposal of your old appliance 1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. 2.

All electrical and electronic products shall be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, and 2006/125/ EC. European Standards Centre: Krijgsman 1, 1186 DM Amstelveen, The Netherlands yy Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product. Getting Started 5 Important Notice for TV colour system The colour system of this player differs according to currently playing discs. For example, when the player plays the disc recorded in the NTSC colour system, the image is output as an NTSC signal.

Only the multi system colour TV can receive all signals output from the player. yy If you have a PAL colour system TV, you will see just distorted images when using discs or video contents recorded in NTSC. yy The multi system colour TV changes the colour system automatically according to input signals. In case that the colour system is not changed automatically, turn it off and then on to see normal images on screen. yy Even if the disc recorded in NTSC colour system are well displayed on your TV, these may not be recorded correctly on your recorder. Notes on Copyrights yy Recording equipment should be used only for lawful copying and you are advised to check carefully what is lawful copying in the area in which you are making a copy. Copying of copyright material such as films or music is unlawful unless permitted by a legal exception or consented to by the rights owner. yy This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights.

Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited. yy **CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 625p UNIT PLEASE CONTACT OUR CUSTOMER SERVICE CENTRE.** yy Because AACS (Advanced Access Content System) is approved as content protection system for Blu-ray Disc format, similar to use of CSS (Content Scramble System) for DVD format, certain restrictions are imposed on playback, analogue signal output, etc., of AACS protected contents. The operation of this product and restrictions on this product may vary depending on your time of purchase as those restrictions may be adopted and/or changed by AACS after the production of this product.



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)  
<http://yourpdfguides.com/dref/4546507>

yy Furthermore, BD-ROM Mark and BD+ are additionally used as content protection systems for Blu-ray Disc format, which imposes certain restrictions including playback restrictions for BD-ROM Mark and/or BD+ protected contents. To obtain additional information on AACS, BDRM Mark, BD+, or this product, please contact an authorized Customer Service Centre.

yy Many BD-ROM/DVD discs are encoded with copy protection. Because of this, you should only connect your player directly to your TV, not to a VCR.

Connecting to a VCR results in a distorted picture from copy-protected discs. yy Under the U.S.

Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, BD-ROM discs, DVDs, CDs and other materials may subject you to civil and/or criminal liability. 1 Getting Started 6 Table of Contents Table of Contents 1 3 8 8 8 8 8 9 10 11 11 11 11 12 13 3 System Setting 23 24 24 24 24 25 25 25 26 26 27 27 27 28 28 30 30 32 33 33 Auto Set UP Home Menu Overview – Basic button operations Settings – Adjust the Setup Settings – Settings for Digital TV – Scanning programmes automatically (Auto Tuning) – Scanning programmes manually (Manual Tuning) – Editing Programme List (Channel Edit) – Setting the DTV Lock – Adjusting DTV Rating – Setting the antenna power – Setting the Timeshift – [DTV] Menu – [DISPLAY] Menu – [LANGUAGE] Menu – [AUDIO] Menu – [LOCK] Menu – [NETWORK] Menu – [OTHERS] Menu Getting Started Safety Information Introduction – About the “7” Symbol Display – Symbols Used in this Manual – Supplied Accessories – LG Remote – What is SIMPLINK? – Playable Discs – File compatibility – Regional Code – AVCHD (Advanced Video Codec High Definition) – System Requirements – Compatibility Notes Remote control Main Unit 2 Connecting 14 14 Connections to Your TV – Antenna connection to your TV and this unit 15 – HDMI Connection 16 – Composite connection 16 – Resolution Setting 17 Connecting to an Amplifier 17 – Connecting to an Amplifier via HDMI Output 18 – Connecting to an Amplifier via Digital Audio Output 18 – Connecting to an Amplifier via 2 Channel Audio Output 19 Connecting to your Home Network 19 – Wired network connection 20 – Wired Network Setup 22 USB device connection 22 – Playback content in the USB device 4 Operating 35 35 35 35 36 36 36 37 38 38 38 39 39 39 40 40 40 41 Using the Digital TV functions – Viewing the Digital TV – Changing Digital TV programmes – Setting favourite programmes – Viewing the programme information – Selecting DTV audio language – Selecting DTV subtitle language – Programme Guide (Digital program only) – Using the timeshift function manually – Using the timeshift function automatically – Using the teletext (Viewing Teletext) Recording TV programmes – Normal Recording – Timer Recording (Manual) – Timer Recording (EPG) – Canceling a timer recording – Editing a timer recording – Instant Timer Recording Table of Contents 7 41 41 42 42 43 43 43 44 44 45 46 46 46 47 47 47 48 48 48 49 49 49 50 50 50 51 51 52 53 54 54 55 56 57 58 58 59 60 General Playback – Playing Discs – Using the disc menu – Resume playback – Playing the recorded titles – Searching the recorded titles – Sorting the recorded titles – Playing content contained in the internal hard disk drive &ndash;that contain Movie, Music or Photo files. DVD-VIDEO (8 cm / 12 cm disc) Discs such as movies that can be purchased or rented. DVD±R (8 cm / 12 cm disc) yy Video mode and finalized only yy Supports the dual layer disc also yy Finalized AVCHD format yy DVD±R discs that contain Movie, Music or Photo files. DVD-RW (8 cm / 12 cm disc) yy VR mode, Video mode and finalized only yy Finalized AVCHD format yy DVD-RW discs that contain Movie, Music or Photo files. DVD+RW (8 cm / 12 cm disc) yy Video mode and finalized only yy Finalized AVCHD format yy DVD+RW discs that contain Movie, Music or Photo files. Audio CD (8 cm / 12 cm disc) CD-R/RW (8 cm / 12 cm disc) yy CD-R/RW discs that contain audio titles, Movie, Music or Photo files. yy Depending on the conditions of the recording equipment or the CD-R/RW (or DVD-R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs cannot be played on the unit. yy Depending on the recording software & the finalization, some of recorded discs (CD-R/ RW or DVD±R/RW) may 3 Tag embedded MP3 file. yy The total playback time indicated on the screen may not be correct for VBR files. Note ., PHOTO Recommended size: Less than 4,000 x 3,000 x 24 bit/pixel Less than 3,000 x 3,000 x 32 bit/pixel yy Progressive and lossless compression photo image files are not supported. yy Depending on the size and number of the photo files, it may take several minutes to read the contents of the media. yy This player can not display thumbnail image in some files. Getting Started 11 Regional Code This unit has a regional code printed on the rear of the unit. This unit can play only BD-ROM or DVD discs labelled same as the rear of the unit or “ALL”.

Compatibility Notes yy Because BD-ROM is a new format, there can be issues regarding certain disc, digital connection and other compatibility issues. If you experience compatibility problems, please contact an authorized Customer Service Center. yy Viewing high-definition content and upconverting standard DVD content may require a HDMI-capable input or HDCP-capable DVI input on your display device. yy Some BD-ROM and DVD discs may restrict the use of some operation commands or features. yy Dolby TrueHD, Dolby Digital Plus and DTS-HD are supported with maximum 7.1 channels if you use HDMI connection as the audio output. yy You can use a USB device that is used to store some disc related information, including downloaded on-line content. The disc you are using will control how long this information is retained. yy While watching 3D contents, on-screen displayed may not be displayed properly. To display proper on-screen display, turn off 3D mode on TV.

1 Getting Started AVCHD (Advanced Video Codec High Definition) yy This player can playback AVCHD format discs. These discs are normally recorded and used in camcorders.



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)

<http://yourpdfguides.com/dref/4546507>

yy The AVCHD format is a high definition digital video camera format. yy The MPEG-4 AVC/H.264 format is capable of compressing images at higher efficiency than the conventional image compressing format.

yy Some AVCHD discs use the "x.v.Color" format. yy This player can playback AVCHD discs using "x.v.

Color" format. yy Some AVCHD format discs may not be played, depending on the recording condition. yy AVCHD format discs need to be finalized. yy "x.v.Color" offers a wider colour range than normal DVD camcorder discs. System Requirements For high definition video playback: yy High definition display that has COMPONENT or HDMI input jacks. yy BD-ROM disc with high definition content. yy HDMI or HDCP capable DVI input on your display device is required for some content (as specified by disc authors). yy For up-conversion of standard definition DVD, a HDMI or HDCP capable DVI input on your display device is required for copy-protected content.

For Dolby® Digital Plus, Dolby TrueHD and DTS-HD multi-channel audio playback: yy An amplifier/receiver with a built-in (Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS or DTS-HD) decoder. yy Main, centre, surround speakers and subwoofer as necessary for chosen format. 12 Getting Started Remote control 1 Getting Started ••••• a ••••• 1 (POWER): Switches the unit ON or OFF. OPEN/CLOSE (B): Opens and closes the disc tray. ?: Feature is not available. 0-9 numerical buttons: Selects numbered options in a menu. CLEAR: Removes a mark on the search menu or a number when setting the password. REPEAT: Repeats a desired section or sequence. TV/RADIO: Switches between TV and radio modes. TV Control Buttons: See page 64. ••••• b ••••• c/v: Searches backward or forward. C/V: Goes to next or previous chapter/track/file. z: Starts playback. M: Pauses playback or recording. Z: Stops playback.

BACK (1): Exits the menu or back to previous step. DISC MENU/REC.LIST: Accesses menu on a disc or switches between recording list menu. ••••• d ••••• GUIDE: Displays the EPG menu. PR (-/+): Scans up or down through memorized programmes.

PR LIST: Displays the Channel list. Coloured (R, G, Y, B) buttons: Use to navigate BD-ROM menus. They are also used for [MOVIE], [PHOTO], [MUSIC] and [DTV] menu. EXIT: Exits a menu or hides onscreen information. SUBTITLE: Selects a subtitle language. TEXT: Switches between teletext mode and normal TV viewing. MUTE (@): Mutes the sound. REC. (X): Starts recording. TIMER REC.

: Displays [Timer Recording] menu. TITLE/POPOPUP: Displays the DVD title menu or BD-ROM's popup menu, if available. Battery Installation TIME SHIFT: Activates pause live TV/playback (timeshift) for a live TV programme. ••••• c ••••• HOME (n): Accesses or removes the HOME menu. Remove the battery cover on the rear of the Remote Control, and insert two R03 (size AAA) batteries with 4 and 5 matched correctly. INFO/MENU (m): Displays or exits On-Screen Display. W/S/A/D (left/right/up/ down): Navigates on-screen displays. ENTER (b): Acknowledges menu selection or displays the TV info. Getting Started 13 Main Unit 1 Getting Started a Disc Tray b Display window c Remote Sensor d B (Open/Close) e T (Play/Pause) f I (Stop) g 1 (Power) h USB Port a ANTENNA IN b LAN port c HDMI OUT (TO TV) d VIDEO OUT e DIGITAL AUDIO OUT (COAXIAL) f 2CH AUDIO OUT (Left/Right) g AC IN connector Connect the supplied power cord h ANTENNA OUT (TO TV) 14 Connecting Connections to Your TV Make one of the following connections, depending on the capabilities of your existing equipment. yy Antenna connection (page 14) yy HDMI connection (page 15) Antenna connection to your TV and this unit Connect one end of the RF cable to ANTENNA OUT(TO TV) jack on the unit and other end to ANTENNA IN jack on your TV.

Passes the signal from the ANTENNA IN jack to your TV/monitor. Connect the Terrestrial TV antenna to the ANTENNA IN jack on the unit. If you want to use an indoor antenna, use one with a signal amplifier rated at 5V, 100mA and set [Antenna 5V] to [ON] in the setup menu (See page 28). 2 Connecting yy Composite connection (page 16) yy Depending on your TV and other equipment you wish to connect, there are various ways you could connect the unit. Use only one of the connections described in this manual.

yy Please refer to the manuals of your TV, Stereo System or other devices as necessary to make the best connections. yy Make sure the player is connected directly to the TV. Tune the TV to the correct video input channel. yy Do not connect the player's AUDIO OUT jack to the phono in jack (record player) of your audio system. yy Do not connect your player via your VCR.

The image could be distorted by the copy protection system. Note ,, Rear of this unit ANTENNA Rear of this unit RF Cable TV TV Connecting 15 HDMI Connection If you have a HDMI TV or monitor, you can connect it to this unit using a HDMI cable (Type A, High Speed HDMI™ Cable). Connect the HDMI jack on the unit to the HDMI jack on a HDMI compatible TV or monitor. yy If a connected HDMI device does not accept the audio output of the unit, the HDMI device's audio sound may be distorted or may not output. yy When you use HDMI connection, you can change the resolution for the HDMI output. (Refer to "Resolution Setting" on page 16.) yy Select the type of video output from the HDMI OUT jack using [HDMI Color Setting] option on the [Setup] menu (see page 29). yy Changing the resolution when the connection has already been established may result in malfunctions. To solve the problem, turn off the player and then turn it on again. yy When the HDMI connection with HDCP is not verified, TV screen is changed to black screen.

In this case, check the the HDMI connection, or disconnect the HDMI cable. Note ,, Rear of of this unit Rear this unit 2 Connecting HDMI Cable TV TV yy If there is noise or lines on the screen, please check the HDMI cable (length is generally limited to 4.5m). Additional Information for HDMI yy When you connect a HDMI or DVI compatible device make sure of the following: Set the TV's source to HDMI (refer to TV's Owner's manual). -- Try switching off the HDMI/DVI device and this player. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this player. -- The connected device's video input is set correctly for this unit. -- The connected device is compatible with 720x576p, 1280x720p, 1920x1080i or 1920x1080p video input. yy Not all HDCP-compatible HDMI or DVI devices will work with this player. -- The picture will not be displayed properly with non-HDCP device. -- This player does not playback and TV screen is changed to black screen.



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)

<http://yourpdfguides.com/dref/4546507>

16 Connecting Composite connection Connect the VIDEO OUT jack on the Recorder to the video in jack on the TV using the video cable supplied. Connect the Left and Right AUDIO OUT jacks on the Recorder to the audio left/right in jacks on the TV using the supplied audio cables. Resolution Setting The player provides several output resolutions for HDMI OUT jacks. You can change the resolution using [Setup] menu.

1. Press HOME (n). 2. Use A/D to select the [Setup] and press ENTER (b). The [Setup] menu appears.

2 Connecting Rear of this unit Video Cable Audio Cable TV 3. Use W/S to select [DISPLAY] option then press D to move to the second level. 4. Use A/D to select the [Resolution] option then press ENTER (b) to move to the third level. 5. Use W/S to select the desired resolution then press ENTER (b) to confirm your selection. Connecting 17 Connecting to an Amplifier Make one of the following connections, depending on the capabilities of your existing equipment. yy HDMI Audio connection (page 17) yy Digital Audio connection (page 18) yy 2CH Analogue Audio connection (page 18) Since many factors affect the type of audio output, see "Audio Output Specifications" for details (pages 70-71). Connecting to an Amplifier via HDMI Output Connect the player's HDMI OUT jack to the corresponding in jack on your amplifier using a HDMI cable. You will need to activate the player's digital output.

(See "[AUDIO] Menu" on pages 30-31.) 2 Rear of this unit Connecting About Digital Multi-channel sound A digital multi-channel connection provides the best sound quality. For this, you need a multichannel Audio/Video Receiver that supports one or more of the audio formats supported by your unit. Check the receiver manual and the logos on the front of the receiver. (PCM Stereo, PCM Multi-Ch, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and/or DTS-HD) HDMI Cable Amplifier/Receiver Amplifier/Receiver HDMI Cable TV TV Connect the amplifier's HDMI output jack to HDMI input jack on your TV using a HDMI cable if your amplifier has HDMI output jack. 18 Connecting Connecting to an Amplifier via Digital Audio Output Connect the player's DIGITAL AUDIO OUT (COAXIAL) jack to the corresponding in jack (COAXIAL) on your amplifier. Use an optional digital (coaxial) audio cable. You will need to activate the unit's digital output. (See "[AUDIO] Menu" on pages 30-31.) Connecting to an Amplifier via 2 Channel Audio Output Connect the Left and Right 2CH AUDIO OUT jacks on the unit to the audio left and right in jacks on your amplifier, receiver, or stereo system, using audio cables.

2 Connecting Coaxial Cable Rear of this unit Audio Cable Amplifier/Receiver Amplifier/Receiver Amplifier/Receiver Amplifier/Receiver Connecting 19 Connecting to your Home Network This unit can be connected to a local area network (LAN) via the LAN port on the rear panel. By connecting the unit to a broadband home network, you have access to services such as software updates, BD-Live interactivity and streaming services. Router Broadband Service WAN 2 Connecting LAN 1 Wired network connection Using a wired network provides the best performance, because the attached devices connect directly to the network and are not subject to radio frequency interference. Please refer to the documentation for your network device for further instructions. Connect the player's LAN port to the corresponding port on your Modem or Router using a commercially available LAN or Ethernet cable (CAT5 or better with RJ45 connector).

In the example configuration for wired connection below, this player would be able to access content from either of the PCs. yy When plugging or unplugging the LAN cable, hold the plug portion of the cable. When unplugging, do not pull on the LAN cable but unplug while pressing down on the lock. yy Do not connect a modular phone cable to the LAN port. yy Since there are various connection configurations, please follow the specifications of your telecommunication carrier or internet service provider.

PC LAN 2 PC LAN 3 LAN Cable Note ,, Rear of this unit 20 Connecting Wired Network Setup If there is a DHCP server on the local area network (LAN) via wired connection, this player will automatically be allocated an IP address. After making the physical connection, a small number of home networks may require the player's network setting to be adjusted. Adjust the [NETWORK] setting as follow. 3. Select [OK] and press ENTER (b) to apply network settings. 4. The player will ask you to test the network connection. Select [OK] and press ENTER (b) to complete the network connection. 5. If you select [Test] and press ENTER (b) at step 5 above, the network connection status is displayed on the screen.

You can also test it on the [Connection Status] in the [Setup] menu. 2 Connecting Preparation Before setting the wired network, you need to connect the broadband internet to your home network. 1. Select [Connection Setting] option in the [Setup] menu then press ENTER (b). 2. Use W/S/A/D to select the IP mode between [Dynamic] and [Static]. Normally, select [Dynamic] to allocate an IP address automatically. If there is no DHCP server on the network and you want to set the IP address manually, select [Static] then set [IP Address], [Subnet Mask], [Gateway] and [DNS Server] using W/S/ A/D and numerical buttons. If you make a mistake while entering a number, press CLEAR to clear the highlighted part. Note ,, Connecting 21 Notes on Network Connection: yy Many network connection problems during set up can often be fixed by re-setting the router or modem.

After connecting the player to the home network, quickly power off and/ or disconnect the power cable of the home network router or cable modem. Then power on and/or connect the power cable again. yy Depending on the internet service provider (ISP), the number of devices that can receive internet service may be limited by the applicable terms of service. For details, contact your ISP. yy Our company is not responsible for any malfunction of the player and/or the internet connection feature due to communication errors/malfunctions associated with your broadband internet connection, or other connected equipment. yy The features of BD-ROM discs made available through the Internet Connection feature are not created or provided by our company, and our company is not responsible for their functionality or continued availability. Some disc related material available by the Internet Connection may not be compatible with this player. If you have questions about such content, please contact the producer of the disc. yy Some internet content may require a higher bandwidth connection. yy Even if the player is properly connect and configured, some internet content may not operate properly because of internet congestion, the quality or bandwidth of your internet service, or problems at the provider of the content. yy Some internet connection operations may not be possible due to certain restrictions set by the Internet service provider (ISP) supplying your broadband Internet connection.



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)

<http://yourpdfguides.com/dref/4546507>

yy Any fees charged by an ISP including, without limitation, connection charges are your responsibility. yy A 10 Base-T or 100 Base-TX LAN port is required for wired connection to this player. If your internet service does not allow for such a connection, you will not be able to connect the player. yy You must use a Router to use xDSL service. yy A DSL modem is required to use DSL service and a cable modem is required to use cable modem service. Depending on the access method of and subscriber agreement with your ISP, you may not be able to use the internet connection feature contained in this player or you may be limited to the number of devices you can connect at the same time. (If your ISP limits subscription to one device, this player may not be allowed to connect when a PC is already connected.) yy The use of a "Router" may not be allowed or its usage may be limited depending on the policies and restrictions of your ISP. For details, contact your ISP directly.

yy Turn off all unused network equipment in your local home network. Some devices may generate network traffic. 2 Connecting 22 Connecting USB device connection This unit can play movie, music and photo files contained on a USB device. Playback content in the USB device 2 Connecting 2. Press HOME (n). 3. Select [Movie], [Photo] or [Music] using A/D, and press ENTER (b). 4. Select the [USB] option using W/S, and press ENTER (b). 5.

Select a file using W/S/A/D, and press d (PLAY) or ENTER (b) to play the file. 6. Withdraw the USB device carefully after exiting the USB mode. 1. Insert a USB device into the USB port until it fits into place.

yy This unit supports USB flash memory/ external HDD formatted in FAT16, FAT32 and NTFS when accessing files (music, photo, movie). However, for BD-Live, only FAT16 and FAT32 formats are supported. The USB device can be used for local storage for enjoying BD-Live discs from the Internet. yy Please use the Internal HDD or USB flash memory/external HDD formatted in either FAT16 or FAT32 when using BD-Live. yy This unit can support up to 4 partitions of the USB device.

yy Do not extract the USB device during operation (play, recording, etc.). yy A USB device which requires additional programme installation when you have connected it to a computer, is not supported. yy USB device: USB device that supports USB1.1 and USB2.0. yy Movie, Music and photo files can be played. For details of operations on each file, refer to relevant pages. yy Regular back up is recommended to prevent data loss. yy If you use a USB extension cable or USB HUB or USB multi card reader, the USB device may not be recognized.

yy Some USB device may not work with this unit. yy Digital camera and mobile phone are not supported. yy The USB Port on this unit cannot be connected to a PC. The unit cannot be used as a storage device. yy Unformatted media cannot be used. Please format before using. yy If USB HDD cannot be recognized, try another different USB cable. yy Some USB cables may not supply enough current for normal USB operation. yy Files over 4GB are supported with NTFS format. Note ,, System Setting 23 Auto Set UP You can reset the recorder to all its factory settings.

Some options cannot be reset (Rating and Password). The [Auto Setup] menu appears on the screen after the factory settings. Step 3. Time Setting 1. Use A/D to select an option among [Manual] or [Auto], and press ENTER (b).

Step 1. Language Setting 1. Use W/S/A/D to select a language for the on-screen display, and press ENTER (b). Auto: Set the programme that broadcasts a clock signal and the clock will be set automatically. If the time that has automatically set is not correct comparing your local time, you can set additional time option.

Manual: If there is no channel that broadcasts a clock signal in your area, you can set the time and date manually. Use W/S to select each field, and input correct time and date using A/ D. You can use numerical buttons. 3 System Setting Step 2. Channel Setting 1. Use W/S/A/D to select a country, and press ENTER (b). 2. Input the new password using numerical buttons. Enter it again to verify. 3.

While the Start option is selected, and press ENTER (b) to begin the channel search. 2. Press ENTER (b) to complete the time setting. Step 4. Network Setting Refer to "Wired network connection" on pages 1921 to complete the [Wired] setup option, and press ENTER (b). . The recorder automatically searches for and saves the programmes. If you select [Stop], the [Channel Setting] function will be skipped. 4. Press ENTER (b).

24 System Setting Home Menu Overview To access numerous functions of the unit, press HOME on the remote. Settings Adjust the Setup Settings You can change the settings of the player in the [Setup] menu. 1. Press HOME (n). Basic button operations HOME: Accesses or removes the Home Menu. A/D: Used to navigate on-screen displays. ENTER (b): Acknowledges menu selection. BACK: Exits the menu. 3 2. Use A/D to select [Setup] and press ENTER (b).

The [Setup] menu appears. System Setting DTV You can watch digital broadcasts. (pages 35-41) Movie Starts video media's playback or displays the [MOVIE] menu. Photo Displays [PHOTO] menu. (pages 57-59) Music Displays [MUSIC] menu. (pages 59-61) Setup Displays [Setup] menu. (pages 28-34) 4. Use W/S to select a second setup option, and press ENTER (b) or D to move to the third level. 3. Use W/S to select the first setup option, and press D to move to the second level.

5. Use W/S to select a desired setting, and press ENTER (b) or D to confirm your selection. System Setting 25 Settings for Digital TV To use DTV functions, this recorder needs some settings in advance. Scanning programmes manually (Manual Tuning) Scans digital TV or radio programmes and adds the detected programmes to the programme list. 1. Display [Setup] menu. 2. Use W/S to select [DTV], and press ENTER (b). 3. Use W/S to select [Manual Tuning] and press ENTER (b) to display the [Manual Tuning] menu.

Scanning programmes automatically (Auto Tuning) All available digital TV or radio programmes are searched for and stored automatically based on the selected country. 1. Press HOME. 2. Use A/D to select [Setup], and press ENTER (b).

3. Use W/S to select [DTV], and press ENTER (b). 4. Use W/S to select [Auto Tuning] and press ENTER (b). 5.

Use S to select [Start], and press ENTER (b) to begin the channel search. 3 System Setting 4. Use W/S/A/D to select the desired multiplexer (MUX), Modulation option, and the unit starts scanning automatically. 5. Use S to select the [Add] and press ENTER (b) to add the programme the unit scans automatically. If the [DTV Lock] option is set to [Lock], this function is available when you enter the password correctly. (see page 26.) Note ,, Select [Stop] and press ENTER (b) to stop the scanning programmes. If the [DTV Lock] option is set to [Lock], this function is available when you enter the password correctly. (see page 26.

) Note ,, 26 System Setting Editing Programme List (Channel Edit) You can remove any digital TV or radio programs stored on this recorder using the [Channel Edit] menu.



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)

<http://yourpdfguides.com/dref/4546507>

1. Display [Setup] menu. 2. Use W/S to select [DTV], and press ENTER (b). 3. Use W/S/A/D to select [Channel Edit] and press ENTER (b). 4. Press W to select [DTV] and use A/D to select [DTV] or [Radio] programme list. Setting the DTV Lock Allows you to activate or deactivate all of the lock schemes previously set.

When the [DTV Lock] is set to [Unlock]. 1. Display [Setup] menu. 2. Use W/S/A/D to select [LOCK] and press ENTER (b).

3. Use W/S to select [DTV Lock] and press ENTER (b). 4. Input the password using numerical buttons. If you have not set your password yet, input "1111" and press ENTER (b).

5. Use W/S to select [Lock] and press ENTER (b) to activate the DTV Lock. 3 System Setting 5. Use W/S/A/D to select a programme you want to skip from the list, and press red coloured (R) button. If you do not want to skip the programme, select the programme and press red coloured (R) button again. Use W/S/A/D to select a programme you want to lock from the list, and press blue coloured (B) button. If you do not want to lock the programme, select the programme and press blue coloured (B) button again. Skip : If the programme is assigned to skip, you can't select that programme with PR button in Remote control. Block/unblock : If the programme is assigned to block and [DTV Lock] in the [Setup] menu is set to [Lock], you should enter the password to watch the programme. 6.

Press BACK (1) to return to the previous step. System Setting 27 Adjusting DTV Rating Viewing of some digital TV programmes can be limited according to the age limit you set. 1. Display [Setup] menu. 2. Use W/S to select [LOCK] and press ENTER (b). 3. Use W/S to select [DTV Rating] and press ENTER (b). 4. Input the password using numerical buttons.

If you have not set your password yet, input and press ENTER (b). Setting the antenna power If you are using indoor antenna with a signal amplifier rated at DC 5V, 100mA, the recorder can supply power through ANTENNA IN jack. 1. Display [Setup] menu. 2.

Use W/S/A/D to select [Antenna 5V] and press ENTER (b). 3. Use W/S to select [On], and press ENTER (b) to supply antenna power. 3 System Setting 5. Use W/S to set the limitation level and press ENTER (b).

Unlock You can view all programs. 4 (Kids) - 18 (Adult) Rating [4 (Kids)] has the most restrictions and [18 (Adult)] is the least restrictive. The [Antenna 5V] option must be set to [Off] when your indoor antenna is supplied the power from the mains. If you set the [Antenna 5V] option to [On] for the indoor antenna which is supplied power from the mains, it may cause serious defect to this unit. Note ., Setting the Timeshift You can set the Time Shift function automatically without pressing TIME SHIFT button. The timeshift will start after Digital TV tuner mode is started. 1. Display [Setup] menu. 2. Use W/S to select [DTV], and press ENTER (b).

3. Use W/S to select [Timeshift] and press ENTER (b). 4. Use W/S to select [Auto] or [Manual] to apply timeshift. 28 System Setting [DTV] Menu Auto Tuning This option scans a programme and sets the available programmes. Refer to page 25 for more information. [DISPLAY] Menu TV Aspect Ratio Select a TV aspect ratio option according to your TV type. [4:3 Letter Box] Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture. [4:3 Pan Scan] Select when a standard 4:3 TV is connected.

Displays pictures cropped to fill your TV screen. Both sides of the picture are cut off. [16:9 Original] Select when a 16:9 wide TV is connected. The 4:3 picture is displayed with an original 4:3 aspect ratio, with black bars appearing at the left and right sides. [16:9 Full] Select when a 16:9 wide TV is connected.

The 4:3 picture is adjusted horizontally (in a linear proportion) to fill the entire screen. You cannot select [4:3 Letter Box] and [4:3 Pan Scan] option when the resolution is set to higher than 720p. Manual Tuning Scans digital TV or radio programmes and adds the found programmes to the programme list. Refer to page 25 for more information Channel Edit 3 System Setting This option allows you to edit the TV or Radio programmes. Refer to page 26 for more information.

Antenna 5V If you are using an indoor antenna, use one with a signal amplifier rated at DC 5V, 100mA and set this option to [On]. Refer to page 27 for more information. Timeshift Set this option to [Auto] to use the Time Shift function automatically without pressing TIME SHIFT button. The timeshift will start after TV viewing is started. Refer to page 27 for more information. Note ., Software Auto Update If you set this option to [On], the unit updates the latest software automatically through the built-in digital tuner If the software update is available from the broadcaster. System Setting 29 Resolution Sets the output resolution of the HDMI video signal. Refer to page 16 and 72 for details about the resolution setting. [Auto] If the HDMI OUT jack is connected to TVs providing display information (EDID), this automatically selects the resolution best suited to the connected TV. [1080p] Outputs 1080 lines of progressive video.

[1080i] Outputs 1080 lines of interlaced video. [720p] Outputs 720 lines of progressive video. [576p] Outputs 576 lines of progressive video. [576i] Outputs 576 lines of interlaced video. HDMI Color Setting Select the type of output from the HDMI OUT jack. For this setting, please refer to the manuals of your display device. [YCbCr] Select when connecting to a HDMI display device. [RGB] Select when connecting to a DVI display device. 3D Mode Select the type of output mode for Blu-ray 3D disc playback. Refer to page 45 for more information about Blu-ray 3D disc.

[Off] Blu-ray 3D disc playback will output as 2D mode like a normal BD-ROM disc playback. [On] Blu-ray 3D disc playback will output as 3D mode. 3 System Setting 1080p Display Mode When the resolution is set to 1080p, select [24 Hz] for smooth presentation of film material (1080p/24 Hz) with a HDMI-equipped display compatible with 1080p/24 Hz input. yy When you select [24 Hz], you may experience some picture disturbance when the video switches video and film material. In this case, select [50 Hz].

yy Even when [1080p Display Mode] is set to [24 Hz], if your TV is not compatible with 1080p/24 Hz, the actual frame frequency of the video output will be 50 Hz or 60 Hz to match the video source format. Home Menu Guide This function allows you to display or delete the guide bubble on the Home Menu. Set this option to [On] for displaying guide. Note ., 30 System Setting [LANGUAGE] Menu Display Menu Select a language for the [Setup] menu and onscreen display. [AUDIO] Menu Each disc has a variety of audio output options.

Set the player's Audio options according to the type of audio system you use. Since many factors affect the type of audio output, see "Audio Output Specifications" on pages 70-71 for details. Note ., Disc Menu/Disc Audio/Disc Subtitle Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu.



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)

<http://yourpdfguides.com/dref/4546507>

[Original] Refers to the original language in which the disc was recorded. HDMI / Digital Output Select the output sound format when a device equipped with a HDMI or Digital Audio input jack is connected to the HDMI OUT or DIGITAL AUDIO OUT jack on this player. [PCM Stereo] Select if you connect this unit's HDMI OUT or DIGITAL AUDIO OUT jack to a device with twochannel digital stereo decoder. [PCM Multi-Ch] (HDMI only) Select if you connect this unit's HDMI OUT jack to a device with multi-channel digital decoder. [DTS Re-Encode] Select if you connect this unit's HDMI OUT or DIGITAL AUDIO OUT jack to a device with a DTS decoder. [Primary Pass-Thru] Select if you connect this unit's DIGITAL AUDIO OUT and HDMI OUT jack to a device with LPCM, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and DTS-HD decoder. yy When [HDMI] option is set to [PCM MultiCh], the audio may output as PCM Stereo if the PCM Multi-Ch information is not detected from HDMI device with EDID.

yy If the [HDMI] or [Digital Output] option is set to [DTS re-encode], the DTS Re-encode audio is output for BD-ROM discs with secondary audio and the original audio is output for the other discs (like [Primary PassThru]). 3 System Setting [Other] Press ENTER (b) to select another language. Use number buttons then press ENTER (b) to enter the corresponding 4-digit number according to the language code list on page 66. [Off] (Disc Subtitle only) Turn off Subtitle. Depending on the disc, your language setting may not work. Note ,, DTV Audio Digital channels sometimes provide multiple audio tracks, often in a different language or format (Dolby Digital, Dolby Digital+, AVC, Mpeg, etc.). You can set a default audio language with this setting. If provided by the broadcaster, you can also select a different audio language while viewing TV by pressing AUDIO repeatedly. (See "Selecting DTV audio language" on page 36.

) Note ,, DTV Subtitle Digital channels sometimes provide subtitles, often in a different language. You can set a preferred subtitle language with this setting, if DTV subtitles are provided by the broadcaster. Press SUBTITLE repeatedly to select a subtitle language while viewing digital TV. (See "Selecting DTV subtitle language" on page 36.) System Setting 31 Sampling Freq.

(Digital Audio Output) [192 kHz] Select this if your A/V Receiver or Amplifier is capable of handling 192 kHz signals. [96 kHz] Select this if your A/V Receiver or Amplifier is not capable of handling 192 kHz signals. When this choice is made, this unit automatically converts any 192 kHz signals to 96 kHz so your system can decode them. [48 kHz] Select this if your A/V Receiver or Amplifier is not capable of handling 192 kHz and 96 kHz signal. When this choice is made, this unit automatically converts any 192 kHz and 96 kHz signals to 48 kHz so your system can decode them.

Check the documentation for your A/V Receiver or Amplifier to verify its capabilities. DTS Neo:6 If the player is connected to the multi-channel Audio Receiver by HDMI connection, set this option to enjoy the multi-channel surround sound with the 2-channel audio source. [Off] Outputs the stereo sound via front speakers. [Music] Outputs the multi-channel sounds that are optimized for listening to music. [Cinema] Outputs the multi-channel sounds that are optimized for watching movie. yy This function is not available on an on-line service. yy Only the audio source with less than 48 kHz sampling frequency is available for this function. yy This function is available only when [HDMI] option is set to [PCM Multi-Ch]. 3 System Setting Note ,, DRC (Dynamic Range Control) This function allows you to listen to a movie at a lower volume without losing clarity of sound. [Off] Turns off this function.

[On] Compress the dynamic range of the Dolby Digital, Dolby Digital Plus or Dolby TrueHD audio output. [Auto] The dynamic range of the Dolby TrueHD audio output is specified by itself. And the dynamic range of the Dolby Digital and Dolby Digital Plus are operated as same as the [On] mode. The DRC setting can be changed only when a disc is not inserted or the unit is in complete stop mode. Note ,, 32 System Setting [LOCK] Menu To access any features in the [LOCK] settings, you must enter the 4-digit security code you have created. If you have not entered a password yet, you are prompted to do so. Enter a 4-digit password twice, and press ENTER (b) to create a new password. DVD Rating Blocks playback of rated DVD based on their content. (Not all discs are rated.) [Rating 1-8] Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.

[Unlock] If you select [Unlock], parental control is not active and the disc plays in full. Password You can create, or change the password. [None] Enter a 4-digit password twice, and press ENTER (b) to create a new password. [Change] Enter the current password and press ENTER (b). Enter a 4-digit password twice, and press ENTER (b) to create a new password.

If you forget your password If you forget your password, you can clear it using the following steps: 1. Remove any disc that might be in the player. 2. Select [Password] option in the [Setup] menu. 3.

Use Number buttons to enter "210499". The password is cleared. If you make a mistake before pressing ENTER (b), press CLEAR. Then input the correct password. Blu-ray Disc Rating Sets an age limit for BD-ROM playback. Use number buttons to input an age limit for BD-ROM viewing. [255] All BD-ROM can be played. [0-254] Prohibits play of BD-ROM with corresponding ratings recorded on them. The [Blu-ray Disc rating] will be applied only for the Blu-ray Disc that containing the Advanced Rating Control. 3 System Setting Note ,, Note ,, Area Code Enter the code of the area whose standards were used to rate the DVD video disc, based on the list on page 65.

DTV Lock Allows you to set up specific programs and through blocking schemes. Also allows you to activate or disable all of the lock schemes previously set up. A password is required to gain access to the lock menu options. When the DTV Lock is set to [unlock]. (See "Setting the DTV Lock" on page 26.) DTV Rating You can set the rating to block out all the programs with rating above a specified level. (See "Adjusting DTV Rating" on pages 27.) System Setting 33 [NETWORK] Menu The [NETWORK] settings are needed to use the software update feature and BD-LIVE. [OTHERS] Menu Time Setting The clock must be set in order to use timer recording. [Auto] Select a programme that broadcasts a clock signal and the clock will be set automatically.

If the time that has been automatically set is not correct when compared your local time, you can set additional time option. [Manual] If there is no channel that broadcasts a clock signal in your area, you can set the time and date manually. Use A/D to select each field, and input correct time and date using W/S, and press ENTER (b). Connection Setting If your home network environment is ready to be connected to the player, the player needs to be set to the wired network connection for network communication.



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)  
<http://yourpdfguides.com/dref/4546507>



(See "Connecting to your Home Network" on pages 19-21.

) Connection Status If you want to check the network status on this player, select the [Connection Status] option and press ENTER (b) to check whether a connection to the network and the internet has been established. 3 System Setting BD-LIVE connection You can restrict Internet access when BD-LIVE functions are used. [Permitted] Internet access is permitted for all BD-LIVE contents. [Partially permitted] Internet access is permitted only for BDLIVE contents which have content owner certificates. Internet access and AACOS Online functions are prohibited for all BD-LIVE contents without a certificate. [Prohibited] Internet access is prohibited for all BD-LIVE contents. Blu-ray Storage Select This player can store some BD-ROM disc related information, including downloaded on-line content such as movie trailers and special features into the internal Flash Memory or an USB device. [Built-In Storage] Store the downloaded Blu-ray disc content on the Internal Flash Memory. [USB Storage] Store the downloaded Blu-ray disc content on the connected USB device. Blu-ray Storage Clear Removes the BD contents from the built-in storage or the connected USB storage. [Built-In Storage] Delete all the downloaded contents from the built-in storage. [USB Storage] Delete all the downloaded contents from the connected USB storage. If you select USB Storage, playback, copying and recording on the USB device is disabled. Note ,, 34 System Setting DivX® VOD ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LCC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video.

Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration. 2. Use W/S/A/D to select [Setup] in the [Home] menu, and press ENTER (b). 3.

Use W/S to select [OTHERS] option from the [Setup] menu, and press ENTER (b). 4. Use W/S to select [Initialize], and press ENTER (b) to display the sub-options. 5. Use W/S to select [Internal HDD Format], and press ENTER (b).

Select [No] and press ENTER to cancel. 6. Use A/D to select [Yes], and press ENTER (b) to start the HDD format. Select [OK] and press ENTER (b) to return to the previous step. 3 System Setting Software [Information] Displays the current software version.

[Update] You can update the software by connecting the unit directly to the software update server (see pages 68-69). [Register] Displays the registration code of your player. [Deregister] Deactivate your player and display the deactivation code. All the downloaded videos from DivX VOD with this player's registration code can only be played back on this unit. Note ,, Auto Power Off The screen saver appears when you leave the player in Stop mode for about five minutes. If you set this option to [On], the unit automatically turns itself off after the Screen Saver is displayed for 25 minutes. Set this option to [Off] to leave the screen saver until the unit is operated by the user. Initialize [Factory Set] You can reset the recorder to all its factory settings. Some options cannot be reset (Rating and Password). The [Factory Set] menu appears on the screen after the factory settings.

yy If you reset the unit to its original factory settings using [Factory Set] option, you have to set the network settings activation again. T yy he [Initialization] option is not available while recording or [Lock] in the [Setup] menu is set to [On]. yy If you select [Factory Set] in the Setup menu, All the channels will be deleted. [Internal HDD Format] Everything recorded on the HDD will be erased. 1. Press HOME. Note ,, Operating 35 Using the Digital TV functions You can watch and record the digital TV programmes or playback the recorded TV programmes you want to watch using this unit. 2. Use W/S to select a desired programme, and press ENTER (b). Press red coloured button (R) to sort the programmes into alphabetical order.

Press green coloured button (G) to sort the programmes into FTA - CAS Press yellow colored (Y) button to sort the programmes into number order. 3. Press BACK (1) to exit the programme list. Viewing the Digital TV Viewing the Digital TV broadcasting on the TV screen. yy DTV antenna connection is required. (page 14) yy DTV settings such as [Auto Tuning] in the [Setup] menu may be required. (page 25) 1. Press 1 (POWER) to turn on the recorder. 2. Use A/D to select [DTV] on the HOME menu and press ENTER (b).

Setting favourite programmes You can set the storage location where you want to store the DTV recordings. 1. While watching DTV, press PR LIST. @@@@ You can select a subtitle language when it is available. @@@@ For the programmes with subtitle, SUB icon appears on the programme information. Note ,, Note ,, 4 Operating Selecting DTV audio language Some digital programmes may broadcast several audio languages or encoding methods. You can select an audio languages or an encoding method when it is available. @@@@ Press INFO/MENU (m) to display detail information window. @@@@ 1. Display Program Guide with 8 days.

2. Select a program then press red colour (R) button. @@@@39-41). @@@@ 1. Press TIME SHIFT while watching a TV broadcast. The recorder starts recording the current TV programme to the HDD. @@@@yy Without changing a channel, the timeshift function will go on. @@@@Ex) Home menu, Power off, Record etc. @@@@ Press C/V to move the starting point or the ending point of timeshift. Press c/v to playback of timeshift fast forward or fast reverse.

Timeshift cannot be saved as a recorded title. Using the teletext (Viewing Teletext) Many Digital TV programmes broadcast information via their text service, and this recorder has access to dedicated text programmes transmitted by the broadcasters. 4. Press Z to cancel the timeshift. Using the timeshift function automatically If you set the Timeshift option to [Auto], live TV broadcast will automatically be recorded to the HDD without pressing the TIME SHIFT button.

The timeshift will start automatically when the Digital TV tuner mode is started. Refer to "Setting the Timeshift" on page 27 to set the [Timeshift] option. 1. Press 1 (POWER) to turn on the unit. 2.

Use W/S/A/D to select [DTV] and press ENTER (b). The timeshift function will automatically start. Press C/V to move the starting point or the ending point of timeshift. Press c/v to playback of timeshift fast forward or fast reverse. 1. Press TEXT while watching Live TV. 2. Use coloured (R/G/Y/B) button to select a page. You can also select a page by entering a three digit number with the numerical buttons. 3.

Press TEXT or EXIT to exit the teletext screen. Additionally, you now have four coloured buttons to navigate through the content of the page.



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)  
<http://yourpdfguides.com/dref/4546507>

The use of these coloured buttons will be displayed on the screen. Note ,, 3. Press HOME (n) to exit from the DTV viewing. Operating 39 Recording TV programmes You can record Digital TV programmes and store them on the HDD. Timer Recording (Manual) You can set the timer for a total of 32 programmes, up to 22-28 days in advance. 1. While watching TV, press TIMER REC. Normal Recording 1.

Use PR (-/+) to select a programme you want to record. 2. Press X REC to start recording. Press M to pause recording, press M again to resume recording. 3.

Press Z to stop recording. To stop recording, you must move to the programme being recorded before pressing Z. The TV screen turns black with stop mark caused by no signal, Scramble, rating lock recording is not available. 2. Use W/S/A/D to select the date to record, and press ENTER (b).

Note ,, 3. Select an item using A/D and adjust it using W/S. You can use numbered buttons to change the setting. The adjustable items are listed below. Start time End time Channel Sets the start time. Sets the end time. Sets the programme position. (If you want to display more channels, press PR LIST) Choose a desired repeat mode. (Once, Daily, Weekly or Mon-Fri) 4 Operating Repeat yy The timer recording can be set from 3 minutes after the current time. yy Timer recording is not available on a USB device.

4. Press ENTER (b). 5. Select [OK] then press ENTER (b). If you input the wrong information, an error message will appear and the timer recording cannot be made. Note ,, 40 Operating Timer Recording (EPG) You can also set the timer based on the information provided by the EPG. 1. While watching TV, press GUIDE. Canceling a timer recording You can cancel a timer recording before the timer recording actually starts. 1.

While watching TV, press TIMER REC. 2. Press the red coloured (R) button. 3. Use W/S/A/D to select a schedule you want to cancel.

4. Use W/S to select [Timer Record List], and press the green coloured (G) button. 2. Use A/D to select date field, and select the date of recording schedule using W/S. 3.

Use A/D to select programme field, and set the programme using W/S. 4. Use A/D to select the programme list, and select a programme you want to record using W/S. 5 Press the red coloured (R) button. @@A red bullet mark may not appear for unavailable programme to record. Select [No] and press ENTER (b) to cancel. @@1. While watching TV, press TIMER REC. 2. Press the red coloured (R) button.

@@@1. Use PR (-/+) to select a programme you want to record. 2. Press X REC. to start recording. @@yy The standard recording time is 3hours (MAX=6hours). @@@@yy You cannot record radio or blocked channels. @@@@For most Audio CD, BD-ROM and DVD-ROM discs, playback starts automatically. 3. Press HOME (n).

4 Operating While navigating [Movie], [Photo] or [Music] menu, press green(G) colored button to change the device. (DISC, USB or HDD) 42 Operating 6. Select a file using W/S/A/D, and press d (PLAY) or ENTER (b) to play the file. yy Playback functions described in this manual are not always available in every files and media. Some functions can be restricted depending on many factors.

yy Depending on the BD-ROM titles, a USB device connection may be needed for proper playback. Using the disc menu BD DVD AVCHD Note ,, To display the disc menu The menu screen may be displayed first after loading a disc which contains a menu. If you want to display the disc menu during playback, press DISC MENU. Use W/S/A/D buttons to navigate through menu items. To stop playback Press Z (STOP) during playback.

To display the Pop-up menu Some BD-ROM discs contain a Pop-up menu that appears during playback. Press TITLE/POPUP during playback, and use W/S/A/D buttons to navigate through menu items. To pause playback Press M (PAUSE) during playback. Press d (PLAY) to resume playback. 4 Operating To play frame-by-frame Press M (PAUSE) while movie playback. Press M (PAUSE) repeatedly to playback Frame-byFrame. Resume playback BD MUSIC DVD REC AVCHD MOVIE ACD To scan forward or backward Press c or v to play fast forward or fast reverse during playback. You can change the various playback speeds by pressing c or v repeatedly. To slow down the playing speed While the playback is paused, press v repeatedly to play various speeds of slow motion. This unit remembers the point where you pressed the Z (STOP) depending on the disc.

If "ZM (Resume Stop)" appears on the screen briefly, press d (PLAY) to resume playback (from the scene point). If you press Z (STOP) twice or unload the disc, "Z (Complete Stop)" appears on the screen. The unit will clear the stopped point. yy The resume point may be cleared when a button is pressed (for example; 1 (POWER), B (OPEN/CLOSE), etc). yy On BD-Video discs with BD-J, the resume playback function does not work. yy If you press Z (STOP) once during BD-ROM interactive title playback, the unit will be in Complete Stop mode . Note ,, To skip to the next/previous chapter/track/file During playback, press C or V to go to the next chapter/track/file or to return to the beginning of the current chapter/track/file. Press C twice briefly to step back to the previous chapter/track/file. Operating 43 Playing the recorded titles REC 1. While watching TV, press REC LIST to display the options menu or press REC LIST in Home menu.

[Clear] – Clear all entered characters. [Space] – Inserts a space at the cursor position. [<-] – Deletes the previous character at the cursor position. [ABC / abc / #+=&] – Change the keyboard menu settings to capital letters, small letters or symbols. To enter a letter with an accent mark: 1. Select a letter using W/S/A/D on the keyboard menu. 2. Use W/S/A/D to select recording title. 3. Press d (PLAY) or ENTER (b) to play the recording title. yy N mark is displayed in recorded files that never once played since it was recorded. 2. Press INFO/MENU (m) to display the extended character set. 3. character set. Use A/D to select a character then press ENTER (b). 4. When you finish entering the search words, Select [OK] and press ENTER (b) to display the related videos list. Note ,, Note ,, 4 Operating Searching the recorded titles REC You can search for videos by entering search words of up to 60 characters. 1.

While watching TV or in Home, press REC LIST to display the options menu. 2. Press yellow (Y) colored button. 3. Use W/S/A/D to select a character then press ENTER (b) to confirm your selection on the virtual keyboard. To enter a letter with an accent mark, select the letter from extended character set. Sorting the recorded titles REC 1. While watching TV, press REC LIST to display the options menu. 2. Press blue coloured (B) button repeatedly to sorted by recorded time in recent order or title name in alphabetical order.

[ABC order] – by title name in alphabetical order. [Recent order] – sorted by recorded date. 44 Operating Playing content contained in the internal hard disk drive 1. Press HOME (n).



[You're reading an excerpt. Click here to read official LG HR822T user guide](http://yourpdfguides.com/dref/4546507)  
<http://yourpdfguides.com/dref/4546507>