




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG LCS310UR. You'll find the answers to all your questions on the LG LCS310UR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG LCS310UR
User guide LG LCS310UR
Operating instructions LG LCS310UR
Instructions for use LG LCS310UR
Instruction manual LG LCS310UR

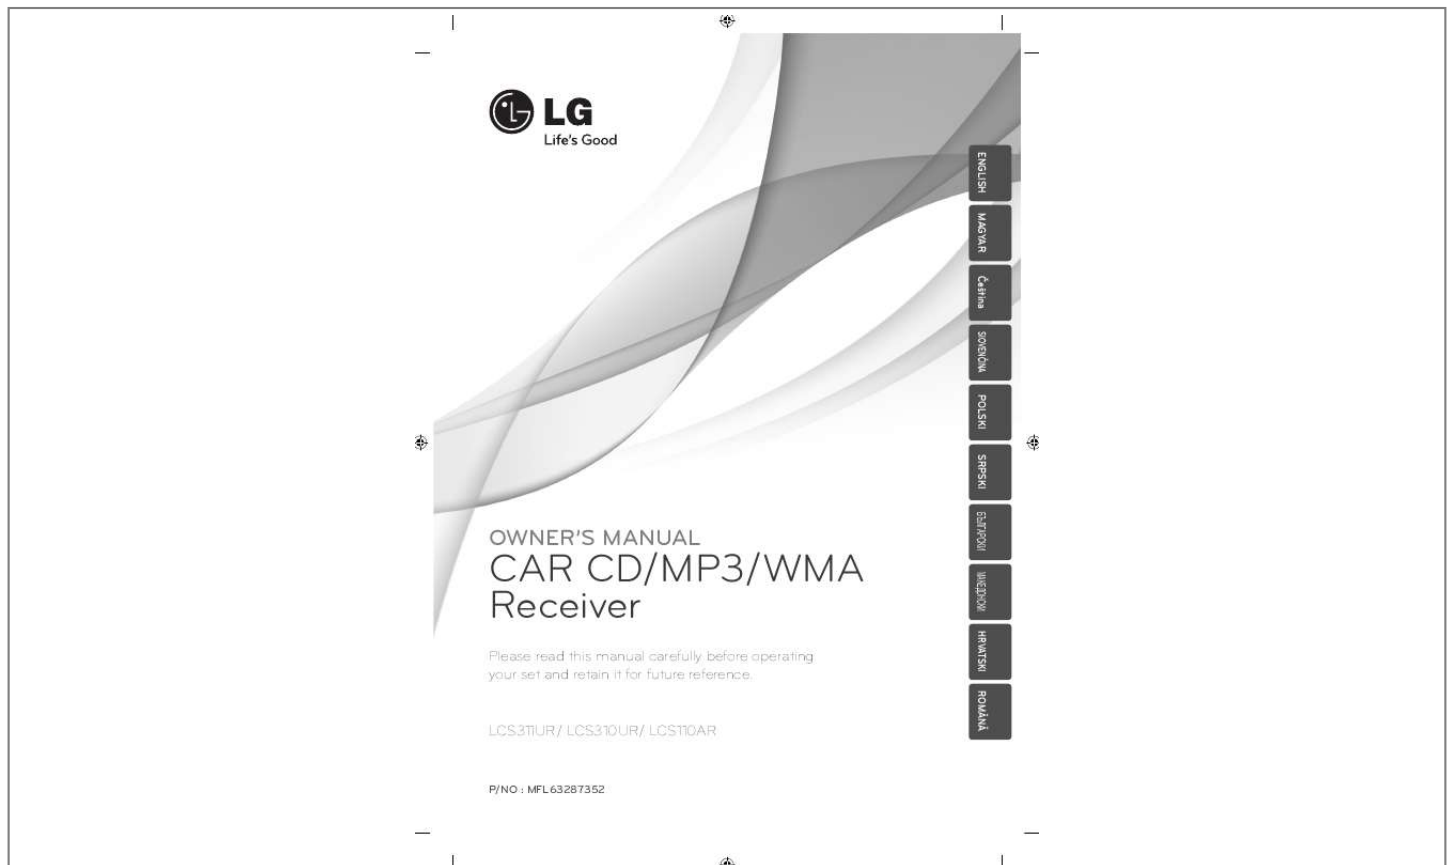

[You're reading an excerpt. Click here to read official LG LCS310UR user guide](http://yourpdfguides.com/dref/3956596)
<http://yourpdfguides.com/dref/3956596>

Manual abstract:

Refer servicing to qualified service personnel. @@@@This unit cannot play 8cm disc (use 12cm disc only). CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product. WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. WARNING: Do not install this equipment in a confined space such as a book case or similar unit. Always operate the vehicle in a safe manner.

Do not become distracted by the vehicle while driving, and always be fully aware of all driving condition. Do not change settings, or any functions. Pull over in a safe and legal manner before attempting such operations. Do not use for many hours at extremely low or high temperature. (-10 C to 60 C) While driving, keep the sound volume at a proper level. Do not drop it and avoid heavy impacts at anytime. This unit is for vehicles with a 12-volt battery and negative grounding.

Before installing it in a recreational vehicle, lorry or bus, check the battery voltage. To avoid shorts in the electrical system, be sure to disconnect the E battery cable before beginning the installation. Getting Started 3 CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service centre. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. @@Visible laser radiation when open. DO NOT STARE INTO BEAM. Disposal of your old appliance 1. @@2. @@3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. 1 Getting Started "This device is equipped with a portable battery or accumulator. Safe way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points.

Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators." The battery shall not be exposed to excessive heat such as sunshine, fire or the like. You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players. (Mastered/Live File System : Disc format system for Windows Vista) When being connected in a wrong way, the unit displays as follows. - Antenna port short : "ANTENNA ON PORT SHORT CIRCUIT CHECK" After connecting it again, restart the unit. 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. @@European representative : LG Electronics Service Europe B.

V. @@ When pressed and held, powers unit on or off. b Returns to the previous step. c Volume knob Adjusts volume level. Confirms the settings. Checks tracks, files or preset stations. d BAND Selects a band in Tuner mode. @@@@ When pressed, selects the EQ function. When pressed and held, selects the XDSS+ function. hB Ejects a disc.

@@ press and hold it, you can turn on/off the display window. k MUTE Temporarily stops the sound. l `Activates setting menu. @@oN Plays and pauses playback. @@@@u USB port (OPTIONAL) 6 Getting Started i DISP Press it, you can check the clock time. Press and hold it, you can turn on/off the display window. j RPT Repeats playback k INT Intro scan l Numeric buttons (1 - 6) Selects a numbered preset station in TUNER. Remote control (OPTIONAL) 1 Getting Started a SRC/ OFF When pressed, selects function sources. When pressed and held, powers unit off. b FUNC When pressed, sets playback items in each mode.

MENU When pressed and held, activates setting menu. c BAND Selects a band in Tuner mode. DRV (OPTIONAL) Moves to a next USB drive. d d/M Plays or pauses playback. e SHF Randoms playback f MUTE Temporarily stops the sound. g VOLUME W/S Adjusts volume level. h c/v Skip/ Search/ Seek/ Tune Returns to the previous step. w/s List up/ down Adjusts settings. Moves 10 MP3/WMA tracks backward or forward if there is no folder or one folder on a CD. Moves to the previous or next folder if there are more than 2 folders on a CD.

ENTER/ LIST Confirms the settings. Checks tracks, files or preset stations. Battery Installation 1. Pull out the battery holder with a sharp product like a ball point pen. 2.

Put the battery with 4 and 5 correctly on the battery holder. 3. Push the battery holder back into its original position. Use only one CR2025 (3 V) lithium battery. Remove the battery if the remote control is not used for a long period of time.

Do not leave the product in a hot or humid place. Do not handle the battery with metallic tools. Do not store the battery with metallic materials. , Note Connecting 7 About detachable control panel Attaching the control panel 1. Align the left side of the panel with the stopper. Detaching the control panel 1. Press the 6 to open the control panel. 2. Push the control panel to right. 2 Connecting 2.

Push the right side of panel into the unit until it clicks. 3. Pull the control panel out of the unit. 4. Put the detached control panel into the protective case. The control buttons may not work properly if the control panel is not attached properly. If this occurs, gently press the display. Do not leave the control panel in any area exposed to high temperatures or direct sunlight. Do not drop the control panel or otherwise subject it to strong impact. Do not allow such volatile agents as benzine, thinner, or insecticides to come into contact with the surface of the control panel.

> Caution Control panel Protective Case Periodically wipe the contacts on the back of the control panel with a cotton swap moistened with alcohol. For safety, turn off the ignition before cleaning, and remove the key from the ignition switch. , Note 8 Connecting Installation Basic Installation Before installing, make sure that the ignition-switch is set to OFF and remove the terminal of the car battery to avoid short-circuiting.



[You're reading an excerpt. Click here to read official LG LCS310UR user guide](http://yourpdfguides.com/dref/3956596)
<http://yourpdfguides.com/dref/3956596>

