




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG LCS500UN. You'll find the answers to all your questions on the LG LCS500UN in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG LCS500UN
User guide LG LCS500UN
Operating instructions LG LCS500UN
Instructions for use LG LCS500UN
Instruction manual LG LCS500UN

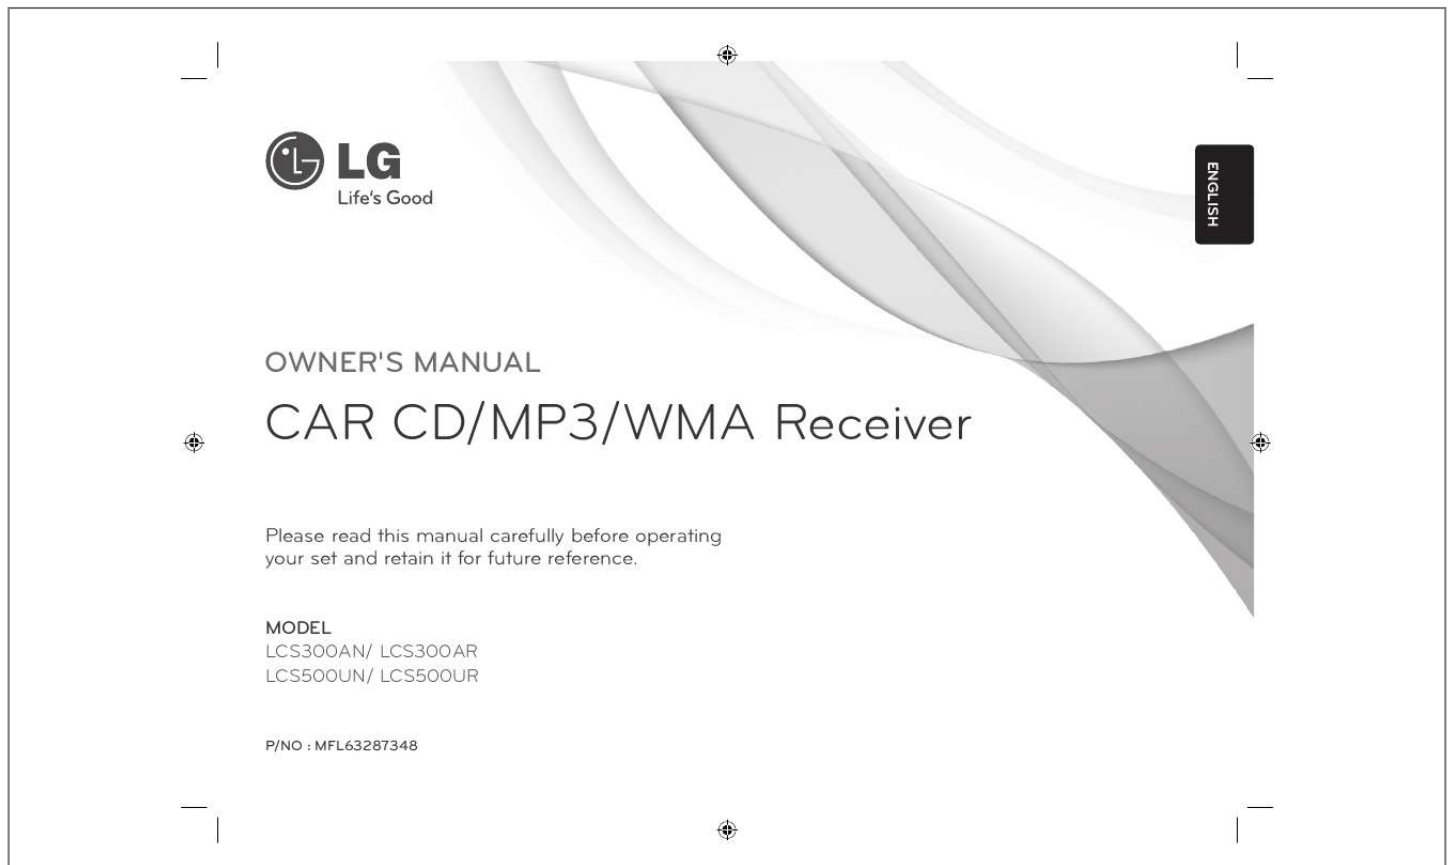

[You're reading an excerpt. Click here to read official LG LCS500UN user guide](http://yourpdfguides.com/dref/3984603)
<http://yourpdfguides.com/dref/3984603>

Manual abstract:

MODEL LCS300AN/ LCS300AR LCS500UN/ LCS500UR P/NO : MFL63287348 Table of Contents 3 4 5 Safety Note Front Panel Remote Control (OPTIONAL) Battery installation 6 About detachable control panel Attaching the control panel Detaching the control panel 7 Installation Basic installation Removing the existing receiver unit ISO-DIN installation 8 Connection 9-10 Basic operation Mute Using the EQ Using XDSS+ (Extreme Dynamic Sound System) Checking the clock Turning off the display light Resetting the unit Adjusting general settings 10-11 Listening to a CD Pausing or restarting CD playback Searching for a section within a track /file Skipping to another track/ file Checking information about your music Playing back tracks/files in a way you want 11 Listening to music from an external device 12-13 Listening to the radio Storing desired frequencies manually Listening to a preset station Adjusting tuner settings Using an USB device (OPTIONAL) Moving to another drive Quick search of a desired file Troubleshooting Specifications 13 14 15 LG Electronics hereby declares that this/ these product(s) is/ are in compliance with the essential requirements and other relevant provisions of Directive 2006/28/EC (ANNEX I, 3.2.9), 72/245/EEC, and 2006/95/EC. European representative : LG Electronics Service Europe B.V. Veluwezoom 15, 1327 AE Almere, The Netherlands (Tel : +31-(0)36-547-8888) The unit is compatible with the steering wheel remote control. The function allows operation by sending the steering wheel remote control signal to the unit. For details, consult with your dealer. 2 CAR CD/MP3/WMA Receiver Safety Note CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION : This product uses a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference.

Should the unit require maintenance, contact an authorized service center. @@@@Visible laser radiation when open. @@@@REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

@@Always operate the vehicle in a safe manner.

@@Do not change settings, or any functions. @@Do not use for many hours at extremely low or high temperature. @@There are no user-serviceable parts inside. Refer servicing to qualified service personnel. To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.

The temperature of unit's outside can be extremely high, please use the unit after proper installation in your vehicle. This unit cannot play 8 cm disc (use 12 cm disc only). "This device is equipped with a portable battery or accumulator. Safe way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators." The battery shall not be exposed to excessive heat such as sunshine, fire or the like. Disposal of your old appliance 1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 3. @.@4. @.@@[- OFF] Power on/ off. b [MENU] Activates setting menu. c Volume knob · Adjusts volume level. · Confirms the settings. @.@d [BAND] Selects a band. @.@@h [DISP] · Press it, you can check the clock time.

@.@j [] Opens the front panel. k [MUTE] Temporarily stops the sound. l [] Returns to the previous step. m b?-/A?B Skip / Search / Seek / Tune n [FUNC] In each mode, sets playback items. o BX Plays and pauses playback.

p [INT] Intro scan q [RPT] Repeat function r [SHF] Shuffle s Numeric buttons Selects a numbered preset station in TUNER t [AUX] If connected to other portable player, you can enjoy musics from it on the unit. u USB port (OPTIONAL) Remote Control (OPTIONAL) g Adjusts volume level. h [m M] Skip/ Search/ Seek/ Tune [] Returns to the previous step. [v V] · List up/ down · Adjusts settings. · Moves 10 MP3/WMA tracks backward or forward if there is no folder or one folder on a CD.

· Moves to the previous or next folder if there are more than 2 folders on a CD. [ENTER/ LIST] · Confirms the settings. · Checks tracks or files in CD mode or preset stations in TUNER mode. [SRC] Selects function sources. i [DISP] · Press it, you can check the [- OFF] Power off. clock time. [- MENU] Activates setting menu · Press and hold it, you can turn [FUNC] off the display light. In each mode, sets playback j [RPT] Repeat function items. k [INT] Intro scan [BAND/DRV] l Numeric buttons · Selects a band. Selects a numbered preset sta · Moves to a next USB drive tion in TUNER.

(OPTIONAL) [B/X] Plays or pauses playback [SHF] Shuffle [MUTE] Temporarily stops the sound. Battery Installation 1 2 3 Pull out the battery holder with a sharp product like a ball point pen. Put the battery with and correctly on the battery holder. Push the battery holder back into its original position. Note · Use only one CR2025 (3 V) lithium battery. @@ · Do not leave the product in a hot or humid place. · Do not handle the battery with metallic tools.

@@@@@1 2 3 4 Remove the existing receiver unit. Make the necessary connections. Install the installation sleeve.

@.@Fit screws removed from the old unit. Slide the unit and frame into the dash opening. Install the dash panel or adapter plate. Install the trim ring to the unit. @.@1 2 Remove the rear support from the unit.

Remove the control panel and trim ring from the unit. Insert the lever A into the hole on one side of the unit. @.@Turn the unit on. 2. Select a source.

3. Adjust the volume. 4. Turn the unit off. @.@Press DISP once to check the clock. 2. Press it again to remove it. Turning off the display light 1. Press and hold DISP. 2.

@.@1. Press [] and pull out the front panel. (Refer to page 6 for detaching the control panel.) 2. @.@Press MUTE to cut the sound. 2. @.@The function helps you to enjoy sound more plentifully. Press EQ/ · XDSS+ on the unit repeatedly. The indicator lights up in the following order. @.@On the Unit 1.

Press MENU. 2. @.@3. Rotate the volume knob to select the item 1. Press FUNC.

2. Rotate the volume knob to select an item and press it.



[You're reading an excerpt. Click here to read official LG LCS500UN user guide](http://yourpdfguides.com/dref/3984603)

<http://yourpdfguides.com/dref/3984603>

3. Rotate the volume knob to set the option. 4.

Press the volume knob to confirm the setting. If you want to return to the previous step, press . On the Remote Control (OPTIONAL) 1. Press FUNC/ · MENU. 2. Press v or V to select an item and press it. 3. Press v or V to set the option. 4. Press ENTER to confirm the setting.

@@@Our company has no right to grant such permission. @@Connect an external device to the AUX jack with line input cable. ON PLAYER - . 2. Select a source to AUX. 3. Play the connected Auxiliary Equipment. 4. @@@@1. Press FUNC on the unit or FUNC/ · MENU on the remote control. 2. @.3. @.4. @@@@Bit rate / within 8 kbps to 320 kbps (include VBR) (MP3) 32 kbps to 320 kbps (WMA) 3. CD-R/CD-RW file system should be "ISO 9660" 4.

If you record MP3/WMA files using software which cannot create a FILE SYSTEM, for example "Direct-CD" etc., it will not be possible to playback MP3/WMA files. We recommend that you use "Easy-CD Creator" which creates an ISO9660 file system. CAR CD/MP3/WMA Receiver 11 Listening to the radio ON PLAYER 1. Select a source to tuner.

2. Select a band. 3. Auto seek. Manual seek. SRC BAND b?-/±?B Press and hold b?-/±?B Adjusting TUNER settings On the Unit 1. Press FUNC. 2. Rotate the volume knob to select an item and press it. 3.

Rotate the volume knob to set the option and press it. 4. If you want to return to the previous step, press . On the Remote Control (OPTIONAL) 1. Press FUNC/ · MENU. 2. Press v or V to select an item and press ENTER. 3. Press v or V to set the option and press ENTER. 4.

If you want to return to the previous step, press . PTY (vrsti programa) (OPTIONAL) It searches the radio stations by program type of FM tuner in a way as follows; The program types are displayed as follows. NEWS VARIED LEISURE JAZZ AFFAIRS WEATHER DOCUMENT COUNTRY INFO FINANCE POP M NATION M SPORT CHILDREN ROCK M OLDIES EDUCATE SOCIAL EASY M FOLK M DRAMA RELIGION LIGHT M. CULTURE PHONE IN CLASSICS SCIENCE TRAVEL OTHER M PI (Programme Identification) SOUND/ MUTE (OPTIONAL) PI SOUND : When the frequency of a tuned station switches to an AF(Alternative frequency) with an unidentified PI, it keeps the sound. @@@@Refer to the page 12 for setting the clock.

TA(Traffic Announcement) ALARM/ SEEK (OPTIONAL) TA ALARM : When the tuned station has no TP information for 5 seconds, a double beep sound is output. TA SEEK : When the tuned station does not receive TP information for 5 seconds, the receiver retunes to the next station that has the TP information.

Listening to the radio - more you can do Storing desired frequencies manually 1. Press BAND to select a desired band you want to store. 2.

Press and hold b?- or ±?B on the unit or m or M on the remote control until the beep sound is heard. 3. Press it repeatedly to select a desired frequency. 4. Pres operate Battery power is low. correctly even when the appropriate remote control buttons are pressed. Load a new battery. 14 CAR CD/MP3/WMA Receiver Specifications General Output Power Power Source Speaker impedance Ground System Dimensions (W x H x D) Net Weight Tuner FM Frequency Range S/N Ratio Distortion Usable Sensitivity AM (MW) Frequency Range S/N Ratio Distortion Usable Sensitivity CD Frequency Response S/N Ratio Distortion Channel Separation (1 kHz) AUX Frequency Response S/N Ratio Distortion Channel Separation (1 kHz) Max Input Level (1 kHz) USB Version Line OUT Frequency Response Output Voltage Subwoofer (optional) Frequency Response Output Voltage 53 W x 4 CH (Max.) DC 12 V 4 Negative 178 x 50 x 169 mm (Without Control Panel) 1.37 kg 87.

5 MHz to 107.9, 87.5 MHz to 108 MHz, 65 MHz to 74 MHz, or 87.5 MHz to 108 MHz 55 dB 0.7 % 12 dBV 520 MHz to 1720 or 522 MHz to 1620 kHz 50 dB 1.0 % 28 dBV 20 Hz to 20 kHz 80 dB 0.12 % 55 dB 20 Hz to 20 kHz 80 dB 0.1 % 45 dB 1.1 V USB 1.1 20 Hz to 20 kHz 2 V (Max.) 20 Hz to 120 Hz 2.0 V (Max.) Designs and specifications are subject to change without notice. CAR CD/MP3/WMA Receiver 15 LG Electronics RUS 143160

, , , , 86 . . .

9 : () . , 215300 , , , , . 88 ëÁÏÓ , äËÚÁ BZ03 .



[You're reading an excerpt. Click here to read official LG LCS500UN user guide](http://yourpdfguides.com/dref/3984603)

<http://yourpdfguides.com/dref/3984603>