




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG LCS700BR. You'll find the answers to all your questions on the LG LCS700BR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG LCS700BR
User guide LG LCS700BR
Operating instructions LG LCS700BR
Instructions for use LG LCS700BR
Instruction manual LG LCS700BR

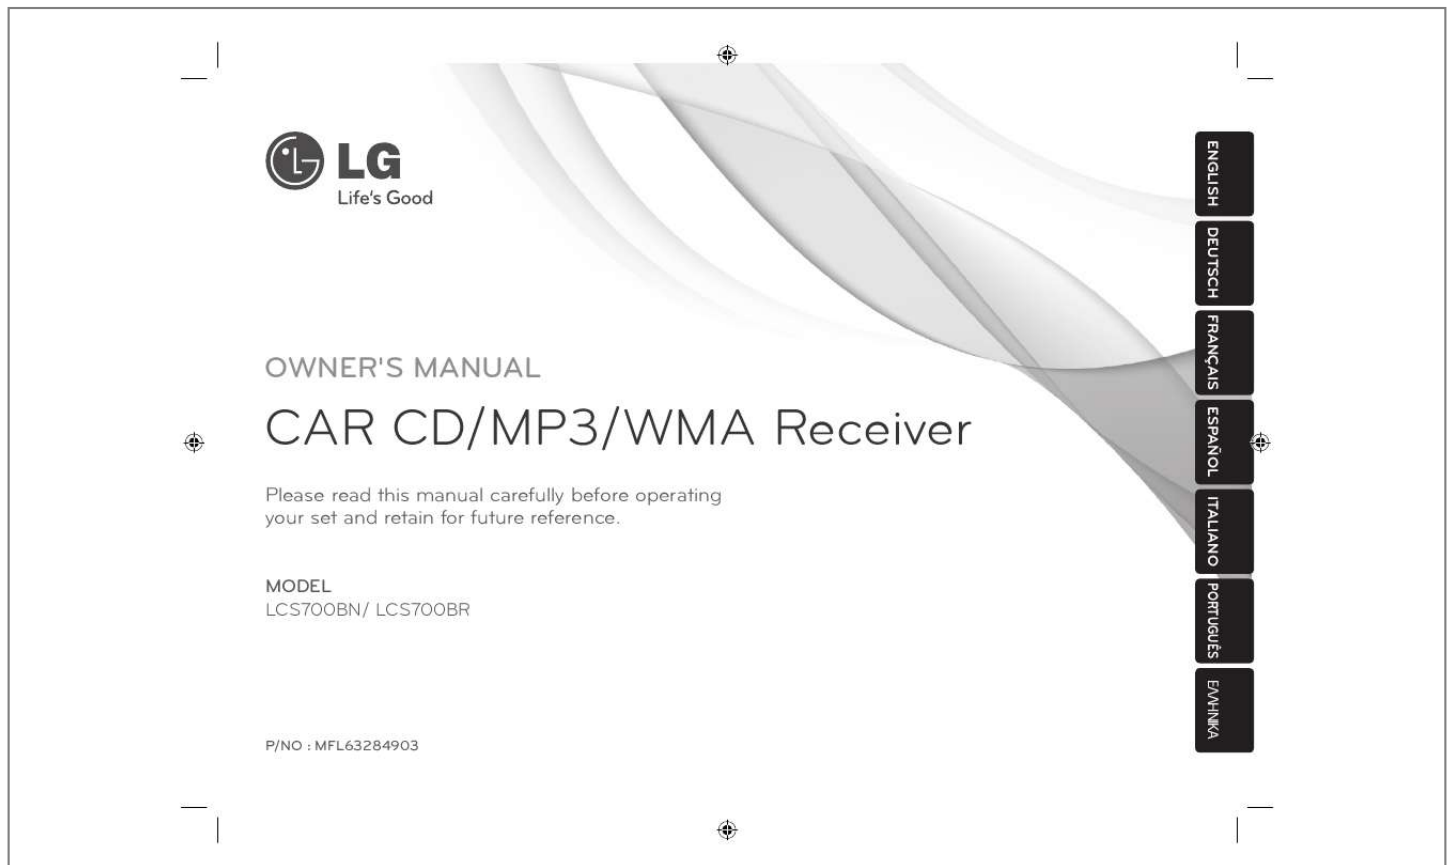

[You're reading an excerpt. Click here to read official LG LCS700BR user guide](http://yourpdfguides.com/dref/3910553)
<http://yourpdfguides.com/dref/3910553>

Manual abstract:

2 CAR CD/MP3/WMA Receiver Safety Note CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION : This product uses a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center. Performing controls, adjustments, or carrying out procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM. CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT SPLIT COVER(OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product. Always operate the vehicle in a safe manner. Do not become distracted by the vehicle while driving, and always be fully aware of all driving condition. Do not change settings, or any functions. Pull over in a safe and legal manner before attempting such operations.

Do not use for many hours at extremely low or high temperature. (-10 °C to 60 °C) To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel. To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.

The temperature of unit's outside can be extremely high, please use the unit after proper installation in your vehicle. 8 cm "This device is equipped with a portable battery or accumulator. Safe way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. @@Do not dispose of batteries or battery together with other waste. @@@@2. @@@3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. Caution When being connected in a wrong way, the unit displays as follows.

- Antenna port short : "ANTENNA ON PORT SHORT CIRCUIT CHECK" After connecting it again, restart the unit. This unit cannot play 8 cm disc (use 12 cm disc only). CAR CD/MP3/WMA Receiver 3 Front Panel a [SRC] Selects function sources. [· OFF] Power on/off. b [BT] Activates BT function. c Volume knob · Adjusts volume level. · Confirms the settings. · Checking tracks or files in CD mode or preset stations in TUNER mode. d [BAND] Selects a band. [· TA] Traffic Announcement (OPTIONAL) Searches stations that have TA/TP information.

e Remote Sensor f Display window g [EQ]/[- XDSS+] Improves sound quality. h [DISP] · Press it, you can check the clock time. · Press and hold it, you can turn off the display light. 4 CAR CD/MP3/WMA Receiver i [Z] Releases a disc. j [] Opens the front panel.

k [Mute] Temporarily stops the sound. l [] Returns to the previous step. m b?-/ +?B Skip / Search / Seek / Tune n [FUNC] In each mode, sets playback items. [· Menu] Activates setting menu. o BX Plays and pauses playback.

p [INT] Intro scan q [RPT] Repeat function r [SHF] Shuffle s Numeric buttons Selects a numbered preset station in TUNER t [AUX] If connected to other portable player, you can enjoy music from it on the unit. u USB port Remote Control g Adjusts volume level. h [m M] Skip / Search / Seek / Tune [] Returns to the previous step. [v V] · List up/ down · Adjusts settings. · Moves 10 MP3/WMA tracks backward or forward if there is no folder or one folder on a CD. · Moves to the previous or next folder if there are more than 2 folders on a CD. [ENTER/LIST] · Confirms the settings. · Checks tracks or files in CD mode or preset stations in TUNER mode. [SRC] Selects function sources. i [DISP] [· OFF] Power off.

· Press it, you can check the [· Menu] Activates setting menu clock time. [FUNC] · Press and hold it, you can turn In each mode, sets playback off the display light. items. j [RPT] Repeat function [BAND/DRV] k [INT] Intro scan · Selects a band. l Numeric buttons · Moves to a next USB drive Selects a numbered preset sta[B/X] tion in TUNER. @@@Put the battery with and correctly on the battery holder. @@@@· Do not leave the product in a hot or humid place. · Do not handle the battery with metallic tools. @@@@1 2 3 4 Remove the existing receiver unit. Make the necessary connections.

Install the installation sleeve. @@Fit screws removed from the old unit. Slide the unit and frame into the dash opening. Install the dash panel or adapter plate. Install the trim ring to the unit.

Install the control panel to the unit. Removing the existing receiver unit A If there is already an installation sleeve for the receiver unit in the dashboard, it must be removed. 1 2 Remove the rear support from the unit. Remove the control panel and trim ring from the unit. Insert the lever A into the hole on one side of the unit.

Perform the same operation on the other side and pull the unit out from the mounting sleeve. A 3 CAR CD/MP3/WMA Receiver 7 Connection Before connecting, make sure that the ignition switch is set to OFF, and remove the battery # terminal to avoid short circuits. Wired remote input(Black): Hard-wired control adapter can be connected. (Optional/Not supplied) Wired mic To Audio out (OPTIONAL) Front Left Front Right To Audio in (OPTIONAL)

Rear Left (Sub-woofer Left) Rear Right (Sub-woofer Right) *Sub-woofer is optional. A 1 5 2 6 3 7 4 8 1 5 B 2 6 3 7 4 8 Power Antenna Control Relay Amplifier (OPTIONAL) A8 A7 A2 A1 A5 Power Antenna(Blue) Dimmer(Pink) To Ignition(Red) To Battery(+)(Yellow) Ground(-)(Black) BATTERY Dimmer Switch Ignition Switch B1 B2 B3 B4 B5 B6 B7 B8 B B B B B B 1 2 3 4 5 6 7 8 Violet / Black Stripe : Rear Right Violet : Rear Right + Gray / Black Stripe : Front Right Gray : Front Right + Green/ Black Stripe : Rear Left Green : Rear Left + White/Black Stripe : Front Left White : Front Left + A3 A4 A6 8 Remote On(Blue/White) Phone Mute(Orange) Not connected Amplifier (Optional) CAR CD/MP3/WMA Receiver Basic Operation ON PLAYER 1. Turn the unit on. 2. Select a source.



[You're reading an excerpt. Click here to read official LG LCS700BR user guide](http://yourpdfguides.com/dref/3910553)
<http://yourpdfguides.com/dref/3910553>

3. Adjust the volume.

4. Turn the unit off. Any key SRC Rotate the volume knob Press and hold OFF ON REMOTE SRC VOLUME Press and hold OFF Turning off the display light
1. Press and hold DISP. 2. Press and hold it again to turn it on. Note Under the light-off condition, press any keys, the light is turned on and then off
automatically if you don't press it within a few seconds. Resetting the unit It resets the unit when it does not operate properly. 1. Press [] and pull out the
front panel.

(Refer to page 6 for detaching the control panel.) 2. Prick the RESET hold with sharp object. Basic operation - more you can do Mute 1. Press MUTE to cut
the sound.

2. To cancel it, press again. Adjusting general settings You can adjust sound, light and other settings by k/ file Press b?- or +?B on the unit (m/M on remote
control.). Or 1.

Press the volume knob on unit or ENTER on the unit. 2. Rotate the volume knob on unit or press v or V on the remote control to select a desired track or file.

3. Press ENTER (or the volume knob) to start playback. Note To skip to previous track, press briefly b?- within 3 seconds of playing time. Checking
information about your music MP3/WMA files often come with tags. The tag gives the Title, Artist or Album. Press DISP repeatedly during MP3/WMA/CD
TEXT file playback. If there is no information, "NO TEXT" will be shown in the display window.

10 CAR CD/MP3/WMA Receiver Playing back tracks/files in a way you want For using easy buttons 1. Press INT/RPT/SHF. 2. Press it again to cancel. Or
Using the FUNC button On the Unit 1. Press FUNC/ MENU. 2. Rotate the volume knob to select an item and press it. 3. Rotate the volume knob to set the
option.

4. Press the volume knob to confirm the setting. If you want to return to the previous step, press . On the Remote Control 1. Press FUNC/ MENU.

2. Press v or V to select an item and press it. 3. Press v or V to set the option. 4.

Press ENTER to confirm the setting. If you want to return to the previous step, press . INT (Intro Scan) Each files in the current selected folder (INT) or the
first 10 seconds of each tracks/files (INT) on the disc are played. RPT (Repeat) The current selected tracks/files (1 RPT) or folder (played repeatedly. RPT)
on the disc is Customers should also note that permission is required in order to download MP3/WMA files and music from the Internet. Our company has no
right to grant such permission. Permission should always be sought from the copyright owner. You have to set the disc format option to [Mastered] in order to
make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players.
(Mastered/Live File System : Disc format system for Windows Vista) Listening to music from an external device 1.

Connect an external device to the AUX jack with line input cable. 2. Select a source to AUX. 3. Play the connected Auxiliary Equipment. 4. Adjust the volume.
ON PLAYER ON REhe driver modes changes. CAR CD/MP3/WMA Receiver 13 Connecting a Bluetooth wireless technology Before you start the pairing
procedure, make sure the Bluetooth wireless technology is turned on in to your phone. Refer to your phone's user guide.

Pairing links your unit and phone with Bluetooth wireless technology, and is required only once for the initial setup. If the connection is successful, the phone
is registered (Device 15) and the flashing of indicator stops on the unit. The process of pairing may be different depend on the phones. The PIN CODE is
1234. ON PLAYER 1.

Enter the menu. 2. Find the "CONNECTION" menu. 3. Search the phones supported Bluetooth wireless technology.

4. Select a phone you want to connect. 5. Connect the phone. 6. Select the "CONN" menu. BT Rotate the volume knob Press the volume knob Rotate the
volume knob Press the volume knob Press the volume knob Using the buttons for Bluetooth wireless technology a b c d a · Press the volume knob: Go to the
next contents of the setting. · Rotate the volume knob : Move the contents vertically on the setting or choose a spell when you write the words on the unit. b BT
: Press it to enter BT function. c : Returns to the previous step.

d Adjusts the mic volume while talking on the phone by BT function. · b?- : Press it to delete a spell or go back previous contents. @@@@ @@@@ @@@@ @1.
Press BT to answer the call. 2. Press BT again. The "Private" is displayed. @@@@ @@@@ @@@@ You can check the list of missed call. To place a call, press
BT. @@The Bluetooth remains on until you turn the device off.

Press SRC repeatedly to select "BT Music". To play an MP3 file stored on your device. Refer to the phone's user guide for using this function. Bluetooth
wireless technology profiles information. Note · The lists of Missed calls, Dialed calls and Received calls are sorted from newest to oldest entries.
· When you want to make an international call, press +?B to add "+" and to delete it press again. · "+" can only be added when the detail list of Missed call,
Dialed call or Received call is selected. · Rejecting a call / Making a call saved preset number / Missed call notification (These features are only available on
phones with Headset profile.) In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with
following profiles.

GAP (Generic Access Profile) HFP (Hands Free Profile) HSP (Hands Set Profile) GAVDP (Generic Audio/Video Distribution Profile) A2DP (Advanced
Audio Distribution Profile) AVRCP (Audio/Video Distribution Remote Control Profile) OPP (Object Push Profile) CAR CD/MP3/WMA Receiver 15 Adjusting
the setting. BT CALL (Bluetooth wireless technology) RECEIVED/DIALED/MISSED Phone number list. · To call the phone number, select the phone number
and press BT. · To save it, select the phone number and press the volume knob. "SAVE" will be shown. Press the volume knob again. Rotate the volume knob
to select a preset number(1 to 6). Press the volume knob again. The phone number be saved. Checks and deletes the phone number saved preset number.

@@And then press the volume knob. Press the volume knob again when the "DELETE" is displayed. Adjusts the counts of redial. (1 TIME <-> 2 TIMES.)
Enters the number directly on the unit. To select the 1 to 10 rotate the volume. Press +?B to make the phone number. To call it, Press BT. Checks the list of
the phone numbers saved by phonebook. Searches the phone number in the list.

@@GET : Getting the Phonebook from the phone automatically. @@Then send the phonebook data from your phone. Depend on your phone, the sending
process is different. Refer to your phone's guide. Connected Device Name will be displayed.

@@Select the register in the Connection contents. Makes it is impossible to search this unit. (SHOWN <-> HIDDEN) Adjusts connection with automatically
or not.



**You're reading an excerpt. Click here to read official LG LCS700BR
user guide**

<http://yourpdfguides.com/dref/3910553>

12 % 55 dB 20 Hz to 20 kHz 80 dB 0.1 % 45 dB 1.1 V 4 dBm 2402 MHz to 2480 MHz Bluetooth Specification 2.0 + EDR AUX Frequency Response S/N Ratio
Distortion Channel Separation (1 kHz) Max Input Level (1 kHz) Bluetooth TX POWER Frequency Range Version CAR CD/MP3/WMA Receiver 21 .



[You're reading an excerpt. Click here to read official LG LCS700BR user guide](#)

<http://yourpdfguides.com/dref/3910553>