




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG LCS720BO. You'll find the answers to all your questions on the LG LCS720BO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG LCS720BO  
User guide LG LCS720BO  
Operating instructions LG LCS720BO  
Instructions for use LG LCS720BO  
Instruction manual LG LCS720BO

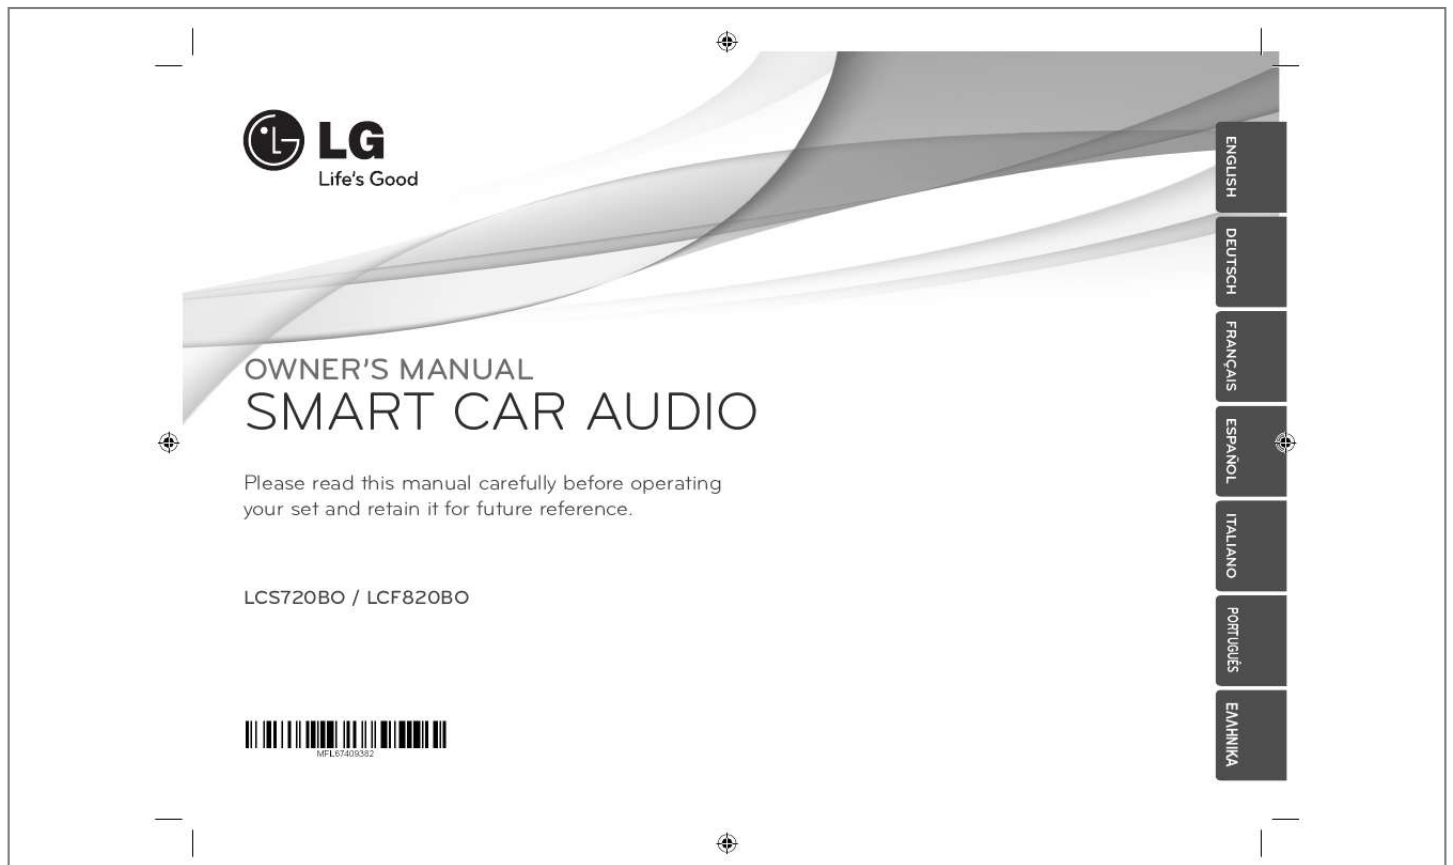

[You're reading an excerpt. Click here to read official LG LCS720BO user guide](http://yourpdfguides.com/dref/4348577)  
<http://yourpdfguides.com/dref/4348577>

**Manual abstract:**

@@There are no user-serviceable parts inside. Refer servicing to qualified service personnel. @@The temperature of unit's outside can be extremely high, please use the unit after proper installation in your vehicle. This unit cannot play 8 cm disc (use 12 cm disc only). While driving, keep the sound volume at a proper level. Do not drop it and avoid heavy impacts at anytime. This unit is for vehicles with a 12-volt battery and negative grounding. Before installing it in a recreational vehicle, lorry or bus, check the battery voltage. To avoid shorts in the electrical system, be sure to disconnect the E battery cable before beginning the installation. @@@@This device is equipped with a portable battery or accumulator.

Safe way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Disposal of waste batteries/ accumulators 1. When this crossed-out wheeled bin symbol is attached to batteries/accumulators of Your product it means they are covered by European Directive 2006/66/EC. 2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury,0.

002% of cadmium or 0.004% of lead. 3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health. 5. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product. 1 Getting Started CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product. WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. WARNING: Do not install this equipment in a confined space such as a book case or similar unit. Always operate the vehicle in a safe manner. Do not become distracted by the vehicle while driving, and always be fully aware of all driving condition. Do not change settings, Table of Contents 3 Disposal of your old appliance 1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. 2. All electrical and electronic products shall be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 3.

he correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC and 2009/125/EC. European Standards Centre: Krijgsman 1, 1186 DM Amstelveen The Netherlands □ Please note that this is NOT a Customer Service contact point.

For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product. Table of Contents 1 2 4 5 5 9 11 11 11 11 11 11 12 12 Getting Started Safety Information Front panel Remote control – Battery Installation 2 6 6 6 6 7 8 8 Connecting Installation – Basic Installation – Removing the existing receiver unit – ISO-DIN Installation About detachable control panel Connection – Connecting to a car 12 12 13 13 14 14 14 14 14 14 15 3 9 9 9 9 9 9 Operating Operation – Basic operations – Turning off the sound temporarily – Using EQ (Equalizer) – Using 3D SOUND/ MIRROR CD – Checking the clock – Turning off the display light – Resetting the unit – Adjusting the general settings Listening to a CD – Pausing or restarting CD playback – Searching for a section within a track / file – Skipping to another track/ file – Checking information about your music – Playing back tracks / files in a way you want Listening to music from an external device – Preventing radical changes in volume as switching sources Listening to the radio – Storing desired frequencies manually – Listening to a preset station – Adjusting TUNER settings Using an USB device/ SD card – Moving to another drive – Quick search of a desired file – Deleting the desired file – Playable USB device/ SD card Requirement – Recording to USB device / SD card Listening to music by connecting iPod/iPhone 15 – Pausing or restarting playback 15 – Searching for a section within a file 15 – Skipping to another file 15 – Checking information about your music 15 – Playing back files in a way you want 16 – Playing back files by music menus 16 – iPod / iPhone CONTROL MODE 16 – Compatible iPod / iPhone models 16 Connecting a Bluetooth wireless technology 17 – Using the buttons for Bluetooth wireless technology 17 – Using a Bluetooth wireless technology 18 – Adjusting the setting 19 – Using "LG CAR Remote" application 20 – Phone compatibility list 1 2 3 4 4 22 Troubleshooting Troubleshooting 5 5 23 Appendix Specifications 4 Getting Started f BAND - Selects a band in Tuner mode. - Moves to a next USB drive. iPOD Activates iPod/ iPhone CONTROL MODE. • TA (Optional) Searches stations that have TA / TP information, when it is pressed and held. g DISP - Press it, you can check the clock time. - Press and hold it, you can turn on/ off the display window and the light of LED buttons. h Display window i USB port j Returns to the previous step. k BT - Activates BT function.



**[You're reading an excerpt. Click here to read official LG LCS720BO user guide](http://yourpdfguides.com/dref/4348577)**  
<http://yourpdfguides.com/dref/4348577>

- Answers a call. q RPT (LCS720BO only) Repeats playback. r SHF (LCS720BO only) Shuffles playback. s W/S (LCS720BO only) - Moves 10 MP3 / WMA files backward or forward if there is no folder or one folder on a CD/ USB. - Moves to the previous or next folder if there are more than 2 folders on a CD/ USB. t Numeric buttons (1 to 6) (LCS720BO only) Selects a numbered preset station in TUNER.

u 6 Opens the front panel. v AUX If connected to other portable player, you can enjoy music from it on the unit. Front panel [LCS720BO] 1 Getting Started [LCF820BO] a SRC When pressed, selects function sources. •OFF When pressed and held, powers unit off. b R (LCS720BO only) Ejects a disc. c T Plays and pauses playback. MUTE Temporarily stops the sound. d LIST / ENTER / PRESET (Volume knob) - Adjusts volume level. - Confirms the settings. - Checks tracks, files or preset stations.

e EQ / •3D Improves sound quality. - When pressed, selects the EQ function. - When pressed and held, selects the 3D SOUND/ MIRROR CD function. l Y/U Skip / Search / Seek / Tune m FUNC In each mode, sets playback items. •MENU Activates setting menu.

n REC Recording to USB. DEL Deleting the desired file. o Remote Sensor p INT (LCS720BO only) Intro scan. Getting Started h c/v Skip / Search / Seek / Tune Returns to the previous step. w/s - List up / down - Adjusts settings.

- Moves 10 MP3 / WMA tracks backward or forward if there is no folder or one folder on a CD/ USB. - Moves to the previous or next folder if there are more than 2 folders on a CD/ USB. ENTER / LIST - Confirms the settings. - Checks tracks, files or preset stations. i DISP - Press it, you can check the clock time. - Press and hold it, you can turn on/ off the display window and the light of LED buttons. j RPT Repeats playback. k INT Intro scan. l Numeric buttons (1 to 6) Selects a numbered preset station in TUNER. 5 Remote control Battery Installation Type 1 □ Use only one CR2025 (3 V) lithium battery.

□ Remove the battery if the remote control is not used for a long period of time. □ Do not leave the product in a hot or humid place. □ Do not handle the battery with metallic tools. □ Do not store the battery with metallic materials. , Note 1 Getting Started a SRC When pressed, selects function sources. •OFF When pressed and held, powers unit off. b FUNC When pressed, sets playback items in each mode. •MENU When pressed and held, activates setting menu. c BAND Selects a band in Tuner mode. DRV Moves to a next USB drive.

d d/M Plays or pauses playback. e SHF Shuffles playback. f MUTE Temporarily stops the sound. g VOLUME W / S Adjusts volume level. Type 2 2 1 6 Connecting Installation Basic Installation Before installing, make sure that the ignition-switch is set to OFF and remove the terminal of the car battery to avoid short-circuiting.

Bend the claws according to the thickness of the dashboard. Removing the existing receiver unit If there is already an installation sleeve for the receiver unit in the dashboard, it must be removed. ISO-DIN Installation 2 Connecting Control panel 1. Remove the rear support from the unit. 2.

Remove the control panel and trim ring from the unit. 3. Insert the lever into the hole on one side of the unit. Perform the same operation on the other side and pull the unit out from the mounting sleeve. 1. Slide the unit into the ISO-DIN frame. 2. Fit screws removed from the old unit. 3. Slide the unit and frame into the dash opening.

4. Install the dash panel or adapter plate. (According to models, this step may not be needed.) 5. Install the trim ring to the unit. 6. Install the control panel to the unit. Control panel 1. 2. 3.

4. Remove the existing receiver unit. Make the necessary connections. Install the installation sleeve. Install the unit into the installation sleeve.

Connecting 7 About detachable control panel [LCS720BO] Attaching the control panel 4. Pull the control panel out of the unit. 5. Put the detached control panel into the protective case. Detaching the control panel 1.

Press the 6 to open the control panel. □ The control buttons may not work properly if the control panel is not attached properly. If this occurs, gently press the display. □ Do not leave the control panel in any area exposed to high temperatures or direct sunlight. > Caution Control panel Protective Case 2. Push the control panel to left. □ Do not drop the control panel or otherwise subject it to strong impact. □ Do not allow such volatile agents as benzine, thinner, or insecticides to come into contact with the surface of the control panel. 2 Connecting [LCF820BO] 1. Align the left side of the panel with the stopper.

2. Pu On the Remote Control 1. Press and hold FUNC / •MENU. 2. Press w / s to select [SOUND], [LIGHT], or [OTHER] and press ENTER. 3. Press w / s to select the mode and press ENTER. 4. Press w / s to adjust the level. 5.

Press ENTER to confirm the setting. If you want to return to the previous step, press . Checking the clock 1. Press DISP. 2.

Press it again to cancel. Turning off the display light 1. Press and hold DISP. 2. Press and hold it again to turn it on.

Under the light-off condition, press any key, the light is turned on and then off automatically if you don't press it within a few seconds. , Note 10 Operating □ DIM (Dimmer) OFF / ON : You can change the bback tracks / files in a way you want For using applicable buttons 1. Press INT / RPT / SHF. 2. Press it again to cancel. Or Using the FUNC button On the unit 1. Press FUNC. 2. Rotate the volume knob to select an item and press it. 3.

Rotate the volume knob to select the option. 4. Press the volume knob to set the option. If you want to return to the previous step, press . Checking information about your music MP3 / WMA files often come with tags. The tag gives the Title, Artist or Album. Press DISP repeatedly during MP3 / WMA / CD TEXT file playback. If there is no information, "NO TEXT" will be shown in the display window. Skipping to another track/file Make sure to press B after pressing 6 to eject a disc. Refer to the picture above.

Note [LCS720BO] Press Y/U on the unit. [LCF820BO] Push Y/U clockwise or counterclockwise on the unit. Or press c / v on the remote control. Or 1. Press the volume knob on the unit.

Or press ENTER on the remote control. 2. Rotate the volume knob on the unit to select a desired ROOT or folder and press it. Or press w / s and press ENTER on the remote control. 3.

Rotate the volume knob on the unit to select a desired track / file and press it. Or press w / s and press ENTER on the remote control. 3 Operating On the Remote Control 1. Press FUNC / •MENU. 2. Press w / s to select an item and press it. 3. Press w / s to select the option. 4. Press ENTER to set the option.

If you want to return to the previous step, press . Pausing or restarting CD playback 1. Press T on the unit to pause playback. Or press d/M on the remote control. 2. Press it to resume playback. 12 Operating □ RPT (Repeat) The current selected tracks / files (1 RPT) RPT) on the disc is played or folder (repeatedly).



[You're reading an excerpt. Click here to read official LG LCS720BO user guide](http://yourpdfguides.com/dref/4348577)

<http://yourpdfguides.com/dref/4348577>

SHF (Shuffle) Each files in the current selected folder SHF) or all of the tracks / files (SHF) ( on the disc is played randomly. @@@@Sampling Frequency / 8 kHz to 48 kHz (MP3) 22.05 kHz to 48 kHz (WMA).

2. @3. CD-R / CD-RW file system should be "ISO 9660". 4. @@@@Our company has no right to grant such permission.

@@Connect an external device to the AUX jack with line input cable. 2. Select a source to AUX. 3. Play the connected Auxiliary Equipment.

Listening to the radio 1. Press SRC repeatedly to select a source to TUNER. 2. Press BAND repeatedly to select a desired band. 3. @@Then press it repeatedly to select a desired frequency. Or press and hold c / v on the remote control. For auto search, press Y/U on the unit. Then "SEARCH" is displayed. (Except MW) Or press c / v on the remote control.

@@Then push it repeatedly to select a desired frequency. Or press and hold c / v on the remote control. For auto search, Push Y/U clockwise or counterclockwise on the unit. Then "SEARCH" is displayed. @1. Press FUNC on the unit. Or press FUNC / •MENU on the remote control. 2. Rotate the volume knob on the unit. Or press w / s on the remote control to set the option.

(GAIN 0/ +3/ +6) 3. Press the volume knob on the unit. Or press ENTER on the remote control to confirm the setting. 4. If you want to return to the previous .

@@@And during the recording, you can listen to the music being recorded. MODE COPY : The recording speed is twice as fast. And during the recording, you can listen to the TUNER. But you cannot listen to the music being recorded. @@Press BAND to select a desired band you want to store.

2. Select the desired frequency by using Y/U on the unit. @@To cancel, press the volume knob.  P / S (Preset scan) Each preset station appears. To cancel, press the volume knob. @@@@4. @@Press FUNC. 2. Rotate the volume knob to select an item and press it. 3.

Rotate the volume knob to set the option and press it. 4. @@@@Press FUNC / •MENU. 2. Press w / s to select an item and press ENTER. 3. Press w / s to set the option and press ENTER. 4. If you want to return to the previous step, press . @@The program types are displayed as follows.

@@@@(In this mode, the program may differ from the one currently received.) 3 Operating Listening to a preset station 1. Press BAND repeatedly to select a desired band. 2. Press the volume knob on the unit.

Or press ENTER on the remote control. 3. Rotate the volume knob to select a preset station. Or press w / s on the remote control. 4.

Press the volume knob. Or press ENTER on the remote control. Or Press BAND and then press the desired preset button among 1 to 6 on the remote control.

14 Operating Using an USB device/ SD card [USB] 1. Open the USB cover. 2. Connect the USB device. 3. Press SRC repeatedly to select a source to USB. [SD] 1.

Detach the control panel. (Refer to "About detachable control panel" on page 7.) 2. Insert the SD card. 3. Attach the control panel. 4. Press SRC repeatedly to select a source to SD. Quick search of a desired file 1. Press the volume knob on the unit.

Or press ENTER on the remote control. 2. Rotate the volume knob on the unit to select a desired ROOT or folder and press it. Or press w / s and press ENTER on the remote control. 3.

@@Or press w / s and press ENTER on the remote control. Playable USB device/ SD card Requirement  Do not extract the USB device/ SD card during operation (play, etc.).  An USB device/ SD card which requires additional programme installation when you have connected it to a computer, is not supported.  Regular back up is recommended to prevent data loss.

If you use a USB extension cable, USB HUB, USB Multi-reader, or external HDD, the USB device may not be recognized.  When you connect a partitioned USB device into the unit, only the first partition is recognized on it.  Some USB device/ SD card may not work with this unit.  Digital camera and mobile phone are not supported.  USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device.  Using FAT (16 / 32) file system is supported. Using NTFS file system is supported to read only. Recording to USB device / SD card [USB] 1. Open the USB cover and connect it to the unit.

2. Select one of the following lists. (CD, FM tuner, Bluetooth Handsfree) 3. Press REC to start recording. For one track/ file recording, press it once. For all tracks or files in the current selected folder recording, press and hold it until the beep sound is heard. 4. Press it again to stop. [SD] 1. Detach the control panel and connect it to the unit.

Then attach the control panel. (Refer to "About detachable control panel" on page 7.) 2. Select CD only. 3.

Press REC to start recording. For one track/ file recording, press it once. For all tracks or files in the current selected folder recording, press and hold it until the beep sound is heard. 4. Press it again to stop.

Deleting the desired file You can select and delete a playable file you want. 1. Select the desired file in the same way as "Quick Search of a desired file" 2. Press DEL and then "DELETE?" displayed. Press it again to delete. When the delete operation is started, playing is stopped. When the delete operation is ended, the list of files is displayed. If you do not select a file within few seconds, or press the , the first file is played. 3 Operating [LCS720BO] [LCF820BO] Moving to another drive When connecting this unit to multi reader, press BAND on the unit (or DRV on remote control) to go the next drive. Each time you press the button, the driver modes change.

Other functions are same with "Listening to a CD". Refer to page 11. , Note Operating 15  [USB] Only in CD, FM tuner, and Bluetooth Handsfree, recording is available. [SD] Only in CD, recording is available.  Do not remove the USB device / SD card during recording, or an incomplete file may be made and not deleted on PC.  When USB device/ SD card memory is full, "MEMORY FULL" displays and stops recording.  While FM tuner recording, the broadcastings are recorded as a file every 20 minutes.  You can adjust the recording speed. (Refer to the page 12.)  When you record all tracks on the audio CD, "REC" appears.

When you record all MP3/ WMA files in the folder, "REC "appears. , Note Listening to music by connecting iPod/iPhone You can enjoy iPod / iPhone-stored music on the unit by connecting it to the USB connector using the appropriate cable. 1. Open the USB cover. 2.

Connect the iPod / iPhone. 3. @@[LCF820BO] Push Y/U clockwise or counterclockwise on the unit. Or press c / v on the remote control. Or 1.

Press the volume knob on the unit. Or press ENTER on the remote control. 2. @@Or press w / s and press ENTER on the remote control. 3. @@@Press FUNC. 2. Rotate the volume knob to select an item and press it. 3. Rotate the volume knob to select the option.

4. Press the volume knob to set the option. @@Press T on the unit to pause playback. Or press d/M on the remote control.

[You're reading an excerpt. Click here to read official LG LCS720BO user guide](#)



<http://yourpdfguides.com/dref/4348577>

2. Press it to resume playback. On the Remote Control 1. Press RPT / SHF. 2. Press it again to cancel.

Or 1. Press FUNC / •MENU. 2. Press w / s to select an item and press ENTER. 3.

Press w / s to select the option. 4. Press ENTER to set the option. @@@@ The tag gives the Title, Artist or Album. Press DISP repeatedly during MP3 / WMA file playback.

@@infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes. @@@@ Press iPod on the unit. Then playback is paused. And you can control on the unit and iPod / iPhone. □ While using the iPod/iPhone CONTROL MODE, any functions are not available on the unit. □ Press iPod again to cancel the iPod / iPhone CONTROL MODE. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone may affect wireless performance.

Connecting a Bluetooth wireless technology Before you start the pairing procedure, make sure the Bluetooth wireless technology is turned on in your phone. Refer to your phone's user guide. Pairing links your unit and phone with Bluetooth wireless technology, and is required only once for the initial setup. If the connection is successful, the phone is registered (Device 1 to 10). The process of pairing may be different depend on the phones. The PIN CODE is 1234. ON PLAYER 1. Enter the menu. 2. Find the "CONNECT" menu.

3. Enter the "CONNECT" menu. 4. Select the "SEARCH" menu. 5.

Search the phones supported Bluetooth wireless technology. 6. Select a phone you want to connect. 7. Connect the phone.

BT Rotate the volume knob Press the volume knob Rotate the volume knob Press the volume knob Rotate the volume knob Press the volume knob Playing back files by music menus You can check files by music menus and play it back. Compatible iPod / iPhone models □ iPod classic □ iPod nano 6th generation □ iPod touch 4th generation □ iPhone 3G / 3GS / 4 We recommend that you use the OS Version 4.2.1 or more. 3 Operating The music menus are as follows.

PLAYLISTS / ARTISTS / ALBUMS / GENRES / SONGS / COMPOSER / AUDIO BOOK / PODCAST / ... 1. Press the volume knob on the unit.

Or press ENTER on the remote control. 2. Rotate the volume knob on the unit to select a music menu and press it. Or press w / s on the remote control. 3. Rotate the volume knob on the unit to select a file. Or press w / s on the remote control. 4. Press the volume knob on the unit to confirm the setting. Or press ENTER on the remote control.

5. If you want to return to the previous step, press . Or press on the remote control. Operating a LIST / ENTER / PRESET (Volume knob) - Press the volume knob : Go to the next contents of the setting. - Rotate the volume knob : Move the contents vertically on the setting or choose a spell when you write the words on the unit.

b - Returns to the previous step. - Ends a call. 17 Microphone The microphone needs to be close to and pointed toward the person speaking. Install the microphone as shown below. Microphone unit Using the buttons for Bluetooth wireless technology [LCS720BO] a Using a Bluetooth wireless technology Disconnecting a phone Press BT -> CONNECT -> LIST -> Connected device name -> DISCONN Answering and Ending a call To answer a call, press BT. To end a call, press . If you power off the unit while talking on the phone through the unit by using the BT function, the function is deactivated and you can talk on the phone directly. , Note b c d c BT - Press it to enter BT function. - Answers a call. d Y/U Adjusts the mic volume while talking on the phone by BT function. Y Deletes a spell or go back previous contents while writing some words on the unit. U Moves next space on display while writing some words on the unit. Rejecting a call To reject a call, press . [LCF820BO] a Making a call saved as a preset number Press BT and a preset number (1 to 6). 3 Operating Checking missed calls When the "?" appears, go to the menu (Press BT-> CALL -> LASTCALL).

You can check the list of missed call. b Audio transfer It is possible to switch the audio connection between your phone equipped with Bluetooth wireless technology and this unit. 1. Press BT to answer the call. 2. Press BT again. The "PRIVATE" is displayed. If the private mode is selected on the unit, press BT to return to the call to handsfree mode. c d 18 Operating □ The lists of LASTCALL are sorted from newest to oldest entries. □ [LCS720BO] When you want to make an international call, press U to add "+" and to delete it press again.

[LCF820BO] When you want to make an international call, push U clockwise to add "+" and to delete it push again. □ "+" can only be added when the detail list of LASTCALL is selected. □ You can record the Bluetooth Handsfree to USB. (Refer to the page 14.) □ The call waiting function is not supported.

We do not guarantee any errors due to use of the call waiting function. , Note Listening to music of the Bluetooth device When your unit and the Bluetooth device are pairing, Press SRC repeatedly to select "BT". And play the music stored on your Bluetooth device. Refer to the your Bluetooth device's user guide.

Adjusting the setting 1.

Press BT. 2. Rotate the volume knob to select an item and press it. 3. Rotate the volume knob to set the option and press it. 4. If you want to return to the previous step, press . □ DIAL Enters the number directly on the unit. To select the 0 to 9 rotate the volume. Press U to make the phone number.

To call it, Press the volume knob. □ PRESET Checks and deletes/dials the phone number saved preset number. CALL -> PRESET -> Select the preset number and press the volume knob -> Display the information -> Press the volume knob -> DIAL, DELETE menu will be displayed. - To call the phone number, select DIAL and Press the volume knob. - To delete the selected phone number, DELETE -> NAME -> Press the volume knob. - To delete all phone number, DELETE -> ALL -> Press the volume knob. Bluetooth wireless technology profiles information In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profiles. GAP (Generic Access Profile) HFP (Hands Free Profile) GAVDP (Generic Audio / Video Distribution Profile) A2DP (Advanced Audio Distribution Profile) AVRCP (Audio / Video Distribution Remote Control Profile) PBA / PBAP (Phone Book Access Profile) CALL □ LASTCALL Phone number list (Received, Dialed, Missed). CALL -> LASTCALL -> Select the phone number -> Press the volume knob -> Display the information -> Press the volume knob -> DIAL, SAVE, DELETE menu will be displayed.



[You're reading an excerpt. Click here to read official LG LCS720BO user guide](http://yourpdfguides.com/dref/4348577)

<http://yourpdfguides.com/dref/4348577>

