




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG RH735C. You'll find the answers to all your questions on the LG RH735C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual LG RH735C**  
**User guide LG RH735C**  
**Operating instructions LG RH735C**  
**Instructions for use LG RH735C**  
**Instruction manual LG RH735C**

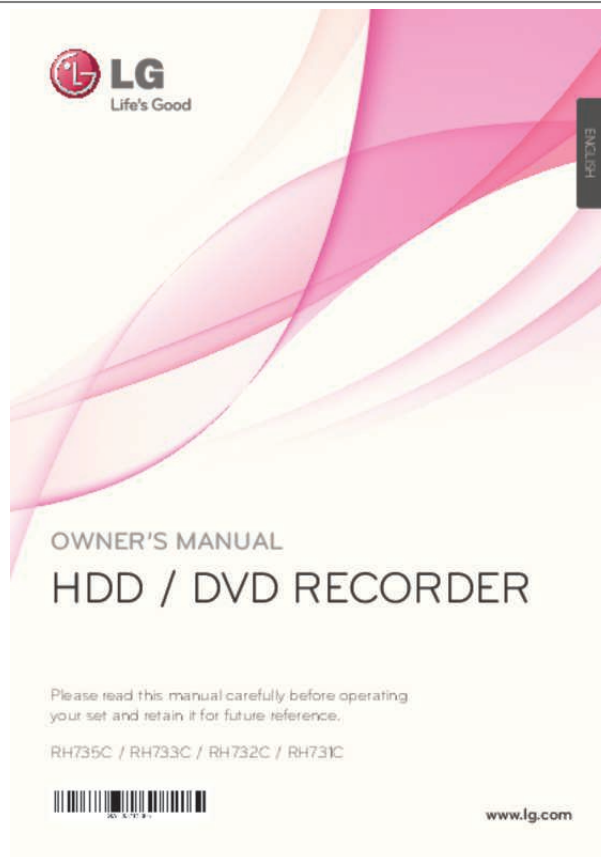

[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)  
<http://yourpdfguides.com/dref/5452748>

**Manual abstract:**

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit. **CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface.

@@@To prevent direct exposure to laser beam, do not try to open the enclosure. **CAUTION** concerning the Power Cord Most appliances recommend they be placed upon a dedicated circuit; That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous.

Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service centre. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug.

When installing the product, ensure that the plug is easily accessible. 1 Getting Started 4 Getting Started This device is equipped with a portable battery or accumulator. Disposal of waste batteries/accumulators 1. When this crossed-out wheeled bin symbol is attached to batteries/ accumulators of Your product it means they are covered by European Directive 2006/66/EC. 2.

This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead. 3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 4. The correct disposal of Your old batteries/ accumulators will help to prevent potential negative consequences for the environment, animal and human health. 5. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

1 Getting Started Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like. **CAUTION:**

The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Disposal of your old appliance 1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. 2. All electrical and electronic products shall be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product. LG

Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Contact office for compliance of this product : LG Electronics Inc. EU Representative, Krijgsman 1, 1186 DM Amstelveen, The Netherlands yy Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product. Getting Started 5 Notes on Copyrights yy Recording equipment should be used only for lawful copying and you are advised to check carefully what is lawful copying in the area in which you are making a copy. Copying of copyright material such as films or music is unlawful unless permitted by a legal exception or consented to by the rights owner.

yy This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited. yy CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 625p UNIT PLEASE CONTACT OUR CUSTOMER SERVICE CENTRE. yy Many DVD discs are encoded with copy protection. Because of this, you should only connect your player directly to your TV, not to a VCR.

Connecting to a VCR results in a distorted picture from copy-protected discs. yy Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, DVDs, CDs and other materials may subject you to civil and/or criminal liability. Important Notice for TV colour system The colour system of this player differs according to currently playing discs. For example, when the player plays the disc recorded in the NTSC colour system, the image is output as an NTSC signal. Only the multi system colour TV can receive all signals output from the player. yy If you have a PAL colour system TV, you will see just distorted images when using discs or video contents recorded in NTSC. yy The multi system colour TV changes the colour system automatically according to input signals. In case that the colour system is not changed automatically, turn it off and then on to see normal images on screen.

yy Even if the disc recorded in NTSC colour system are well displayed on your TV, these may not be recorded correctly on your recorder.



[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)  
<http://yourpdfguides.com/dref/5452748>

1 Getting Started 6 Table of Contents Table of Contents 1 Getting Started 3 System Setting 21 Auto Set Up 22 Home Menu Overview 22 – Basic button operations 22 Settings 22 – Adjust the Setup Settings 23 – Settings for Digital TV 23 – Auto Tuning (Cable Setting) 24 – Auto Tuning (Terrestrial Antenna Setting) 24 – Scanning programmes manually (Manual Tuning) 25 – Editing Programme List (Channel Edit) 25 – Lock System 26 – Setting the antenna power 26 – Setting the Timeshift 27 – [PICTURE] Menu 28 – [SOUND] Menu 29 – [DTV] Menu 30 – [LOCK] Menu 31 – [OPTION] Menu 33 – [DISC] Menu 33 – [SUPPORT] Menu 3 Safety Information 8 Introduction 8 – Playable discs and symbols used in this manual 8 – About the “7” symbol display 8 – Regional Code 9 – Compatibility Notes 9 – AVCHD (Advanced Video Codec High Definition) 9 – System Requirements 10 – Recordable Discs 10 – Recommended recordable DVD discs 10 – File compatibility 12 – Remote control 13 Main Unit 2 Connecting 14 14 Connections to Your TV – Antenna connection to your TV and this unit 15 – HDMI Connection 16 – Video/Audio (Left/Right) Connection 16 – Resolution Setting 17 Connecting to an Amplifier 17 – Connecting to an Amplifier via HDMI Output 18 – Connecting to an Amplifier via Digital Audio Output 18 – Connecting to an Amplifier via 2 Channel Audio Output 19 Connection to Another device 19 – Accessory Video/Audio/ Connections to Recorder 20 USB device connection 20 – Playback content in the USB device 4 Operating 34 34 34 34 35 35 35 35 36 36 36 37 37 38 38 38 38 39 39 40 Using the Digital TV functions – Viewing the Digital TV – Changing Digital TV programmes – Setting favourite programmes – Viewing the programme information – Selecting DTV audio language – Selecting Audio Description – Selecting DTV subtitle language – Changing Aspect Ratio – Changing Recording device – Programme Guide (Digital program only) – Using the timeshift function manually – Using the timeshift function automatically – Using the teletext (Viewing Teletext) Recording TV programmes – Dual Programme Recording – Normal Recording – Stop Recording – Timer Recording (Manual) – Timer Recording (Programme Guide) Table of Contents 7 41 41 42 42 43 43 44 44 44 45 45 46 46 47 47 47 48 50 50 50 50 51 51 51 51 52 52 52 – Deleting a timer recording – Modify a timer recording – Instant Timer Recording – Recording from Video/Audio Input General Playback – Playing a disc – Using the disc menu – Resume playback – Playing the recorded titles – Rename the recorded titles – Deleting a recorded titles Playing movie file and VR discs Playing a file on Linked Devies – To control movie playback – To control photo view – To control music playback – Basic operations for video and audio content – Basic operations for photo content Advanced Playback – Repeat Playback – Viewing content information – Last Scene Memory On-Screen display – Displaying content information onscreen – Playing from selected time – Hearing different audio – Selecting a subtitle language – Watching from a different angle Using the Recording title Copy 6 Appendix 57 Controlling a TV with the Supplied Remote Control 57 – Setting up the remote to control your TV 58 Area Code List 59 Language codeme AVCHD format discs may not be played, depending on the recording condition. yy AVCHD format discs need to be finalized. yy “x.v.

Color” offers a wider colour range than normal DVD camcorder discs. 1 Getting Started System Requirements For high definition video playback: yy High definition display that has HDMI input jacks. yy HDMI or HDCP capable DVI input on your display device is required for some content (as specified by disc authors). yy For up-conversion of standard definition DVD, a HDMI or HDCP capable DVI input on your display device is required for copy-protected content. For Dolby® Digital Plus, Dolby TrueHD audio playback: yy An amplifier/receiver with a built-in (Dolby Digital, Dolby Digital Plus, Dolby TrueHD or DTS).

yy Main, centre, surround speakers and subwoofer as necessary for chosen format. For CI+ CAM, It takes more than 3 minutes to authenticate at the fiPEG4 standard, like DivX or XVID. \*1 GMC – Global Motion Compensation \*2 Qpel Quarter pixel – yy HD movie files that need high performance playback could react slowly. yy The total playback time indicated on the screen may not be correct for .ts files. PNG File yy 64bits : Less than 1M pixel, Max width 4096 pixel yy 32bits : Less than 2M pixel, Max width 4096 pixel Depending on the size and number of the JPEG files, it may take several minutes to read the contents of the media. Thumbnail image: JPG File : Less than 16M pixel, Max width 6000 pixel PNG File : Less than 16M pixel, Max width 4096 pixel yy This unit just supports Baseline JPG and 32bits PNG in thumbnail. □ Note ,, 1 Getting Started Note ,, MUSIC Sampling frequency: between 8 - 48 kHz (WMA), within 32 kHz - 48 kHz (MP3) Bit rate: between 32 - 320 kbps (MP3) and between 8 - 320 kbps (WMA) The total playback time indicated on the screen may not be correct for VBR files. Note ,, PHOTO Recommended size: JPG File yy Baseline JPG : Less than 16M pixel, Max width 6000 pixel yy Progressive JPG : Less than 4M pixel, Max width 6000 pixel 12 Getting Started Remote control 1 Getting Started ●●●●●a ●●●●●1 (POWER): Switches the player ON or OFF. INPUT: Changes the input for recording (Tuner or AV mode).

MUTE (@): Mutes the sound. B (OPEN/CLOSE): Opens and closes the disc tray. 0-9 numerical buttons: Selects numbered options in a menu. DISC MENU/REC.LIST: Accesses menu on a disc or switches between recording list menu. TITLE/Q.MENU: Displays the DVD title menu or sets options menu, if available. TV (TV Control Buttons): See page 57. VOL (-/+): Adjusts the sound level of the unit. ●●●●●b ●●●●●c/v (SCAN): Searches backward or forward.



[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)

<http://yourpdfguides.com/dref/5452748>

*C/V (SKIP): Goes to the next or previous chapter / track / file. Z (STOP): Stops playback. z (PLAY): Starts playback. M (PAUSE): Pauses playback. TIME SHIFT: Activates pause live TV/playback (timeshift) for a live TV programme.*

*.....c.....HOME (n): Displays or exits the [Home Menu]. INFO/MENU (m): Displays or exits On-Screen Display. Direction buttons: Selects an option in the menu. ENTER (b): Acknowledges menu selection. BACK (1): Exits the menu or returns to the previous screen.*

*EXIT: Exits a menu or hides onscreen information. ....d.....CH LIST: Displays the Channel list. CH/PAGE (S/W): Scans up or down through memorized programmes or previous or next viewing page. FAV: Displays the favourite programme list. Coloured (R, G, Y, B) buttons: Use to navigate screen menus. GUIDE: Displays the programme guide menu. TEXT: Switches between teletext mode and normal TV viewing. TIMER REC.: Displays [Timer Recording] menu. REC.*

*(X): Starts recording. REPEAT (h): Repeats a desired section or sequence. TV/RADIO: Switches between TV and radio channel. SUBTITLE: Selects a subtitle language. Remove the battery cover on the rear of the Remote Control, and insert a R03 (size AAA) battery with 4 and 5 matched correctly. Battery Installation Getting Started 13 Main Unit 1 Getting Started a Disc Tray b Display window c Remote Sensor d R (Open/Close) e T (Play/Pause) f I (Stop) g 1/ (Power) h USB Port a ANTENNA IN b HDMI OUT (TO TV) c OPTICAL (DIGITAL AUDIO OUT) d VIDEO IN/2CH AUDIO IN (Left/Right) Connect the audio/video output of an external source. e AC IN connector Connect the supplied power cord. f ANTENNA OUT (TO TV) g COMMON INTERFACE Slot for external Conditional Access (CA) module and smart card used to decode scrambled channels. This device works with CI or CI+ CAM. h VIDEO OUT i 2CH AUDIO OUT (Left/Right) 14 Connecting Connections to Your TV Make one of the following connections, depending on the capabilities of your existing equipment.*

*yy Antenna connection (page 14) yy HDMI connection (page 15) Antenna connection to your TV and this unit Connect one end of the RF cable to ANTENNA OUT(TO TV) jack on the unit and other end to ANTENNA IN jack on your TV. Passes the signal from the ANTENNA IN jack to your TV/monitor. Connect the CATV line or Terrestrial TV antenna to the ANTENNA IN jack on the unit. If you want to use an indoor antenna, use one with a signal amplifier rated at 5V, 100mA and set [Antenna 5V] to [ON] in the setup menu (See page 26). ANTENNA 2 Connecting yy Video/Audio (Left/Right) Connection (page 16) yy Depending on your TV and other equipment you wish to connect, there are various ways you could connect the unit.*

*Use only one of the connections described in this manual. yy Please refer to the manuals of your TV, Stereo System or other devices as necessary to make the best connections. yy Make sure the player is connected directly to the TV. Tune the TV to the correct video input channel. yy Do not connect the unit's AUDIO OUT jack to the phono in jack (record player) of your audio system.*

*yy Do not connect your unit via your VCR. The image could be distorted by the copy protection system. Note ,, Rear of this unit RF Cable TV TV Connecting 15 HDMI Connection If you have a HDMI TV or monitor, you can connect it to this unit using a HDMI cable (Type A, High Speed HDMI™ Cable). Connect the HDMI jack on the unit to the HDMI jack on a HDMI compatible TV or monitor. yy If a connected HDMI device does not accept the audio output of the unit, the HDMI device's audio sound may be distorted or may not output. yy When you use HDMI connection, you can change the resolution for the HDMI output. (Refer to "Resolution Setting" on page 16.) yy Select the type of video output from the HDMI OUT jack using [HDMI Color Setting] option on the [Setting] menu (see page 27). yy Changing the resolution when the connection has already been established may result in malfunctions. To solve the problem, turn off the player and then turn it on again.*

*yy When the HDMI connection with HDCP is not verified, TV screen is changed to black screen. In this case, check the HDMI connection, or disconnect the HDMI cable. Note ,, Rear of this unit 2 Connecting HDMI Cable TV TV yy If there is noise or lines on the screen, please check the HDMI cable (length is generally limited to 4.5m). Additional Information for HDMI yy When you connect a HDMI or DVI compatible device make sure of the following: Set the TV's source to HDMI (refer to TV's Owner's manual). -- Try switching off the HDMI/DVI device and this player. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this player. -- The connected device's video input is set correctly for this unit. -- The connected device is compatible with 720x576p, 1280x720p, 1920x1080i or 1920x1080p video input. yy Not all HDCP-compatible HDMI or DVI devices will work with this player.*

*-- The picture will not be displayed properly with non-HDCP device. -- This player does not playback and TV screen is changed to black screen. 16 Connecting Video/Audio (Left/Right) Connection Connect the VIDEO OUT jack on the unit to the video in jack on the TV using the video cable supplied. Connect the Left and Right AUDIO OUT jacks on the unit to the audio left/right in jacks on the TV using the supplied audio cables. Resolution Setting The player provides several output resolutions for HDMI OUT jacks.*

*You can change the resolution using [Setting] menu. 1. Press HOME (n). 2. Use a/d to select the [Setting] and press ENTER (b).*

*The [Setting] menu appears. 2 Rear of this unit Connecting 3. Use w/s to select [PICTURE] option then press d or ENTER (b) to move to the second level.*

*Video/Audio Cable TVTV 4. Use w/s to select the [Resolution] option then press ENTER (b) to move to the third level. 5. Use w/s to select the desired resolution then press ENTER (b) to confirm your selection. If your TV is NTSC SYSTEM, resolution can be set only for AUTO mode. Note ,, Connecting 17*

*Connecting to an Amplifier Make one of the following connections, depending on the capabilities of your existing equipment. yy Connecting to an Amplifier via HDMI Output (page 17) yy Connecting to an Amplifier via Digital Audio Output (page 18) yy Connecting to an Amplifier via 2 Channel Audio Output (page 18) Connecting to an Amplifier via HDMI Output Connect the unit's HDMI OUT jack to the corresponding in jack on your amplifier using a HDMI cable.*

*You will need to activate the unit's digital output. (See "[SOUND] Menu" on page 28.) Rear of this unit 2 Connecting About Digital Multi-channel sound A digital multi-channel connection provides the best sound quality. For this, you need a multichannel Audio/Video Receiver that supports one or more of the audio formats supported by your unit.*



**[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)**

**<http://yourpdfguides.com/dref/5452748>**

Check the receiver manual and the logos on the front of the receiver. (PCM Stereo, Dolby Digital, Dolby Digital Plus and/or DTS) HDMI Cable Amplifier/Receiver Amplifier/Receiver HDMI Cable TV TV Connect the amplifier's HDMI output jack to HDMI input jack on your TV using a HDMI cable if your amplifier has HDMI output jack. 18 Connecting Connecting to an Amplifier via Digital Audio Output Connect the unit's OPTICAL (DIGITAL AUDIO OUT) jack to the corresponding in jack (OPTICAL) on your amplifier. Use an optional digital (OPTICAL) audio cable. You will need to activate the unit's digital output. (See "[SOUND] Menu" on page 28.

) Connecting to an Amplifier via 2 Channel Audio Output Connect the Left and Right 2CH AUDIO OUT jacks on the unit to the audio left and right in jacks on your amplifier, receiver, or stereo system, using audio cables. 2 Connecting OPTICAL Rear of this unit Rear of this unit Audio Cable Optical Cable Amplifier/Receiver Amplifier/Receiver Amplifier/Receiver Amplifier/Receiver Connecting 19 Connection to Another device Accessory Video/Audio/Connections to Recorder Connect the input jacks (VIDEO IN/2 CH AUDIO IN) on the unit to the video/audio out jacks on your accessory component, using video/audio cables. 2 Connecting Rear of this unit Video/Audio Cable VIDEO OUT AUDIO OUT L R Jack panel of Accessory Component (VCR, Camcorder, etc.) 20 Connecting USB device connection This unit can play movie, music and photo files contained on a USB device. 6.

Withdraw the USB device carefully after exiting the USB mode. yy The external USB HDD for recording has to be formatted in NTFS. yy Please use the Internal HDD or USB flash memory/external HDD formatted in either FAT16/FAT32 or NTFS when accessing files (audio, photo, video). yy This unit can support up to 4 partitions of the USB device. yy Do not extract the USB device during operation (play, recording, etc). yy A USB device which requires additional programme installation when you have connected it to a computer, is not supported. yy USB device: USB device that supports USB1.1 and USB2.0. yy This unit can play Movie, Music and Photo files in USB. For details of operations on each file, refer to relevant pages. (pages 46-49) yy Regular back up is recommended to prevent data loss. yy If you use a USB extension cable, HUB or USB multi card reader, the USB device may not be recognized. yy Some USB devices may not work with this unit.

Note ,, Playback content in the USB device 2 Connecting or USB flash memory 2. Press HOME (n). 3. Select [Movie], [Photo] or [Music] using a/d, and press ENTER (b). 1. Insert a USB device into the USB port until it fits into place. Front of the unit External HDD 4. Select the [ (USB) ] option using w/s/ a/d, and press ENTER (b). yy Digital camera and mobile phone are not supported. yy The USB Port on this unit cannot be connected to a PC. The unit cannot be used as a storage device. yy Unformatted media cannot be used. Please format before using. yy If USB HDD cannot be recognized, try another different USB cable. 5.

Select a file using w/s/a/d, and press z (PLAY) or ENTER (b) to play the file. yy Some USB cables may not supply enough current for normal USB operation. yy Files over 4GB are supported with NTFS format. System Setting 21 Auto Set Up You can reset the recorder to all its factory settings. The [Auto Set up] menu appears on the screen after the factory settings.

Step 5. Auto Tuning 1. Use w/s to select the [Antenna] or [Cable] and press ENTER (b). Step 1. Language Selection Use w/s/a/d to select a language for the onscreen display, and press ENTER (b). 2. While the Start option is selected, and press ENTER (b) to begin the channel search. 3 System Setting Step 2. Screen Size Setting Use a/d to select a screen size, and press ENTER (b). The recorder automatically searches for and saves the programmes.

Step 3. Country Selection Use w/s/a/d to select a country, and press ENTER (b). If you select [Stop], the [Auto Tuning] function will be skipped. 3. Press ENTER (b). Step 6. Setting is complete Check all the settings that you have set in the previous steps. Step 4. Password Setting Input the new password using numerical buttons. Enter it again to verify.

Press ENTER (b) while [Complete] is highlighted to finish the auto set up settings. 22 System Setting Home Menu Overview To access numerous functions of the unit, press HOME (n) on the remote. Settings Adjust the Setup Settings You can change the settings of the player in the [Settings] menu. 1. Press HOME (n).

Basic button operations HOME (n): Accesses or removes the Home Menu. w/s/a/d: Used to navigate on-screen displays. ENTER (b): Acknowledges menu selection. BACK (1): Exits the menu. 3 2.

Use a/d to select [Settings] and press ENTER (b). The [PICTURE] menu appears. System Setting [DTV] - You can watch digital broadcasts. (pages 34-42) [Movie] - Plays video contents. [Photo] - Plays photo contents. [Music] - Plays audio contents. [AV] - You can watch video from external input mode. When you use the recording mode, you can't enter the AV mode. [Settings] - Adjusts the system settings. 3.

Use w/s to select the first setup option, and press ENTER (b) to move to the second level. 4. Use w/s to select a second setup option, and press ENTER (b) to move to the third level. 5. Use w/s to select a desired setting, and press ENTER (b) to confirm your selection. System Setting 23 Settings for Digital TV To use DTV functions, this recorder needs some settings in advance. 8. Select a desired option using w/s. Then adjust selected option using a/d or numerical buttons. 9.

Use w/s/a/d to select [Next], and press ENTER (b). Auto Tuning (Cable Setting) 1. Press HOME (n). 2. Use a/d to select [Settings], and press ENTER (b). 3. Use w/s to select [DTV], and press ENTER (b). 10. Use w/s to select [Start], and press ENTER (b) to begin the channel search. 3 System Setting 4. Use w/s to select [Auto Tuning] and press ENTER (b). 5. Use w/s to select [Cable] and press ENTER (b). Select [Stop] and press ENTER (b) to stop the scanning programmes. If the [Lock System] option is set to [On], this function is available when you enter the password correctly. (see page 25.) Note ,, 6. Use w/s to select [KDG] or [Unity Media], and press ENTER (b). 7. Use a/d to select an option Type [Quick or Network] or [Full].

24 System Setting Auto Tuning (Terrestrial Antenna Setting) All available digital TV or radio programmes are searched for and stored automatically based on the selected country. 1. Press HOME (n). 2. Use a/d to select [Settings], and press ENTER (b). 3. Use w/sto select [DTV], and press ENTER (b). Scanning programmes manually (Manual Tuning) Scans digital TV or radio programmes and adds the detected programmes to the programme list. 1. Display [Settings] menu.

2. Use w/s to select [DTV], and press ENTER (b). 3. Use w/s to select [Manual Tuning] and press ENTER (b) to display the [Manual Tuning] menu. 3 System Setting 4.

Use w/s to select [Auto Tuning] and press ENTER (b).



**You're reading an excerpt. Click here to read official LG RH735C user guide**  
<http://yourpdfguides.com/dref/5452748>

5. Use w/s to select [Antenna] and press ENTER (b). [Antenna] or [Cable] 4. Use a/d to select the desired VHF/UHF CH. and the unit starts scanning automatically [Manual Tuning] If you want to set up, Use the w/s/a/d and numerical button to set up the desired option. 6. Press ENTER (b) to begin the channel search. 5. Use s to select the [Update] or [Add] and press ENTER (b) to update or add the programme the unit scans automatically. If the [Lock System] option is set to [On], this function is available when you enter the password correctly. (see page 25.) Note ,, Select [Stop] and press ENTER (b) to stop the scanning programmes. If the [Lock System] option is set to [On], this function is available when you enter the password correctly. (see page 25.

) Note ,, System Setting 25 Editing Programme List (Channel Edit) You can remove any digital TV or radio programs stored on this recorder using the [Channel Edit] menu. 1. Display [Settings] menu. 2. Use w/s to select [DTV], and press ENTER (b). 3. Use w/s/a/d to select [Channel Edit] and press ENTER (b). 4. Press w/s to select [DTV (or Cable DTV)] and use a/d to select [DTV (or Cable DTV)] or [RADIO (or Cable Radio)] programme list. Lock System Allows you to set up specific programs and ratings through blocking schemes.

Also allows you to activate or disable all of the lock schemes previously set up. A password is required to gain access to the lock menu options. When the Lock System is set to [OFF], the Block Programme and Parental Guidance are not effective. The Lock System option is effective for Block Programme and Parental Guidance options. 1.

Display [Setting] menu. 2. Use w/s to select [LOCK] and press ENTER (b). 3. Input the password using numerical buttons.

4. Use w/s to select [Lock System] and press ENTER (b). 5. Use w/s to select [On] and press ENTER (b) to activate the Lock System. 3 System Setting 5. Use w/s/a/d to select a programme you want to skip from the list, and press red (R) coloured button. If you do not want to skip the programme, select the programme and press red (R) coloured button again. 6. Select [Close] and press ENTER (b). Use w/s/a/d to select and press ENTER (b) to programme you want to lock from the list, and press green (G) coloured button.

If you do not want to lock the programme, select the programme and press green (G) coloured button again. Skip : If the programme is assigned to skip, you can't select that programme with CH button in Remote control. Block/unblock : If the programme is assigned to block and [Lock system] in the [Setting] menu is set to [Lock], you should enter the password to watch the programme. Channel Number Edit : Choose a channel you want. Press yellow (Y) coloured button and then change the channel number by using w/s/ a/d, and press ENTER (b). FAV Set as Favourite : You can display favourite Setting the Block Programme

1. Display [Lock System] menu. 2. Use w/s to select [Block Programme] and press ENTER (b). 6.

Press BACK (1) to return to the previous step. 3. Use w/s/a/d to select and press ENTER (b) to programme you want to lock from the list, and press green (G) coloured button. If you do not want to lock the programme, select the programme and press ENTER (b). Then press green (G) coloured button again. channel list using the FAV button and switch into other favourite channel on the channel list. (see page 34.) 4. Press BACK (1) to exit the block programme

menu. 26 System Setting Setting the Parental Guidance 1.

Display [Lock System] menu. 2. Use w/s to select [Parental Guidance] and press ENTER (b). Setting the Timeshift You can set the Time Shift function automatically without pressing TIME SHIFT button. The timeshift will start after Digital TV tuner mode is started. 1. Display [Settings] menu. 2. Use w/s to select [DTV], and press ENTER (b). 3.

Use w/s to select [Timeshift] and press ENTER (b). 3 System Setting 3. Use w/s to set the limitation level and press ENTER (b). Blocking Off You can view all programs. Rating [4 and above] has the most restrictions and [18 and above] is the least restrictive. 4. Select [Close] and press ENTER (b). 4. Use w/s to select [Auto] or [Manual] to apply timeshift. Setting the antenna power If you are using indoor antenna with a signal amplifier rated at DC 5V, 100 mA, the recorder can supply power through ANTENNA IN jack.

1. Display [Settings] menu. 2. Use w/s to select [DTV], and press ENTER (b). 3.

Use w/s/a/d to select [Antenna 5V] and press ENTER (b). 4. Use w/s to select [On], and press ENTER (b) to supply antenna power. The [Antenna 5V] option must be set to [Off] when your indoor antenna is supplied the power from the mains. If you set the [Antenna 5V] option to [On] for the indoor antenna which is supplied power from the mains, it may cause serious defect to this unit.

Note ,, System Setting 27 [PICTURE] Menu Aspect Ratio Select a TV aspect ratio option according to your TV type. [4:3 Letter Box] Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture. [4:3 Pan Scan] Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Both sides of the picture are cut off. [Original] Select when a 16:9 wide TV is connected. The 4:3 picture is displayed with an original 4:3 aspect ratio, with black bars appearing at the left and right sides. [16:9] Select when a 16:9 wide TV is connected. The 4:3 picture is adjusted horizontally (in a linear proportion) to fill the entire screen.

Resolution Set the output resolution of the HDMI video signal. Refer to page 16 for details about the resolution setting. [Auto] If the HDMI OUT jack is connected to TVs providing display information (EDID), this automatically selects the resolution best suited to the connected TV. [1080p] Outputs 1080 lines of progressive video. [1080i] Outputs 1080 lines of interlaced video. [720p] Outputs 720 lines of progressive video. [576p] Outputs 576 lines of progressive video. [576i] Outputs 576 lines of interlaced video. 3 System Setting You cannot select [4:3 Letter Box] and [4:3 Pan Scan] option when the resolution is set to higher than 720p. Note ,, yy If you select a resolution manually and then connect the HDMI jack to TV and your TV does not accept it, the resolution setting is set to [Auto].

yy Not supported resolution on the setting menu turns disabled. Note ,, HDMI Color Setting Select the type of output from the HDMI OUT jack. For this setting, please refer to the manuals of your display device. [YCbCr] Select when connecting to a HDMI display device. [RGB] Select when connecting to a DVI display device.

Screen Size Setting This function adjusts the Screen Size you want to display. Please select the Screen Size within [99% ~ 92%] or [Original Size]. 28 System Setting [SOUND] Menu Each disc has a variety of audio output options. Set the unit's Audio options according to the type of audio system you use. Sampling

Freq.

[192 kHz] Select this if your A/V Receiver or Amplifier is capable of handling 192 kHz signals.



[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)  
<http://yourpdfguides.com/dref/5452748>

[96 kHz] Select this if your A/V Receiver or Amplifier is not capable of handling 192 kHz signals. When this choice is made, this unit automatically converts any 192 kHz signals to 96 kHz so your system can decode them. [48 kHz] Select this if your A/V Receiver or Amplifier is not capable of handling 192 kHz and 96 kHz signal. When this choice is made, this unit automatically converts any 192 kHz and 96 kHz signals to 48 kHz so your system can decode them. Check the documentation for your A/V Receiver or Amplifier to verify its capabilities. Digital Audio Out Select the output sound format when a device equipped with a HDMI or Digital Audio input jack is connected to the HDMI OUT or OPTICAL (DIGITAL AUDIO OUT) jack on this unit. [PCM Stereo] Select if you connect this unit's HDMI OUT or OPTICAL (DIGITAL AUDIO OUT) jack to a device with two-channel digital stereo decoder. [Primary Pass-Thru] Select if you connect this unit's OPTICAL (DIGITAL AUDIO OUT) and HDMI OUT jack to a device with LPCM, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and DTS-HD decoder. 3 System Setting Dolby Digital Plus [Off] When [Digital Output] setting is [Primary PassThru], digital audio output for Dolby Digital Plus contents is Dolby Digital bitstream.

If the external device does not support Dolby Digital, this unit outputs PCM Stereo via digital output port. [On] When [Digital Output] setting is [Primary Pass-Thru] and the external device, which is connected with HDMI cable, supports Dolby Digital Plus, HDMI output for Dolby Digital Plus contents is Dolby Digital Plus bitstream and OPTICAL(DIGITAL AUDIO OUT) is muted. In case this unit is connected to the external device, which does not support Dolby Digital Plus, digital audio output for Dolby Digital Plus contents is Dolby Digital. If the external device does not support even Dolby Digital, this unit outputs PCM Stereo via digital output port. DRC (Dynamic Range Control) This function allows you to listen to a movie at a lower volume without losing clarity of sound. [Off] Turns off this function. [On] Compress the dynamic range of the Dolby Digital, Dolby Digital Plus or Dolby TrueHD audio output. [Auto] The dynamic range of the Dolby TrueHD audio output is specified by itself. And the dynamic range of the Dolby Digital and Dolby Digital Plus are operated as same as the [On] mode. System Setting 29 [DTV] Menu Auto Tuning This option scans a programme and sets the available programmes.

Refer to pages 23-24 for more information. Default Recording Device This option sets the storage where your TV recording will be stored. 1. Display [Setting] menu. 2.

Use w/s to select [DTV], and press ENTER (b). 3. Use w/s to select [Default Recording Device] and press ENTER (b). 4. Select an option between [HDD] or [USB].

yy Even though [USB] is selected TV recording will be stored on internal HDD, if there is not proper external storage. yy Additionally default Rec.List storage is also applied by this menu option. Manual Tuning Scans digital TV or radio programmes and adds the found programmes to the programme list.

Refer to page 24 for more information. Note ., Channel Edit This option allows you to edit the TV or Radio programmes. Refer to page 25 for more information. 3 System Setting Antenna 5V If you are using an indoor antenna, use one with a signal amplifier rated at DC 5V, 100 mA and set this option to [On]. Refer to page 26 for more information. Timeshift Set this option to [Auto] to use the Time Shift function automatically without pressing TIME SHIFT button.

The timeshift will start after TV viewing is started. Refer to page 26 for more information. CI Information You can enjoy not only scramble services using the Conditional Access Module (CAM), but also FreeTo-Air services. Different CAM supports different encryption system. Contact your service provider or distributor to obtain the right kind of CAM. Only Free-To-Air services are available without CAM. This option displays a menu of CI card functions. Consult your service provider for more information on the functions available. You must obtain a "CI or CI+ CAM" from your service provider. CI Operator Profile Mode In case of On it shows a channel list that is offered by CAM operator.

30 System Setting [LOCK] Menu To access any features in the [LOCK] settings, you must enter the 4-digit security code you have created. If you have not entered a password yet, you are prompted to do so. Enter a 4-digit password twice, and press ENTER (b) to create a new password. Parental Guidance Viewing of some digital TV programmes can be limited according to the age limit you set. (See "Setting the Parental Guidance" on page 26.

) DVD Rating Blocks playback of rated DVD based on their content. (Not all discs are rated.) [1 (Kids) - 8 (Adults)] Rating [1 (Kids)] has the most restrictions and rating eight [8 (Adults)] is the least restrictive. [Blocking Off] If you select [Blocking Off], parental control is not active and the disc plays in full. Set Password You can create, or change the password.

[New] Enter a 4-digit password twice, and press ENTER (b) to create a new password. [Confirm] Enter the current password and press ENTER (b). Enter a 4-digit password twice, and press ENTER (b) to create a new password. If you forget your password If you forget your password, you can clear it using the following steps: Use w/s to select [LOCK], and press ENTER (b). If you forgot the password, press "0325" using numeric button on the remote control. New password input menu will be appeared. 3 System Setting Area Code Enter the code of the area whose standards were used to rate the DVD video disc, based on the list on page 58. Save CAM PIN code If you saved the CAM PIN, the unit will automatically send the CAM PIN information without displaying PIN code window Lock System Allows you to set up specific programs and ratings through blocking schemes. Also allows you to activate or disable all of the lock schemes previously set up. A password is required to gain access to the lock menu options.

(See "Lock System" on page 25.) Block Programme After select channels, run the Edit functions. If the programme is assigned to block and [LOCK] in the [Setting] menu is set to [Lock system], you should enter the password to watch the programme. (See "Setting the Block Programme" on page 25.) System

Setting 31 [OPTION] Menu Language(Language) Select a language for the [Setting] menu and onscreen display. Use w/s/a/d to select a Menu Language, Audio Language, Audio Language, Subtitle language, Text Language for the on-screen display, and press ENTER (b). Disc Menu/Disc Audio/Disc Subtitle/Disc Language Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu. [Original] Refers to the original language in which the disc was recorded. [Other] Press ENTER (b) to select another language. Use number buttons then press ENTER (b) to enter the corresponding 4-digit number according to the language code list on page 59.



[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)  
<http://yourpdfguides.com/dref/5452748>

[Off] (Disc Subtitle only) Turn off Subtitle. Depending on the disc, your language setting may not work. 5. Press a/d to select a value then press ENTER (b) (GMT-1 ~ GMT-11, GMT ~ GMT+12). yy There are cases where the TV station does not send, or sends wrong date and/or time information and the recorder sets the incorrect time.

yy If this happens, we recommend that you set the clock manually. Manual Time Setting 1. Select [Time Setting] option then press ENTER (b). 2. Use a/d to select [Manual] option then press ENTER (b).

3. Enter the necessary information for date and time. a/d (left/right): Moves the cursor to the previous or next column. w/s (up/down): Changes the setting at the current cursor position. Note ,, 3 System Setting 4. Press ENTER (b) to confirm your setting. DivX® VOD ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration. [DivX VOD Registration] Displays the registration code of your player. [DivX Deregistration] Deactivate your player and display the deactivation code. Note ,, Time Setting When Channel auto search is completed the actual Time and Date are also set automatically. If the time in the recorder display is not correct, the clock must be set manually. Auto Time Setting 1.

Select [Time Setting] option then press d. 2. Use a/d to select [Auto] option then press ENTER (b). 3. If the clock that has automatically set is different with your local clock, you can add more time using [Time Zone] option.

(For example, when summer time is started in local area.) Press w/ s/a/d to select [Time Zone] option. 4. Use w/s to select [Offset] option then press ENTER (b). 32 System Setting All the downloaded videos from DivX VOD with this player's registration code can only be played back on this unit.

Note ,, Factory Reset You can reset the recorder to its original factory settings. @@@@1. Select [Factory Reset] option then press d. 2. Press ENTER (b) and then confirm message will appear. @@@@1. Press HOME (n). @@@3. Use w/s to select [OPTION] and press ENTER (b). 4.

Use w/s/a/d to select [Internal HDD Format], and press ENTER (b). Select [No] and press ENTER to cancel. @@@@If you load a completely blank disc, the recorder will initialize the disc. Also, you can reformat the DVD-RW/DVD+RW from the Setting menu as below. 1. Display [Setting] menu. 2. Select [DISC] option then press ENTER (b). 3. Select [OK] then press ENTER (b).

The recorder starts finalizing the disc. yy How long finalization takes depends on the type of disc, how much is recorded on the disc, and the number of titles on the disc. yy DVD-R, DVD+R DISC can be finalized only one time. @@@4. Press ENTER (b) while [Yes] is selected.

Format Disc menu appears. Disc initialization is completed will appear. @@@@1. Select [Finalize] option then press ENTER (b). 2.

Press ENTER (b) while [Finalize] is selected. @@@@yy DTV antenna connection is required. @@@@1. While watching DTV, press CH LIST. 2. Press red (R) coloured button to display [Channel Edit] menu. @@@2. Use a/d to select [DTV] on the HOME menu and press ENTER (b). 3. Use a/d to select [Live TV] and press ENTER (b).

@@@@@8. On the channel list menu, use a/d to move to the Favourite Ch. Group menu. @@@@1. While watching DTV, press Q.MENU. @@@2. Press INFO/MENU (m) again to close the programme information. @@@@You can select a subtitle language when it is available. 1.

While watching DTV, press Q.MENU or SUBTITLE. @@@@1. While watching DTV, press Q.MENU.

@@yy You can find a programme that supports subtitle language on the programme information. For the programmes with subtitle, SUB icon appears on the programme information. yy While playing the recording title, You can select the subtitle language by pressing Q.MENU button. Note ,, 3.

Use w/s to select audio language or an encoding method, and press ENTER (b). yy This option is not available while recording. yy While playing the recording title, You can select the audio language by pressing Q.MENU button. Note ,, 36 Operating Changing Aspect Ratio You can change the TV aspect ratio setting while playback. 1. While watching DTV, press Q.MENU. 2. Use a/d to select the [Aspect Ratio] option.

Programme Guide (Digital program only) The Program Guide contains schedule and program information for digital programs. They also provide local over-the-air programs information including conventional digital programs. Use the Program Guide to find programs easily and conveniently and to view schedule and descriptive program information for the programs. To Display the Program Guide 3. Use w/s to select aspect ratio, and press ENTER (b). While playing the recording title, You can select the aspect ratio by pressing Q.MENU button. Press the GUIDE button on your remote control. Note ,, 4 Operating

Changing Recording device You can set the storage location where you want to store the DTV recordings. 1.

While watching DTV, press Q.MENU. 2. Use a/d to select the [Recording device] option. To Exit the Program Guide Press the BACK (1) button to return to the last program you tuned to.

To navigate through programs on the Guides Use w/s/a/d on your remote control to navigate the guide screen. You can move faster through programs by scrolling page-by-page with the CH (W/S) buttons on the remote control. Each button stroke scrolls one page up or down. 3. Use w/s to select storage, and press ENTER (b).

This option is unavailable while recording. Note ,, To tune to another current channel Use w/s/a/d to select a current channel then press ENTER (b) and watch TV button. You can watch the channel. To display the Full Information window You can view the detail information for the highlighted program. Press INFO/MENU (m) or ENTER (b) to display detail information window. To exit from the detail information window, press INFO/MENU (m) or select [Close] then press ENTER (b). Operating 37 To change date When the Program Guide with 8 days is displayed, you can also change the date of the Program Guide by pressing the green (G) coloured button, you can set the time +24H. On the contrary, by pressing the red (R) coloured button, you can set the time -24H.

After setting favourite channels from the CH list, you can use the FAV button to toggle between [All] and [A~D] channel list. Using the timeshift function automatically If you set the timeshift option to [Auto], live TV broadcast will automatically be recorded to the HDD without pressing the TIME SHIFT button.

@@@@1. Press I/I (POWER) to turn on the unit. The timeshift function will automatically start.



[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)  
<http://yourpdfguides.com/dref/5452748>



Press c/v to playback of timeshift fast forward or fast reverse. 2. Press HOME (n) to exit from the DTV viewing. @@yy Without changing a channel, the timeshift function will go on. @@Ex) Power off, Record etc. @@@@yy Timeshift record Mode is not supported for Audio Only Channel. @@@@1. Press TIME SHIFT while watching a TV broadcast. The recorder starts recording the current TV programme to the HDD. @3. Press z to resume watching the programme. Press ENTER (b) or a/d to display the progress of timeshift.

Press c/v to playback of timeshift fast forward or fast reverse. @@ Timeshift cannot be saved as a recorded title. When recording and copying or record deleting the record, timeshift function is will be stopped. Note ,, 4 Operating Note ,, 38 Operating Using the teletext (Viewing Teletext) Many Digital TV programmes broadcast information via their text service, and this recorder has access to dedicated text programmes transmitted by the broadcasters. Recording TV programmes You can watch another channel while recording a channel or record up to two different programmes simultaneously in the built-in HDD and playback the recorded programmes.

Dual Programme Recording You can record two Digital TV programme at the same time. 1. Use CH (W/S) to select a programme you want to record. 2. Press REC. (X) to start recording. 1. Press TEXT while watching TV. 3. Use CH (W/S) to select another programme you want to record.

4. Press REC. (X) to start recording. While recording two programmes simultaneously, you can only watch the programmes being recorded. 4 Operating 2. Use coloured (R/G/Y/B) button to select a page. You can also select a page by entering a three digit number with the numerical buttons. 3. Press TEXT or EXIT to exit the teletext screen. Additionally, you now have four coloured buttons to navigate through the content of the page.

The use of these coloured buttons will be displayed on the screen. Note ,, Normal Recording 1. Use CH (W/S) to select a programme you want to record. 2. Press REC.

(X) to start recording. yy If the TV screen turns black with stop mark that caused by no signal, scramble and any other reasons, then recording is unavailable. yy You can record maximum 300 titles. yy Pay channel can not be recorded correctly if you don't insert CI or CI+ CAM. yy You should unlock parental rating of CI CAM if you want to use timer record correctly.

yy When you record pay channel, recorded title can be divided in to several titles according to CAM authentication. yy Some of title can not be played well if title is recorded when CAM is not authenticated by this recorder. Note ,, Operating 39 Stop Recording You can stop recording instantly in Live TV. 1. Press Z (STOP) then stop dialogue is displayed. 2. Use a/d to select [Yes] and press ENTER (b) to stop recording. To stop recording, you must move to the programme being recorded before pressing Z (STOP). 4. Enter the necessary information for your timer recording(s).

Note ,, a/d (left/right) – Move the cursor left/right w/s (up/down) – Change the setting at the current cursor position. You can use numbered buttons to change the setting. Timer Recording (Manual) You can set the timer for a total of 30 programmes, up to 22-28 days in advance. 1. While watching TV, press TIMER REC.. 5. Select [Next], and press ENTER (b). 6. Use w/s/a/d to select a programme to record, and press ENTER (b).

(programme shows icon) 4 Operating 2. Use w/s/a/d to select the date to record, and press ENTER (b). 7. Select [Complete], and press ENTER (b) to save the programme. 3.

Use a/d repeatedly to select [Once, Daily, Mon.–Fri., Sat.–Sun. or Manual], and press s.

If you want to select the day manually, select [Manual] then press s, and press ENTER (b). Select the desired day using w/s/a/d and press ENTER (b). yy The timer recording can be set from 2 minutes after the current time. yy You should unlock parental rating of CI or CAM if you want to use timer record correctly.

Note ,, 40 Operating Timer Recording (Programme Guide) You can also set the timer based on the information provided by the programme guide. 1. While watching TV, press GUIDE. 8. Use w/s/a/d to select a programme to record, and press ENTER (b). (programme shows icon) 9.

Select [Complete], and press ENTER (b) to save the programme. 10. Press BACK (1) to return to the TV viewing. 2. Press red (R) or green (G) coloured button to select date field. 3. Use a/d to select the programme list, and select a programme you want to record using w/s. 11. Press TIMER REC., and press the blue (B) coloured button.

4 Operating 4 Press the yellow (Y) coloured button. Check whether the schedule is registered properly or not. 5. Use w/s/a/d to select the date to record, and press ENTER (b). Instant Timer Recording with Programme Guide You can set the recording time instantly to stop the recording automatically.

1. While watching TV, press GUIDE. 6. Use a/d repeatedly to select [Once, Daily, Mon.–Fri.

, Sat.–Sun. or Manual], and press s. If you want to select the day manually, select [Manual] then press s, and press ENTER (b). Select the desired day using w/s/a/d and press ENTER (b). 2. Use a/d to select the programme list, and select a programme you want to record using w/s. 3. Press ENTER (b) to display instant recording menu. 7.

Select [Next], and press ENTER (b). Operating 41 Modify a timer recording You can modify a pre-scheduled timer recording before the timer recording actually starts. 1. While watching TV, press TIMER REC.. 2. Press the blue (B) coloured button. 4. Use a/d to select [Record] and press ENTER (b). If you select [Advanced Schedule] and press ENTER (b) to follow the steps 3-5 from “Timer Recording (Manual)” on page 39 to complete the editing.

5. Select [Yes] and press ENTER (b). 6. Use a/d to select [Yes] and press ENTER (b) to start recording. 3.

Use w/s to select programme field, and press ENTER (b). 4. Use w/s to select [Modify], and press ENTER (b). 5. Use w/s/a/d to select a category to change, and press ENTER (b).

Deleting a timer recording You can delete a timer recording before the timer recording actually starts. 1. While watching TV, press TIMER REC.. 2. Press the blue (B) coloured button. 3. Use w/s to select a schedule you want to delete, and press ENTER (b). 4. Use w/s to select [Delete], and press ENTER (b).

The adjustable items are listed below. Date Type / Time Repeat Sets the start date Sets the start time and end time. Choose a desired repeat mode. (Once, Daily, Mon.–Fri., Sat.–Sun. or Manual) 4 Operating 6. Select [Cancel] and press ENTER (b) to cancel. 5.

Select [Yes] and press ENTER (b) to delete selected schedules (selected recording). Select [No] and press ENTER (b) to cancel. 42 Operating Instant Timer Recording You can set the recording time instantly to stop the recording automatically. 1. Use CH (W/S) to select a programme you want to record.

2. Press REC. (X) to start recording. Press ENTER (b) to display the progress of recording. Recording from Video/Audio Input You can record from an external composite, such as a camcorder, connected to any of the unit's external inputs.



[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)

<http://yourpdfguides.com/dref/5452748>

1. Make sure that the component you want to record from is connected properly to the unit. See page 19. 2. Select the recording location using [Default Recording Device] option on the Setting menu. (page 29) 3. While watching TV, press INPUT or select [AV] option on Home menu to select the external input. Record with external input is not available if you're recoding TV broadcasting. 4. Press REC.

(X) once to start recording. 5. Press Z (STOP) to stop recording. yy The external USB HDD recording feature is only supported on first primary partition and it must be formatted with 4KB block NTFS. yy If your source is copy-protected using CopyGuard, you will not be able to record it using this recorder. For more details, See Copyright on page 5. yy In case an incoming signal is NTSC, recording and playback does not work. (only PAL Incoming signal is recordable.) yy You can't use Home menu or enter TV mode while recording process is underway using the external input. If you want to change recording time during recording, press REC.

(X) button then, change it in the Record option menu. 4 Operating 3. Press Z to stop recording. yy The external USB HDD recording feature is only supported on first primary partition and it must be formatted with 4KB block NTFS. yy If the unit cannot catch the signal, the recording will be pause, actual recording time can be less than the time set on timer.

yy The quality of recording can be different on the status of the broadcast signal. yy During the recording, turning off by force can cause a serious problem on hard disk drive. yy Recording can be restarted when contents status is changed and it'll separate recording title into two individual title consequently. Note ,, Note ,, Operating 43 General Playback Playing a disc DVD AVCHD ACD 1. Press B (OPEN/CLOSE), and place a disc on the disc tray.

2. Press B (OPEN/CLOSE) to close the disc tray. For most Audio CD, DVD, AVCHD and DVD-ROM discs, playback starts automatically. To stop playback Press Z (STOP) during playback. To pause playback Press M (PAUSE) during playback. Press z (PLAY) to resume playback. To scan forward or backward Press c or v to play fast forward or fast reverse during playback. You can change the various playback speeds by pressing c or v repeatedly. 3. Press HOME (n).

4. Select [Movie], [Photo] or [Music] using a/d, and press ENTER (b). To slow down the playing speed While the playback is paused, press v to play at slow motion. To skip to the next/previous chapter/track/file During playback, press C or V to go to the next chapter/track/file or to return to the beginning of the current chapter/track/file. Press C twice briefly to step back to the previous chapter/track/file. In case of movie file, press C one time. You can play previous file. 4 Operating 5. Select the disc icon using a/d, and press ENTER (b). Playback functions described in this manual are not always available in every files and media.

Some functions can be restricted depending on many factors. Note ,, 44 Operating Using the disc menu DVD AVCHD Playing the recorded titles REC 1. While watching TV, press REC.LIST to display the options menu or use w/s/a/d to select [Recorded TV] on the HOME menu and press ENTER (b). To display the disc menu The menu screen may be displayed first after loading a disc which contains a menu.

If you want to display the disc menu during playback, press DISC MENU. Use w/s/a/d buttons to navigate through menu items. Resume playback DVD AVCHD This unit remembers the point where you pressed the Z (STOP) depending on the disc. If "ZM (Resume Stop)" appears on the screen briefly, press d (PLAY) to resume playback (from the scene point). If you press Z (STOP) twice "Z (Complete Stop)" appears on the screen.

The unit will clear the stopped point. yy The resume point may be cleared when a button is pressed (for example; 1 (POWER), B (OPEN/CLOSE), etc.) yy Resume playback may not work depending on the present play section. (Resume playback is disabled on the disk menu section.) 2. Use w/s/a/d to select recording title. If you want to view previous or next page, press PAGE (W/S). 3. Press z (PLAY) to play the recorded title. yy NEW text is displayed next to recorded files that have not been viewed yet.

yy Pay channel title does not have thumbnail. 4. Use w/s/a/d to select a recorded title then press ENTER (b) to display the option menu. 4 Operating Note ,, Note ,, 5. Use w/s to select [Play on previous play time.] or [Play from the start.] option, and press ENTER (b) to play the recorded title. yy You can change device on the [Recorded TV] menu. Press green (G) colored button to display the [Linked Device List] menu. Use w/s to select device, and press ENTER (b).

yy While playing disc, [Play on previous play time.] is not supported. Note ,, Operating 45 Sorting the recorded titles REC 1. While watching TV, press REC.LIST to display the [Recorded TV] or use w/s/a/d to select [Recorded TV] on the HOME menu and press ENTER (b).

2. Press yellow (Y) coloured button repeatedly to sorted by recorded time in recent order or title name in alphabetical order. [ABC] – by title name in alphabetical order. [Recent] – sorted by recorded date. If you rename a title in DISC, it will take long time.

Note ,, Deleting a recorded titles REC You can delete recorded title. 1. While watching TV, press REC.LIST to display the [Recorded TV] or use w/s/a/d to select [Recorded TV] on the HOME menu and press ENTER (b). 2. Press blue (B) colored button. 3. Use w/s/a/d to select a recording title then press ENTER (b). (shows icon) 4. Press yellow (Y) colored button.

In case of [ABC] sort, the extended character like tilde can sort incorrectly. Note ,, Rename the recorded titles REC You can rename a recorded title. 1. While watching TV, press REC.LIST to display the [Recorded TV] or use w/s/a/d to select [Recorded TV] on the HOME menu and press ENTER (b). 2. Use w/s/a/d to select a recorded title then press ENTER (b). 3. Use w/s to select [Rename] option, and press ENTER (b) to display the virtual keyboard. 4.

Select a letter using w/s/a/d on the keyboard menu. To enter a letter with an accent mark: 5. Use a/d to select [Yes], and press ENTER (b) to delete the selected recorded titles. yy It is unable to do delete during the recording. yy If you delete a title in DISC, it will take long time.

yy If you want delete all titles then HDD format is more faster and more safe (OPTION : Internal HDD format). 6. Press red (R) colored button, you can (un)select all titles. 4 Operating Note ,, [ ] – Inserts a space at the cursor position. [ ] – Deletes the previous character at the cursor position.

[a/A/#] – Change the keyboard menu settings to capital letters, small letters or symbols. 5. Enter a new name using virtual keyboard, and press ENTER (b) while [OK] is selected. 46 Operating Playing movie file and VR discs You can play DVD-RW discs that are recorded in Video Recording (VR) format and movie files contained on a disc/HDD/USB device.



[You're reading an excerpt. Click here to read official LG RH735C user guide](http://yourpdfguides.com/dref/5452748)

<http://yourpdfguides.com/dref/5452748>