



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG RHT599H. You'll find the answers to all your questions on the LG RHT599H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG RHT599H
User guide LG RHT599H
Operating instructions LG RHT599H
Instructions for use LG RHT599H
Instruction manual LG RHT599H

USER MANUAL

LG
Life's Good

Freeview+ DVD Recorder with HDD

RHT599H

Freeview + digital DV3 DVD RW DIVX
DOLBY DIGITAL Windows Media DVFX RAM HDMI

LG RHT49X instructions.indd 1 2009-03-04 3:50:12



[You're reading an excerpt. Click here to read official LG RHT599H user guide](http://yourpdfguides.com/dref/5477888)
<http://yourpdfguides.com/dref/5477888>

Manual abstract:

@@DO NOT open the unit and stare directly into beam. WARNING: Risk of explosion and damage to the unit and remote control if batteries are replaced incorrectly. WARNING: DO NOT dispose of batteries in a fire. WARNING: DO NOT dispose of batteries with normal household waste, take to a local recycling centre. WARNING: To prevent fire or electric shock hazard, DO NOT expose this product to rain or moisture. WARNING: DO NOT expose this unit to dripping or splashing water. Objects filled with liquids, such as vases, should NOT be placed on or near the unit. WARNING: DO NOT place heat sources or naked flames (e.g candles) on or near this unit. WARNING: Slots and openings on this unit are for ventilation to prevent over heating.

@@@Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorised by Macrovision corporation. Reverse engineering or disassembly is prohibited. REGIONAL CODES This unit has a regional code printed on the rear of the unit and can play only DVD discs labelled with the same code as on the rear of the unit or "ALL". Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your unit's regional code or the disc cannot play.

If you try to play a DVD with a different regional code from the unit, the message "Incorrect region code. Can't play back" appears on the TV screen. DISPOSAL OF YOUR OLD UNIT The wheeled bin symbol means the unit and remote control is covered by the European Directive 2002/96/EC. DO NOT dispose of this unit with normal household waste, take to a local authority recycling centre. Dispose of packaging correctly after installation LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC and 2009/125/EC.

European Standards Centre: Krijgsman 1, 1186 DM Amstelveen, The Netherlands Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product. chased this product. OPEN SOURCE SOFTWARE NOTICE This unit includes the following open source software: Freetype library : copyright © 2003 The FreeType Project (www.freetype.org). Zlib compression library developed by Jean-loup Gailly and Mark Adler. Copyright (C) 1995-2005 Jean-loup Gailly and Mark Adler. Doubly Linked List licensed by Artistic license. You can download this software from <http://freshmeat.net/projects/linklist/>. Manufactured under license from Dolby Laboratories. Dolby and the D symbol are trademarks of Dolby Laboratories. 3 LG RHT49X instructions.indd Sec1:3 2009-03-04 3:50:13 SPECIFICATIONS GENERAL Power requirements: Power consumption: Dimensions (approx.): Net weight (approx.): Operating temperature: Operating humidity: Television system Analogue: Digital: Recording format AC 200-240V, 50/60 Hz 30W 430 X 49 X 275 mm (w x h x d) without foot 4 kg 5°C to 35°C 5 % to 65 % PAL I, B/G, I/I, SECAM D/K, KI, colour system DVB-T Standard Compliant PAL AUDIO RECORDING FORMAT Sampling frequency Compression format 48kHz Dolby Digital PLAYBACK Frequency response Signal-to-noise ratio Harmonic distortion DVD (PCM 48 kHz): 8 Hz to 22 kHz, CD: 8 Hz to 20 kHz DVD (PCM 96 kHz): 8 Hz to 44 kHz More than 90 dB (AUDIO OUT connector) Less than 0.02% (AUDIO OUT connector) RECORDING Recording format Recordable media DVD Video Recording, DVD-VIDEO HDD (500GB) DVD-RW, DVD-R, DVD+RW, DVD+R, DVD+R(Double Layer), DVD-RAM DVD (4.7GB): Approx.1 hour (XP mode), 2 hours (SP mode), 4 hours (LP mode), 6 hours (EP mode), 14 hours (MLP mode) DVD+R DL (8.5GB): Approx. 3 hours (XP mode), 3.8 hours (SP mode), 7.3 hours (LP mode), 9.1 hours (EP mode) 21 hours (MLP mode) HDD (500GB, MPEG2 Recording): Approx. 133 hours (XP mode), 259 hours (SP mode), 506 hours (LP mode), 715 hours (LP mode), 169 hours (MLP mode) INPUTS Antenna in Video in Audio in DV in USB in Antenna input, 75 ohms 1.0 Vp-p 75 ohms, sync negative, RCA jack x 1 / SCART x 2 2.0 Vrms more than 47 kohms, RCA jack (L, R) x 1 / SCART x 2 4 pin (IEEE 1394 standard) 4 pin (USB 1.1 standard) Recordable time OUTPUTS Video out S-Video out Vp-p 75 , sync negative, SCART x 2 (Y) 1.0 V (p-p), 75 , sync negative, Mini DIN 4-pin x 1(C) 0.3 V (p-p) 75 Component video out (Y) 1.0 V (p-p), 75 , sync negative, RCA jack x 1, (PB)/(PR) 0.7 V (p-p), 75 , RCA jack x 2 HDMI video/audio output 19 pin (HDMI standard, Type A) Audio output (digital) 0.5 V (p-p), 75 , RCA jack x 1 Audio output (optical) 3 V (p-p), Optical connector x 1 Audio output (analog) 2 Vrms (1 kHz, 0 dB), 600 , RCA jack (L, R) x 2 / SCART x 2 VIDEO RECORDING FORMAT Sampling frequency Compression format 27MHz MPEG2 4 LG RHT49X instructions.indd Sec1:4 2009-03-04 3:50:13 RECORDABLE AND PLAYABLE DISCS This unit can play and record all widely-used DVD types. The table below shows some specific compatability differences depending on the disc types. The table below shows the file formats and media types that this unit can playback. DVD Discs such as movies that can be purchased or rented. Audio CD Music CDs or CD-R/RWs in music CD format that can be purchased. Data disc (DivX, JPEG, MP3 or WMA) Discs that contain DivX, JPEG, MP3 or WMA files.

5 LG RHT49X instructions.indd Sec1:5 2009-03-04 3:50:13 GUARANTEE TECHNOLOGY WITH THE HUMAN TOUCH LG Electronics U.K. Ltd. will provide the following services in order to expedite this Guarantee. 1. All faulty components which fail due to defective manufacture will be replaced free of charge for a period of 12 months from the original date of purchase. 2. The dealer (or his service agent) who sold the product will be reimbursed for any labour provided in the repair of this LG equipment, for a period of 12 months from the original date of purchase. These claims must be made in accordance with the published scale of service charges and relevant claims procedure.

This guarantee does not affect your statutory rights. REQUIREMENTS TO MAINTAIN WARRANTY COVERAGE: RETAIN YOUR RECEIPT TO PROVE DATE OF PURCHASE. A COPY OF YOUR RECEIPT MUST BE SURRENDERED AT THE TIME GUARANTEE SERVICE IS PROVIDED. Product Registration Card: Complete at least your name, address, phone, model & serial numbers and return it. This will enable LG to assist you in the future should you lose your receipt, your unit is stolen, or should modifications be necessary.

For help call Customer Service Centre 0870 873 5454 Monday Friday 9.00am - 4.30pm LG House, 250 Bath Road, Slough, Berkshire, SL1 4DX PLEASE NOTE A. The dealer may restrict the guarantee to the original purchaser. B.

The dealer is not obliged to carry out service under guarantee if unauthorised modifications are made to the apparatus, or if non standard components are used or if the serial number of the apparatus is removed, defaced, misused, or altered.



[You're reading an excerpt. Click here to read official LG RHT599H user guide](http://yourpdfguides.com/dref/5477888)
<http://yourpdfguides.com/dref/5477888>

C. Any claims made under guarantee must be directed to the dealer from whom the equipment was originally purchased. The dealer may, before carrying out service under guarantee, require a receipted account as evidence of the date of purchase. D. We respectfully point out that your dealer is not obligated to replace batteries if they become exhausted or worn in use. E. Aerial alignment and consumer control adjustments are not covered by this guarantee. LGEUK Website: www.lge.

co.uk (service website : www.lgelectronics.co.uk) MODEL NO* SERIAL NO* DATE OF PURCHASE* Please complete for your own record. In case of difficulty consult your LG dealer from whom the product was purchased 6 LG RHT49X instructions.indd Sec1:6 2009-03-04 3:50:13 **IMPORTANT COMPATIBILITY AND DIGITAL TV COVERAGE STATEMENT** Before purchasing this unit, please ensure that you can receive a digital TV transmission signal in your area. Please be aware that not all high definition TVs are fully compatible with this unit. For TVs with 625 progressive scan problems, switch to a standard definition (576i, 576p). Please contact our customer service centre if you have any questions regarding TV compatibility issues. **POWER:** This unit operates on a mains supply of 200-240V~, 50/60Hz. **WARNING:** This unit is supplied with a BSI 1363 approved 13 amp mains plug, fused at 5 amp. When replacing the fuse always use a 5 amp BS 1362, BSI or ASTA approved type. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer.

If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below: **WARNING:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol or coloured green or green and yellow. If any other plug is fitted, use a 5 amp fuse, either in the plug, or at the distribution board.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following codes: **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. **CONTENTS QUICK START** Introducing your LG recorder and remote control Connecting your LG recorder Auto set-up, playing a disc Accessing Freeview+ & The Digital EPG Recording 8 10 12 12 13 14 14 15 16 16 18 19 21 22 24 26 27 28 29 30 32 35 39 42 42 43 43 **CONTENTS MAIN GUIDE** Terms and tips HDMI connection Connecting a Pay-TV decoder / BSKYB / VCR Connecting a digital camcorder Digital audio connection Adjust settings General settings Language settings Parental lock settings Recording settings Disc settings Software update & system information Viewing TV Recording Using other media types Playback from disc Editing recorded content Copying and moving files, folders and titles **BOX CONTENTS:** DVD and HDD recorder (1), RF cable (1), Remote control (1), Battery (1). Design and specifications are subject to change without notice. **TROUBLESHOOTING** General Playback Recording HDMI 7 LG RHT49X instructions.indd Sec1:7 2009-03-04 3:50:13 **INTRODUCING YOUR LG RECORDER** Main Unit 1 2 4 3 1. / I **POWER** Switches the unit ON or OFF. 7. REC Starts recording. Press repeatedly to set the recording time.

2. Disc Tray Insert a disc here. 3. OPEN/CLOSE Opens or closes the disc tray. 9 15 10 5678 4. Display Window Shows the current status of the unit. T/S:Indicates the timeshift mode. REC:The uthe TV without switching the unit on. Connect the power cord to 'AC IN' terminal on the unit. Then plug the power cord into mains socket.

Turn **POWER ON** to the unit and TV. 10 LG RHT49X instructions.indd Sec1:10 2009-03-04 3:50:14 **HD CONNECTION OTHER OPTIONS QUICK START** **HDMI CABLE** HDMI connection is the digital replacement to the old SCART standard and provides the best picture and sound quality as well as being quick and simple to connect. Connect to **HDMI OUTPUT** port on the unit and to **HDMI INPUT** port on your TV. You can change the resolution (576i, 576p, 720p, 1080i or 1080p) for the HDMI output by pressing RES button on the front of the unit repeatedly.

HDMI cable sold separately. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC. **COMPONENT (Y PB PR) CABLE** A HD connection can also be obtained by using a ComRed button. g) Select Recording series option. h) Press OK [] To cancel recording: a) Select program.

b) Press [Red]. c) Re-select option. d) Press OK [] button. Timer icon will be removed. **QUICK START RECORDING** Instant recording The Instant record feature records your current program using your existing settings direct to the hard disk (HDD). To start instant recording: · Press REC [] button on remote control. Recording starts, onto HDD. If stop time required: · Press REC [] repeatedly to increase length of recording (10, 20, 30 minutes etc). To stop recording: · Press STOP []. 13 LG RHT49X instructions.

indd Sec1:13 2009-03-04 3:50:15 **CONNECTING YOUR LG RECORDER TERMS AND TIPS** Unit Press Select The LG HDD/DVD Recorder Press a [named] button on Unit's remote control] buttons freely on remote Press [control to highlight an option Set Follow instructions for currently displayed menu to choose an option Enter Press buttons on remote control to provide a code, name or password Panel Part of the display screen. Many screens have left, middle and right panels Accessing menus Press HOME [] on remote control to display first menu] from any menu to exit menu displays Press BACK [iii Select Sampling Freq. from middle panel. iv Select 48 kHz from right panel. v Press [OK] to confirm. If TV isn't equipped with Dolby Digital and MPEG decoder: · Set Dolby Digital and MPEG options to PCM. If TV isn't equipped with DTS decoder: · Set DTS to OFF. Use an HDMI cable (not supplied) to connect HDMI Output port on Unit to HDMI Input port on TV. Set resolution using RES. button on front panel of Unit.

Check device is switched off. Switch off Unit. Switch on device. Wait 30 seconds. Switch on Unit.

b) c) d) e) f) g) h) **DISPLAYING SET UP MENU** Displaying Set Up Menu a) Press HOME []. First menu is displayed.] until Easy Menu is displayed b) Press [c) Select SETUP d) Press OK [] to display set up menu **COAXIAL ANTENNA FEED 5V** To supply power to connected antenna: a) If antenna is indoor: · Ensure signal amplifier rate is DC 5V, 100mA @@Select Antenna Feed 5V from middle panel d) Select option in right panel: · If antenna is indoor: · Select ON · If antenna is outdoor: · Select ON or OFF e) Press OK [] to confirm **HDMI CONNECTION** HDMI cables provide optimal connection that produces better picture & sound quality than a SCART connection and gives you access to the HD upscaling features of this unit.



[You're reading an excerpt. Click here to read official LG RHT599H user guide](http://yourpdfguides.com/dref/5477888)
<http://yourpdfguides.com/dref/5477888>

You can alter the resolution for the HDMI output by pressing the RES button on the front of the unit repeatedly (576i, 576p, 720p, 1080i, 1080p). To connect a High Definition television or other HDMI enabled device: a) Check device is compatible with 720(1440)x576i, 720x576p, 1280x720p, 1920x1080i or 1920x1080p video input.

If TV can't handle 96 kHz sampling frequency: i Display set up menu (see Displaying Set Up Menu). ii Select audio options icon in left panel. 14 LG RHT49X instructions.indd Sec1:14 2009-03-04 3:50:15 CONNECTING A PAY-TV / CANAL PLUS DECODER DISPLAYING SET UP MENU a) b) c) d) Press HOME []. First menu is displayed.] until Easy Menu is displayed Press [Select SETUP Press OK [] to display set up menu To watch or record analogue PAY-TV/Canal Plus programmes: a) Disconnect Unit's mains lead b) Use a SCART lead to connect AV2 Decoder port on Unit to corresponding port on Decoder c) Reconnect Unit's mains lead d) Display set up menu (see Displaying Set Up Menu) e) Select AV2 Connection from middle panel f) Select Decoder from right panel g) Press OK [] to confirm h) Select Canal from middle panel i) Select ON from right panel j) Press OK [] to confirm Unit does not need to be switched on to view signal. To decode encoded signal for recording or watching PAY-TV/Canal Plus programs (see General Information section): a) Display set up menu (see Displaying Set Up Menu) b) Auto Programming is highlighted. @@Channel editing screen is displayed. e) Press [AV/INPUT] once. Decoder On/Off option is displayed in left panel.

f) Press OK [] to select ON. Canal+ is displayed when ON is selected. g) Pressing OK [] a second time turns option OFF.] to exit h) Press BACK [AV2 Connection To connect a decoder or other device to AV2 Decoder port on rear panel of Unit: a) Display set up menu (see Displaying Set Up Menu) b) Auto Programming is highlighted. Select AV2 Connection from middle panel c) Select option in right panel: Decoder to connect a PAY-TV decoder to AV2 Decoder port on Unit Others to connect a VCR or similar recording device to AV2 Decoder port on Unit d) Press OK [] to confirm Connecting a B Sky B Tuner / VCR / similar recording device To connect a B SKY B Tuner / VCR or another similar recording device follow these steps: a) Disconnect Unit's mains lead b) Use a SCART lead to connect AV2 Decoder port on Unit to VCR SCART port on device d) Reconnect Unit's mains lead e) Display set up menu (see Displaying Set Up Menu) f) Select AV2 Connection from middle panel g) Select Decoder from right panel h) Press OK [] to confirm i) Select recording options from left panel j) Set AV2 Recording to Auto, CVBS, RGB or SVideo k) If device is VCR: · Connect VCR to a second Line Input on TV for clear image MAIN GUIDE CONNECTING TO THE AV IN 3 PORTS Use audio/video cables to connect input ports (AV IN 3) on Unit to audio/video output ports on other device. 15 LG RHT49X instructions.indd Sec1:15 2009-03-04 3:50:15 CONNECTING A DIGITAL CAMCORDER To connect a digital DV camcorder: · Use a DV cable to connect the DV IN/OUT port of DV camcorder to DV IN port on front panel of Unit. To record from a DV-equipped camcorder to HDD: a) Press [AV/INPUT] button, under [9] button on remote control, repeatedly to select DV input b) Find start position on camcorder recording c) Press REC on Unit's front panel to start recording d) Use Unit's remote control buttons for STOP, PLAY and PAUSE functions DV recording audio For digital camcorder with two audio tracks and 32kHz/12-bit sound connected to DV IN port on front panel of Unit. To select soundtrack for recording: a) Display set up menu (see Displaying Set Up Menu) b) Select recording icon from left panel c) Select DV Record Audio from middle panel d) Select option from right panel: Audio 1: use sound recorded while shooting Audio 2: use overdubbed sound e) Press OK [] Audio Output. To choose digital audio signal when using a Digital Audio Output port: a) Press HOME [].

First menu is displayed.] until Easy Menu is displayed b) Press [c) Select SETUP d) Press OK [] to display set up menu e) Select audio options icon in left panel f) Select Audio Signal Type (Dolby, DTS, MPEG) from middle panel g) Select option in right panel: Bitstream when connecting Unit to an audio component with built-in decoder PCM when connecting Unit to an audio component without built-in decoder Off when connecting Unit to an audio component without built-in DTS decoder h) Press OK [] to confirm Sample Freq. @@@@First menu is displayed. @@Searching stops when Unit tunes into a channel. @@Press OK [] to confirm c) Enter Password if needed. @@@@Channel editing screen is displayed. e) Use [] to highlight title at top of program list.] to select DIGITAL TV, ANALOG TV or RADIO. @@@@Channel editing screen is displayed. e) Select channel to edit f) Press OK []. @@@@Channel editing screen is displayed. @@Program is set as favorite and FAV is displayed. @@First menu is displayed. @@@@Auto Setup menu is displayed. · HDD format. HDD contents are erased. @@First menu is displayed. @@Refer to language code list below ii Enter chosen code. @@@@First menu is displayed. @@@@Password has now been cleared.

@@h) Press OK [] to confirm DTV RATING To restrict viewing of Digital TV transmissions by age group: a) Display set up menu (see Displaying Set Up Menu) b) Select lock system icon in left panel c) Select DTV Rating from middle panel d) Press [] to move to right panel e) Enter password. · Press [CLEAR] to delete invalid entries f) Press OK [] to confirm g) Select an option: · Program rating level · Lock All: to block all programs. · No Control: to view all programs h) Press OK [] to confirm CHANGING/DELETING PASSWORD To change or delete password: a) Display set up menu (see Displaying Set Up Menu) b) Select lock system icon in left panel c) Select Set Password from middle panel · Select Change from right panel to change password: i Enter current password ii Enter new password iii Repeat new password · Press [CLEAR] to delete invalid entry iv Press OK [] to confirm · Select Delete from right panel to delete password i Enter current password · Press [CLEAR] to delete invalid entry ii Press OK [] to confirm MAIN GUIDE DIVX REG. CODE To view the DivX® registration code for Unit: a) Display set up menu (see Displaying Set Up Menu) b) Select lock system icon in left panel c) Select DivX Reg. Code from middle panel d) Select View in right panel. View icon is highlighted. e) Press OK [] to view registration code. YES is highlighted. f) Press OK [] to close the screen DVD RATING To control DVD viewing by age-related ratings: a) Display set up menu (see Displaying Set Up Menu) b) Select lock system icon in left panel c) Select DVD Rating from middle panel d) Press [] to move to right panel e) Enter password.



You're reading an excerpt. Click here to read official LG RHT599H user guide
<http://yourpdfguides.com/dref/5477888>

23 LG RHT49X instructions.

indd Sec1:23 2009-03-04 3:50:16 RECORDING SETTINGS RECORDING SETTINGS AREA CODE The area code determines which country's standards are used to rate DVDs for control by parents. Afghanistan AF Argentina AR Australia AU Austria AT Belgium BE Bhutan BT Bolivia BO Brazil BR Cambodia KH Canada CA Chile CL China CN Colombia CO Congo CG Costa Rica CR Croatia HR Czech Republic CZ Denmark DK Ecuador EC Egypt EG El Salvador SV Ethiopia ET Fiji FJ Finland FI France FR Germany DE Great Britain GB Greece GR Greenland GL Hong Kong HK Hungary HU India IN Indonesia ID Israel IL Italy IT Jamaica JM Japan JP Kenya KE Kuwait KW Libya LY Luxembourg LU Malaysia MY Area Code Maldives MV Mexico MX Monaco MC Mongolia MN Morocco MA Nepal NP Netherlands NL Netherlands Antilles AN New Zealand NZ Nigeria NG Norway NO Oman OM Pakistan PK Panama PA Paraguay PY Philippines PH Poland PL Portugal PT Romania RO Russian Federation RU Saudi Arabia SA Senegal SN Singapore SG Slovak Republic SK Slovenia SI South Africa ZA South Korea KR Spain ES Sri Lanka LK Sweden SE Switzerland CH Taiwan TW Thailand TH Turkey TR Uganda UG Ukraine UA United States US Uruguay UY Uzbekistan UZ Vietnam VN Zimbabwe ZW DISPLAY SET UP MENU a) Press HOME []. First menu is displayed.] until Easy Menu is displayed b) Press [c) Select SETUP d) Press OK [] to display set up menu RECORDING MODE Recording using different quality options allows you to choose between picture quality and available space depending on your unit model. To work out your unit's storage capacity in hours will depend on the size of your hard drive and the picture quality option selected when setting recording mode.

Table showing the storage capacity in hours. Picture quality option (Lowest quality) Size of hard drive (Giga Bytes) 500GB HDD MLP 1695hrs EP 715hrs LP 506hrs (Highest quality) SP 259hrs XP 133hrs To set area code: a) Display set up menu (see Displaying Set Up Menu) b) Select lock system icon in left panel c) Select Area Code from middle panel d) Press [] to move to right panel e) Enter password. · Press [CLEAR] to delete invalid entries f) Press OK [] to confirm g) Refer to area code list below to choose a code h) Enter area code i) Press OK [] to confirm To set recording mode: a) Display set up menu (see Displaying Set Up Menu, above) . b) Select recording icon from left panel. c) Select Recording Mode from middle panel.

d) Select picture quality option from right panel: MLP: lowest picture quality. EP: Low quality. 24 LG RHT49X instructions.indd Sec1:24 2009-03-04 3:50:17 LP: Slightly lower than SP mode. SP: Standard quality. XP: Highest picture quality. e) Press OK [] · 10 mins · 15 mins e) Press OK [] RECORDING ASPECT To set aspect ratio for recording to DVD: a) Display set up menu (see Displaying Set Up Menu) b) Select recording icon from left panel c) Select Record Aspect from middle panel d) Select option from right panel: i 4:3 ii 16:9 e) Press OK [] AV2 RECORDING Setting must be compatible with video input signal for clear picture. To select a method of inputting video signals for AV2 Decoder port: a) Display set up menu (see Displaying Set Up Menu) b) Select recording icon from left panel c) Select AV2 Record from middle panel d) Select option from right panel: · Auto: video input signal automatically matches signal received. · CVBS: Inputs CVBS (composite) video signals. · RGB: Inputs RGB signals.

· S-VIDEO: Inputs S-Video signals. e) Press OK [] TV RECORDING AUDIO To select audio channel when recording a bilingual program: a) Display set up menu (see Displaying Set Up Menu) b) Select recording icon from left panel c) Select TV Record Audio from middle panel d) Select option from right panel: · Main+Sub: Main and sub language · Main: Main language only · Sub: Sub language only e) Press OK [] MAIN GUIDE AUTO CHAPTER MARKING To specify marker insertion interval: a) Display set up menu (see Displaying Set Up Menu) b) Select recording icon from left panel c) Select Auto Chapter Mark from middle panel d) Select interval from right panel: · 5 mins 25 LG RHT49X instructions.indd Sec1:25 2009-03-04 3:50:17 DISC SETTINGS DISPLAY SET UP MENU a) Press HOME []. First menu is displayed.] until Easy Menu is displayed b) Press [c) Select SETUP d) Press OK [] to display set up menu number of titles To unfinalise a disc: a) Load disc in drive @@Select Disc Format option from left panel d) Select Unfinalise from middle panel e) Press OK [] to confirm FORMATTING To format a DVD: · Load disc in drive. If disc is blank, disc will be initialized automatically. To re-format a used disc: i Display set up menu (see Displaying Set Up Menu) ii Auto Programming is highlighted. Select Disc Format option from the left panel iii Select Disc Format from middle panel iv Select mode: VR and Video for DVD-RW discs from right panel v Press OK [] to confirm. Formatting starts. Everything recorded on the DVD will be erased after formatting.

LABELLING To change disc name: a) Load disc in drive). Disc information is displayed. @@Select Edit from middle panel d) Press OK [] to confirm. Keyboard menu is displayed.] to navigate keyboard and press e) Use [OK [] on remote control to confirm each key selection f) Select OK on keyboard menu to confirm new name FINALISING Newly recorded discs must be finalised to work on other DVD players.

RAM Finalisation not required +RW Discs are automatically finalised when removed from Unit -RW Finalised discs can be unfinalised for re-recording or editing +R - R Finalised discs cannot be edited or re-recorded To finalise a disc: a) Load disc in drive. @@@@Finalisation starts. @@Disc information is displayed. @@@@First menu is displayed. @@d) Select START in right panel e) Press OK [] .

Diagnostic information is displayed. @@@@TV channel list is displayed. @@c) Press [Chosen list is displayed. CHANGING TV CHANNEL To change channel: · Press [PR+] or [PR-] OR · Use numbered [0-9] buttons to jump to a channel DISPLAYING FAVORITE PROGRAM LIST To display favorite channel list: a) Press [FAV]. Favorite options are displayed. b) Select channel c) Press OK [] to view CHOOSING TV CHANNEL FROM LIST To display TV channel list: a) Press [PR LIST]. TV channel list is displayed. b) Select channel c) Press OK [] to confirm ACCESSING A DIGITAL TEXT SERVICE a) b) c) d) e) Press [TEXT] to display text menu for current channel Select choice Press OK [] to confirm Use [Red, Green, Yellow and Blue] as instructed on display] to return to normal viewing Press [TEXT] or BACK [DISPLAYING INFORMATION WHILE WATCHING TV To display information while using Unit to watch TV: · Press [INFO] · Information is displayed briefly, as follows: · Channel number, station name, audio signal (Stereo, Bilingual, Mono) for analog channels · Media name and format · Mode, free space, and elapsed time · Current date and time · Program title, start time and end time · Extended Text Message icon: an Extended Text Message is available to program description · DTV Subtitle icon: current program contains subtitles Wide icon: current program is in wide picture format Digital Text Service Icon: digital text service available CHANGING TV AUDIO CHANNEL To change TV audio channel for stereo and bilingual broadcast: · Press AUDIO [] on remote control repeatedly.



[You're reading an excerpt. Click here to read official LG RHT599H user guide](http://yourpdfguides.com/dref/5477888)

<http://yourpdfguides.com/dref/5477888>

Current audio channel is displayed. 28 LG RHT49X instructions.

indd Sec1:28 2009-03-04 3:50:17 RECORDING MODE SETTING To view live TV in HDD mode: · Press [HDD] To view live TV in DVD mode: · Press [DVD] e) Enter following information: · Media: Choose HDD or DVD CH/PR: Choose a program number or other source to record. · Date: Choose a date up to 1 month ahead. · Start Time: Set start time. · End Time: Set end time. · Repeat Choose a desired repeat: Once, Daily (Mon-Fri), or Weekly Press REC [] on remote control repeatedly to change recording mode (XP, SP, LP, EP or MLP) Press OK [] to set recording DISPLAYING TIMER RECORD LIST a) Press HOME []. First menu is displayed. b) Press [] until TV menu is displayed c) Select Timer Record. Timer recording list is displayed. CANCELLING A TIMER RECORDING To cancel a timer recording before timer starts: a) Display timer record list. See Displaying timer record list, above. b) Select recording to cancel c) Press CLEAR RECORDING A BILINGUAL BROADCAST To select audio channel when recording a bilingual program: a) Press HOME []. First menu is displayed.] until Easy Menu is displayed b) Press [c) Select SETUP d) Press OK [] to display set up menu e) Select recording icon from left panel f) Select TV Record Audio from middle panel g) Select option from right panel: · Main+Sub: Main and sub language · Main: Main language only · Sub: Sub language only h) Press OK [] TIME SLIP While recording a program to HDD as a title, the recording in progress can be viewed simultaneously from the beginning. To watch recording: a) Wait for 15 seconds after recording starts b) Press PLAY [] on remote control To stop playback: · Press STOP []. Playback stops but recording continues. To stop recording: · Press STOP []. Recording stops. MAIN GUIDE TIMER RECORDING To set the start and end time of a recording: a) Ensure clock is set to correct time. See Quick Start guide. b) Display timer record list. See Displaying timer record list, above c) Select New d) Press OK [] to display timer record details screen] to move between columns · Press [TIMESHIFT To record live TV transmission temporarily to HDD, if TV viewing is interrupted: a) Ensure Unit is in HDD mode. See Mode Setting above. b) Press [TIMESHIFT] c) Press PAUSE/STEP []. Timeshift recording starts. 29 LG RHT49X instructions.indd Sec1:29 2009-03-04 3:50:17 USING OTHER MEDIA TYPES To display recording progress bar during timeshift recording: · Press OK [] To play back from beginning or end of timeshift bar:] · Press [To stop timeshift recording: a) Press STOP []. Screen will return to live transmission. b) Press OK [] to confirm · Timeshift will stop automatically after 6 hours. To save a timeshift recorded clip as a title for subsequent viewing: · Press REC [] at start and at end point on bar of clip to be saved Repeat to save further clips Clips will be recorded on HDD as titles when you exit timeshift function. OPERATING USB FLASH DRIVE (Not supplied) Keep the USB Flash Drive out of reach of children.

If swallowed, seek medical advice immediately. . . . a) b) c) d) e) f) Compatible formats: FAT16 or FAT32 supporting USB 1.1. Disc or HDD files cannot be moved or copied to a USB Flash Drive. Do not remove whilst in use. Remove carefully when not in use. WARNING TO PLAY DIVX® MOVIE FILES Load DivX® disc Press HOME []. Movie menu is displayed. Select DivX® Press OK []. DivX® movie list is displayed.

Select file to play Press [INFO] to show file information To play multiple files: i Press [MARKER] ii Select and mark further files as required To select all files and folders list: i Select any file/folder ii Press [CLEAR] · To deselect files and folders · Press [CLEAR] again. g) Press OK [] LISTENING TO RECORDED MUSIC To play music recorded on HDD, disc or USB Flash Drive: a) Load disc or flash drive as required b) Press HOME []. First menu is displayed. 30 LG RHT49X instructions.indd Sec1:30 2009-03-04 3:50:17 c) d) e) f) g) · Press [] until MUSIC menu is displayed Select location of music file Press OK [] Select music title Press PLAY [] Press INFO to display file information.

ID3-Tag information is displayed if present. DISPLAYING MP3/WMA FILE INFORMATION VIEWING PHOTOS To look at photos recorded on HDD, disc or USB Flash Drive: a) Load disc or flash drive as required b) Press HOME []. First menu is displayed.] until PHOTOS menu is displayed c) Press [d) Select location of photo file e) Press OK [] f) Select photo file g) Press PLAY [] Press OK []. Slide Show menu is displayed.

Select Speed option Press OK [] Select speed required Press OK [] To view all photo files: · Select All To view only selected files: i Select file ii Press [MARKER] iii Select and mark further files as required iv Select Object option l) Select START m) Press OK []. Slide show begins. g) h) i) j) k) LISTENING TO MUSIC DURING SLIDE SHOW To display photo files as slide show while listening to MP3/WMA music files on HDD: a) Press HOME []. First menu is displayed.] until PHOTOS menu is displayed b) Press [c) Select location of photo file d) Press OK [] e) Select Slide Show option on left side of screen f) Press OK []. Slide Show menu is displayed. g) Select Simultaneous Music play on slide show menu h) Press OK []. Music file selection menu is displayed. i) Select file j) Press [MARKER] k) Select and mark further files as required l) Select [START] option m) Press OK []. Music selection and slide show start.

MAIN GUIDE SKIP TO THE NEXT/PREVIOUS PHOTO · · Press [Press [] to view previous/next photo] to rotate photo ROTATE A PHOTO VIEWING PHOTO FILES AS A SLIDE SHOW To show photos in photo list consecutively: a) Load disc or flash drive as required b) Press HOME []. First menu is displayed.] until PHOTOS menu is displayed c) Press [d) Select location of photo file e) Press OK [] f) Select Slide Show option on left side of screen 31 LG RHT49X instructions.indd Sec1:31 2009-03-04 3:50:17 PLAYBACK FROM DISC PAUSE A SLIDE SHOW · · Press PAUSE/STEP [] to pause slide show. Press PLAY [] to continue slide show. SIMULTANEOUS PLAYBACK AND RECORD To play a title from HDD/DVD while making a different recording: Options are restricted when copying, dubbing, using DivX or using DVD. a) Press HOME []. MOVIE menu is displayed. b) Select HDD or DVD c) Press OK []. Options are displayed.

d) Select title to play. e) Press OK [] PLAYING DISC CONTAINING A MENU Menu setting and operation may vary with disc used. To view disc menu: a) Load DVD b) Press HOME [] button on remote control c) Select DVD option d) Press OK []. Title list is displayed. · To play a DVD title/chapter: i Select title/chapter ii Press OK [] to start playback iii Press [TITLE] or [MENU/LIST] to return to menu screen] to move to next chapter/track/file · Press SKIP [] once to return to beginning of current · Press SKIP [chapter/track/file · Press SKIP [] twice to return to beginning of previous chapter/track/file PAUSE PLAYBACK · Press PAUSE/STEP [] To continue playback: · Press PLAY [] 32 LG RHT49X instructions.



[You're reading an excerpt. Click here to read official LG RHT599H user guide](http://yourpdfguides.com/dref/5477888)
<http://yourpdfguides.com/dref/5477888>

indd Sec1:32 2009-03-04 3:50:18 FRAME-BY-FRAME PLAYBACK · Press PAUSE/STEP [] repeatedly To advance or reverse playback frame by frame: · Press PAUSE/STEP [] once to freeze playback] repeatedly. · Press [Reverse frame-by-frame playback not available for Video CD. PLAYING REPEATEDLY DURING PLAYBACK To play back current title, chapter, folder or track repeatedly: · Press [REPEAT] repeatedly To return to normal playback: · Press [REPEAT] repeatedly to select OFF FAST FORWARD OR FAST REVERSE DURING PLAYBACK · Press SCAN [] to play fast forward or fast reverse To change playback speed:] repeatedly · Press SCAN [To resume normal speed: · Press PLAY [] REPEATING A SPECIFIC PORTION (MINIMUM 3 SECONDS) DURING PLAYBACK a) Press REPEAT to select start point of portion a) Press OK [] to select end point of portion. Selected portion will be repeated continually. To return to normal playback: · Press [REPEAT] repeatedly to select OFF CHANGE AUDIO LANGUAGE, TRACK OR ENCODING METHOD DURING PLAYBACK a) Press AUDIO []] repeatedly b) Press [LAST SCENE MEMORY (DVD) Unit memorises last scene from last disc viewed even if disc is removed or Unit is switched off.

When that disc is reloaded, last scene is automatically recalled and displayed. MAIN GUIDE SLOW DOWN PLAYING SPEED a) Press PAUSE/STEP []] repeatedly to slow down forward or a) Press SCAN [reverse playback Slowing down reverse playback not available for Video CD. To change playback speed:] repeatedly · Press SCAN [To resume normal speed: · Press PLAY [] DISPLAY DVD TITLE MENU a) Press [TITLE] If current DVD title has no title menu, disc menu may appear. 33 LG RHT49X instructions.indd Sec1:33 2009-03-04 3:50:18 CHAPTER SEARCH: HDD, -RW VR, -RW VIDEO, +RW, +R, RAM To select a chapter from which to start playback: a) Ensure playback stopped b) Press [HDD] or [DVD] c) Press [MENU/LIST] d) Select title to edit e) Press OK [] to display editing menu f) Select Chapter in Search option from menu on left of screen g) Press OK [] to display Chapter List menu h) Select chapter for start of playback i) Press PLAY [] to start correction ii Enter correct numbers. d) Press OK [] SELECTING A SUBTITLE LANGUAGE a) Press [INFO] twice during playback. Playback menu is displayed. b) Select subtitle option c) Select subtitle language d) Press OK [] OR a) Press [SUBTITLE] button on remote control during playback b) Press [Left, Right] repeatedly to select subtitle language c) Press OK [] ADDING CHAPTER MARKERS: HDD, -RW VR, +RW, +R, RAM To create chapters within a title during recording (except for HDD) or playback: · Press [MARKER] at desired point. Chapter marker icon is displayed. WATCHING FROM A DIFFERENT ANGLE To select camera angle for viewing, if available: a) Press [INFO] twice to display playback menu b) Select angle option c) Select desired angle d) Press OK [] MOVING TO ANOTHER TITLE To display information about a title on a disc where there is more than one title: a) Press [INFO] button on remote control twice during playback b) Select title icon] to select a title number c) Press number button [0-9] or [d) Press OK [] SELECTING A SOUND MODE This Unit can produce a 3D Surround Sound effect to simulate multichannel audio playback.

a) Press [INFO] twice to display playback menu b) Select sound option c) Select sound mode: 3D SUR. or NORMAL d) Press OK [] STARTING PLAYBACK FROM SELECTED TIME a) Press [INFO] twice during playback. Time search box shows elapsed playing time. b) Select the time search box c) Enter required start time in hours, minutes and seconds. Eg: to start at 2 hours, 10 minutes and 20 seconds, enter "21020" · To correct errors:] to move underscore: _ to number needing i Press [34 LG RHT49X instructions.indd Sec1:34 2009-03-04 3:50:18 EDITING RECORDED CONTENT BEFORE EDITING · Advanced editing functions require VR mode formatted DVD (DVD-RW or DVD-RAM). · Original title or Playlist can be edited. · Editing of Original title is final. · Playlists can be created for editing purposes. g) Press OK [] · If item was on Playlist, it is deleted from Playlist but not from Original · If item was on Original recording, it is deleted both from Original and from Playlist h) Press OK [] to confirm.

EDITING A TITLE To edit recordings on DVD or HDD: a) Ensure playback stopped b) Press [HDD] or [DVD] c) Press [MENU/LIST] d) Select title to edit e) Press OK [] to display menu in left panel To edit a VR mode disc: · Press [MENU/LIST] to switch between original and playlist menus CREATING / ADDING TO A PLAYLIST: -RW VR, RAM A Playlist allows you to edit or re-edit a title or chapter without changing the Original recording. a) To add an Original title or chapter to a Playlist: b) Ensure playback stopped c) Press [DVD] d) Press [MENU/LIST] e) Select title to edit f) Press OK [] to display editing menu g) Press OK [] to display Select Playlist menu · To add title/chapter to an existing Playlist: · Select Playlist name To add title/chapter to a new Playlist: · Select New Playlist h) Select Playlist Add option i) Press OK [] to confirm ADDING CHAPTER MARKERS: HDD, -RW VR, +RW, +R, RAM To create chapters within a title during recording (except for HDD) or playback: · Press [MARKER] at desired point. Chapter marker icon is displayed. MAIN GUIDE DELETING A TITLE OR CHAPTER To delete a title or chapter: a) Ensure playback stopped b) Press [HDD] or [DVD] c) Press [MENU/LIST] d) Select title / chapter to delete · For multiple deletion on HDD only: i Press [MARKER] ii Repeat for each file to be deleted e) Press OK [] to display editing menu f) Select Delete option from menu on left panel MOVING A PLAYLIST CHAPTER: -RW VR, RAM To re-arrange playing order of a Playlist title on Chapter List/ Playlist menu: a) Ensure playback stopped b) Press [DVD] c) Press [MENU/LIST] d) Select title to edit e) Press OK [] to display editing menu f) Press OK [] to display Select Playlist menu 35 LG RHT49X instructions.indd Sec1:35 2009-03-04 3:50:18 g) h) i) j) k) Select either Chapter or Playlist option Select Move option from menu on left panel Press OK [] Select place to move chapter to Press OK [] .

Updated list is displayed. COMBINING TITLES: HDD To merge selected title with another title: a) Ensure playback stopped b) Press [HDD] c) Press [MENU/LIST] d) Select title to merge e) Press OK [] to display editing menu f) Select Edit option to display editing menu g) Select Combine from menu in left panel h) Press OK [] i) Select a title to combine with current title j) Press OK [] to confirm TIME SEARCH: HDD, -RW VR, -RW VIDEO, +RW, +R, -R, RAM To play back a title by time when recording was made: a) Ensure playback stopped b) Press [HDD] or [DVD] c) Press [MENU/LIST] d) Select title to play e) Select Search option from menu in left panel f) Press OK [] g) Select Time option] buttons to determine start time.



[You're reading an excerpt. Click here to read official LG RHT599H user guide](http://yourpdfguides.com/dref/5477888)

Each press h) Use [of [] moves 1 minute, or press and hold [] to move by 5 minutes. i) Press OK [] to watch title from selected time selected HIDING A CHAPTER OR TITLE To skip past a chapter or title without viewing during playback: a) Ensure playback stopped b) Press [DVD] or [HDD] c) Press [MENU/LIST] d) Select chapter / title to hide e) Press OK [] to display editing menu f) Select Edit option to display editing menu g) Select Hide option from menu in left panel h) Press OK [] To recover the hidden title or chapter: i) Select Show option from editing menu in left panel j) Press OK [] to recover title/ chapter SORTING TITLES: HDD Ensure playback stopped Press [HDD] Press [MENU/LIST] Press OK [] to display options menu Select Sort Press OK [] to view further options Select whether to sort titles by · Date (when they were recorded) · Title (alphabetical order) OR · Category (genre) h) Press OK [] .

Sorting starts and display is rearranged.

a) b) c) d) e) f) g) VIEWING TITLE LIST MENU DISPLAYED ON ANOTHER UNIT To view title list menu displayed on another unit capable of playing DVD+RW or DVD+R discs: · Press [TITLE] during playback or when stopped. Title List menu is displayed. If [TITLE] button unavailable due to digital broadcasts: 36 LG RHT49X instructions.indd Sec1:36 2009-03-04 3:50:18 · Press and hold [MENU/LIST] button for 3 seconds DELETING A PART To delete part of title: a) Ensure playback stopped b) Press [DVD] or [HDD] c) Press [MENU/LIST] d) Select title e) Press OK [] f) Select Edit option to display editing menu g) Select Delete Part from editing menu in left panel h) Press OK [] to display delete part menu] and PAUSE/STEP [] i) Use PLAY [], SCAN [buttons to locate start/end points · Start Point: Select start point of deletion · End Point: Select end point of deletion · Next Part: Delete additional part (HDD only) · Cancel: Cancel deletion · Done: Delete selected part j) Press OK [] to confirm deletion DIVIDING A TITLE To separate a title into two titles: a) Ensure playback stopped b) Press [DVD] or [HDD] c) Press [MENU/LIST] d) Select title to split e) Press OK [] f) Select Edit option to display editing menu g) Select Divide option from left panel] and PAUSE/STEP [] h) Use PLAY [], SCAN [buttons to locate split point · Each section must be 3 seconds or longer. i) Press OK [] . Playback screen shows dividing point. j) Select Done option k) Press OK [] to confirm split PROTECT A TITLE To protect a title against accidental recording, editing or deletion: a) Ensure playback stopped b) Press [DVD] or [HDD] c) Press [MENU/LIST] d) Select title to protect e) Press OK [] f) Select Edit option to display editing menu g) Select Protect option from left panel h) Press OK [] . Lock mark is displayed on title thumbnail. To unprotect the title: i) Select Unprotect option from editing menu in left panel j) Press OK [] to confirm MAIN GUIDE NAMING A TITLE To change a title name: a) Ensure playback stopped b) Press [DVD] or [HDD] c) Press [MENU/LIST] d) Select title e) Press OK [] f) Select Edit option from menu in left panel g) Select Rename or Title name from editing menu in left panel h) Press OK [] to navigate keyboard and press i) Use [OK [] on remote control to confirm each key selection · To use shortcuts on remote control to enter a name: PLAY []: Inserts a space at the cursor position 37 LG RHT49X instructions.indd Sec1:37 2009-03-04 3:50:18 PAUSE/STEP []: Deletes a character after cursor position STOP [] / [CLEAR]: Deletes character before cursor position]: Moves cursor to left or right [[MENU/LIST] / [INFO]: Changes character set on keyboard menu.

@@@ Combine indicator is displayed between chapter thumbnails. h) Press OK [] NB This function will not work if: · There is only one chapter in title · First chapter is selected · Chapters to be combined are created by deleting part of Original title · Chapters to be combined are created from different titles · One of Playlist chapters to be combined has been moved OVERWRITING To overwrite an unprotected video recording: a) Select TV channel or input source you want to record b) Press [MENU/LIST] c) Select a title to overwrite d) Press REC [] to start overwrite To stop the recording: · Press STOP [] If recording is longer than title being overwritten, following title will also be overwritten, unless protected. If following title is protected, overwriting stops. 38 LG RHT49X instructions.indd Sec1:38 2009-03-04 3:50:18 COPYING AND MOVING FILES, FOLDERS AND TITLES COPYING FILE(S) OR FOLDER(S)

TO HDD a) Press [DVD] to select mode b) Press [MENU/LIST] c) Select file or folder to copy To copy more files or folders: · Select next file · Press [MARKER] when each one is highlighted. @@g) Select Copy option. Copy menu is displayed. h) Press OK [] i) Select directory to copy to j) Select Copy option k) Press OK [] to begin copying NAMING A FILE OR FOLDER ON HDD a) b) c) d) e) f) g) h) i) Press [HDD] Press [MENU/LIST] Select file or folder Press OK [] Select Edit from menu in left panel Press OK [] Select Rename option Press OK [] to navigate keyboard and press Use [OK [] on remote control to confirm each key selection · To use shortcuts on remote control to enter a name: PLAY []: Inserts a space at the cursor position PAUSE/STEP []: Deletes a character after cursor position STOP [] / [CLEAR]: Deletes character before cursor position [b B]: Moves cursor to left or right [MENU/LIST] / [INFO]: Changes character set on keyboard menu. Numbers [0-9]: Enters that number at cursor position j) Select OK on keyboard menu to confirm name MOVING FILE(S) OR FOLDER(S) TO OTHER FOLDERS ON HDD a) Press [HDD]/[DVD] to select mode b) Press [MENU/LIST] c) Select file or folder to copy To copy more files or folders: · Select next file · Press [MARKER] when each one is highlighted. @@g) Select Move option. Move menu is displayed. @@ Currently set recording mode (XP, SP, LP, EP or MLP) will apply. @@@@ · When dubbing from HDD to VR mode DVD-RW or DVDRAM, the Fast mode is not available for edited HDD titles and Clip Recording titles. · When dubbing an edited title from VR mode DVD-RW or DVD-RAM to HDD the Fast mode is not available. h) Press OK [] i) Select START j) Press OK [] to start dubbing DUB A CURRENTLY PLAYING TITLE Works only for DVD± finalized with video formatted DVD-RW or for DVD-ROM without copy protection.

To copy a title to HDD during DVD playback: a) Press HOME [] . First menu is displayed.] until Easy Menu is displayed b) Press [40 LG RHT49X instructions.indd Sec1:40 2009-03-04 3:50:19 NOTES MAIN GUIDE 41 LG RHT49X instructions.indd Sec1:41 2009-03-04 3:50:19 GENERAL PROBLEM The Power does not turn on PLAYBACK SOLUTION Check the mains cable is plugged into the Unit and mains outlet securely.



[You're reading an excerpt. Click here to read official LG RHT599H](#)

[user guide](#)

<http://yourpdfguides.com/dref/5477888>

Try resetting the unit by holding the POWER button for FIVE seconds. Select the appropriate video input (AV) mode on the TV so the picture from the unit appears. **PROBLEM SOLUTION** Check the disc format is compatible with this unit. Check the disc region code is compatible with this unit. The unit does not playback. Ensure the disc is placed in the unit the correct way. Check the disc for signs of damage and dirt. Disable or alter the Parental locks and Rating function. Ensure the disc has been finalised (see page 26). There is no picture.

Check the connecting cables between the unit and the TV. Check the Video Output Format in the SETUP menu is set to the appropriate item that conforms to your connection. You are playing a disc recorded in a colour system (PAL, NTSC, SECAM) that is different from your TV. Picture Noise Appears. The video signal from the external device is copyprotected. Check the screen resolution is compatible by pressing the RES Button. Cannot play a disc recorded on this unit on an other player. Check the disc format is compatible with the other player. Ensure the disc is placed in the unit the right way round. Discs recorded with copy-once material cannot be played on other players.

Unable to find TV channels and store them. Check antenna connection to your unit. Check to see if you have Digital TV available in your area. Check the connecting cables between the unit, TV and/ or amplifier. The angle cannot be changed.

The subtitle language cannot be changed or disabled. Cannot play MP3/WMA/ JPEG/DviX files. Unable to deactivate password or forgotten your password Multi-angles are not recorded on the DVD video being played. The angles cannot be changed for the titles recorded on this unit. Subtitles are not recorded on the DVD Video being played.

The subtitles cannot be changed for the titles recorded on this unit. The files are not recorded in a compatible format. The movie file Codec is not compatible with this unit. The unit cannot support the resolution. Follow instructions on page 23 - Forgotten password. There is no sound. Check the input source setting on the amplifier. Is the unit in scan, slow motion or pause modes? The remote control does not work properly. Try resetting the unit by holding the POWER button for FIVE seconds. Check you are pointing the remote at the sensor on the unit.

Is the remote too far from the unit. The remote control does not work properly. Check there are now obstacles in the way of the sensor. Reset the remote control to work with your connected TV (page 19). Replace the batteries in the remote control (page 9). 42 LG RHT49X instructions.indd Sec1:42 2009-03-04 3:50:19 **RECORDING PROBLEM SOLUTION** Check the disc/HDD has sufficient available space. **HDMI PROBLEM SOLUTION** Try disconnecting then re-connecting the HDMI cable. Cannot record or does not record correctly. Check the source is not copy protected.

Switch the mains power off and back on. Use a VR mode formatted disc for copy-once material. Check the Video input for the connected device is set correctly. HDMI device does not display a picture. Timer record function is not successful.

Check the clock & date are set correctly. Check the HDMI cable is fitted correctly. Timer recordings may have overlapped. Only the earliest setting will record completely. Check the HDMI cable for damage.

Check your TV has stereo capability. Not all HDCP devices are compatible with this unit. Check the Program was broadcast in a stereo format. Not all HDCP devices are compatible with this unit Stereo Audio Record and/or Playback is not present. Check the A/V output ports are connected to the TV A/V ports. If your TV is not capable of processing a 96 kHz sampling frequency, set the [Sampling Freq.] option to 48 kHz. Connected HDMI device does not output sound. Check the cables are connected correctly. **TROUBLESHOOTING** Your TV is not equipped with Dolby Digital and MPEG decoder, set [Dolby Digital] and [MPEG] to [PCM] in the setup menu.

Check cables for signs of damage. Your TV is not equipped with DTS decoder, set [DTS] option to [OFF] in the setup menu. 43 LG RHT49X instructions.indd Sec1:43 2009-03-04 3:50:19 LG RHT49X instructions.indd Sec1:44 2009-03-04 3:50:19 .



[You're reading an excerpt. Click here to read official LG RHT599H user guide](http://yourpdfguides.com/dref/5477888)

<http://yourpdfguides.com/dref/5477888>