



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER. You'll find the answers to all your questions on the LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER
User guide LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER
Operating instructions LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER
Instructions for use LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER
Instruction manual LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER




Package Contents

- Wireless-G USB Network Adapter with SpeedBooster
- One Setup CD-ROM
- One User Guide on CD-ROM
- USB Cable
- Quick Installation Guide

2.4GHz Wireless-G
USB Network Adapter with SpeedBooster
Quick Installation

Model No. WUS8546S

1


Begin Installation

IMPORTANT: Do not connect the Adapter to Your PC until you are instructed to do so in Step 2 or the Adapter will not install properly.

The USB Network Adapter is installed and set up using the Setup Wizard that comes on the CD enclosed.

- A** To begin, insert the **Setup Wizard CD-ROM** into your CD-ROM drive. The Setup Wizard should run automatically, and the Welcome screen should appear.
- B** To install the Adapter, click **Click Here to Start** on the Welcome screen.
- C** After reading the License Agreement, click **Next** to continue the installation and Windows will begin copying the files onto your PC.
- D** The Setup Wizard will now prompt you to connect the Adapter to your PC's USB port.

Proceed to Step 2.

2

Connect the Adapter

Now that the Setup Wizard has prompted you to connect the Adapter, follow the instructions below.

- A** Connect one end of the included USB cable to the Adapter's USB port
- B** Connect the other end of the cable to one of the USB ports on your computer.
- C** The Power LED should light up when the Adapter is plugged in.
- D** Raise the antenna. Make sure the antenna points straight up into the air, at a 90° angle from the Adapter. This will ensure optimum wireless operating range and performance.

Once the Adapter is connected, click **Next** on the *Connecting the Adapter* screen to proceed.

Proceed to Step 3.



Connecting the Adapter



How to Connect



The Adapter's USB Port



[You're reading an excerpt. Click here to read official LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER user guide](http://yourpdfguides.com/dref/1080832)
<http://yourpdfguides.com/dref/1080832>

Manual abstract:

Raise the antenna. @@This will ensure optimum wireless operating range and performance. A To begin, insert the Setup Wizard CD-ROM into your CDROM drive. The Setup Wizard should run automatically, and the Welcome screen should appear. To install the Adapter, click [Click Here to Start on the Welcome screen](#). After reading the License Agreement, click Next to continue the installation and Windows will begin copying the files onto your PC. The Setup Wizard will now prompt you to connect the Adapter to your PC's USB port. Proceed to Step 2. Connecting the Adapter B C Package Contents · Wireless-G USB Network Adapter with SpeedBooster · One Setup CD-ROM · One User Guide on CD-ROM · USB Cable · Quick Installation Guide D C Once the Adapter is connected, click Next on the Connecting the Adapter screen to proceed. Proceed to Step 3.

How to Connect 2.4 GHz Wireless-G 802.11g Wireless Model No. Model No. WUSB54GS USB Network Adapter with SpeedBooster Quick Installation The Adapter's USB Port 3 Set Up the Adapter If the network utilizes wireless security, you will need to configure security on the Adapter.

@@hexadecimal characters. @@Then, click Connect and proceed to Step B. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ WEP Key Needed for Connection Select 64-bit or 128-bit. Then, enter a passphrase or WEP key. Passphrase - Enter a passphrase in the Passphrase field.

@@It must match the passphrase of your other wireless network devices and is compatible with Linksys wireless products only. (Non-Linksys wireless products, require a WEP key to be entered.) WEP Key - The WEP key must match the WEP key of your wireless network. For 64-bit encryption, enter exactly 10 hexadecimal characters. For 128bit encryption, enter exactly 26 PSK Needed © A Division of Cisco Systems, Inc. B Setting Up the Adapter with Available Networks On the Available Wireless Network screen, the available networks are listed in the center table by SSID. Select the wireless network you wish to connect to and click the Connect button. (If you do not see your network listed, you can click the Refresh button.) After the Adapter has been configured for the network, the Congratulations screen will appear. Click Connect to Network to connect to your network.

Congratulations! Setup is complete. For additional information or troubleshooting help, refer to the User Guide on the Setup CDROM. You can also call or email for further support. @@@@and/or its affiliates in the U.S. and certain other countries. Copyright © 2005 Cisco Systems, Inc. All rights reserved. wusb54gs-qi-50418A BW Model No. .



[You're reading an excerpt. Click here to read official LINKSYS WIRELESS-G USB NETWORK ADAPTER WITH SPEEDBOOSTER user guide](http://yourpdfguides.com/dref/1080832)
<http://yourpdfguides.com/dref/1080832>