



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LINKSYS X1000. You'll find the answers to all your questions on the LINKSYS X1000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LINKSYS X1000
User guide LINKSYS X1000
Operating instructions LINKSYS X1000
Instructions for use LINKSYS X1000
Instruction manual LINKSYS X1000



[You're reading an excerpt. Click here to read official LINKSYS X1000 user guide](http://yourpdfguides.com/dref/5487740)
<http://yourpdfguides.com/dref/5487740>

Manual abstract:

DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Pokud se tato obrazovka nezobrazí: •• V systému Windows klepněte na tlačítko Start, Počítač a poklepejte •• Modem-router (Modem a směrovač): Zařízení X1000 můžete využívat na mechaniku CD a na ikonu Setup (Nastavení). □• Router only (Pouze směrovač): Pokud využíváte pro připojení Zobrazí se obrazovka We are now setting up your Linksys X1000 (Probíhá instalace zařízení Linksys X1000). Easy Setup Key (Klíč pro snadnou instalaci) Update or create key (Aktualizovat nebo vytvořit klíč) – klíč pro snadnou instalaci na jednotce USB Flash umožňuje rychlé ruční nastavení bezdrátového připojení ke směrovači.) Other options (Další možnosti) Register now to receive special offers and updates (Registrujte se a získejte zvláštní nabídky a novinky) – na tuto možnost klepněte, pokud si přejete zasílat zvláštní nabídky a novinky od společnosti Cisco a partnerů Cisco. V opačném případě vyberte možnost Use the following IP address (Použít následující adresu IP). Language (Jazyk) Select your language (Zvolte jazyk) Pokud chcete použít jiný jazyk, zvolte jej z rozevírací nabídky. Guest Access (Přístup hosta) Allow Guest Access (Povolit přístup hosta) Pokud chcete povolit přístup k internetu prostřednictvím sítě pro hosty, ponechte výchozí nastavení yes (ano). På skærmen How will you be using your X1000 (Hvordan vil du bruge din X1000) skal du klikke på Modem-router (Modemrouter) eller Router only (Kun router) og klikke på Next (Næste). DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Hvis du ikke får vist dette: •• Windows: Klik på Start, Computer, og dobbeltklik på cd-drevet og •• Modem-router (Modemrouter): Brug X1000 som både DSL-modem og Opsætning-ikonet. □• Router only (Kun router): Hvis du har et separat kabel- eller DSL-modem til internetadgang, giver denne netværksforbindelse for computerne i hjemmet. Skærmen We are now setting up your Linksys X1000 (Nu konfigurerer vi din Linksys X1000) åbnes. Eller spring den automatiske registrering af dit område over, og konfigurer din internetforbindelse manuelt ved at vælge My region is not in this list (Mit område findes ikke på listen). LED'erne for Power, Trådløs og Ethernet (en for hver tilsluttet computer) tændes. LED'erne for Power, Trådløs og Ethernet (en for hver tilsluttet computer) tændes. Klik på Help (Hjælp) til højre på skærmen for at gå til vores websted for at få mere hjælp til værktøjet. Easy Setup-nøgle Update or create key (Opdater eller opret nøgle) Easy Setup-nøglen er et USB-drev, som indeholder routerens trådløse indstillinger.) Andre valgmuligheder Register now to receive special offers and updates (Registrer dig nu, og modtag specialtilbud og opdateringer) Klik på denne valgmulighed for at registrere dig og modtage specialtilbud og opdateringer fra Cisco og Ciscos partnere.) Advanced settings (Avancerede indstillinger) Klik på denne valgmulighed for at få adgang til indstillinger for avancerede brugere. Avanceret konfiguration Hvis du ændrer nogle indstillinger på en skærm, skal du klikke på Save Settings (Gem indstillinger) for at anvende ændringerne eller klikke på Cancel Changes (Annuller ændringer) for at fjerne ændringerne. Fanerne er sorteret i to niveauer, øverste niveau for generelle funktioner og nederste niveau for de tilhørende specifikke funktioner. Det giver dig mulighed for at ændre de generelle indstillinger for routeren. Ellers skal du vælge Use the following IP address (Brug følgende IP-adresse). Language (Sprog) Select your language (Vælg dit sprog) Hvis du vil bruge et andet sprog, skal du vælge det i rullemenuen. Trådløs > Basisindstillinger for trådløs Bemærk Klik på Help (Hjælp) til højre på hver skærm for at få mere at vide om felterne. Wireless (Trådløs) > Wireless Security (Trådløs sikkerhed) Indstillingerne for trådløs sikkerhed konfigurerer sikkerheden for dit/ dine trådløse netværk. Guest Access (Gæsteadgang) Allow Guest Access (Tillad gæsteadgang) Behold standardværdien yes (ja) for at tillade internetadgang via et gæstetværk. Disse trin er specifikke for Internet Explorer, en er tilsvarende for andre browsere. 5 (ADSL2+) for appendiks A, B, M, L, U-R2 for appendiks B Noter Se cd'en, der blev leveret sammen med modemrouteren, eller gå til Linksys. DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay •• Router only (nur Router): Wenn Sie ein separates Kabel oder DSL- DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Der Bildschirm We are now setting up your Linksys X1000 (Linksys X1000 wird jetzt installiert) öffnet sich.



[You're reading an excerpt. Click here to read official LINKSYS X1000 user guide](http://yourpdfguides.com/dref/5487740)

<http://yourpdfguides.com/dref/5487740>

Klicken Sie auf dem Bildschirm *How will you be using your X1000 (Wie wird X1000 verwendet) auf Modem-router (Modem-Router) oder auf Router only (nur Router).*

*Oder überspringen Sie die automatische Erkennung Ihrer Region und konfigurieren Sie Ihre Internetverbindung manuell, indem Sie **My region is not in this list (Meine Region ist nicht in der Liste)** wählen und anschließend auf **Next (Weiter)** klicken. **Easy Setup Key Update or create key** (Schlüssel aktualisieren oder erstellen): Beim **Easy Setup Key** handelt es sich um ein USB-Flash-Laufwerk, das die Wireless-Einstellungen für den Router enthält. wenn Sie einen **Easy Setup Key** erstellen oder aktualisieren möchten, wählen Sie diese Option. Andere Optionen **Register now to receive special offers and updates**(Registrieren Sie sich jetzt und erhalten Sie Sonderangebote und Aktualisierungen): Wählen Sie diese Option, um sich für Sonderangebote und Aktualisierungen von Cisco und Cisco Partnern anzumelden. **How will you be using your X1000 (Xq10q DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost The We are now setting up your Linksys X1000 screen opens. You are then asked to connect your router's cables. 5. If you chose Router only in Step 4: a. Connect the power cable, then turn on the power switch. b. Connect the blue cable to the Cable port on the back of your router and to the modem. Set AutoPlay defaults in Control Panel If you do not see this: ••For Windows, click Start, Computer, then double-click the CD drive and the Setup icon. the Setup icon.***

suggested Mounting Hardware 3-5 mm Product Overview 7-8 mm 1. 5-2 mm Note Cisco is not responsible for damages incurred by unsecured wallmounting hardware. follow these instructions: 1. Determine where you want to mount the router. Make sure that the wall you use is smooth, flat, dry, and sturdy. Also make sure the location is within reach of an electrical outlet. 2. Drill two holes into the wall. Make sure the holes are 75. Insert a screw into each hole and leave 3 mm of its head exposed.

4. Position the router so the wall-mount slots line up with the two screws. 5. Place the wall-mount slots over the screws and slide the router down until the screws fit snugly into the wall-mount slots. wall-mounting template Print this page at 100% size. Cut along the dotted line, and place on the wall to drill precise spacing. 75,6 mm 2 Linksys X1000 Installation Installation Set up your modem-router automatically 1. Insert the CD into your CD or DVD drive. AutoPlay •• Modem router: Use the X1000 as both a DSL modem and a router. If you have a DSL Internet service provider, this option provides Internet access and networking connectivity to your home's computers, without the need for a separate modem and router.

□• Router only: If you have a separate cable or DSL modem for Internet DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay access, this option provides networking connectivity to your home's computers. DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost The We are now setting up your Linksys X1000 screen opens. You are then asked to connect your router's cables. 5. If you chose Router only in Step 4: a. Connect the power cable, then turn on the power switch. b. Connect the blue cable to the Cable port on the back of your router and to the modem. Set AutoPlay defaults in Control Panel If you do not see this: ••For Windows, click Start, Computer, then double-click the CD drive and the Setup icon. the Setup icon.

□• For Mac, double-click the CD icon on your desktop, then double-click 3. Read the license terms, select the checkbox, then click Next. 4. At the How will you be using your X1000 screen, click Modem router or Router only, then click Next. c.

Follow the on-screen instructions to finish the setup. If your router has a power button, turn it on. 3 Linksys X1000 b. Connect the gray cable to the modem-router's DSL port and to a telephone jack on your wall, then click Next. Installation Set up your modem-router manually Note Run the Setup CD-ROM to install the modem-router.

If you cannot run the Setup CD-ROM, refer to the steps below. Note If you are setting up your modem-router in New Zealand, see "NOTE FOR USERS IN NEW ZEALAND" on page 6. Connect your modem-router You are asked to enter your ISP information. c. Select your region, click Next, then select your ISP.

If prompted, enter your DSL account name and password. to connect your modem-router: 1. Power down all your network devices, including your computer(s) and the modem-router. If you currently use a modem, disconnect it now—the modem-router replaces your modem. 2.

Connect one end of the provided Ethernet cable to your computer's Ethernet adapter and the other end to an Ethernet port on the back of the modem-router.

*3. Repeat step 2 for each additional computer or device that you want to connect to the modem-router. Or, to skip the automatic detection of your region and manually configure your Internet connection, select **My region is not in this list**, then click **Next**. Use information available from your ISP to complete the remaining screens for DSL settings, Internet type, and account information. d. Follow the on-screen instructions to finish the setup. Note If your computer's Ethernet adapter is not set up, refer to the Ethernet adapter's documentation for more information. 4. Connect one end of the phone cable to the DSL port on the back.*

4 Linksys X1000 5. Connect the other end of the phone cable to the wall jack with ADSL service or microfilter. Note If you experience static on your phone line, you may need a microfilter or splitter. (This is required for users in the UK; other users should contact their ISPs to verify. iSDN users do not need a microfilter.

) If you require a microfilter, you must install one for each phone or fax that you use. To install a microfilter, plug it into a phone jack that has ADSL service, then connect one end of the provided phone cable to the microfilter's DSL port. 6. Connect one end of the power adapter cord to the Power port and the other end to the electrical outlet.



[You're reading an excerpt. Click here to read official LINKSYS X1000 user guide](http://yourpdfguides.com/dref/5487740)
<http://yourpdfguides.com/dref/5487740>

Installation Set up your modem-router as only a router Note Run the Setup CD-ROM to install the modem-router.

If you cannot run the Setup CD-ROM, refer to the steps below. to set up your modem-router as a router: 1. Connect one end of the provided Ethernet cable to your computer's Ethernet adapter and the other end to an Ethernet port on the back of the modem-router. 7. Power on the computer that you will use to configure the modem-router. 8. The LEDs for Power, Wireless, and Ethernet (one for each connected computer) should light up. If not, make sure the modem-router is powered on and the cables are securely connected. 2. Connect one end of an Ethernet cable to the Cable port on the back of the modem-router, then connect the other end to an available Ethernet/ LAN port on your modem.

3. Connect one end of the power adapter cord to the Power port and the other end to the electrical outlet. 4. Power on the computer that you will use to configure the modem-router. 5. The LEDs for Power, Wireless, and Ethernet (one for each connected computer) should light up. If not, make sure the modem-router is powered on and the cables are securely connected. 5 Linksys X1000 NOTE FOR USERS IN NEW ZEALAND To set up the device, follow these instructions: 1. For the Virtual Circuit ID, enter 0 for the VPI and 100 for the VCI. Enter your User Name and Password details from your ISP.

How to use Cisco Connect How to use Cisco Connect Cisco Connect provides an easy way to manage your router and network. You can connect computers or devices to your router, give Internet access to guests in your home, and change the router's settings. Main Menu When Cisco Connect starts up, the main menu appears and offers four options: Computers and Devices, Parental Controls, Guest Access, and Router Settings. 6 Linksys X1000 Main Menu – Computers and Devices Use this option to connect another computer or device to the router. 1.

To connect another computer or device to the router, click Add device. Then, follow the on-screen instructions. How to use Cisco Connect Main Menu – Router Settings Use this option to personalize the router's settings. Main Menu – Parental Controls Parental controls restrict Internet access for up to five computers. For the computers you select, you can block or limit Internet access to specific times.

You can also block specific websites. Then, follow the on-screen instructions. Main Menu – Guest Access Guest Access provides Internet access only; it does not provide access to the local network and its resources. Guest Access helps minimize exposure of your local network. To give Internet access to friends or family, provide the guest network name and password displayed on this screen. When a guest wants Internet access in your home, have the guest do the following: 1. Connect to the wireless guest network, which is the name of your wireless network followed by -guest. On the login screen, enter the password of your guest network. Then, follow the on-screen instructions. Personalize Router name The name of the router is displayed (this is also the name of your wireless network).

to change the name, click Change. Then, follow the on-screen instructions. Password The password that protects access to the router's settings is displayed (this also protects wireless access to your local network). to change the password, click Change. Then, follow the on-screen instructions. Caution When you change the router name or password, the name or password of your wireless network also changes, and the router is reset. ALL computers and devices connected to your router will momentarily lose their Internet connection. Wired computers and devices will reconnect automatically; however, you will need to reconnect all wireless computers and devices using the wireless network's new name or password. Port Lights on/off To allow the lights on the router to turn on, keep the default, on. 7 Linksys X1000 Easy Setup Key Update or create key The Easy Setup Key is a USB flash drive that holds the wireless settings for the router.

If you want to create or update an Easy Setup Key, click this option. Then, follow the on-screen instructions. Advanced Configuration Advanced Configuration After setting up the router with the setup software (located on the CD-ROM), the router will be ready for use. If you would like to change its advanced settings, or if the software does not run, use the router's browser-based utility. You can access the utility via a web browser on a computer connected to the router.

For more help with the utility, click Help on the right side of the screen or go to our website. Internet Speed Launch Test You can use the Internet speed test to determine your ISP's current download and upload speeds. Connection speed depends on many factors, and may change throughout the day. To run the speed test, click this option. Then, follow the on-screen instructions.

Other Options Register now to receive special offers and updates To sign up to receive special offers and updates from Cisco and Cisco partners, click this option. Router details To view more information about the router, click this option. The Router details screen appears, displaying the Model name, Model number, Serial number, Firmware version, Operating system, Software version, Connection type (WAN), IP address (LAN), IP address (WAN), and Computer IP address. (WAN stands for Wide Area Network, such as the Internet.) Advanced settings To access settings for advanced users, click this option. Then, follow the on-screen instructions. How to access the browser-based utility 1. To access the browser-based utility, launch the web browser on your computer, and enter the router's default Internet Protocol (IP) address, 192. Note You can also access the browser-based utility on Windows computers by entering the device name in the Address field. In the User name field, enter admin.

8 Linksys X1000 3. In the Password field, enter the password created by the setup software. If you did not run the setup software, then enter the default, admin. Note You can also access the browser-based utility through Cisco Connect. Advanced Configuration Setup > Basic Setup The first screen that appears is the Basic Setup screen. This allows you to change the router's general settings. ADSL mode ADSL mode (default) has the following fields that should be completed: How to use the browser-based utility Use the tabs at the top of each screen to navigate within the utility. The tabs are arranged in two levels, top-level tabs for general functions and lower-level tabs for the corresponding specific functions. the top-level tabs are: Setup, Wireless, Security, Access Restrictions, Applications & Gaming, Administration, and Status. Each of these has its own unique, lowerlevel tabs.

Note Within this User Guide, each screen is identified by its top- and lower-level tab names. For example, "Setup > Basic Setup" is the screen accessed via the Setup top-level tab, and its Basic Setup lower-level tab.



[You're reading an excerpt. Click here to read official LINKSYS X1000 user guide](http://yourpdfguides.com/dref/5487740)
<http://yourpdfguides.com/dref/5487740>

If you change any settings on a screen, you must click **Save Settings** to apply your changes, or click **Cancel Changes** to clear your changes. These controls are located at the bottom of each screen. **Language Select** your language To use a different language, select one from the dropdown menu. The language of the browser-based utility will change five seconds after you select another language. **Internet Setup** The **Internet Setup** section configures the router to your Internet connection. Most of this information can be obtained through your Internet Service Provider (ISP). @9 Linksys X1000 Internet Connection Type Select the type of Internet connection your ISP provides from the drop-down menu. The available types are: •••••••• Advanced Configuration Ethernet mode If you select Ethernet (router-only) mode, the following fields are available: Bridged Mode Only RFC 2684 Bridged RFC 2684 Routed IPoA RFC 2516 PPPoE RFC 2364 PPPoA Bridged Mode Only In this mode, only the DSL modem function is available, and all Gateway features are disabled.

If selected, you only need to enter the VC Settings. RFC 2684 Bridged If selected, enter the correct data for the IP Settings. Select **Obtain an IP address automatically** if your ISP allocates an IP address upon connection. Otherwise, select **Use the following IP address**. RFC 2684 Routed With this method, you are required to use a permanent IP address to connect to the Internet. If you are using PPPoE, your IP address is provided automatically. rFC 2364 PPPoA Some DSL-based ISPs use PPPoA (Point-to-Point Protocol over ATM) to establish Internet connections. If using PPPoA, your IP address is provided automatically. **Language Select** your language To use a different language, select one from the dropdown menu. The language of the browser-based utility will change five seconds after you select another language.

Internet Setup The **Internet Setup** section configures the router to your Internet connection. Most of this information can be obtained through your Internet Service Provider (ISP). **Network Setup** The **Network Setup** section configures the IP settings for your local network. 10 Linksys X1000 Internet Connection Type Select the type of Internet connection your ISP provides from the drop-down menu. The available types are: •••••••• Advanced Configuration L2TP Layer 2 Tunneling Protocol (L2TP) is a service that generally applies to connections in Israel. □• Automatic Configuration - DHCP Static IP PPPoE PPTP L2TP Telstra Cable Connect on Demand or Keep Alive—The **Connect on Demand** and **Keep Alive** options let you choose whether the router connects to the Internet only as needed (useful if your ISP charges for connect time), or if the router should always be connected. Keep the default only if your ISP supports DHCP or if you connect using a dynamic IP address. (This option usually applies to cable connections.) Static IP If you are required to use a fixed IP address to connect to the Internet, select **Static IP**. PPPoE If you have a DSL connection, check whether your ISP uses **Point-to-Point Protocol over Ethernet (PPPoE)**.

if so , select PPPoE. □• **Network Setup** The **Network Setup** section configures the IP settings for your local network. **Wireless > Basic Wireless Settings** @The basic settings for wireless networking are set on this screen. There are two ways to configure the Router's wireless network(s), manual and **Wi-Fi Protected Setup**. **Wi-Fi Protected Setup** is a feature that makes it easy to set up your wireless network.

If you have client devices, such as wireless adapters, that support **WiFi Protected Setup**, then you can use **Wi-Fi Protected Setup**. configuration View To manually configure your wireless networks , select **Manual**. **Connect on Demand** or **Keep Alive**—The **Connect on Demand** and **Keep Alive** options let you choose whether the router connects to the Internet only as needed (useful if your ISP charges for connect time), or if the router should always be connected. If your PPTP connection supports DHCP or a dynamic IP address, then select **Obtain an IP Address Automatically**. If you are required to use a fixed IP address to connect to the Internet, then select **Specify an IP Address** and configure the options below.

□• **Connect on Demand** or **Keep Alive**—The **Connect on Demand** and **Keep Alive** options let you choose whether the router connects to the Internet only as needed (useful if your ISP charges for connect time), or if the router should always be connected. select the appropriate option. 11 Linksys X1000 Manual setup Set up the wireless network on this screen. Note After you set up the wireless network(s), set up the wireless security settings. go to “Wireless > Wireless Security” on page 14. □• •• •• Advanced Configuration **Wireless-G Only** If you have only Wireless-G devices, select **Wireless-G Only**. **Wireless-N Only** If you have only Wireless-N devices, select **Wireless-N Only**. **Disabled** If you have no Wireless-B, Wireless-G, and Wireless-N devices in your network, select **Disabled**. Note If you are not sure which mode to use, keep the default, **Mixed**. The default is Cisco followed by the last 5 digits of the router's serial number, which is found on the bottom of the router.

If you used the setup software for installation, then the default **Network Name** is changed to an easy-to-remember name. Note If you restore the router's factory default settings (by pressing the **Reset** button or using the **Administration > Factory Defaults** screen), the **Network Name** will return to its default value, and all devices on your wireless network will need to be reconnected. **channel Width** For best performance in a network using **Wireless-B** , **Wireless-G** and **Wireless-N** devices , select **Auto** (20 MHz or 40 MHz). For a channel width of 20 MHz, keep the default, 20 MHz only. **Standard Channel** Select the channel from the drop-down list for **Wireless-B**, **Wireless-G**, and **Wireless-N** networking. If you are not sure which channel to select, then keep the default, **Auto**. **Network Mode** In most network configurations, you should leave it set to **Mixed** (default). **Wireless settings** **Basic Wireless Settings (Manual) > Wireless Settings** **Network Mode** Select the wireless standards your network will support. □• •• •• **Mixed** If you have **Wireless-N**, **Wireless-G**, and **Wireless-B** devices in your network, keep the default, **Mixed**. **Wireless-B/G Only** If you have both **Wireless-B** and **Wireless-G** devices in your network, select **Wireless-B/G Only**.

Wireless-B Only If you have only **Wireless-B** devices, select **Wireless-B Only**. **SSID Broadcast** When wireless clients survey the local area for wireless networks to associate with, they will detect the **SSID** broadcast by the router. To broadcast the router's **SSID**, keep the default, **Enabled**.



You're reading an excerpt. Click here to read official LINKSYS X1000 user guide
<http://yourpdfguides.com/dref/5487740>

If you do not want to broadcast the router's SSID, then select Disabled. 12 Linksys X1000 Wi-Fi Protected Setup Three methods of Wi-Fi Protected Setup are available.

Use the method that applies to the client device you are configuring. □• Advanced Configuration Wi-Fi Protected Setup Button Use this method if your client device has a Wi-Fi Protected Setup button. Click or press the Wi-Fi Protected Setup button on the client device. b. Click the Wi-Fi Protected Setup button on the router's Wi-Fi Protected Setup screen, OR press and hold the Wi-Fi Protected Setup button on the back panel of the router for one second.

note Wi-Fi Protected Setup configures one client device at a time. Repeat the instructions for each client device that supports Wi-Fi Protected Setup. c. After the client device has been configured, click OK on the router's Wi-Fi Protected Setup screen within two minutes. □• Enter Client Device PIN on Router Use this method if your client device has a Wi-Fi Protected Setup PIN (Personal Identification Number). Wi-Fi Protected Setup light activity ••••• The Cisco logo on the top panel of the router functions as the Wi-Fi Protected Setup light. When the Wi-Fi Protected Setup process is active, the light flashes slowly. When the Wi-Fi Protected Setup is successful, the light is continuously lit. If there is an error, the light flashes quickly for two minutes; please wait and try again. Wait until the light is continuously lit, before starting the next Wi-Fi Protected Setup session.

a. Enter the PIN from the client device in the field on the router's Wi-Fi Protected Setup screen. b. Click the Register button on the router's Wi-Fi Protected Setup screen. c. After the client device has been configured, click OK on the router's Wi-Fi Protected Setup screen within two minutes. 13 Linksys X1000 •• Advanced Configuration Personal Options Security Option WPA2 Personal WPA2/WPA Mixed Mode Enter Router PIN on Client Device Use this method if your client device asks for the router's PIN. strength Strongest WPA2: Strongest WPA: Strong Strong Basic a. On the client device, enter the PIN listed on the router's Wi-Fi Protected Setup screen. (It is also listed on the bottom of the router.

) b. After the client device has been configured, click OK on the router's Wi-Fi Protected Setup screen within two minutes. For each wireless network, the Network Name (SSID), Security, and Passphrase are displayed at the bottom of the screen. Note If you have client devices that do not support Wi-Fi Protected Setup, note the wireless settings, and then manually configure those client devices. WPA Personal WEP Office Options The office options are available for networks that use a RADIUS server for authentication.

The office options are stronger than the personal options because WPA2 or WPA provides encryption while RADIUS provides authentication. Security Option WPA2 Enterprise WPA2/WPA Enterprise Mixed Mode WPA Enterprise RADIUS Strength Strongest WPA2: Strongest WPA: Strong Strong Basic Wireless > Wireless Security The wireless security settings configure the security of your wireless network(s). The router supports the following wireless security options: WPA2/WPA Mixed Mode, WPA2 Personal, WPA Personal, WPA2/WPA Enterprise Mixed Mode, WPA2 Enterprise, WPA Enterprise, WEP, and RADIUS.)

@@ Wireless Security Wireless security is strongly recommended, and WPA2 is the strongest method available. Use WPA2 if it is supported by all of your wireless devices.

Security Mode Select the security option for your wireless network. Then go to the instructions for your selection. 14 Linksys X1000 WPA2/WPA Mixed Mode Note If you select WPA2/WPA Mixed Mode as your Security Mode, each device in your wireless network MUST use WPA2/WPA and the same passphrase.

Advanced Configuration WPA Personal Note If you select WPA Personal as your Security Mode, each device in your wireless network MUST use WPA Personal and the same passphrase. If you used the setup software for installation, then the default is changed to a unique passphrase. If you used the setup software for installation, then the default is changed to a unique passphrase. WPA2 Personal Note If you select WPA2 Personal as your Security Mode, each device in your wireless network MUST use WPA2 Personal and the same passphrase. WPA2/WPA Enterprise Mixed Mode This option features WPA2/WPA used in coordination with a RADIUS server. (@) Note If you select WPA2/WPA Enterprise Mixed Mode as your Security Mode, each device in your wireless network MUST use WPA2/WPA Enterprise and the same shared key. If you used the setup software for installation, then the default is changed to a unique passphrase.

RADIUS Server Enter the IP address of the RADIUS server. RADIUS Port Enter the port number of the RADIUS server. the default is 1812. @@15 Linksys X1000 WPA2 Enterprise This option features WPA2 used in coordination with a RADIUS server. (@) Note If you select WPA2 Enterprise as your Security Mode, each device in your wireless network MUST use WPA2 Enterprise and the same shared key. Advanced Configuration RADIUS Server Enter the IP address of the RADIUS server. RADIUS Port Enter the port number of the RADIUS server. the default is 1812. @@WEP WEP is a basic encryption method, which is not as secure as WPA. Note If you select WEP as your Security Mode, each device in your wireless network MUST use WEP and the same encryption and shared key.

RADIUS Server Enter the IP address of the RADIUS server. RADIUS Port Enter the port number of the RADIUS server. the default is 1812. @@@@WPA Enterprise This option features WPA used in coordination with a RADIUS server. (@) Note If you select WPA Enterprise as your Security Mode, each device in your wireless network MUST use WPA Enterprise and the same shared key.

16 Linksys X1000 RADIUS This option features WEP used in coordination with a RADIUS server. @@@@RADIUS Port Enter the port number of the RADIUS server. the default is 1812. @@@@This helps minimize exposure of your local network. @@@@ otherwise , select no.

@@ guest Password The default is guest. @@Change Click this option to change the Guest Password. the Change Guest Password screen appears. @@@@Select the number of guests you want to allow on your guest network. @@To broadcast the SSID of the guest network, keep the default, Enabled. If you do not want to broadcast the SSID of the guest network, then select Disabled. 18 Linksys X1000 Troubleshooting Troubleshooting X1000 Your computer cannot connect to the Internet. Follow the instructions until your computer can connect to the Internet: ••• The computer cannot connect wirelessly to the network. Make sure the wireless network name or SSID is the same on both the computer and the device. If you have enabled wireless security, then make sure the same security method and key are used by both the computer and the device.



[You're reading an excerpt. Click here to read official LINKSYS](http://yourpdfguides.com/dref/5487740)

[X1000 user guide](http://yourpdfguides.com/dref/5487740)

<http://yourpdfguides.com/dref/5487740>

You need to modify the basic settings on the device. Run the Setup Wizard on the Setup CD-ROM. You need to modify the advanced settings on the device. Open the web browser (for example, Internet Explorer or Firefox), and enter the device's IP address in the address field (the default IP address is 192. When prompted, complete the User name and Password fields (the default user name and password is admin). Click the appropriate tab to change the settings You cannot use the DSL service to connect manually to the Internet. After you have installed the router, it will automatically connect to your Internet Service Provider (ISP), so you no longer need to connect manually. When you open the web browser, the login screen appears, even though you do not need to log in.

These steps are specific to Internet Explorer but are similar for other browsers. Make sure that the Modem Router is powered on.

The Power LED should be green and not flashing. If the Power LED is flashing, then power off all of your network devices, including the Modem Router and computers. Then power on each device in the following order: a. modem Router b. Computer •• Check the LEDs on the device's front panel.

Make sure the Power, DSL, and at least one of the numbered Ethernet LEDs are lit. If they are not, then check the cable connections. The computer should be connected to one of the Ethernet ports numbered 1-3 on the device, and the device's DSL port must be connected to the ADSL line. When you double-click the web browser, you are prompted for a user name and password. If you want to get rid of the prompt, follow these instructions.

Launch the web browser and perform the following steps (these steps are specific to Internet Explorer but are similar for other browsers): 1. You are using a static IP address and cannot connect. Refer to Windows Help and change your Internet Protocol (TCP/IP) Properties to Obtain an IP address automatically.

19 Linksys X1000 The router does not have a coaxial port for the cable connection. A coaxial cable can connect to only a cable modem. Your modem router works as a modem with your ADSL Internet, but if you have cable Internet, your modem router should be connected to a separate cable modem. Insert the Setup CD into your computer and follow the on-screen instructions to connect your modem-router to a cable modem. You want to access the browser-based utility from Cisco Connect. To enter the browser-based utility from Cisco Connect, follow these steps: 1. Write down the username and password that are displayed.

(To help protect your password, you can copy it to the Clipboard by clicking Copy password. Troubleshooting When you try to log into the browser-based utility, your password does not work. Your wireless security password also serves as the browser-based utility's login password. The Password is displayed on the left side of the screen. In Windows XP, you do not see the router in the My Network Places screen. In the Network Tasks section, click Show icons for networked UPnP devices. If the router does not appear, follow these instructions: 1. Web If your questions are not addressed here, refer to the website, linksys. 5 (ADSL2+) for Annex A, B, M, L, U-R2 for Annex B NoteS For regulatory, warranty, and safety information, see the CD that came with your modem router or go to Linksys. com/support.

Specifications are subject to change without notice. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions. environmental Dimensions Weight Power Operating Temperature Storage Temperature Operating Humidity Storage Humidity 180 x 34 x 167 mm (7 ,09 x 1 ,34 x 6 ,58") 287 g (10 ,1 oz) 12VDC , 1A 0 to 40°C (32 to 104°F) -20 to 70°C (-4 to 158°F) 10 to 85% Noncondensing 5 to 90% Noncondensing 21 Visit linksys. Com/support for award-winning 24/7 technical support Cisco, the Cisco logo, and Linksys are trademarks or registered trademarks of Cisco and/or its affiliates in the United States and other countries.

A listing of Cisco's trademarks can be found at www. All other trademarks mentioned in this document are the property of their respective owners. □• Router only (Sólo router): Si cuenta con un módem por cable o DSL DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Se abre la pantalla We are now setting up your Linksys X1000 (Estamos configurando Linksys X1000). En la pantalla How will you be using your X1000 (Uso del X1000), haga clic en Modem-router (Router módem) o Router only (Sólo router). O, para omitir la detección automática de su región y configurar manualmente la conexión a Internet, seleccione My region is not in this list (Mi región no se encuentra en la lista) y, a continuación, haga clic en Next (Siguiente).

Cómo utilizar Cisco Connect Other Options (Otras opciones) Register now to receive special offers and updates (Regístrese ahora para recibir ofertas especiales y actualizaciones) Para suscribirse y recibir ofertas especiales y actualizaciones de Cisco y los socios de Cisco, haga clic en esta opción. router details (Detalles del router) Para ver más información sobre el router , haga clic en esta opción. Aparece la pantalla Router details (Detalles del router), con los siguientes datos: Model name (Nombre del modelo), Model number (Número del modelo), Serial number (Número de serie), Firmware version (Versión del firmware), Operating system (Sistema operativo), Software version (Versión de software), Connection type (WAN) (Tipo de conexión [WAN]), IP address (LAN) (Dirección IP [LAN]), IP address (WAN) (Dirección IP [WAN]) y Computer IP address (Dirección IP del. Language (Idioma) Select your language (Seleccione su idioma) Si desea utilizar un idioma distinto, selecciónelo del menú desplegable. Guest Access (Acceso de invitado) Allow Guest Access (Permitir acceso de invitado) Para permitir el acceso a Internet a través de una red para invitado, mantenga el parámetro predeterminado, yes (sí).



[You're reading an excerpt. Click here to read official LINKSYS](http://yourpdfguides.com/dref/5487740)

[X1000 user guide](http://yourpdfguides.com/dref/5487740)

<http://yourpdfguides.com/dref/5487740>

Valitse How will you be using your X1000 (Mikä on laitteen X1000 käyttötapa) -näytössä Modem-router (Modeemireiitin) tai Router only (Vain reititin) ja valitse Next (Seuraava). DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Jos tämä ei tule näyttöön: •• Valitse Windowsissa Käynnistä, Tietokone, kaksoisnapsauta CD•• Modem-router (Modeemireiitin): Käytä X1000-laitetta sekä DSL- asemaa ja Setup-kuvaketta. □• Router only (Vain reititin): Jos käytät internetiä erillisen kaapeli- tai Näyttöön tulee We are now setting up your Linksys X1000 (Määritetään Linksys X1000) -ikkuna. Modeemireiittimen DSL-porttiin ja Voit myös ohittaa asuinalueen automaattisen tunnistuksen ja määrittää Internet-yhteyden manuaalisesti valitsemalla My region is not in this list (Asuinalueeni ei ole luettelossa) ja sen jälkeen Next (Seuraava). Other options (Muut asetukset) Register now to receive special offers and updates (Rekisteröitymällä nyt saat erikoistarjouksia ja päivityksiä) Valitse tämä, jos haluat saada erikoistarjouksia ja päivityksiä Ciscolta ja sen kumppaneilta.

Language (Kieli) Select your language (Valitse kieli) Voit käyttää jotakin toista kieltä valitsemalla sen avattavasta valikosta. Valitse muutoin Use the following IP address (Käytä seuraavaa IP-osoitetta). Guest Access (Vieraskäyttö) Allow Guest Access (Salli vieraskäyttö) Jos haluat sallia internet-yhteyden muodostamisen vierasverkon kautta, käytä oletusarvoa yes (Kyllä). Sur l'écran How will you be using your X1000 (Comment allez-vous utiliser votre X1000), cliquez sur Modem-router (Modem routeur) ou sur Router only (Routeur uniquement), puis cliquez sur Next (Suivant). DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Si cette option n'apparaît pas : •• Pour Windows, cliquez sur Démarrer, Ordinateur, puis cliquez deux fois sur le lecteur CD et sur l'icône Setup (Configuration). □• Router only (Routeur uniquement) : si votre accès Internet s'effectue L'écran We are now setting up your Linksys X1000 (Nous procédons à l'installation de votre Linksys X1000) apparaît. Autres options : Register now to receive special offers and updates (Inscrivez-vous maintenant pour recevoir nos offres spéciales et nos mises à jour) : pour recevoir les offres spéciales et les mises à jour de Cisco et des partenaires Cisco, cliquez sur cette option. L'écran Router details (Informations du routeur) s'affiche avec les éléments suivants : Model name (Nom du modèle), Model number (Référence du modèle), Serial number (Numéro de série), Firmware version (Version du micrologiciel), Operating system (Système d'exploitation), Software version (Version du logiciel), Connection type (Type de connexion) WAN, IP address (Adresse IP) LAN, IP address (Adresse IP) WAN et Computer IP address (Adresse IP de l'ordinateur). Type de connexion Internet Dans le menu déroulant, sélectionnez le type de connexion Internet communiqué par votre FAI. Type de connexion Internet Dans le menu déroulant, sélectionnez le type de connexion Internet communiqué par votre FAI.

□• Enter the Router's PIN on your client device (Saisir le code PIN du routeur sur le périphérique client) : utilisez cette méthode si votre périphérique client vous demande le code PIN du routeur. □• Enter the client device's PIN on the Router (Saisir le code PIN du périphérique client sur le routeur) : utilisez cette méthode si votre périphérique client dispose d'un code PIN Wi-Fi Protected Setup. À l'écran How will you be using your X1000 (Mode d'utilisation de votre X1000), cliquez sur Modem-router (Modem routeur) ou Router only (Routeur seulement), puis cliquez sur Next (Suivant). DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Si ce lien ne s'affiche pas : •• Sous Windows, cliquez sur Démarrer, Ordinateur/Poste de travail, ensuite •• Modem-router (Modem routeur) : Utilisez le X1000 à la fois comme double-cliquez sur votre lecteur CD et sur l'icône Setup (Configuration). □• Router only (Routeur seulement) : Si vous utilisez un modem câble Le message We are now setting up your Linksys X1000 (Configuration de votre Linksys X1000 en cours) s'affichera à l'écran.

Ou, pour ignorer la détection automatique de votre région et configurer manuellement votre connexion Internet, sélectionnez My region is not in this list (ma région ne figure pas dans cette liste), puis cliquez sur Next (suivant).



[You're reading an excerpt. Click here to read official LINKSYS X1000 user guide](http://yourpdfguides.com/dref/5487740)

<http://yourpdfguides.com/dref/5487740>

Easy Setup Key (Clé de configuration facile) Update or create key (Mettre à jour ou créer clé) La clé de configuration facile est une clé USB qui conserve les paramètres sans fil pour le routeur. Other Options (Autres options) Register now to receive special offers and updates (Inscrivez-vous maintenant pour recevoir des offres spéciales et des mises à jour) Pour vous inscrire afin de recevoir des offres spéciales et des mises à jour de la part de Cisco et ses partenaires, cliquez sur cette option. router details (Détails sur le routeur) Pour voir plus de renseignements sur le routeur, cliquez sur cette option. L'écran Router details (Détails sur le routeur) s'affiche et comprend les champs suivants : Model name (Nom du modèle), Model number (Numéro du modèle), Serial number (Numéro de série), Firmware version (Version du micrologiciel), Operating system (Système d'exploitation), Software version (Version logicielle), Connection type (WAN) (Type de connexion [réseau étendu]), IP address (LAN) (Adresse IP [réseau local]), IP address (WAN) (Adresse IP [réseau étendu]) et Computer IP address (Adresse IP de l'ordinateur).

Sinon, sélectionnez Use the following IP address (Utiliser l'adresse IP suivante). A How will you be using your X1000 (Az X1000 használatának módja) képernyőn kattintson a Modem-router (Modem-útválasztóként) vagy a Router only (Csak útválasztóként) lehetőségre, majd kattintson a Next (Tovább) gombra. DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Ha nem látja a következőt: •• Windows rendszer esetén kattintson a Start (Indítás), a Computer •• Modem-útválasztóként: Használja a X1000 eszközt DSL-modemként (Számítógép) gombra, majd kattintson kétszer a CD meghajtó és a Setup (Telepítés) ikonra. □• Csak útválasztóként: Ha külön kábellel vagy DSL-modemmel Ekkor megnyílik a We are now setting up your Linksys X1000 (A Linksys X1000 eszköz telepítése folyamatban) képernyő. Easy Setup Key (Egyszerű telepítési kulcs) Update or create key (Kulcs frissítése vagy létrehozása) Az Egyszerű telepítési kulcs olyan USB Flash meghajtó, amely megőrzi az útválasztó vezeték nélküli beállításait.) Other Options (Egyéb opciók) Register now to receive special offers and updates (Speciális ajánlatok és frissítések fogadásához regisztráljon most) Ha szeretne feliratkozni a Cisco vállalatától vagy a Cisco társvállalataitól származó speciális ajánlatok és frissítések fogadására, kattintson erre az opcióra. router details (Útválasztó részletei) Az útválasztóval kapcsolatos további információkért kattintson erre az opcióra. Megjelenik a Router details (Útválasztó részletei) képernyő, mely a következőket tartalmazza: Model name (Típus neve), Model number (Típus száma), Serial number (Sorozatszám), Firmware version (Firmware-verzió), Operating system (Operációs rendszer), Software version (Szoftver-verzió), Connection type (Csatlakozás típusa) (WAN), IP address (LAN) (LAN IP-címe), IP address (WAN) (WAN IP-címe), and Computer IP address (Számítógép IP-címe). Ellenkező esetben válassza az Use the following IP address (A következő IP-cím használata) lehetőséget. Language (Nyelv) Select your language (Nyelv kiválasztása) Másik nyelv használatához válasszon egyet az alábbi legördülő menüben.

Guest Access (Vendég-hozzáférés) Allow Guest Access (Vendég-hozzáférés engedélyezése) A vendég-hálózaton keresztül történő internet-elérés engedélyezéséhez tartsa meg a yes (igen) alapértelmezett értéket. Di layar How will you be using your X1000 (Bagaimana Anda akan menggunakan X1000), klik Modem-router atau Router only (Router saja), kemudian klik Next (Berikutnya). DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel Jika Anda tidak melihat ini: •• Untuk Windows, klik Start (Mulai), Computer (Komputer), kemudian •• Modem-router: Gunakan X1000 baik sebagai modem DSL maupun klik ganda drive CD dan ikon Setup (Penyetelan). □• Router only (Router saja): Jika Anda mempunyai modem kabel atau Layar We are now setting up your Linksys X1000 (Kami sedang menyetel Linksys X1000 Anda) akan terbuka. Easy Setup Key (Kunci Penyetelan Mudah) Update or create key (Perbarui atau buat kunci) Easy Setup Key (Kunci Penyetelan Mudah) adalah drive flash USB yang menyimpan setelan wireless untuk router.) Other Options (Opsi Lainnya) Register now to receive special offers and updates (Daftarkan sekarang untuk menerima penawaran khusus dan update) Untuk mendaftar agar menerima penawaran khusus dan info terbaru dari Cisco dan mitra Cisco, klik opsi ini.



[You're reading an excerpt. Click here to read official LINKSYS X1000 user guide](http://yourpdfguides.com/dref/5487740)
<http://yourpdfguides.com/dref/5487740>

router details (Perincian router) Untuk melihat informasi lebih lanjut tentang router, klik opsi ini. Layar Router details (Perincian router) muncul, menampilkan Model name (Nama model), Model number (Nomor model), Serial number (Nomor seri), Firmware version (Versi firmware), Operating system (Sistem operasi), Software version (Versi perangkat lunak), Connection type (Jenis koneksi) (WAN), IP address (Alamat IP) (LAN), IP address (Alamat IP) (WAN), dan Computer IP address (Alamat IP komputer). Jika tidak, pilih Use the following IP address (Gunakan alamat IP berikut). Guest Access (Akses Tamu) Allow Guest Access (Izinkan Akses Tamu) Untuk mengizinkan akses Internet melalui jaringan tamu, pertahankan defaultnya, yes (ya).

Router only (Solo router): se si dispone di un cavo o di un modem DSL DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Viene visualizzata la schermata We are now setting up your Linksys X1000 (Installazione di Linksys X1000 in corso). Nella schermata How will you be using your X1000 (Modalità di utilizzo di X1000), fare clic su Modem-router o Router only (Solo router), quindi fare clic su Next (Avanti). Installazione In alternativa, per disabilitare il rilevamento automatico del paese e configurare manualmente la connessione Internet, selezionare My region is not in this list (Il paese non è incluso nell'elenco), quindi fare clic su Next (Avanti) Utilizzare i dati forniti dal provider di servizi Internet per completare le schermate rimanenti relative alle impostazioni DSL, al tipo di connessione Internet e alle informazioni sull'account. Viene visualizzata la schermata Router details (Dettagli router), contenente Model name (Nome modello), Model number (Numero modello), Serial number (Numero di serie), Firmware version (Versione firmware), Operating system (Sistema operativo), Software version (Versione software), Connection type (WAN) (Tipo di connessione (WAN)), IP address (LAN) (Indirizzo IP (LAN)), IP address (WAN) (Indirizzo IP (WAN)) e Computer IP address (Indirizzo IP del computer). Altri opzioni Register now to receive special offers and updates (Registri ora per ricevere offerte speciali e aggiornamenti) Fare clic su questa opzione per ricevere offerte speciali e aggiornamenti da Cisco e partner Cisco.

Language (Lingua) Select your language (Selezionare la lingua desiderata) Per utilizzare un'altra lingua, selezionarne una dal menu a discesa. Guest Access (Accesso ospite) Allow Guest Access (Consenti accesso ospite): per consentire l'accesso a Internet tramite una rete ospite, mantenere l'impostazione predefinita yes (Sì). Router only (Alleen router): als u een aparte kabelmodem DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Het scherm We are now setting up your Linksys X1000 (We zijn bezig uw Linksys X1000 in te stellen) wordt weergegeven. Klik in het scherm How will you be using your X1000? Of sla de automatische detectie van uw regio over en configureer handmatig uw internetverbinding: selecteer My region is not in this list (Mijn regio staat niet in deze lijst) en klik vervolgens op Next (Volgende). Cisco Connect gebruiken Andere opties Register now to receive special offers and updates (Registreer u nu en ontvang speciale aanbiedingen en updates) Als u speciale aanbiedingen en updates wilt ontvangen van Cisco en partners van Cisco, klikt u op deze optie.

router details (Routergegevens) Klik op de deze optie voor meer informatie over de router. Het scherm Router details (Routergegevens) wordt weergegeven met Model name (Modelnaam), Model number (Modelnummer), Serial number (Serienummer), Firmware version (Firmwareversie), Operating system (Besturingssysteem), Software version (Softwareversie), Connection type (WAN) (Verbindingstype (WAN)), IP address (LAN) (IP-adres (LAN)), IP address (WAN) (IP-adres (WAN)) en Computer IP address (IP-adres computer). Easy Setup Key Update or create key (Key bijwerken of maken) De Easy Setup Key is een USB-flashstation dat de draadloze instellingen voor de router bevat. Type internetverbinding Kies het type internetverbinding van uw internetprovider in de vervolgkeuzelijst. Type internetverbinding Kies het type internetverbinding van uw internetprovider in de vervolgkeuzelijst. Guest Access (Gasttoegang) Allow Guest Access (Gasttoegang toestaan) Houd voor het toestaan van internettoegang via een gastnetwerk de standaardinstelling yes (Ja) aan. 14

Personlige alternativer Kontoralternativer Trådløs sikkerhet for 5 GHz eller 2,4 GHz Gjestetilgang Instruksjoner for gjester Wireless (Trådløst) > Guest Access (Gjestetilgang) . Router only (Bare ruter): Hvis du har et separat kabel- eller DSL-modem DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: AutoPlay for Internett-tilgang, gir dette alternativet hjemmedatamaskinene dine nettverkstilkobling. DVD/CD-RW Drive (E:) Linksys Router Setup Always do this for software and games: Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC Install or run program Set up your Linksys Router Published by Cisco Consumer Products LLC General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Set AutoPlay defaults in Control Panel General options Open folder to view files using Windows Explorer Speed up my system using Windows ReadyBoost Skjermbildet We are now setting up your Linksys X1000 (Nå installerer vi Linksys X1000) åpnes. For Mac, dobbeltklikk på ikonet for CD på skrivebordet og deretter på ikonet for Setup (Oppsett).

På skjermbildet How will you be using your X1000 (Hvordan planlegger du å bruke X1000? LED-lampene for strøm, trådløst og Ethernet (én for hver tilkoblet datamaskin) bør nå lyse.



[You're reading an excerpt. Click here to read official LINKSYS X1000 user guide](http://yourpdfguides.com/dref/5487740)
<http://yourpdfguides.com/dref/5487740>