



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MAKITA 6337D. You'll find the answers to all your questions on the MAKITA 6337D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAKITA 6337D  
User guide MAKITA 6337D  
Operating instructions MAKITA 6337D  
Instructions for use MAKITA 6337D  
Instruction manual MAKITA 6337D



<b>GB</b> Cordless Driver Drill	Instruction Manual
<b>F</b> Perceuse-visseuse sans fil	Manuel d'instructions
<b>D</b> Akku-Bohrschrauber	Betriebsanleitung
<b>I</b> Trapano-avvitatore a batteria	Istruzioni per l'uso
<b>NL</b> Snoerloze boor-schroevendraaier	Gebruiksaanwijzing
<b>E</b> Taladro-atornillador a batería	Manual de instrucciones
<b>P</b> Berbequim aparafusador a bateria	Manual de instruções
<b>DK</b> Akku bore-skruemaskine	Brugsanvisning
<b>GR</b> Βιδοτρίπανο με μπαταρία	Οδηγίες χρήσεως

6207D  
6217D  
6317D  
6337D  
6347D



[You're reading an excerpt. Click here to read official MAKITA 6337D user guide](http://yourpdfguides.com/dref/3758039)  
<http://yourpdfguides.com/dref/3758039>

**Manual abstract:**

*â· Note: Specifications may differ from country to country. Intended use The tool is intended for drilling and screw driving in wood, metal and plastic. Safety hints For your own safety, please refer to the enclosed safety instructions. Before using battery cartridge, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using battery. It may result in a risk of overheating, possible burns and even an explosion. If electrolyte gets into your eyes, rinse them out with clear water and seek medical attention right away. It may result in loss of your eyesight. Always cover the battery terminals with the battery cover when the battery cartridge is not used. Do not short the battery cartridge: (1) Do not touch the terminals with any conductive material.*

*A battery short can cause a large current flow, overheating, possible burns and even a breakdown.*

*@@@@ the battery cartridge can explode in a fire. Be careful not to drop or strike battery. @@@@Depress the reversing switch lever from the A side for clockwise rotation or from the B side for counterclockwise rotation. When the reversing switch lever is in the neutral position, the switch trigger cannot be pulled. cAUTION: Â· Always check the direction of rotation before operation.*

*â· Use the reversing switch only after the tool comes to a complete stop. Changing the direction of rotation before the tool stops may damage the tool. â· When not operating the tool, always set the reversing switch lever to the neutral position. DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to drill safety rules. If you use this power tool unsafely or incorrectly, you can suffer serious personal injury.*

*1. Hold power tools by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator. 2. Always be sure you have a firm footing. Be sure no one is below when using the tool in high locations. Keep hands away from rotating parts. Do not touch the drill bit or the workpiece immediately after operation; they may be extremely hot and could burn your skin. 7. Some material contains chemicals which may be toxic.*

*Take caution to prevent dust inhalation and skin contact. Follow material supplier safety data. To change the speed, first switch off the tool and then slide the speed change lever to the "2" side for high speed or "1" side for low speed. Be sure that the speed change lever is set to the correct position before operation.*

*Use the right speed for your job. cAUTION: Â· Always set the speed change lever fully to the correct position. If you operate the tool with the speed change lever positioned halfway between the "1" side and "2" side, the tool may be damaged. â· Do not use the speed change lever while the tool is running.*

*WARNING: MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury. For drilling, depress the lock button and then slide the action mode change lever to the left (f symbol).*

*@@ to start the tool , simply pull the switch trigger. Tool speed is increased by increasing pressure on the switch trigger. @@When not using the driver bit, keep it in the bit holders. Bits 45 mm long can be kept there. @@ place the point of the bit in the indentation and start drilling.*

*Use a cutting lubricant when drilling metals. The exceptions are iron and brass which should be drilled dry. @@ â· There is a tremendous force exerted on the tool/bit at the time of hole break through. Hold the tool firmly and exert care when the bit begins to break through the workpiece. â· A stuck bit can be removed simply by setting the reversing switch to reverse rotation in order to back out.*

*However, the tool may back out abruptly if you do not hold it firmly. â· Always secure small workpieces in a vise or similar hold-down device. â· If the tool is operated continuously until the battery cartridge has discharged, allow the tool to rest for 15 minutes before proceeding with a fresh battery. Place the point of the driver bit in the screw head and apply pressure to the tool. Start the tool slowly and then increase the speed gradually. Release the switch trigger as soon as the clutch cuts in. cAUTION: Â· Make sure that the driver bit is inserted straight in the screw head, or the screw and/or bit may be damaged. â· When driving wood screws, predrill pilot holes to make driving easier and to prevent splitting of the workpiece. CAUTION: Always be sure that the tool is switched off and the battery cartridge is removed before attempting to perform inspection or maintenance. Replace when they wear down to the limit mark.*

*Keep the carbon brushes clean and free to slip in the holders. Both carbon brushes should be replaced at the same time. Take out the worn carbon brushes, insert the new ones and secure the brush holder caps. (Fig. 11) To maintain product SAFETY and RELIABILITY, repairs, any other maintenance or adjustment should be performed by Makita Authorized or Factory Service Centres, always using Makita replacement parts. These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose. If you need any assistance for more details regarding these accessories, ask your local Makita service center. If the tool is operated continuously until the battery cartridge has discharged, allow the tool to rest for 15 minutes before proceeding with a fresh battery.*

*Drilling in wood When drilling in wood, the best results are obtained with wood drills equipped with a guide screw. The guide screw makes drilling easier by pulling the bit into the workpiece. @@@@ wear ear protection. @@@@ wear ear protection. @@For European countries only For Model 6337D Noise The typical A-weighted noise level determined according to EN60745-2-1: Sound pressure level (LpA): 70 dB (A) or less The noise level under working may exceed 85 dB (A).*

*wear ear protection. @@For European countries only For Model 6347D Noise The typical A-weighted noise level determined according to EN60745-2-1: Sound pressure level (LpA): 71 dB (A) Uncertainty (K): 3 dB (A) The noise level under working may exceed 85 dB (A). wear ear protection. @@.*



**[You're reading an excerpt. Click here to read official MAKITA 6337D user guide](http://yourpdfguides.com/dref/3758039)**  
**<http://yourpdfguides.com/dref/3758039>**