




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MAKITA 6723DW. You'll find the answers to all your questions on the MAKITA 6723DW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAKITA 6723DW  
User guide MAKITA 6723DW  
Operating instructions MAKITA 6723DW  
Instructions for use MAKITA 6723DW  
Instruction manual MAKITA 6723DW

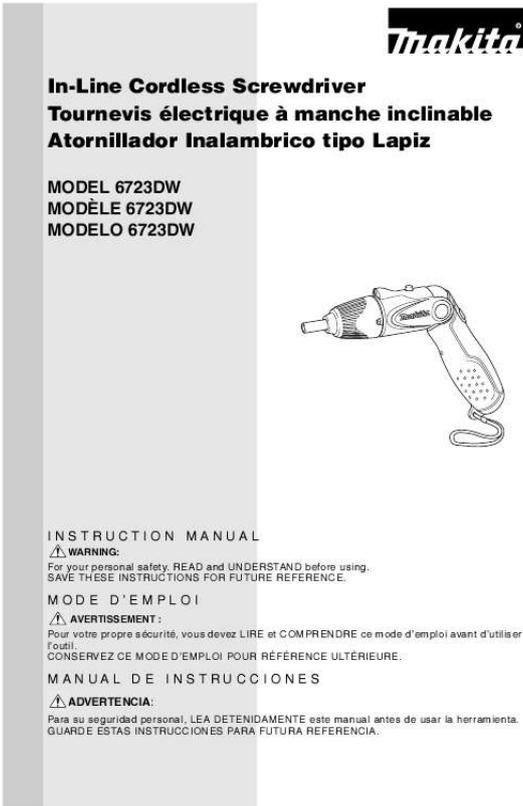

**Makita**

**In-Line Cordless Screwdriver**  
**Tournevis électrique à manche inclinable**  
**Atornillador Inalambrico tipo Lapiz**

MODEL 6723DW  
MODÈLE 6723DW  
MODELO 6723DW



INSTRUCTION MANUAL  
⚠ **WARNING:**  
For your personal safety, READ and UNDERSTAND before using.  
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

MODE D'EMPLOI  
⚠ **AVERTISSEMENT:**  
Pour votre propre sécurité, vous devez LIRE et COMPRENDRE ce mode d'emploi avant d'utiliser l'outil.  
CONSERVEZ CE MODE D'EMPLOI POUR RÉFÉRENCE ULTÉRIEURE.

MANUAL DE INSTRUCCIONES  
⚠ **ADVERTENCIA:**  
Para su seguridad personal, LEA DETENIDAMENTE este manual antes de usar la herramienta.  
GUARDE ESTAS INSTRUCCIONES PARA FUTURA REFERENCIA.



[You're reading an excerpt. Click here to read official MAKITA 6723DW user guide](http://yourpdfguides.com/dref/3042284)  
<http://yourpdfguides.com/dref/3042284>

**Manual abstract:**

Please pay particular attention to all of the sections of this instruction manual that carry warning symbols and notices. Using the LED light - using the folding handle - Using the screwdriver CLEANING AND MAINTENANCE ENVIRONMENTAL PROTECTION Specifications subject to change without notice.

Foldable handle Auto spindle lock LED illumination light Rubberized hand grip Forward / reverse action Carrying strap Accessory pack 6723DW Cordless screwdriver 3 hour charging adaptor Carrying/storage case 80 piece accessory pack containing: 1 x magnetic bit holder 9 x nut drivers 5, 6, 7, 8, 9, 10, 11, 12, 13 mm 6 x 50 mm bits 3 Slotted 4, 5, 6 mm 3 Crosspoint numbers 1, 2, 3 64 x 25 mm bits 12 Slotted 3, 4, 5, 5.5, 6, 7 mm (2 pcs each) 8 Crosspoint numbers 0, 1, 2, 3 (2 pcs each) 16 Pozidriv numbers 0, 1, 2, 3 (4 pcs each) 10 Hexagonal 2, 2. Read and understand all instructions. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury. Keep your work area clean and well lit. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or Keep bystanders, children, and visitors away while operating a power tool. distractions Can cause you to lose control.

A battery operated tool with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery. a charger that may be suitable for One type of battery may create a risk of fire when used with another battery. @@ Use of any Other batteries may create a risk of fire. @@@@ Do not wear loose clothing or jewelry. contain long hair.

Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can Be caught in moving parts. Be sure switch is in the locked or off position before inserting battery pack. Carrying tools with your finger on the switch or inserting the battery pack Into a tool with the switch on invites accidents. Remove adjusting keys or wrenches before turning the tool on.

a wrench or a key that is Left attached to a rotating part of the tool may result in personal injury. Always wear eye protection. dust mask , non-skid safety shoes , hard Hat, or hearing protection must be used for appropriate conditions. Use clamps or other practical way to secure and support the workpiece to a stable platform. Holding the work by hand or against your body is unstable and may lead to loss of Use the correct tool for your application. the correct tool will do the job Better and safer at the rate for which it is designed. Do not use tool if switch does not turn it on or off. A tool that cannot be controlled with the Switch is dangerous and must be repaired. Disconnect battery pack from tool or place the switch in the locked or off position before making any adjustments, changing accessories, or storing the tool. such Preventive safety measures reduce the risk of starting the tool accidentally.

Store idle tools out of reach of children and other untrained persons. tools are Dangerous in the hands of untrained users. When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. With sharp cutting edge are less likely to bind and are easier to control. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tool's operation. if damaged , have the tool serviced before using. Many accidents are caused by poorly maintained tools. 20. Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool may create a risk of injury when used on another tool.

Tool service must be performed only by qualified repair personnel. service or Maintenance performed by unqualified personnel may result in a risk of injury. When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of shock or injury.

@@@@ 1. @@@@ 3. Always be sure you have a firm footing. Be sure no one is below when using the tool in high locations. Keep hands away from rotating parts.

@@@@ Connecting it to any other power source may cause damage to the tool. @@@@ Recharge only when the tool starts to run slowly. Before the first use, the battery must be charged for 5 hours. 2. @@@@ 4. Before the first charge, the battery should be fully discharged. Make sure that the On/Off switch is not activated. @@@@ Whilst charging, the battery pack and charger may become warm. @@@@ see page 3 for details. @@@@ NOTE: Always use sharp good quality screwdriver bits.

@@@@ To switch the LED light Off press the LED light On/Off switch again. The screwdriver is equipped with a folding handle for either in-line, or pistol grip use. When folded into the pistol grip position it gives assistance when used in areas that may have restricted access. see figure 8. To use the folding handle, grip the lower handle with one hand and move the upper handle to the desired position with the other hand. When using the screwdriver the following points should be observed. 1. Place the point of the screwdriver bit in the head of the screw and apply light pressure to the screwdriver. 2. Make sure that the screwdriver bit is inserted straight and upright in the screw head, or the screw may be damaged.

When driving wood screws, pre-drill pilot holes to make driving easier and to prevent splitting the material. It acts as a guide for the screw to follow and it prevents distortion or splitting of the wood. 6. Pilot holes should be drilled to a depth equal to or greater than the length of the screw to be used. 7. The table below should be used as a guide for the size of the pilot hole. Select forward rotation to drive screws in and reverse rotation to take them out. 9. Take care not to overtighten small brass screws. The screw head is easily twisted off and the threads can strip.

Use Posidrive screws whenever possible. They are easier to drive, as the screwdriver bit engages more firmly in the screw head. 11. When inserting a screw into a hole that is already threaded, start the screw by hand. Run the screw until you feel the threads catch and then use the screwdriver to tighten the screw. 12. When using the nut drivers supplied with this screwdriver, take care not to overtighten the nuts as they could be damaged. Do not press the On/Off switch when performing cleaning and maintenance procedures. After use, remove the screwdriver bit and tap the side of the screwdriver bit holder to remove any dust, or chippings etc. Clean the body of the screwdriver with a soft cloth.

Keep the handle clean and free from oil and grease. Keep the charging adaptor clean and free from dust and grease. worn or damaged parts must be replaced by qualified personnel.



[You're reading an excerpt. Click here to read official MAKITA](http://yourpdfguides.com/dref/3042284)

[6723DW user guide](http://yourpdfguides.com/dref/3042284)

<http://yourpdfguides.com/dref/3042284>

*There are no user servicable parts inside the screwdriver. The law prohibits any other method of disposal. @@Recycle unwanted materials instead of disposing of them as waste. @@@@Do not incinerate NiCad battery packs as they may explode when exposed to fire. How to remove the inside battery (for recycle) Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are: · lead from lead-based paints , · Crystalline silica from bricks and cement and other masonry products, and · arsenic and chromium from chemically-treated lumber. Your risk from these exposures varies, depending on how often you do this type of work.*

*To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles. .*



[You're reading an excerpt. Click here to read official MAKITA](http://yourpdfguides.com/dref/3042284)

[6723DW user guide](http://yourpdfguides.com/dref/3042284)

<http://yourpdfguides.com/dref/3042284>