



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for MAKITA ADP03. You'll find the answers to all your questions on the MAKITA ADP03 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAKITA ADP03
User guide MAKITA ADP03
Operating instructions MAKITA ADP03
Instructions for use MAKITA ADP03
Instruction manual MAKITA ADP03



GB Automatic Refreshing Adapter	DK Automatisk opfriskningsadapter
F Adaptateur de régénération automatique	S Automatisk uppräsningsadapter
D Schnell-Auffrischadapter	N Automatisk oppfriskeradapter
I Adattatore di rigenerazione automatica	SF Automaattinen virkistystaaja
NL Automatische opfrisadapter	GR Αυτόματος μετασημαστικής αναζωογόνησης
E Adaptador automático para descarga/carga	CH 自動再生轉換器
P Adaptador de renovação automática	

ADP03

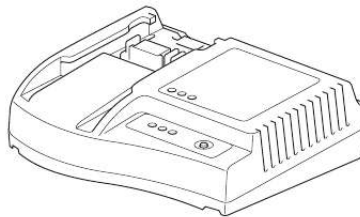

[You're reading an excerpt. Click here to read official MAKITA ADP03 user guide](http://yourpdfguides.com/dref/3796782)
<http://yourpdfguides.com/dref/3796782>

Manual abstract:

1 2 3 Battery cartridge Charging lights Refreshing lights 4 5 6 Terminal cover Automatic refreshing adapter Conditioned refreshing button 7 Battery charger
Use this adapter with Makita battery charger DC14SC, DC14SA, DC18SC, DC24SA or DC24SC. @Never carry charger by cord or yank it to disconnect from receptacle. â Do not expose charger and adapter to rain or snow. @@@@â After charging, unplug the charger from the power source. The battery charger is not intended for use by young children or infirm persons without supervision. â Young children should be supervised to ensure that they do not play with the battery charger. Insert the adapter into charger until it stops adjusting to the guide of charger. Terminal cover of charger can be opened with inserting and closed with pulling out the adapter. plug the battery charger into your power source. Two charging lights will flash in green color repeatedly.

Insert the battery cartridge into adapter until it stops adjusting to the guide of adapter. when the battery cartridge is inserted , the adapter selects normal charge or automatic refreshing charge automatically. When the adapter selects normal charge, the charging light colors will change from green to red and normal charge will begin. When the adapter selects automatic refreshing charge, the charging light colors will change from green to red and one refreshing light will flash in green color repeatedly and quickly. then , automatic refreshing charge will begin.

With the finish of normal charge and automatic refreshing charge, the charging light colors will change from red to green. When you press the conditioned refreshing button, the charging light colors will change from green to red and one refreshing light will flash in green color repeatedly. then , conditioned refreshing charge will begin. With the finish of conditioned refreshing charge, the charging light colors will change from red to green. @@Charging lights flash alternately in green and red color.

After charging, unplug the charger from the power source. @@If not, proceed along the way "No" shown below. The battery cartridge is new and out of use. the battery cartridge has been UNUSED for approximately six months. @@None of your actions are needed. (The following actions are taken automatically).

@@@@@The battery cartridge is new and out of use. @@@@@@But the charging time will be longer than usual in this case.

@@@@@Recharge of battery with its low temperature 3. @@Always stop tool operation and charge the battery cartridge when you notice less tool power.

Charge the Nickel Metal Hydride battery cartridge when you do not use it for more than six months. Never use it for other purposes or for other manufacturer's batteries. â When you charge a new battery cartridge or a battery cartridge which has not been used for a long period of time, it may not accept a full charge. This is a normal condition and does not indicate a problem. You can recharge the battery cartridge fully after discharging it completely and recharging a couple of times or after refresh charging. â If you charge a battery cartridge from a just-operated tool or battery cartridge which has been left in a location exposed to direct sunlight for a long time, the charging light may flash in red color. If this occurs, wait for a while. charging will begin after the battery cartridge is cooled by the cooling fan installed in the charger. When the temperature on battery is more than approx. 70Â°C (158Â°F), two charging lights may flash in red color, and when approx.

If the charging light flashes alternately in green and red color, charging is not possible. The terminals on the charger, adapter or battery cartridge are clogged with dust or the battery cartridge is worn out or damaged. â Any of the following conditions indicates damage to the charger, adapter and/or battery cartridge. @@ 2. @@ 3.

@@ 4. @@CAUTION: Always be sure that the charger is unplugged and the battery cartridge is removed before attempting to perform inspection or maintenance. To maintain product SAFETY and RELIABILITY, repairs, maintenance or adjustment should be performed by Makita Authorized or Factory Service Centers, always using Makita replacement parts. .



[You're reading an excerpt. Click here to read official MAKITA](#)

[ADP03 user guide](#)

<http://yourpdfguides.com/dref/3796782>