



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MAKITA BHP459. You'll find the answers to all your questions on the MAKITA BHP459 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAKITA BHP459
User guide MAKITA BHP459
Operating instructions MAKITA BHP459
Instructions for use MAKITA BHP459
Instruction manual MAKITA BHP459



GB	Cordless Hammer Driver Drill	Instruction Manual
F	Perceuse Percussion-Visseuse sans Fil	Manuel d'instructions
D	Akku-Schlagbohrschrauber	Betriebsanleitung
I	Trapano avvitatore a percussione a batteria	Istruzioni per l'uso
NL	Snoerloze slagboer-schroevendraaier	Gebruiksaanwijzing
E	Rotomartillo Aterrillador Inalámbrico	Manual de instrucciones
P	Furadeira de Impacto / Parafusadeira a Bateria	Manual de instruções
DK	Akku-slagskruestrækker	Brugsanvisning
GR	Κρουστικό δρέπανο κατ'επίδο μπαταρίας	Οδηγίες χρήσεως
TR	Akülü Darbeli Matkap Tornavida	Kullanma kılavuzu

BHP459



[You're reading an excerpt. Click here to read official MAKITA BHP459 user guide](http://yourpdfguides.com/dref/5209706)
<http://yourpdfguides.com/dref/5209706>

Manual abstract:

Weight, with battery cartridge, according to EPTA-Procedure 01/2003 ENE079-1 BHP459 13 mm 13 mm 38 mm 6 mm x 75 mm M6 0 1,500 0 22,500 0 6,000 192 mm D. Wear ear protectors with impact drilling. Exposure to noise can cause hearing loss. Use auxiliary handle(s), if supplied with the tool. loss of control can cause personal injury. Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring. Cutting accessory contacting a live wire may make exposed metal parts of the power tool live and could give the operator an electric shock. Hold power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring. Fasteners contacting a live wire may make exposed metal parts of the power tool live and could give the operator an electric shock. Always be sure you have a firm footing.

Be sure no one is below when using the tool in high locations. hold the tool firmly. Keep hands away from rotating parts. Do not leave the tool running. Operate the tool only when hand-held.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. 10. Some material contains chemicals which may be toxic. Take caution to prevent dust inhalation and skin contact.

Follow material supplier safety data. installing or removing battery cartridge (Fig. 1) Hold the tool and the battery cartridge firmly when installing or removing battery cartridge. Failure to hold the tool and the battery cartridge firmly may cause them to slip off your hands and result in damage to the tool and battery cartridge and a personal injury. To remove the battery cartridge, slide it from the tool while sliding the button on the front of the cartridge. To install the battery cartridge, align the tongue on the battery cartridge with the groove in the housing and slip it into place. Insert it all the way until it locks in place with a little click. installing or removing battery cartridge (Fig. CAUTION: Always install the battery cartridge fully until the red indicator cannot be seen. Do not install the battery cartridge forcibly.

If the cartridge does not slide in easily, it is not being inserted correctly. SAVE THESE INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS FOR BATTERY CARTRIDGE 1. do not disassemble battery cartridge. It may result in loss of your eyesight. A battery short can cause a large current flow, overheating, possible burns and even a breakdown. Do not store the tool and battery cartridge in locations where the temperature may reach or exceed 50°C (122°F). Do not incinerate the battery cartridge even if it is severely damaged or is completely worn out. The battery cartridge can explode in a fire. Be careful not to drop or strike battery.

Charge the battery cartridge before completely discharged. Always stop tool operation and charge the battery cartridge when you notice less tool power. Charge the battery cartridge with room temperature at 10°C 40°C (50°F 104°F). let a hot battery cartridge cool down before charging it. Charge the battery cartridge once in every six months if you do not use it for a long period of time.

The tool and battery are equipped with a protection system. This system automatically cuts off power to the tool to extend battery life. let a hot battery cartridge cool down before charging it. In this situation, release the switch trigger on the tool and stop the application that caused the tool to become overloaded. Then pull the switch trigger again to restart.

If the tool does not start, the battery is overheated. In this situation, remove and recharge the battery. switch action (Fig. To start the tool, simply pull the switch trigger. Tool speed is increased by increasing pressure on the switch trigger. Pull the switch trigger to light up the lamp. The lamp keeps on lighting while the switch trigger is being pulled. The lamp goes out just after releasing the trigger. adjusting the fastening torque (Fig. reversing switch action (Fig.

This tool has a reversing switch to change the direction of rotation. reversing switch action (Fig. installing or removing the driver bit or drill bit (Fig. 8) Turn the sleeve counterclockwise to open the chuck jaws. Place the bit in the chuck as far as it will go. Turn the sleeve clockwise to tighten the chuck. To remove the bit, turn the sleeve counterclockwise. 9) Speed change (Fig. The tool may be damaged. 9) Speed change (Fig. Be sure that the speed change lever is set to the correct position before operation. Use the right speed for your job. this tool employs an action mode changing ring. Select one of the three modes suitable for your work needs by using this ring. If you operate the tool with the ring positioned halfway between the mode marks, the tool may be damaged.

The hook is convenient for temporarily hanging the tool. This can be installed on either side of the tool. To install the hook, insert it into a groove in the tool housing on either side and then secure it with a screw. To remove, loosen the screw and then take it out. installing the bit holder (Optional accessory) (Fig. When not using the driver bit, keep it in the bit holders. Bits 45 mm long can be kept there. installing the bit holder (Optional accessory) (Fig. Insert it fully until the red part cannot be seen. installing the bit holder (Optional accessory) (Fig. 11) Selecting the action mode (Fig. Be sure to use a tungsten-carbide tipped bit. Do not force the tool. Light pressure gives best results. Keep the tool in position and prevent it from slipping away from the hole.

Do not apply more pressure when the hole becomes clogged with chips or particles. Instead, run the tool at an idle, then remove the bit partially from the hole. By repeating this several times, the hole will be cleaned out and normal drilling may be resumed. Drilling in wood When drilling in wood, the best results are obtained with wood drills equipped with a guide screw. The guide screw makes drilling easier by pulling the bit into the workpiece. Place the point of the bit in the indentation and start drilling. Use a cutting lubricant when drilling metals. The exceptions are iron and brass which should be drilled dry. discoloration, deformation or cracks may result. blow-out bulb (optional accessory) (Fig.

screwdriving operation (Fig. Place the point of the driver bit in the screw head and apply pressure to the tool. Start the tool slowly and then increase the speed gradually. Release the switch trigger as soon as the clutch cuts in. CAUTION: Make sure that the driver bit is inserted straight in the screw head, or the screw and/or bit may be damaged.



[You're reading an excerpt. Click here to read official MAKITA](http://yourpdfguides.com/dref/5209706)

[BHP459 user guide](http://yourpdfguides.com/dref/5209706)

<http://yourpdfguides.com/dref/5209706>

NOTE: ⚠ When driving wood screw, predrill a pilot hole 2/3 the diameter of the screw. It makes driving easier and prevents splitting of the workpiece.

OPTIONAL ACCESSORIES CAUTION: ⚠ These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use the accessories or attachments for their stated purposes.

If you need any assistance for more details re.



[You're reading an excerpt. Click here to read official MAKITA](#)

[BHP459 user guide](#)

<http://yourpdfguides.com/dref/5209706>