



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for MAKITA BMR100. You'll find the answers to all your questions on the MAKITA BMR100 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAKITA BMR100
User guide MAKITA BMR100
Operating instructions MAKITA BMR100
Instructions for use MAKITA BMR100
Instruction manual MAKITA BMR100



GB	Radio	Instruction manual
F	Radio	Manuel d'instructions
D	Radio	Betriebsanleitung
I	Radio	Istruzioni per l'uso
NL	Radio	Gebruiksaanwijzing
E	Radio	Manual de instrucciones
P	Rádio	Manual de instruções
DK	Radio	Brugsanvisning
S	Radio	Bruksanvisning
N	Radio	Bruksanvisning
SF	Түюмаарadio	Käyttöohje
GR	Ραδιόφωνο	Οδηγίες χρήσης
PO	Odbiornik radiowy	Instrukcja obsługi
RU	Радио	Инструкцию по эксплуатации

BMR100

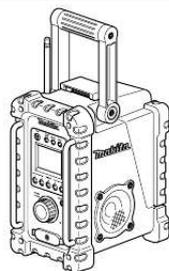

[You're reading an excerpt. Click here to read official MAKITA BMR100 user guide](http://yourpdfguides.com/dref/3791975)
<http://yourpdfguides.com/dref/3791975>

Manual abstract:

Be sure that you understand their meaning before use. Only for EU countries Do not dispose of electric equipment together with household waste material! In observance of European Directive 2002/96/EC on waste electrical and electronic equipment and its implementation in accordance with national law, electric equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility. AM/FM-stereo PLL Synthesized Large LCD display with illumination Manual/Preset/Scan tuning Rotary tuning and volume control 5 preset stations each band Time and 2 alarm timers (radio and HWS buzzer) with Snooze Adjustable sleep (auto shut off) timer Stereo speaker for rich sound performance Ultra rugged design Water resistant to JIS 4 Powered by both Makita battery pack and supplied power adaptor WARNING: When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following: 1. Read this instruction manual and the charger instruction manual carefully before use. 2. Clean only with dry cloth. 3. Do not block any ventilation opening. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Unplug this apparatus during lightning storms or when unused for long periods of time.

7. A battery operated radio with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery. 8. Use battery operated radio only with specifically designated battery packs.

Use of any other batteries may create a risk of fire. 9. When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. @@@@ 1. Pull out the battery compartment locker to release battery compartment.

There are main battery pack compartment and back up battery compartment. Remove back up battery compartment cover and insert 2 fresh UM-3 (AA sizes). Make sure the batteries are with correct polarity as shown inside the compartment. BH2433 \ BH2420 After back up batteries are inserted, insert the main battery pack to power radio. Reduced power, distortion and a "stuttering sound" or low battery sign that appears on the display are all the signs that the main battery pack needs to replace. Note: The battery pack can't be charged via the supplied AC power adaptor. 6. When low battery sign appears and an "E" keeps on flashing is the time to replace the back up batteries. The following tables indicate the operating time on a single charge. Using Supplied AC power adaptor (Fig.

6) Remove the rubber protector and insert the adaptor plug into the DC socket on the front side of the radio. plug the adaptor into a standard mains socket outlet. Whenever the adaptor is used, the battery pack are automatically disconnected. The AC adaptor should be disconnected from the main supply when not in use. Clock can be set either when the radio is power on or off. 2. Display will show "-: -" when the back up batteries are installed. 3. Long press the time set button for more than 2 seconds, display will flash time set symbol and also the hour digit, followed by a beep. Press the button again to complete clock setting.

@@@@@ for AM (MW) band , rotate the radio to get best signal. @@ 3. @@ Press the Scan button again to pick up the found station. @@@@ 4. Rotate the Volume control to get required sound level.

@@ The radio alarm can be set either when radio is on or off. @@ 4. @@ 5. Follow same procedures of setting hour to set required minute. @@ 4.

@@ 5. Rotate the volume control to get required sound level. @@ display will show when radio alarm is set. @@ There are 5 memory presets for each waveband. Press and hold down the required preset until radio beeps. @@@@ The HWS buzzer alarm can be set either radio is on or off. During the symbol flashes, long pressing the button for more than 2 seconds followed by a beep and display Hour digit will flash. 4. Rotate Tuning Control to select required alarm hour, then press time set button again. Rotate Tuning Control to select required alarm minute, the press time set button again to complete HWS buzzer alarm setting.

Press the power button to turn on the radio. When the radio alarm is selected, the radio will turn on and play the chosen radio station at the chosen alarm time. The radio alarm will continue for one hour unless turned off by pressing the Power button. Press and hold down buzzer alarm button for more than 2 seconds followed by a beep to switch on or off the HWS buzzer alarm. Sound is no longer in stereo and stereo indicator disappears. 5 mm headphone socket located in front of your radio is provided for use with either headphones or an hairpiece. Whilst the alarm is activated, pressing any buttons except the Power Button will activate the snooze function. The snooze function can be repeatedly during one hour that the alarms are active. Power Requirements AC power adaptor DC12V 700mA, center pin positive Battery UM-3 (AA size) x 2 for back up Cluster battery: 9. The sleep timer will automatically switched off the radio after a preset time has elapsed.

1. Press and continue to hold down the Power button for more than 2 seconds, followed by a beep tone, the display will cycle through the available sleep times in the order 60-45-30-15-120-90-60. Release the Power button when the required sleep time appears in the display. @@@@ continue pressing Step/Band button for approx. @@ by rotating the Tuning control , you may adjust to 100 kHz per tuning step.

After FM tuning step is reset, pressing Step/Band button again, display will show AM (MW) and flash 9 kHz. When the stereo FM station reception is weak, you can improve it by pressing Mono button for 2 seconds. We declare under our sole responsibility that this product is in compliance with the following standards of standardized documents, EN55013 in accordance with Council Directives, 89/336/EEC. We declare under our sole responsibility that this product is in compliance with the following standards of standardized documents, EN60950, EN61558 in accordance with Council Directives, 73/23/EEC. .



[You're reading an excerpt. Click here to read official MAKITA](http://yourpdfguides.com/dref/3791975)

[BMR100 user guide](http://yourpdfguides.com/dref/3791975)

<http://yourpdfguides.com/dref/3791975>