



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MAKITA BMR102. You'll find the answers to all your questions on the MAKITA BMR102 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAKITA BMR102
User guide MAKITA BMR102
Operating instructions MAKITA BMR102
Instructions for use MAKITA BMR102
Instruction manual MAKITA BMR102



GB	Radio	Instruction manual
F	Radio	Manuel d'instructions
D	Radio	Betriebsanleitung
I	Radio	Istruzioni per l'uso
NL	Radio	Gebruiksaanwijzing
E	Radio	Manual de instrucciones
P	Rádio	Manual de instruções
DK	Radio	Brugsanvisning
S	Radio	Bruksanvisning
N	Radio	Bruksanvisning
FIN	Työmaaradio	Käyttöohje
GR	Ραδιόφωνο	Οδηγίες χρήσης
PO	Odbiornik radiowy	Instrukcja obsługi
RUS	Радио	Инструкция по эксплуатации

BMR102



[You're reading an excerpt. Click here to read official MAKITA BMR102 user guide](http://yourpdfguides.com/dref/5210156)
<http://yourpdfguides.com/dref/5210156>

Manual abstract:

5 **Only for EU countries Do not dispose of electric equipment or battery pack together with household waste material! In observance of European Directive 2002/96/EC on waste electric and electronic equipment, 2006/66/EC on batteries and accumulators and waste batteries and accumulators and their implementation in accordance with national laws, electric equipment and battery pack that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.** 7 **ENGLISH (Original instructions) IMPORTANT SAFETY INSTRUCTIONS WARNING: When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:**

1. Read this instruction manual and the charger instruction manual carefully before use. 2. Clean only with dry cloth. 3. Do not block any ventilation opening. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 5. Only use

attachments/accessories specified by the manufacturer.

6. Unplug this apparatus during lightning storms or when unused for long periods of time. 7. A battery operated radio with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery. Use battery operated radio only with specifically designated battery packs. Use of any other batteries may create a risk of fire. 9. When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks, burns, or a fire. 10.

11. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns. 5. Do not short the battery cartridge: (1) Do not touch the terminals with any conductive material. A battery short can cause a large current flow, overheating, possible burns and even a breakdown. 6. The battery cartridge can explode in a fire. 8.

Be careful not to drop or strike battery. 9. Do not use dropped or struck battery. (Do not use a damaged battery.) Features: AM/FM-stereo PLL Synthesized Large LCD display with illumination Manual/Preset/Scan tuning Rotary tuning and volume control 5 preset stations each band Time and 2 alarm timers (radio and HWS buzzer) with Snooze Adjustable sleep (auto shut off) timer Stereo speaker for rich sound performance Ultra rugged design Water resistant to IPX 4 Powered by both Makita battery pack and supplied power adaptor Explanation of general view (Fig. Battery compartment (covering main battery pack and back up batteries) 12. Before using battery cartridge, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using battery. If operating time has become excessively shorter, stop operating immediately. It may result in a risk of overheating, possible burns and even an explosion. 4.

If electrolyte gets into your eyes, rinse them out with clear water and seek medical attention right away. It may result in loss of your eyesight. Pull out the battery compartment locker to release battery compartment. There are main battery pack compartment and back up battery compartment. Remove back up battery compartment cover and insert 2 fresh UM-3 (AA sizes).

The following tables indicate the operating time on a single charge. battery Cartridge Voltage 7. To remove the battery cartridge, slide it from the tool while sliding the button on the front of the cartridge or pressing the buttons on both sides of the cartridge. WARNING: Do not use two main batteries at the same time. 0 WARNING: Do not use two main batteries at the same time.

To install the battery cartridge, align the tongue on the battery cartridge with the groove in the housing and slip it into place. Always insert it all the way until it locks in place with a little click. installing or removing Slide battery cartridge (Fig. Install it fully until the red indicator cannot be seen. If not, it may accidentally 9 3-2. installing or removing Cluster battery cartridge (Fig. 5 - 9) Pull the supporting bar to allow the battery to insert to the terminal. To insert the battery cartridge, align the tongue on the battery cartridge with the groove in the housing and slip it into place. Release the supporting bar. 4.

Return the battery compartment locker to the original position. 5. 6. Press button to confirm hour setting, the minute digit will flash. Press the button again to complete clock setting. scan Tuning 1. Press the Power button to turn on the radio. 2. Select the required waveband by pressing the Band button.

2. 3. Press the Scan button again to pick up the found station. 4. Rotate the Tuning/Volume control knob to get required sound level. To turn off the radio, press the Power button. Using Supplied AC power adaptor (Fig. Plug the adaptor into a standard mains socket outlet. manual Tuning 1. Press the Power button to turn on the radio.

2. Select the required waveband by pressing the Band button. 4. 5. Rotate the Tuning/Volume control knob to get required sound level. setting the clock 1. Clock can be set either when the radio is power on or off. 2. Display will show -: - when the back up batteries are installed. To turn off the radio, press the Power button.

display will show OFF. Storing stations in preset memories There are 5 memory presets for each waveband. 1. Press the Power button to turn on the radio. 2. Tune to required station using one of the methods previously described. 3. Press and hold down the required preset until radio beeps. The preset number will appear in the display and the station will be stored under chosen preset button. 4.

Repeat this procedure for the remaining presets. 5. Stations stored in preset memories can be overwritten by following above procedures.

The HWS buzzer alarm can be set either radio is on or off.

2. 3. During the symbol flashes, long pressing the button for more than 2 seconds followed by a beep and display Hour digit will flash. 4. Rotate Tuning/Volume control knob to select required alarm hour, then press time set button again.

The minute digit will then flash. 5. Rotate Tuning/Volume control knob to select required alarm minute, the press time set button again to complete HWS buzzer alarm setting. Press the Power button to turn on the radio. Momentarily press the required Preset button, the preset number and station frequency will appear in the display. Setting the radio alarm When the radio alarm is selected, the radio will turn on and play the chosen radio station at the chosen alarm time.



[You're reading an excerpt. Click here to read official MAKITA BMR102 user guide](http://yourpdfguides.com/dref/5210156)
<http://yourpdfguides.com/dref/5210156>

The radio alarm will continue for one hour unless turned off by pressing the Power button. Pressing the Power button whilst the alarm is activated will cancel the alarm for 24 hours. @@The radio alarm can be set either when radio is on or off. 2.

@@ 3. During radio alarm symbol flashing, press button for more than 2 seconds followed by a beep. 4. Display Hour will flash, rotate Tuning/Volume control knob to select the hour then press button again to confirm hour setting. 5. Follow same procedures of setting hour to set required minute. Press button to complete alarm time setting. snooze function 1. @@@ 2. The display will flash both the snooze symbol and the alarm symbol.

@@Sleep function The sleep timer will automatically switched off the radio after a preset time has elapsed. Release the Power button when the required sleep time appears in the display. The symbol will appear in the display and the radio will play the last station selected. During setting radio alarm time and radio alarm symbol is flashing, press Band button to activate the radio to select required wake-up band and station by manual tuning and recall the preset stations.

To cancel the sleep function, press the Power button.

the Symbol will disappear and radio is off. Display illumination Press any buttons or rotate Tuning/Volume control knob will illuminate the LCD display for approx. 15 seconds. During scanning stations and alarm activated, will also a.



[You're reading an excerpt. Click here to read official MAKITA BMR102 user guide](http://yourpdfguides.com/dref/5210156)

<http://yourpdfguides.com/dref/5210156>