



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MAKITA PLM4101. You'll find the answers to all your questions on the MAKITA PLM4101 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAKITA PLM4101
User guide MAKITA PLM4101
Operating instructions MAKITA PLM4101
Instructions for use MAKITA PLM4101
Instruction manual MAKITA PLM4101



Betriebsanleitung
Manuel d'utilisation
Operator's manual
Manuale di istruzioni
Gebruikershandleiding
Manual de instrucciones
Manual de instruções
Οδηγίες Χρήσης
Kullanım kılavuzu
Bruksanvisning

Brugsanvisning
Käyttöohjeet
Návod k použití
Instrukcje obsługi
Használati utasítás
Руководство с инструкциями
Priručnik za uporabo
Priročnik za uporabo
Návod na použitie
Manual de instrucțiuni
Instrukcij vadovas
Operatora rokasgrāmat
Kasutusjuhend
Priručnik sa uputstvima



PLM4101
PLM4600
PLM4601
PLM4602
PLM4603
PLM5100
PLM5101



[You're reading an excerpt. Click here to read official MAKITA PLM4101 user guide](http://yourpdfguides.com/dref/3787419)
<http://yourpdfguides.com/dref/3787419>

Manual abstract:

Symbols have therefore been placed on various parts of the machine to remind you of the main precautions to be taken. Their full meanings are explained later on. You are also asked to carefully read the safety regulations in the applicable chapter of this handbook. Keep other people at a safe distance whilst working. 4.3. Warning: Remove the spark plug lead and read instructions before carrying out any repair or maintenance. Do not put hands or feet near the blades. Get familiar with the controls and proper use of the equipment. Learn how to stop the engine quickly. 2) Only use the lawnmower for the purpose for which it was designed, i.

Any other use can be hazardous, causing damage to the machine. 3) Never allow children or people unfamiliar with these instructions to use the lawnmower. Local regulations may restrict the age of the operator. @@@@ Do not operate the equipment when barefoot or wearing open sandals. 2) Thoroughly inspect the area where the equipment is to be used and remove all objects which may be thrown by the machine or damage the cutter assembly and the engine (stones, sticks, metal wire, bones, etc.

) 3) WARNING: DANGER! @@ Refuel using a funnel and outdoors only. Do not smoke while refuelling or whenever handling the fuel. Add fuel before starting the engine. @@@@ 5) Before use, always inspect the machine, especially the condition of the blades, and check that the screws and cutting assembly are not worn or damaged. 12) Do not change the engine governor settings or overspeed the engine.

13) On power-driven models, disengage the drive clutch before starting the engine. 14) Start the engine carefully, following the instructions and keeping feet well away from the blade. 15) Do not tilt the lawnmower when starting the engine. Start the engine on a flat surface that is free of obstacles and tall grass. 16)

Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times. 17) Never pick up or carry a lawnmower while the engine is running. 18) Stop the engine and disconnect the spark plug wire: Before carrying out any work underneath the cutting deck or before unclogging the chute; Before checking, cleaning or working on lawnmower; After striking a foreign object. @@@@ Remove the key from models with electric starters. @@@@ regular maintenance is essential for safety and performance.

@@@3) Allow the engine to cool before storing in an enclosed space. @@ Do not leave containers with grass cuttings in rooms. 5) Check the stone-guard and grass-catcher frequently for wear and deterioration. 6) If the fuel tank has to be drained, this should be done outdoors and when the engine is cool. 7) Wear strong work gloves when removing and reassembling the blade. For safety reasons, these jobs are best carried out at a specialized centre. 9) For reasons of safety, do not use the equipment with worn or damaged parts. Parts are to be replaced and not repaired. Use genuine spare parts (blades should always bear the symbol). Parts that are not of the same quality can damage the equipment and be dangerous for your safety.

1) Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect. 2) Mow only in daylight or good artificial light. 3) If possible, avoid operating the equipment in wet grass. 4) Always be sure of your footing on slopes. 5) Walk, never run and do not allow yourself to be pulled along by the lawnmower.

6) Mow across the face of slopes, never up and down. 7) Exercise extreme caution when changing direction on slopes. 8) Do not mow on slopes of more than 20°. 9) Exercise extreme caution when pulling the lawnmower towards you. 10) Stop the blade if the lawnmower has to be tilted for transportation when crossing surfaces other than grass, and when transporting the lawnmower to and from the area to be mowed.

@@@@@@@ 3. @@ 3. @@@@@@@@@@@@@@ attach the control cables using the clips (6). @@@@@@@@@@@@@@ store the lawnmower in a dry place.

@@2) Carefully clean the machines with water after each cut; remove the grass debris and mud accumulated inside the chassis to avoid their drying and thus making the next start-up difficult. 3) The paintwork on the inside of the chassis may peel off in time due to the abrasive action of the cut grass; in this case, intervene promptly by touching up the paintwork using a rustproof paint to prevent the formation of rust that would lead to corrosion of the metal. 4) Should it be necessary to access the lower part, only tilt the machine from the side shown in the engine handbook; following the relative instructions. 5) Do not drip petrol onto the plastic parts of the motor or the machine to prevent damaging them and remove all traces of spilt petrol immediately. The warranty does not cover damage to plastic parts caused by petrol. @@ 2.

@@ The engine stops when the lever is released. 2. @@ The lawnmower stops moving forward when the lever is released. @@@@@@@@ 4. 3 The control cable must be adjusted if the difference in speed between position «2» and position «4» is minimal or nil. NOTE - The adjustment must be made with the engine switched off. Gradually turn register (2) anticlockwise (so as to cause it to extend) until control lever (1) has difficulty in reaching position «4»; at this point turn the register clockwise by about half a turn, to obtain optimal adjustment of the forward speed, together with correct engagement of the four speeds using control lever (1). The move from one speed to another must be made with the engine running and drive engaged. IMPORTANT - Do not touch the speed changer when the engine is stopped. This operation could damage the speed changer.

NOTE - If the machine does not move forwards with the control in position «1», it is enough to move the control to «4» and then immediately return it to position «1». @@@@@@@@ Man, who is responsible for the guarantee of the product. @@ Use of unsuitable spare parts or parts which are not original MAKITA parts, insofar as they have caused the damage. Use of unsuitable or old oil. Cleaning, servicing and adjustment work is not covered by the guarantee.

All repairs covered by the guarantee must be performed by a MAKITA service centre. Responsibility On tools with engines by Briggs&Stratton, Honda, Tecumseh or Robin Subaru, the engine manufacturer or their authorised service centre is responsible for the engine only. MAKITA is responsible for the rest of the tool (excluding the engine). This does not apply to electrical generators and all o.



[You're reading an excerpt. Click here to read official MAKITA](http://yourpdfguides.com/dref/3787419)

[PLM4101 user guide](http://yourpdfguides.com/dref/3787419)

<http://yourpdfguides.com/dref/3787419>