



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MAXDATA ECO 4000 A. You'll find the answers to all your questions on the MAXDATA ECO 4000 A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual MAXDATA ECO 4000 A**  
**User guide MAXDATA ECO 4000 A**  
**Operating instructions MAXDATA ECO 4000 A**  
**Instructions for use MAXDATA ECO 4000 A**  
**Instruction manual MAXDATA ECO 4000 A**

**MAXDATA Notebook ECO 4000 A**

**User's Manual**

UK



[You're reading an excerpt. Click here to read official MAXDATA ECO 4000 A user guide](http://yourpdfguides.com/dref/2875859)  
<http://yourpdfguides.com/dref/2875859>

*Manual abstract:*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*60 Italy .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 60 Netherlands .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 60 Radio frequencies for units with wireless LAN ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*@@@@@@@67 Switching the Computer on .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*... 68 Power Management .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.. 69 UK Left Side ...*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.... 71 Right Side .*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.... *71 Front View.*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.... *71 Rear View .*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.... *72 Underside .*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.... 72 Explanation of LED Displays .  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

. 73 Hot Keys .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

....74 The Quick Buttons (Quick Launch keys) .....

.....  
.....  
.....

.....  
.....  
.....

..... 75 The Keyboard..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....

.....  
.....  
.....  
.....76 The TouchPad .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 77 The TouchPad - Operation .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 77 The CD-ROM/DVD Drive .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.. 78 The PC Card Slot ...

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

*. 79 The Memory Card Slot .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

*. 79 The Data/Fax Modem ....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*... 80 The LAN Port .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*... 80 System Overview 71 MAXDATA Notebook ECO 4000 A 49 Restoring the Drivers..*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

. 81 The Utility CD .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 81 Setting the Resolution .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 81 Installation Instructions 81 Specifications Fault Diagnosis and Troubleshooting Index 83 87 89 50 Contents Note The company reserves the right to make unadvertised modifications to this document. Information contained in this document is intended solely for reference purposes and in no way constitutes a basis for asserting obligations on the part of the manufacturer or vendor. Neither the manufacturer nor the vendor accept liability for any errors or inaccuracies that this document may contain. Nor is liability accepted for damages or losses that arise from the incorrect application of this guide.

No part of this document and the accompanying software may be copied, translated, or distributed without the prior permission of the dealer, manufacturer, or authors. Archive copies for private use are excepted from this rule. The use of this product's trademarks is subject to the conditions listed in the advanced service handbook on the device drivers and utilities CD-ROM. Brand or product names mentioned in this document may be names protected by copyright law or registered trademarks of other companies. These are mentioned only for identification purposes and have no recommendatory character in regard to the product or manufacturer.

© MAXDATA 2004 You can find additional legal information and conditions in the advanced service handbook on the device drivers and utilities CD-ROM (Utility CD). Acrobat and the Acrobat Logo are trademarks of Adobe Systems Incorporated or its subsidiaries. In certain jurisdictions these trademarks may be registered. Intel® and Pentium® are registered trademarks of Intel Corporation. MS-DOS®, Microsoft® Windows®, Microsoft® Windows® 95, Microsoft® Windows® 98, Microsoft® Windows® Me, Microsoft® Windows® 2000, Microsoft® Windows® XP and Microsoft® Windows® NT are , registered trademarks of Microsoft.

Application and References This user guide offers an introduction and is intended to provide instructions for your first steps with your new computer. For more in-depth specialist information, please consult the advanced service handbook. All references refer to the accompanying device drivers and utilities CD-ROM, which contains the advanced service handbook (in Adobe Acrobat format), drivers, and special utilities for your notebook. If you wish to use an operating system that is not mentioned in these documents, consult the ReadMe files on the CD-ROM for the relevant information. Please also consult your dealer to make sure that it is possible to run your chosen operating system on your notebook. The operating system is not contained on the device drivers and utilities CD-ROM. Note: Some or all system configurations may have been made already. If this is not the case or if parts of the system need to be reconfigured, please consult the advanced service handbook on the device drivers and utilities CD-ROM for instructions on how to do this. Legal Information UK MAXDATA Notebook ECO 4000 A 51 Declaration: This device meets the EN 55022 product standard for interference emissions, the EN 50082-1 basic



standard for interference, and the EN 60950 low voltage directive standard. If any modification that has not been agreed upon with the manufacturer is made to the device, adherence to these standards can no longer be guaranteed.

To ensure electromagnetic compatibility (EMC), please observe the information given in the handbook. Sound Power Level The workplace-based sound power level is less than 55 dB A. Federal Communications Commission (FCC) Note This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Warranty The warranty period for the device is 24 months. In the case of damage occurring outside the scope of the warranty, it is the intention to offer repair of the devices through original replacement parts or exchange of modules or devices with cost for at least 3 years (from end of production). Operator Note: This device has been carefully RF suppressed and tested to avoid radio interference.

However, please pay attention to the following concerning external data cables: If it becomes necessary to replace a data cable specified by the manufacturer, the operator must ensure that replacement cables also match the original cable in terms of screening quality for correct radio interference suppression. Use only screened cables and external devices that are identical with this product in terms of safety level and EMC behavior. In the event of non-observance, compliance with the standards mentioned above is no longer guaranteed! Optical Disk Drive (ODD): Built-in ODDs are Class 1 laser products. Do not open the device and do not look into the beam, even using optical instruments.

Unless the drive is expressly designated for the simultaneous use of more than one CD, never insert more than one CD into the drive. 52 Note Returning the Device/Battery We accept the return of all our products after they have been used if the condition corresponds to standard proper usage. Returned devices are either slated for further use or dismantled and recycled in an environmentally sound manner. The return is handled through your dealer. Rechargeable and disposable batteries containing heavy metals should not be thrown in with household waste.

They are accepted free of charge by manufacturers, dealers or their representatives for recycling or disposal. The outside packaging and all inner parts of the box can be disposed of as waste paper. UK MAXDATA Notebook ECO 4000 A 53 54 Important Safety Information Although the notebook is highly robust, it is not indestructible. To prevent damage from occurring, please pay attention to the following: . . . . . Avoid exposing the notebook to strong shocks or vibrations. Keep it away from intense heat (radiators, direct sunlight).

Protect the notebook from electromagnetic interference. This will also prevent data loss. Don't expose it to moisture. This is an electrical device! Be sure to use the correct power supply. Always use an approved power adapter. The power adapter requires a fluctuation-free and uninterrupted power supply. If you have any questions, consult your local electricity supply company.



[You're reading an excerpt. Click here to read official MAXDATA  
ECO 4000 A user guide  
http://yourpdfguides.com/dref/2875859](http://yourpdfguides.com/dref/2875859)

The power adapter must be fitted with a grounded (earthed) plug. Never pull on the cable to unplug the power supply always pull the plug itself.  
@@@Recharge batteries via the notebook.

Do not attempt to repair faulty batteries yourself. Entrust repairs to your dealer or qualified service personnel. @@Exercise caution in handling damaged batteries. @@The notebook is provided with a battery. The battery is recyclable. @@@@@@If servicing is required, consult qualified service personnel. @@Liquid has entered the computer. @@The computer has been dropped or damaged. Cleaning Never apply cleaning agents directly to the computer. Use only a soft, lintfree cloth.

Never use volatile (petroleum distillates) or scouring cleaning agents. 56 Important Safety Information Wireleserving authority, in order to check whether the use of this product is permitted in your country. Belgium - www.bipt.be Denmark - www.

tst.dk Germany - www.regtp.de Finland - www.ficora.

fi France - www.art-telecom.fr Greece - www.eett.gr England - www.oftel.gov.uk Ireland - www.comreg.ie Italy - www.

agcom.it Luxembourg - www.etat.lu/ILT Netherlands - www.opta.nl Austria - www.rtr.at Portugal - www.urt.gov.

pt Sweden - www.pts.se Switzerland - www.bakom.ch Spain - www.

cmt.es Iceland - www.pta.is Liechtenstein - www.ak.

li Norway - www.npt.no UK MAXDATA Notebook ECO 4000 A 59 Rescuse damage to the computer. @@@@Now press the ON/OFF button to switch on the notebook. @@@@@@Select Shut Down. Click OK. @@@@@@You can find more detailed information on this point in the installation instructions. 68 Preparation Power Management Your system is compatible with the ACPI power saving system. The basic power management settings can be found under the following in Microsoft® Windows® operating systems: <Settings> <Power Options>. If you have questions, use the Microsoft® Windows® Help function.

Here you can set the behavior separately for various battery charge levels. Standby: low energy consumption The display is dimmed and the hard disk remains unchanged. The power LED flashes. By pressing the on/off button, the computer returns to the normal operating state. The user must log on again. Hibernating: without power adapter no energy consumption The current operating state is saved to the hard disk; the computer is switched off. All open documents or applications become available again when the computer is switched on. Switching off the notebook and disconnecting it from the power supply (pulling the plug of the power adapter) can prevent any energy consumption. · Note on PC cards: Never remove a PC card while the system is in save-todisk mode. This deactivates the PC slot, thus changing the system configuration.

This can lead to problems the next time the computer is started. UK MAXDATA Notebook ECO 4000 A 69 70 System Overview Left Side Fig. 6 (1) (2) (3) LAN port Modem port Optical drive Right Side UK Fig. 7 (1) (2) (3) (4) (5) (6) PC card slot IEEE 1394 port Ventilation grill USB ports Socket for power adapter S-Video TV output Front View Fig. 8 (1) (2) (3) (4) (5) Memory card slot Microphone socket Audio line-in socket Loudspeakers / headphones / SPDIF out Wireless on/off switch MAXDATA Notebook ECO 4000 A 71 Rear View All air intake and ventilation openings must be kept free from obstructions at all times.

If not, the device is liable to overheat. Fig. 9 (1) (2) (3) Connector for external monitor Battery Pack Kensington lock - anti-theft device Underside All air intake and ventilation openings must be kept free from obstructions at all times. If not, the device is liable to overheat. Fig.

10 (1) (2) (3) (4) (5) 72 Battery slot Ventilation grill System device cover USB device cover Hard disk drive cover System Overview Explanation of LED Displays i Fig. 11 (1) (2) (3) (4) (5) (6) (7) Wireless LAN Standby Battery Charge / Power Drive Access Num Lock Caps Lock Scroll Lock UK Table 1 Symbol Meaning Lights when the wireless LAN is activated. Flashes in power saving mode. Flashes orange when the battery is charging and lights green when it's fully charged. Lights when the hard disk or optical drive is being accessed. Lights when Num Lock is on. Lights when Caps Lock is on. Lights when Scroll Lock is on. MAXDATA Notebook ECO 4000 A 73 Hot Keys (Shortcut key combinations with special functions) To activate the hot keys, press and hold down the Fn key and then press the desired additional key. For certain functions it may be necessary to install the Quick Button software.

You can find additional information on this on the next page. Table 2 Keys Fn + F1 Fn + F3 Fn + F4 Fn + F5 Fn + F6 Fn + F7 Fn + F8 Fn + Num Lk Fn + Scr Lk Meaning Switches to power saving mode Turns the battery warning beep off or on Switches between LCD display/monitor/both Increases the volume Reduces the volume Increases LCD brightness Decreases LCD brightness Enables the embedded keypad to work in numeric mode Press the Fn + Scr Lk key and then press the up arrow or the down arrow to move one line up or down 74 System Overview The Quick Buttons (Quick Launch keys) There are three Quick buttons just above the keyboard. @@@@@@14 The TouchPad - Operation UK (1) (2) (3) (4) Select Select, drag and drop Double-click to execute/ open files Scrolling When using the TouchPad, make sure it as well as your finger are clean and dry. The TouchPad reacts to finger movements. The lighter it is touched, the better it reacts. Pressing hard will not increase its accuracy. MAXDATA Notebook ECO 4000 A 77 The CD-ROM/DVD Drive To insert a CD, press the eject button on the front side of the drive. Fig. 15 Fig. 16 Place a CD onto the spindle with the label side facing up and push it gently down onto the spindle.

Push the CD tray back in until it locks into place. The CD is now ready to read. Some CDs have an autostart function. This means that installation programs or music CDs automatically run after you place them in the drive. 78 System Overview The PC Card Slot The computer is provided with a PC card slot.

This is a PCMCIA 3.3 V/5 V slot, Type II. To insert a PC card, push it into the slot until it locks into place. . Set the connection you require (e.g. network connection). You can also consult the documents for the relevant card To remove the card, push the eject button next to the slot. The button will pop outwards. Pressing the slot again releases the PC card. Fig. 17 The Memory Card Slot The computer is provided with a combination slot. This slot accepts Memory Sticks, SD (Secure Digital) and MMC (Multimedia card) cards. Insert these cards into the slot holding the printed side upwards. After the card is inserted correctly into place, it is recognized as an additional drive.

The data on the card can then be accessed. To remove it, simply pull the card out. Never remove the card while data is being read from or written to the card! UK Fig.



[You're reading an excerpt. Click here to read official MAXDATA ECO 4000 A user guide](http://yourpdfguides.com/dref/2875859)  
<http://yourpdfguides.com/dref/2875859>

18 MAXDATA Notebook ECO 4000 A 79 The Data/Fax Modem The system automatically sets up the integrated analog modem. To use the modem functions, connect the modem socket to an analog telephone socket (not ISDN) using the telephone cable. Proper use: The modem can be connected to all analog sockets (TBR 21) in Europe. It is to be used solely for data communication purposes. Do not attempt to connect the modem to an ISDN telephone socket! This would result in serious damage to the device. Fig. 19 The LAN Port The built-in network adapter enables your computer to connect to the Internet via a 10/100

Mbps network or DSL.

The connection is made via an Ethernet network cable and RJ-45 connectors. These are inserted on the back of the computer and into an available network hub or DSL socket. Under no circumstances should you confuse a network cable RJ-45 connector with an ISDN connector! NEVER attempt to connect the LAN adapter to an ISDN telephone socket! This would result in serious damage to the device. 80 Fig. 20 Note Installation Instructions Restoring the Drivers

Your system is supplied in a preloaded condition.

This means that all the data and drivers that the system requires are already on the hard disk. In case you erase and/or format your hard disk drive, the system drivers are stored on the Utility CD supplied with the computer. After reinstalling the operating system (for example, with the Recovery CD), this allows you to restore your notebook to a usable condition. The Utility CD The Utility CD will run automatically after you place it in the drive. If this is not the case, you can run the CD as follows: select <My Computer> <CD Drive> and then the "utility.

exe" file. You can select the driver that you want to install in the "Drivers" section. Recommended: All of the drivers listed from top to bottom. In addition, you can later install the advanced functions you require in the "Utility" section. When using the Utility CD, please follow the menu instructions. Setting the Resolution After installation of the graphics driver, you can set the resolution to the desired size (e.g. 1024 × 768). You do this in the following way: Right-click on any free area of the desktop. Select <Properties>.

In the Display Properties window, click the Settings tab. Here you can set the slider to a resolution you find comfortable. Click <Apply> to set the resolution.

UK MAXDATA Notebook ECO 4000 A 81 82 Specifications Processor and Platform · Mobile AMD Sempron™ 2600+ to 3100+ (1.6 GHz to 1.8 GHz) SiS M760 + SiS 963L chipset RAM · Main memory expandable to 1 GB DDR SDRAM Two PC2700/PC3200 (DDR 333/400) SODIMM sockets (Only allow qualified service personnel to expand the main memory) Display and Video · 15.0 inch XGA TFT display. Supported resolution 1024 × 768 with up to 16,7 million colors. SiS Integrated Ultra256 2D / 3D graphics accelerator AGP4X support Simultaneous LCD/external monitor External monitor: Supports up to 1280 × 1024, 16.7 million colors, 60 Hz S-Video output · · · · UK Storage Capacity · · · One E-IDE hard disk drive (2.

5" 9.5 mm) , One internal optical drive One memory card slot Audio · · AC '97 compatible stereo sound with 3D sound effects Built-in stereo loudspeakers

Modem · High-speed 56 Kbps V.90/92 fax/data software MCD modem MAXDATA Notebook ECO 4000 A 83 LAN · Built-in fast Ethernet function for 10Base-

T and 100Base-TX MSI MS-6833 wireless 802.11 b+g network mini PCI module (optional) Input Devices · · · 86-key Microsoft® Windows® keyboard

Ergonomically positioned TouchPad with scroll field Quick launch keys Ports · · · · · One 15-pin VGA port S-video (TV-out) output connector One

Headphone/SPDIF socket One microphone input socket One Line In socket Three USB ports (v2.0) One standard telephone socket (RJ-11) One standard

network socket (RJ-45) One DC IN socket One IEEE1394 i.

Link port One Type II PC card slot Power Supply · Main battery Li-Ion 440 mAh, 48 Watt · · · Recharging System OFF: System ON: 3 hours 4.5 hours AC

power adapter 100-240 V, AC 50-60 Hz, 90 Watt Fully-supported ACPI Power Management, suspend to Disk, suspend to RAM 84 Specifications Operating

System · O/S Microsoft® Windows® 2000/XP Other Data · · · · Dimensions 272 (D) × 333 (W) × 25.3 35.7 (H) mm Weight 2.76 kg (depending on model)

Operating temperature: 5 to 30°C Operating humidity: 20 to 90 % RH Storage temperature: -20 to 50°C UK MAXDATA Notebook ECO 4000 A 85 86 Fault

Diagnosis and Troubleshooting If a problem occurs while working with your computer, first of all try using the following information to solve the problem.

If the problem cannot be solved in this way, you can find additional information in the advanced service handbook (on the device drivers and utilities CD-

ROM). If the problem persists, switch off the system for several minutes and then restart it. You will lose all unsaved data, but the system may work properly

again. Subsequently contact your dealer or customer support agent. Despite pressing the power switch the computer remains switched off. @@Note: · The

power on LED is not lit. @@@@Note: · The battery display LED flashes. Troubleshooting: · Operate the computer using the power adapter. If the

system does not immediately start up, switch off the computer and then restart it. The screen is not working.

Possible cause of the problem: · The energy saving mode is activated. Note: · The suspend LED flashes. Troubleshooting: · Press the on/off button. Possible

cause of the problem: · The screen settings are incorrect. @@@@Troubleshooting: · Press the Fn + F4 key combination. @@@@Note: · This notebook type

does not support dualview because of the hardware specification. The system stops working. Possible cause of the problem: · An energy saving function has

been activated. Note: · The screen switches itself off. Troubleshooting: · Press any key, or press the on/off button if none of the status LEDs are lit.

Possible cause of the problem: · A software error has caused a system crash. Troubleshooting: · Additional information is available in the operating system

handbook. · If you cannot remedy the problem, restart the system. You will lose any unsaved data! If this doesn't work either, briefly switch off the computer

and then switch it back on again. Each time the system starts, it carries out a self-test (POST).

If an error occurs, an error message appears, briefly describing the problem.



[You're reading an excerpt. Click here to read official MAXDATA](http://yourpdfguides.com/dref/2875859)

[ECO 4000 A user guide](http://yourpdfguides.com/dref/2875859)

<http://yourpdfguides.com/dref/2875859>

88 Fault Diagnosis and Troubleshooting Index Accuracy ....

.....  
.....  
.....  
.....  
.....

.... 77 ACPI power saving system .....

.....  
.....

.... 69 Arrow keys .....

.....  
.....  
.....  
.....

76 A Keyboard .....

.....  
.....

...65, 76 Keys .....

.....  
.....  
.....  
.....

. 65, 74, 65, 74 K Battery .....

.....

. 53, 56, 63, 66, 72, 73, 87 Battery slot ....

.....  
.....  
.....  
.....  
.....

66 B Charging times .....

.....  
.....  
.....

..... 66 Cleaning ..

.....  
.....  
.....

. 55, 56 Cold restart .....

.....  
.....  
.....  
.....

..... 68 Color depth .....

.....  
.....  
.....

.....  
.....  
... 68 Ctrl + Alt + Del .  
.....

.....  
.....  
.....  
..... 68 C LAN Port ...

.....  
.....  
.....  
.....

.....  
.....  
80 LCD display.....  
.....

.....  
.....  
.....  
... 65, 74 Line In .....

.....  
.....  
.....  
.....

.....  
71, 84 Liquid .....

.....  
.....  
.....  
.....

... 56 Loudspeakers .....

.....  
.....  
.....  
..... 65, 71 L Memory card ...

.....  
.....  
... 71 Microphone ..  
.....

.....  
.....  
.....  
.....

. 71 Modem socket.....  
.....  
.....  
.....  
.....

*80 Moisture .....*

.....

.....

.....

.....

.....

*..... 55 M Data/Fax Modem ..*

.....

.....

.....

.....

*... 80 Display .....*

.....

.....

*..... 65, 74, 68, 69, 83, 87 D Network .....*

*..... 57 61, 71, 79, 80, 83, 84 , Network adapter .*

.....

.....

.....

.....

*80 N UK Emergency release .....*

.....

.....

.....

*.. 71 Energy consumption...*

.....

.....

.....

*.. 69 Energy settings ...*

.....

.....

.....

*..... 68 External monitor .....*

.....

*.... 72, 83, 87 88 , E Operating state .*

.....

.....

.....

.....

*.. 69 Operating system .....*

*.....68, 69, 76, 77 Original packaging .*

.....

.....

.....

.....

*.. 63 O Finger movements ...*

.....

.....

.....

*.... 77 Fn key .*

.....

.....

.....

.....

.....

.....

. 74, 76 *Function keys* .....

.....

.....

.....

.....

...76 *F G H Garbage collection service* ..

.....

.....

... 55 *PC card* .....

.....

.....

.....

..... 69, 71, 79, 84 *Port replicator* .....

.....

.....

.....

.....

.....

72 , *Power adapter* .... 55, 66, 67 69, 71, 84, 87 *Power button* .

.....

.....

.....

.....

.....

65 *Power cable* .....

.....

.....

.....

..... 56, 67 *Power supply* ...

.....

.....

.....

. 55, 56, 67 69 , *Printer* .....

.....

.....

.....

.....

.....

.....

... 72 *P Headphones* .....

.....

.....

.....

.....

..... 71 *Hibernate* .....

.....

.....

.....

.....  
.....  
.....  
.. 69 Household waste.....

.....  
.....  
.....  
. 53, 55 Qualified service personnel ..... 55, 56, 83 Quick launch keys ..

.....  
.....  
.....  
..... 65, 84 Q I IEEE 1394 ....

.....  
.....  
.....  
.....  
.....  
.....  
.. 71 Infrared ...  
.....  
.....  
.....  
.....  
..... 71, 84 ISDN connector ....

.....  
.....  
.....  
.....  
.....  
.....  
... 80 Release catch .....

.....  
.....  
.....  
.....  
.....  
.....  
... 65 Resolution..

.....  
.....  
.....  
.....  
.....  
.....  
.. 68, 81, 83 R MAXDATA Notebook ECO 4000 A 89 Scroll Pad ...

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 65 Shipping contents .....

..... 63 Shocks/Vibrations ..

.....  
.....  
.....  
.....  
.....  
.....  
.. 55 Special keys ...



.....  
.....

.....  
.....  
.....

.....76 Standby....

.....  
.....  
.....  
.....

.....  
.....  
.....69 Status LEDs ....

.....  
.....  
.....

.....65 Sunlight.

.....  
.....  
.....  
.....

.....  
.....55 Switch on .

.....  
.....  
.....

.....68 System crash ....

.....  
.....  
.....

.....68, 88 S TouchPad ....

.....  
.....  
.....

.....65, 77 84, Typewriter ...

.....  
.....  
.....

.....76 TV Voltage .....

.....  
.....  
.....

.....52, 67 Warm restart .

.....

.....  
.....  
.....  
.....  
68 Warranty .....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
... 52 W 90 .



[You're reading an excerpt. Click here to read official MAXDATA ECO 4000 A user guide](http://yourpdfguides.com/dref/2875859)  
<http://yourpdfguides.com/dref/2875859>