



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MCCULLOCH AQUAMAC 45 STD. You'll find the answers to all your questions on the MCCULLOCH AQUAMAC 45 STD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MCCULLOCH AQUAMAC 45 STD
User guide MCCULLOCH AQUAMAC 45 STD
Operating instructions MCCULLOCH AQUAMAC 45 STD
Instructions for use MCCULLOCH AQUAMAC 45 STD
Instruction manual MCCULLOCH AQUAMAC 45 STD

MCCULLOCH®

Operator's Manual	Read carefully		GB
Manuale d'istruzione	Leggere attentamente		I
Manuel d'instructions	Lire attentivement		F
Bedienungsanleitung	Sorgfältig lesen!		D
Manual de instrucciones	Leer atentamente		E
Gebruikershandleiding	Eerst goed doorkeren		NL
Ágarhandbok	Läs nog!		S
Brughåndbog	Les omhyggeligt		DK
Omistajankäsikirja	Lue huolellisesti		FIN
Eierens Håndbok	Les nøye		N
Manual de Instruções	Ler atentamente		P
ΟΔΗΓΙΕΣ ΧΡΗΣΕΩΣ	ΔΙΑΒΑΣΤΕ ΠΡΟΣΕΚΤΙΚΑ		GR



CE

AQUAMAC 40-45 / 40cc
AGRIMAC / 40cc



[You're reading an excerpt. Click here to read official MCCULLOCH AQUAMAC 45 STD user guide](http://yourpdfguides.com/dref/931722)
<http://yourpdfguides.com/dref/931722>

Manual abstract:

@@@Replace the cap and tighten it. **STARTING:** 1) Open fuel tap lever (B) by moving to vertical position (open). 2) Set switch to "on" position "I", (F). 3) Set the throttle lever (C) to half open position. @@5) Pull the starter rope until the engine fires. @@@STOP: switch to stop position "O".

@@@@@EVERY 20 HOURS: clean and ensure spark plug gap is 0,5 0,6 mm. **EVERY 40 HOURS:** 1) Replace spark plug (champion RDJ8J). 2) Clean air filter, more frequently when working in dusty conditions. @@2) Ensure suction tube (G) is securely tightened.

3) P45 must never be used for salt water or other corrosive liquids. @@**SAFETY:** 1) Never re-fuel while the engine is running. Do not smoke during this operation. 2) Only use the pump in a well ventilated area. 3) Never use for pumping inflammable liquids or acids.

4) Be careful of the hot surfaces on the unit. @@246379 (01.02) .



[You're reading an excerpt. Click here to read official MCCULLOCH
AQUAMAC 45 STD user guide
http://yourpdfguides.com/dref/931722](http://yourpdfguides.com/dref/931722)