




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MCCULLOCH EDITION 1. You'll find the answers to all your questions on the MCCULLOCH EDITION 1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MCCULLOCH EDITION 1
User guide MCCULLOCH EDITION 1
Operating instructions MCCULLOCH EDITION 1
Instructions for use MCCULLOCH EDITION 1
Instruction manual MCCULLOCH EDITION 1

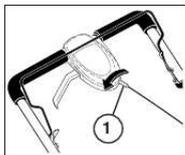


FR Après un certain temps, la vitesse de roulement peut diminuer. Veuillez l'ajuster de cette façon:
• Tournez le écrou (1) à l'air en dessous du châssis pour tendre le câble d'entraînement. La vitesse de roulement devrait augmenter.

ES Con el tiempo, la velocidad con relación al suelo puede reducirse. Ajustar del siguiente modo:
• Rote la tuerca (1) en la parte inferior del bastidor para tensar el cable impulsor. La velocidad con relación al suelo tendría que aumentar.

NL De basissnelheid kan mettertijd afnemen. Corrigeer dit op de volgende manier:
• Draai de Moeren (1) onder de behuizing in en houd deze ingedrukt om de kabel te spannen. De basissnelheid moet toenemen.

IT Nel tempo, la velocità rispetto al suolo può ridursi. Eseguire le seguenti regolazioni:
• Ruotare la dado (1) posizionato sulla parte posteriore del telaio da serrare il cavo. La velocità rispetto al suolo dovrebbe aumentare.

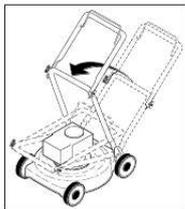

GB GENERAL INFORMATION
Transport
Remove spark plug lead. Empty the petrol tank. Before public transporting, engine oil and petrol must be removed.

DE AL GEMEINE ERLÄUTERUNGEN
Transport
Ziehen Sie das Zündkerzenkabel ab. Entleeren Sie den Benzin tank. Bei Transport mit öffentlichen Verkehrsmitteln ist der Benzin und Öltank zu entleeren.

FR RENSEIGNEMENTS GENERAUX
Transport
Débranchez la bougie. Viduez le réservoir d'essence. En cas de transport par un service public, il faut vider et l'essence et l'huile.

ES INFORMACIONES GENERALES
Transporte
Desconexión del cable de bujía. Vacíese el depósito de gasolina y, si se trata de transporte público, también el de aceite.

NL AL GEMENE NFORMATIE
Vervoer
De bougie kabel losmaken. Ledig de benzinetank. Bij openbaar vervoer dienen zowel olie-als benzinetank geleegd te worden.

IT INFORMAZIONI GENERALI
Transporto
Staccare il cavo d'accensione dalla candela. Svuotare il serbatoio della benzina. In caso di trasporto su mezzi pubblici, si deve svuotare sia la benzina che l'olio.

MCCULLOCH **EDITION 1**



Instruction manual
Please read these instructions carefully and make sure you understand them before using this machine.
Anleitungshandbuch
Bitte lesen Sie diese Anleitungen sorgfältig durch und vergewissern Sie sich, daß Sie diese verstehen, bevor Sie die Maschine in Betrieb nehmen.

Manuel d'instructions
Lisez très attentivement et soyez certain de comprendre ces instructions avant d'utiliser cette machine.
Manual de las instrucciones
Por favor lea cuidadosamente y comprenda estas instrucciones antes de usar esta máquina.

Instructieboekje
Lees deze instructies aandachtig en zorg dat u ze begrijpt voordat u deze machine gebruikt.
Manuale di istruzioni
Prima di utilizzare la macchina leggete queste istruzioni con attenzione ed accertatevi di averle comprese bene.

532 43 20-76
10.26.09 BY



Printed
in U.S.A.



[You're reading an excerpt. Click here to read official MCCULLOCH EDITION 1 user guide](http://yourpdfguides.com/dref/2879345)
<http://yourpdfguides.com/dref/2879345>

Manual abstract:

@@Change oil after each season or after 25 hours running time. Run the engine warm, remove the spark plug lead. Remove the drain plug from bottom of engine and drain oil. Fill with new oil. Over time, ground speed may decrease. Ground speed should increase. @@The level should be between FULL and ADD. Avoid filling with too much oil. @@Failure to observe the following safety instructions could result in serious injury or death. Stop the blade if the lawnmower has to be tilted for transportation when crossing surfaces other than grass, and when transporting the lawnmower to and from the area to be mowed.

Never operate the lawnmower with defective guards, or without safety devices, for example deflectors and/or grass catchers, in place. Do not change the engine governor settings or overspeed the engine. Operating the engine at excessive speed may increase the hazard of personal injury. Start the engine or switch on the motor carefully according to instructions and with feet well away from the blade. Do not tilt the lawnmower when starting the engine or switching on the motor, except if the lawnmower has to be tilted for starting.

In this case, do not tilt more than absolutely necessary and lift only the part which is away from the operator. Do not start the engine when standing in front of the discharge chute. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times. Never pick up or carry lawnmower while the engine is running.

Stop the engine and disconnect the spark plug wire: - before cleaning blockages or unclogging chute; - before checking, cleaning or working on the lawnmower; - after striking a foreign object. @@@@Be familiar with the controls and the proper use of the equipment. @@Local regulations may restrict the age of the operator. Never mow while people, especially children, or pets are nearby. @@While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals. @@- Refuel outdoors only and do not smoke while refueling. - Add fuel before starting the engine. @@@@Tighten the screw properly when reassembling. @@ Mow only in daylight or in good artificial light.

Always be sure of your footing on slopes. Walk, never run. @@@@ Allow the engine to cool before storing in any enclosure. @@If the fuel tank has to be drained, this should be done outdoors. Mow the lawn twice weekly during the most active periods of growth. Never cut more than 1/3 of the length of the grass, especially during dry periods. Mow with a high cutting height setting the first time. examine the result and lower the mower to the desired setting. Mow slowly or mow the grass twice if it is very long. Always remove the spark plug lead before repair, cleaning or maintenance work.

After 5 hours running time, tighten screws and nuts. check the oil. The spark plug must be at the highest point on the mower when it is tilted up. Forward drive is engaged (1) and disengaged (2) with the clutch bar at the top of the handle. Select ground speed with gear shift lever (3).

The farther toward the handle the lever is pulled, the faster the unit will travel. The mower should not be used on ground that slopes more than 15°. This could cause engine lubrication problems. Before mowing, objects such as twigs, toys and stones should be removed from the lawn. Fill the tank with petrol, not oil-blended.

Both lead-free and lead-containing petrol may be used. Do not fill with petrol while the engine is running. Hold engine brake yoke to the handle and pull on starter handle quickly. To "STOP" engine, release engine brake yoke. The mower can be set to different cutting levels. Adjust to desired cutting level by means of the lever at each wheel. Move the lever towards the wheel and set the cutting level. Fill the engine with engine oil. @@@@Learn and understand their meaning. Do not drag the bag when emptying, it will cause unnecessary wear.



[You're reading an excerpt. Click here to read official MCCULLOCH EDITION 1 user guide](http://yourpdfguides.com/dref/2879345)

<http://yourpdfguides.com/dref/2879345>