



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MCCULLOCH FG6000MK. You'll find the answers to all your questions on the MCCULLOCH FG6000MK in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MCCULLOCH FG6000MK
User guide MCCULLOCH FG6000MK
Operating instructions MCCULLOCH FG6000MK
Instructions for use MCCULLOCH FG6000MK
Instruction manual MCCULLOCH FG6000MK



For problems or questions, **DO NOT** return this product to the store. Contact your Customer Service Agent.

En cas de problèmes ou pour des questions, **NE PAS** retourner ce produit au point de vente. S'adresser au préposé du Service à la clientèle en composant.

Para problemas o preguntas, **NO** devolver este producto a la tienda. Contacte a su Agente de Servicio al Cliente.

© 2006 McCulloch
12802 Leffingwell Rd.
Santa Fe Springs, CA • U.S.A.

For Consumer Assistance Please Call
L'Aide Du Consommateur Necessitez S'il Vous Plait
Para La Ayuda Del Consumidor Llame Por Favor



U.S.A.

1-800-521-8559

Made in China/Fabriqué en Chine/Hecho en China

www.mccullochpower.com



USER MANUAL Generator
MANUEL DE UTILISATION Générateur
MANUAL DEL USUARIO Generator

Model: **FG6000MK**

SAFETY
OPERATION
MAINTENANCE

SECURE
FONCTIONNEMENT
ENTRETIEN

SEGURIDAD
OPERACION
MANTENIMIENTO



This generator is not equipped with park arrester which is required by U.S. forest service and the state of California.

WARNING • PLEASE READ

For your own safety please read this manual before attempting to operate your new unit. Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your generator before each use.

Ce générateur n'est pas équipé du limiteur de surtension de parc exigé par le service des forêts américain et par l'état de la Californie.

AVERTISSEMENT • ATTENTION

Pour votre propre sécurité, veuillez lire ce manuel avant toute tentative pour faire fonctionner votre nouvelle unité. Ne pas suivre les instructions peut conduire à de sérieuses blessures au personnel. Passez quelques instants pour vous familiariser avec votre générateur avant toute utilisation.

Este generador no está equipado con supresor de chispas que es requerido por el servicio forestal de los Estados Unidos y el estado de California.

ADVERTENCIA • FAVOR DE LEER

Por su propia seguridad por favor lea este manual antes de intentar operar su nueva unidad. El no seguir las instrucciones puede ocasionar lesiones personales graves. Dedique unos momentos a familiarizarse con su generador antes de cada uso.

PN 7096-FG6024

© 2006 McCulloch • Printed in China



[You're reading an excerpt. Click here to read official MCCULLOCH FG6000MK user guide](http://yourpdfguides.com/dref/3950812)
<http://yourpdfguides.com/dref/3950812>

Manual abstract:

PLEASE READ For your own safety please read this manual before attempting to operate your new unit. Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your generator before each use. Dear Customer, Thank you for purchasing a McCulloch product. With proper operation and maintenance, it will provide you with years of service. In order to make the best use of your investment, be CERTAIN to familiarize yourself with the contents of the ENTIRE user manual before attempting to operate and maintain your unit. Be sure to carefully follow the step-by-step illustrations in this manual to start, operate and maintain your new product. In the manual there will be the following call-outs: NOTE:, WARNING / CAUTION and WARRANTY. A NOTE: is used to convey additional information, to highlight a particular explanation, or to expand a step description. A WARNING or CAUTION identifies a procedure which, if not undertaken or if improperly done, can result in serious personal injury and/or damage to the unit.

The (WARRANTY SYMBOL) serves notice that unless instructions or procedures are followed, any damage caused will void the warranty and repairs will be at owner's expense. Pay particular attention to the safety precautions. @@@@ read them carefully. G If a label comes off or becomes hard to read, contact McCulloch. @@@@Record the engine and frame serial numbers for your future reference.

Refer to these serial numbers when ordering parts, and when making technical inquiry. McCulloch generators are designed to give safe and dependable service if operated according to instructions. Read and understand this user manual before operating your generator. You can help prevent accidents by being familiar with your generator's controls, and by observing safety operating procedures. Know how to stop the generator quickly in case of emergency.

2. @ 3. @@@@Always keep children away from the generator. If the generator is stored outdoors, unprotected from the weather, check all electrical components on the control panel, before each use. Moisture or ice can cause a malfunction or short circuit in electrical components which could result in electrocution. 4. Do not connect to a building's electrical system unless an isolation switch has been installed by a qualified electrician. The exhaust system gets hot enough to ignite some materials. - Keep the generator at least 1 meter (3 feet) away from buildings and other equipment during operation. G L - Do not enclose the generator in any structure.

The muffler becomes very hot during operation and remains hot for a while after stopping the engine. Be careful not to touch the muffler while it is hot. Let the engine cool before storing the generator indoors. Do not smoke or allow flames or sparks where the generator is refueled or where gasoline is stored. Refuel in a well-ventilated area with the engine stopped. 4. Fuel vapors are extremely flammable and may ignite after the engine has started. @@@@ 2.

@@@To keep exhaust gas from building up, provide adequate ventilation. @@ 2.

@@@4-1,4-2,4-3) so that you can Lock the screw on to generator. Secure screws with flat washers and nuts (B). @@NOTE: Engine oil is a major factor affecting engine performance and service life. Non-detergent and 2-stroke engine oils will damage the engine and are not recommended. Check the oil level BEFORE EACH USE with the generator on a level surface with the engine stopped.

Use McCulloch 4-stroke oil, or an equivalent high detergent, premium quality motor oil certified to meet or exceed U. Other viscosities shown in the chart may be used when the average temperature in your area is within the indicated range. @@@@Secure the wheel onto the axle using the cotter pin (G). 4-2D) N Repeat steps 2 through 4 for the other wheel assembly. @@@@ this is no cause for concern.

@@Do not fill to top: Leave some space for fuel expansion. Refuel in a well-ventilated area with the engine stopped. @@@@Be careful not to spill fuel when refueling. spilled fuel or fuel vapor may ignite. @@Avoid repeated or prolonged contact with skin or breathing of vapor. N ON: "I" Re-start to use the generator after starting. @@NOTE: Do not allow the starter to snap back against the engine. @@Be sure to return the lever to OFF after stopping the engine. (See Fig. @@Move the lever out toward CLOSED to enrich the mixture.

@@@ (See Fig. @@@@ENGLISH Improper connections to a building's electrical system can allow electrical current from the utility company to backfeed into the generator. When utility power is restored, the generator may explode, burn, or cause fires in the building's electrical system. In some areas, generators are required by law to be registered with local utility companies. Check local regulations for proper registration and use procedures.

Generator Ground Circuits McCulloch portable generators have a system ground that connects generator frame components to the ground terminals in the AC output receptacles. The system ground is not connected to the AC neutral wire. Local regulations, codes or laws may require that the ground system be connected to the AC neutral wire. If the generator is tested by a receptacle tester, it will not show the same ground circuit condition as for a home receptacle. if local regulations, codes, or laws require the system ground to be connected to the AC neutral wire, consult a qualified electrician or electrical inspector. Provide them with the electrical wiring diagram in this manual. @@@@Power levels between rated and maximum may be used for no more than 30 minutes. NOTICE: Substantial overloading will open the circuit breaker. Exceeding the time limit for maximum power operation or slightly overloading the generator may not switch the circuit breaker OFF, but will shorten the service life of the generator. limit operation requiring maximum power to 30 minutes.

Maximum power is : See the following chart. for continuous operation, do not exceed the rated power. Rated power is : See the following chart. Make sure to disconnect all electrical loads from panel receptacles. turn the fuel switch to the ON position.

Move the choke lever out to the CLOSED position. E Pull the starter grip lightly until resistance is felt, then pull briskly. N NOTE: Do not allow the starter grip to snap back against the engine. If you have manually closed the choke, move it to the OPEN position as the engine warms up. @@Turn the engine switch to the OFF position. @@@@Most motorized appliances require more than their rated wattage for start up. do not exceed the current limit specified for receptacle. If an overloaded circuit causes the AC circuit breaker to switch OFF, reduce the electrical load on the circuit, wait a few minutes and then reset the circuit breaker. @@Shut off the engine before performing any maintenance. If G the engine must be run, make sure the area is well ventilated.

@@@Refill with the recommended oil and check the level (C).



[You're reading an excerpt. Click here to read official MCCULLOCH FG6000MK user guide](http://yourpdfguides.com/dref/3950812)
<http://yourpdfguides.com/dref/3950812>

@@Although this is H unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil. Please dispose of used motor oil in a manner that is compatible with the enne several revolutions to distribute the oil, then reinstall the spark plug. 4. Slowly pull the starter grip until resistance is felt. At this point, the piston is coming up on it's compression stroke and both the intake and exhaust valves are closed. Storing the engine in this position will help to protect is from internal corrosion. Unit starts, but engine has low power. When choosing a generator, it's important to check the product manual to determine the starting and running wattage requirements of the tools to be used, if you are running more than one unit at a time, add the start-up wattage together to establish your power needs. Choose a generator that meets or exceeds your wattage needs.

Note that induction motors require up to three times the normal wattage for starting Check your product manual for wattage requirement to start. E Actual running watts may vary. .



[You're reading an excerpt. Click here to read official MCCULLOCH FG6000MK user guide](http://yourpdfguides.com/dref/3950812)
<http://yourpdfguides.com/dref/3950812>