



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MCCULLOCH FH180A. You'll find the answers to all your questions on the MCCULLOCH FH180A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MCCULLOCH FH180A
User guide MCCULLOCH FH180A
Operating instructions MCCULLOCH FH180A
Instructions for use MCCULLOCH FH180A
Instruction manual MCCULLOCH FH180A



For problems or questions, **DO NOT** return this product to the store. Contact your Customer Service Agent.

En cas de problèmes ou pour des questions, **NE PAS** retourner ce produit au point de vente. S'adresser au préposé du Service à la clientèle en composant.

Para problemas o preguntas, **NO** devolver este producto a la tienda. Contacte a su Agente de Servicio al Cliente.

MCCULLOCH U.S.A.
10715 Springdale Avenue, Unit 2
Santa Fe Springs,
CA 90670 U.S.A

For Consumer Assistance Please Call
L'Aide Du Consommateur Necessitez S'il Vous Plait
Para La Ayuda Del Consumidor Llame Por Favor



U.S.A.
1-800-521-8559

Made in China / Fabriqué à Chine / Hecho en China

www.mccullochpower.com



USER MANUAL High Pressure Jet Washer
MANUEL DE UTILISATION Nettoyeur Haute Pression
MANUAL DEL USUARIO Presion Alta de la Arandela del Chorro
MODEL : FH180A

SAFETY
OPERATION
MAINTENANCE

SECURITE
FONCTIONNEMENT
ENTRETIEN

SEGURIDAD
OPERACION
MANTENIMIENTO



WARNING • PLEASE READ

For your own safety please read this manual before attempting to operate your new unit. Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your pressure washer before each use.

AVERTISSEMENT • LIRE ATTENTIVEMENT

Pour votre sécurité, lisez entièrement ce manuel avant d'utiliser votre nouvel outil. Le non respect des instructions peut résulter en des accidents graves. Prenez quelques instants pour vous familiariser avec le nettoyeur avant chaque utilisation.

ADVERTENCIA • FAVOR DE LEER

Para su propia seguridad, favor de leer este manual antes de intentar operar su unidad nueva. Si no se siguen estas instrucciones se pueden provocar serias heridas personales. Dedique unos cuantos momentos a familiarizarse con su limpiador a presión antes de cada uso.

PN 7096-180A25

Printed in China



[You're reading an excerpt. Click here to read official MCCULLOCH FH180A user guide](http://yourpdfguides.com/dref/3950821)
<http://yourpdfguides.com/dref/3950821>

Manual abstract:

Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your pressure washer before each use. Dear Customer, Thank you for purchasing a McCulloch product. With proper operation and maintenance it will provide you with years of service. In order to make the best use of your investment, be CERTAIN to familiarize yourself with the contents of the ENTIRE User Manual before attempting to operate and maintain your unit. Be sure to carefully follow the step-by-step illustrations in this manual to start, operate and maintain your new product.) is measured at the distance of 10 cm from the nozzle. In the manual there will be the following call-outs: NOTE, WARNING / CAUTION and WARRANTY.

@@@ Read this manual before assembling and operating this appliance. @@@ Read all the instructions before using the product. s 2. High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, animals, electrical devices, or the machine itself. To reduce the risk of injury, do not operate the machine near children. Keep operating area clear of all persons and pets. 4. Learn how to stop the machine and release pressure quickly. Stay alert - watch what you are doing. A When using this product, basic precautions should always be followed: 1. Read all the instructions before using the product. i 2. High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, animals, electrical devices, or the machine itself. 3. To reduce the risk of injury, do not operate the machine near children. Keep operating area clear of all persons and pets. 4. Learn how to stop the machine and release pressure quickly. Stay alert - watch what you are doing. Handle On-Off Switch Hose Reel Detergent Sprayer Chemical Tank Connector Cleaning needle Water inlet filter Spray Wand Wand Extension Trigger Gun High Pressure Hose Water Inlet with Filter Power Cord Safety Lock Wheel Storage for gun & lance Ñ When using this product, basic precautions should always be followed: O 1.

Read all the instructions before using the product. l 2. High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, animals, electrical devices, or the machine itself. 3. To reduce the risk of injury, do not operate the machine near children. Keep operating area clear of all persons and pets. 4. Learn how to stop the machine and release pressure quickly. Stay alert - watch what you are doing. Do not use acids, solvents, or any flammable material in this product. @@ 8. @@@ Do not touch plug with wet hands. n 11. @@ This safety feature DOES NOT lock trigger in the on position.

g L GROUNDING INSTRUCTIONS I This product must be grounded. @@@@ DANGER: Improper connection of the equipment grounding conductor can result in a risk of electrocution. Check with a qualified electrician or service personnel if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use any type of adapter with this product.

@@ Do not touch plug with wet hands. High pressure hose can develop leaks from wear, kinking, abuse, etc. Water spraying from a leak is capable of injecting material into skin. Do not point the pressure washer spray at people or animals. 2. Locate this pressure washer in areas away from combustible materials, combustible fumes or dust. 3. Some chemicals or detergents may be harmful if inhaled or ingested, causing severe nausea, fainting or poisoning. The harmful elements may cause property damage or severe injury. 4.

Do not allow children to operate the pressure washer at any time. 5. @@ 6. @@ 7. @@@@ 10. Never move the machine by pulling on high pressure hose. @@@@ 12. @@ Disconnecting the hose while the unit is pressurized is dangerous. 13. Hold the spray gun firmly in your hand before you start the unit. Failure to do so could result in an injury from a whipping spray gun. Do not leave the spray gun unattended while the machine is running. @@ Water hose must be at least 3/4" in diameter. 2. Flow rate of water supply must not fall below 2.

@@@ g. Paint thinners, gasoline, oil, etc. 6. @@ Risk of injury - Do not direct discharge stream at persons. @@@@ i 2. @@@@ void the warranty and repairs will be at owner's expense. @@@@ Use of these personal safety items is highly recommended to reduce the risk of accidental injury (Figure 2-2). E N G L I S H In the interest of personal safety it is highly recommended when using the high pressure water cleaner. Ensure pressure washer is at least 20 feet (6 meters) away from explosive vapors and combustible materials. Insert the lance extension (A) into the trigger gun (B). Turn the lance extension (A) clockwise until tight. Connect the connector (C) to male connector (E), which is linked to garden hose. Use of these personal safety items is highly recommended to reduce the risk of accidental injury. @@ Insert power cord into power outlet. @@ Wait for steady flow of water to discharge from the spray nozzle.

Ensure the safety lock (G) is released before E pressing trigger (F). (Fig. @@ s 7. Turn on the machine by moving the switch to the ON position (H). Your pressure cleaner is fitted with H Auto Start/Stop feature. @@@@ Pressure washers use the power of water to clean without the need for chemicals or detergents, although most machines also have an option for adding cleaning fluids or wash and wax detergents if necessary. The spray angle can be adjusted from 0° to 30° by twisting the spray nozzle (A). HOSE REEL OPERATION N Pull out the reel handle (A) to roll up or to roll out the high pressure hose. Trun pressure washer to off (O) position. Pull trigger down (A) and engage gun safety lock (B).

Turn on the machine for a few seconds, until the water which had remained in the pump exits. Do not allow high pressure hose to become kinked. 4. Store the machine and accessories in a room which does not reach freezing temperatures. DO NOT store near H furnace or other sources of heat as it may dry out the pump seals.

Failure to follow the above directions will result in damage to the pump assembly and accessories. Turn the switch to off (O) position and unplug cord from outlet. 4-5C) Disconnect the garden hose from the water inlet on the unit. (Fig. 4-5D) Pull trigger down (A) and engage gun safety lock (B).

@@ 1. @@ 2. @@@@ Clean on the underside of the appliance from time to time. @@@@ g Pull out the hose reel handle (A). Allow reel to turn left and return crank handle into groove (B) (Fig. Disconnect power cord before filling chemical tank. Chemical tank and supply lines must be flushed with water after use. e chemical tank and nozzle must be fl 6. @@ Use cleaning needle (A) to clear the nozzle (B) & water inlet filter (C) when they are plugged. Disconnect power cord before filling chemical tank.

Chemical tank and supply lines must be flushed with water after E use.



[You're reading an excerpt. Click here to read official MCCULLOCH FH180A user guide](http://yourpdfguides.com/dref/3950821)
<http://yourpdfguides.com/dref/3950821>

aCESSORIES N· G NOTE: Use only accessories and attachments specifically recommended by manufacturer for use with this product. L Accessories and spray pipe are connected with bayonet coupling. Any other servicing should be performed by an authorized sevice personnel. When switch "I" the machine will not sart working Pressure washer not plugged in. High pressure hose too long. If necessary, change a new outlet hose. Use pressure hose less than 30 meters. Check, clean or replace new valve. Make sure the chemical filter is placed lower than chemical. Clean the nozzle or replace new parts. If temperature is below freezing do not use. Screw detergent spr.



[You're reading an excerpt. Click here to read official MCCULLOCH](#)

[FH180A user guide](#)

<http://yourpdfguides.com/dref/3950821>