



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MCCULLOCH FHH16J. You'll find the answers to all your questions on the MCCULLOCH FHH16J in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MCCULLOCH FHH16J
User guide MCCULLOCH FHH16J
Operating instructions MCCULLOCH FHH16J
Instructions for use MCCULLOCH FHH16J
Instruction manual MCCULLOCH FHH16J



For problems or questions, **DO NOT** return this product to the store. Contact your Customer Service Agent.

En cas de problèmes ou pour des questions, **NE PAS** retourner ce produit au point de vente. S'adresser au préposé du Service à la clientèle en composant.

Para problemas o preguntas, **NO** devolver este producto a la tienda. Contacte a su Agente de Servicio al Cliente.

© 2006 McCulloch Motors
12802 Lettingwell Rd.
Santa Fe Springs, CA • U.S.A.

For Consumer Assistance Please Call
L'Aide Du Consommateur Necessitez S'il Vous Plait
Para La Ayuda Del Consumidor Llame Por Favor



U. S. A.
1-800-521-8559

Made in China/Fabriqué à Chine/Hecho en China

www.mccullochpower.com



USER MANUAL High Pressure Jet Washer
MANUEL DE UTILISATION Nettoyeur Haute Pression
MANUAL DEL USUARIO Presion Alta de la Arandela del Chorro
MODEL : FHH16J

SAFETY
OPERATION
MAINTENANCE
SECURITE
FONCTIONNEMENT
ENTRETIEN
SEGURIDAD
OPERACION
MANTENIMIENTO



WARNING • PLEASE READ

For your own safety please read this manual before attempting to operate your new unit. Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your pressure washer before each use.

AVERTISSEMENT • LIRE ATTENTIVEMENT

Pour votre sécurité, lisez entièrement ce manuel avant d'utiliser votre nouvel outil. Le non respect des instructions peut résulter en des accidents graves. Prenez quelques instants pour vous familiariser avec le nettoyeur avant chaque utilisation.

ADVERTENCIA • FAVOR DE LEER

Para su propia seguridad, favor de leer este manual antes de intentar operar su unidad nueva. Si no se siguen estas instrucciones se pueden provocar serias heridas personales. Dedique unos cuantos momentos a familiarizarse con su limpiador a presión antes de cada uso.

PN 7096-H16J01

© 2006 McCulloch Motors, • Printed in China



[You're reading an excerpt. Click here to read official MCCULLOCH FHH16J user guide](http://yourpdfguides.com/dref/3950763)
<http://yourpdfguides.com/dref/3950763>

Manual abstract:

Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your pressure washer before each use. Dear Customer, Thank you for purchasing a McCulloch product. With proper operation and maintenance it will provide you with years of service. In order to make the best use of your investment, be CERTAIN to familiarize yourself with the contents of the ENTIRE User Manual before attempting to operate and maintain your unit. Be sure to carefully follow the step-by-step illustrations in this manual to start, operate and maintain your new product.) is measured at the distance of 10 cm from the nozzle. In the manual there will be the following call-outs: NOTE, WARNING / CAUTION and WARRANTY. A NOTE is used to convey additional information, to highlight a particular explanation, or expand a step description. A WARNING or CAUTION identifies a procedure which, if not undertaken or if improperly done, can result in serious personal injury or damage to the unit and/or both.

The (WARRANTY SYMBOL) serves notice that unless instructions or procedures are followed, any damage caused will void the warranty and repairs will be at owner's expense. @@@@Read this manual before assembling and operating this appliance. @@@@Read all the instructions before using the product. s 2. High pressure jets can be dangerous if subject to misuse.

The jet must not be directed at persons, animals, electrical devices, or the machine itself. 3. To reduce the risk of injury, do not operate the machine near children. Keep operating area clear of all persons and pets. 4.

Learn how to stop the machine and release pressure quickly. Stay alert - watch what you are doing. Handle On-Off Switch High Pressure Outlet Detergent Sprayer Chemical Tank Screw-type female connector Cleaning needle Water inlet filter Spray Nozzle Lance Extension Trigger Gun High Pressure Hose Water Inlet Power Cord Safety Lock Storage for gun & lance 1. Do not use acids, solvents, or any flammable material in this product. These products can cause physical injuries to the operator and irreversible damage to the machine. 8. Do not operate the product when fatigued or under the influence of alcohol or drugs. To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands. n 11.

The gun Safety Lock PREVENTS the trigger from accidentally being engaged. This safety feature DOES NOT lock trigger in the on position. g L GROUNDING INSTRUCTIONS I This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance S for the electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment H grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with local codes and ordinances. DANGER: Improper connection of the equipment grounding conductor can result in a risk of electrocution. Check with a qualified electrician or service personnel if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use any type of adapter with this product.

To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands. High pressure hose can develop leaks from wear, kinking, abuse, etc. Water spraying from a leak is capable of injecting material into skin. Do not point the pressure washer spray at people or animals.

2. Locate this pressure washer in areas away from combustible materials, combustible fumes or dust. 3. @@The harmful elements may cause property damage or severe injury. 4.

Do not allow children to operate the pressure washer at any time. 5. @@ 6. @@ 7. @@@@ 10. Never move the machine by pulling on high pressure hose. @@@@ 12. @@Disconnecting the hose while the unit is pressurized is dangerous. 13. Hold the spray gun firmly in your hand before you start the unit.

Failure to do so could result in an injury from a whipping spray gun. Do not leave the spray gun unattended while the machine is running. @@Water hose must be at least 3/4" in diameter. i 2. Flow rate of water supply must not fall below 2. @@@@ g. Paint thinners, gasoline, oil, etc. 6. @@Risk of injury - Do not direct discharge stream at persons. @@@@ i 2.

@@ h 3. @@@@ 2. Insert the lance extension (A) into the trigger gun (B). Turn the lance extension (A) clockwise until tight. Connect the high pressure hose (C) to high pressure outlet (D).

Use of these personal safety items is highly recommended to reduce the risk of accidental injury. Connect the screw-type female connector (H) to male connector (E), which is linked to garden hose. Connect garden hose to the cold water source and turn water on completely. Insert power cord into power outlet. Pull the trigger (K) to allow water to flow through and eliminate any trapped air.

Wait for steady flow of water to discharge from the spray nozzle. Ensure the safety lock (H) is released before N pressing trigger (K). 1G) G L I S Water supply must be on and water discharge visible at nozzle before activating ON/OFF switch. h 8. Turn on the machine by moving the switch to the ON position (L). Your pressure cleaner is fitted with Auto Start/Stop feature. This means the motor and pump will start only when the trigger lever is pressed and shut off when it is released. NOTE: Make sure the unit is turned off and the water pressure is released before changing accessories. Connect the detergent sprayer (B) to trigger gun (C) by pushing in and turning clockwise to lock. USE OF CLEANING AGENTS NOTE: Use only cleaning solutions recommended for high pressure cleaners.

Pressure washers use the power of water to clean without the need for chemicals or detergents, although most machines also have an option for adding cleaning fluids or wash and wax detergents if necessary. The spray angle can be adjusted from 0° to 30° by twisting the spray nozzle (A). A E N G L I S H Before performing any work on the machine, ensure it is unplugged from the main electrical supply and the water pressure has been released. 1. Close the water tap and operate the trigger to relieve pressure in the machine and hose. 2. Irregular or too high water pressure indicates clogging or calcium accumulation in the nozzle. Unclog the spray nozzle with cleaning needle and clean the filter in the water N inlet. Clean on the underside of the appliance from time to time. @@@@ Disconnect power cord before filling chemical tank.

Chemical tank and supply lines must be flushed with water after use. @@Accessories and spray pipe are connected with bayonet coupling. @@Disconnect power cord before filling chemical tank. Chemical tank and supply lines must be flushed with water after use. e chemical tank and nozzle must be fl 6.

When the jet is too little to do cleaning job, the nozzle or filter may be plugged.



[You're reading an excerpt. Click here to read official MCCULLOCH FHH16J user guide](http://yourpdfguides.com/dref/3950763)
<http://yourpdfguides.com/dref/3950763>

Use cleaning needle (A) to clear the nozzle (B) & water inlet filter (C) when they are plugged. When switch "I" the machine will not start working Pressure washer not plugged in. High pressure hose too long. If necessary, change a new outlet hose.

â· Use pressure hose less than 30 meters. Check, clean or replace new valve. Low water pressure or no water pressure Clean the nozzle or replace new parts. If temperature is below freezing do not use. Valves dirty, worn out or stuck. Pump is stuck due to dirt, mineral build up, or ice. When you turn the switch ON, the engine buzzes, but it does not start. .



[You're reading an excerpt. Click here to read official MCCULLOCH](#)

[FHH16J user guide](#)

<http://yourpdfguides.com/dref/3950763>