



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MCCULLOCH FHH20A. You'll find the answers to all your questions on the MCCULLOCH FHH20A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MCCULLOCH FHH20A
User guide MCCULLOCH FHH20A
Operating instructions MCCULLOCH FHH20A
Instructions for use MCCULLOCH FHH20A
Instruction manual MCCULLOCH FHH20A



For problems or questions, **DO NOT** return this product to the store. Contact your Customer Service Agent.

Para problemas o preguntas, **NO** devolver este producto a la tienda. Contacte a su Agente de Servicio al Cliente.

MCCULLOCH U.S.A.
10715 Springdale Avenue, Unit 2
Santa Fe Springs,
CA 90670 U.S.A

For Consumer Assistance Please Call
Para La Ayuda Del Consumidor Llame Por Favor



U.S.A. & CANADA

1-800-521-8559

Made in China / Hecho en China

www.mccullochpower.com



USER MANUAL High Pressure Jet Washer
MANUAL DEL USUARIO Limpiadoras de Alta Presion

Model No. FHH20A

SAFETY
OPERATION
MAINTENANCE

SEGURIDAD
OPERACION
MANTENIMIENTO



WARNING • PLEASE READ

For your own safety please read this manual before attempting to operate your new unit. Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your **McCulloch product** before each use.

ADVERTENCIA • FAVOR DE LEER

Para su propia seguridad, favor de leer este manual antes de intentar operar su unidad nueva. Si no se siguen estas instrucciones se pueden provocar serias heridas personales. Dedique unos cuantos momentos a familiarizarse con su limpiador a presión antes de cada uso.

PN 7096-H20A01

Printed in China



[You're reading an excerpt. Click here to read official MCCULLOCH FHH20A user guide](http://yourpdfguides.com/dref/3950756)
<http://yourpdfguides.com/dref/3950756>

Manual abstract:

Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your McCulloch product before each use. Dear Customer, Thank you for purchasing a McCulloch product. With proper operation and maintenance it will provide you with years of service. In order to make the best use of your investment, be CERTAIN to familiarize yourself with the contents of the ENTIRE User Manual before attempting to operate and maintain your unit. Be sure to carefully follow the step-by-step illustrations in this manual to start, operate and maintain your new product. In the manual there will be the following call-outs: NOTE, WARNING / CAUTION and A NOTE is used to convey additional information, to highlight a particular explanation, or expand a step description. A WARNING or CAUTION identifies a procedure which, if not undertaken or if improperly done, can result in serious personal injury or damage to the unit and/or both. The (WARRANTY SYMBOL) serves notice that unless instructions or procedures are followed, any damage caused will void) is measured at the distance of 10 cm from the nozzle. Service other than user maintenance should be performed by a McCulloch Authorized Service Center.

Damage or conditions which render this product inoperable caused by improper maintenance practices will void the manufacturer's warranty. @@Read this manual before assembling and operating this appliance. @@@@Read all the instructions before using the product. 2. High pressure jets can be dangerous if subject to misuse.

@@ 3. To reduce the risk of injury, do not operate the machine near children. Keep operating area clear of all persons and pets. 4. Learn how to stop the machine and release pressure quickly.

Stay alert - watch what you are doing. Do not use acids, solvents, or any flammable material in this product. These products can cause physical injuries to the operator and irreversible damage to the machine. 8. Do not operate the product when fatigued or under the influence of alcohol or drugs. To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands. 11. The gun Safety Lock PREVENTS the trigger from accidentally being engaged. This safety feature DOES NOT lock trigger in the on position.

12. This product is provided with a Ground Fault Circuit Interrupter built the power cord. If replacement of the plug or cord is needed, return complete unit to the factory. This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with local codes and ordinances. DANGER: Improper connection of the equipment grounding conductor can result in a risk of electrocution. Check with a qualified electrician or service personel if you are in doubt as to wether the outlet is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

Do not use any type of adapter with this product. GROUND FAULT CIRCUIT INTERRUPTER PROTECTION This pressure washer is provided with a ground-fault circuit-interrupter (GFCI) built into the plug of the power supply cord. This device provides additional protection from the risk of electric shock. Should replacement of the plug or cord become necessary, use only identical replacement parts that include GFCI protection. EXTENSION CORDS Use of extension cords is NOT recommended unless plugged into a GFCI protected outlet.

@@Use only extension cords that are intended for outdoor use. @@@@Keep cord away from heat and sharp edges. @@Not to use the unit below 40 degree F. 6. @@ 7.

@@@@ 10. Never move the machine by pulling on high pressure hose. @@@@ 12. @@Disconnecting the hose while the unit is pressurized is dangerous. 13. Hold the spray gun firmly in your hand before you start the unit. Failure to do so could result in an injury from a whipping spray gun. Do not leave the spray gun unattended while the machine is running. @@Water hose must be at least 3/4" in diameter. 2.

Flow rate of water supply must not fall below 1. @@@@ g. Paint thinners, gasoline, oil, etc. 6. @@@@Do not touch plug with wet hands. High pressure hose can develop leaks from wear, kinking, abuse, etc. @@Do not point the pressure washer spray at people or animals. 2. @@ 3. @@The harmful elements may cause property damage or severe injury.

4. Do not allow children to operate the pressure washer at any time. Risk of injury - Do not direct discharge stream at pesons. @@@@ 2. A WARNING identifies a procedure which, if not undertaken or if improperly done, can result in a serious personal injury or damage to the unit and/or both. 3. (WARRANTY SYMBOL) serves notice that unless instructions or procedures are followed, any damage will void the warranty and repairs will be at owner's expense. Service other than user maintenance should be performed by a McCulloch Authorized Service Center. Damage or conditions caused by improper maintenance practices which render this product inoperable will void the manufacturer's warranty. Use of these personal safety items is highly recommended to reduce the risk of accidental injury (Figure 2-2).

Screw (B) in the Hose Hook (A), Hose Hook (C) Separately to front and back shell, in torque of 3. 3-1B) Hose Hook is designed for the placement of high pressure hoses; holder II for power cords. Use of these personal safety items is highly recommended to reduce the risk of accidental injury. SAFETY RECOMMENDATIONS In the interest of personal safety it is highly recommended when using the high pressure water cleaner to follow all afety instructions ASSEMBLY AND START UP . Ensure pressure washer is at least 19 feet (6 meters) away from explosive vapors and combustibile materials. . Insert the lance extension (A) into the trigger gun (B). Turn the lance extension (A) clockwise until tight. Connect the high pressure hose (C) to high pressure outlet (D). Connect the screw-type female connector (F) to male connector (G), which is linked to garden hose.

Connect garden hose to the cold water source and turn water on completely. Insert power cord into power outlet. Pull the trigger (I) to allow water to flow through and eliminate any trapped S air. h Wait for steady flow of water to discharge from the spray nozzle. Ensure the safety lock (H) is released before pressing trigger (I). It is allowed for chemical tank "" and "" to load different cleaning solutions. Pull the spray nozzle (F) forward to adjust trigger gun in low pressure condition before the application of chemical tanks. Water supply must be on and water discharge visible at nozzle before activating ON/OFF switch. 8. Turn on the machine by moving the switch to the ON position (J).



[You're reading an excerpt. Click here to read official MCCULLOCH FHH20A user guide](http://yourpdfguides.com/dref/3950756)
<http://yourpdfguides.com/dref/3950756>

Your pressure cleaner is fitted with Auto Start/Stop feature. This means the motor and pump will start only when the trigger lever is pressed and shut off when it is released. @@@@ 1. @@@@Unclog the spray nozzle with cleaning needle and clean the filter in the water inlet. Clean on the underside of the appliance from time to time.

Any other servicing should be performed by an authorized service personnel. e N . G Disconnect power cord before filling chemical tank. 1 6. When the jet is too little to do cleaning job, the nozzle or filter may be plugged.

I Use cleaning needle (A) to clear the nozzle (B) & water inlet filter (C) when S they are plugged. NOTE: Use only accessories and attachments specifically recommended by manufacturer for use with this product. Accessories and spray pipe are connected with bayonet coupling. .



[You're reading an excerpt. Click here to read official MCCULLOCH](#)

[FHH20A user guide](#)

<http://yourpdfguides.com/dref/3950756>