




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MCCULLOCH M11577. You'll find the answers to all your questions on the MCCULLOCH M11577 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MCCULLOCH M11577
User guide MCCULLOCH M11577
Operating instructions MCCULLOCH M11577
Instructions for use MCCULLOCH M11577
Instruction manual MCCULLOCH M11577

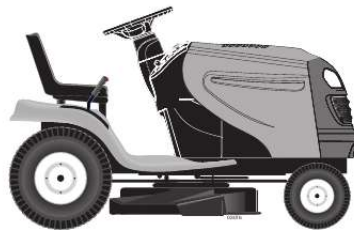

M11577



Instruction manual

Please read these instructions carefully and make sure you understand them before using this machine.

Anleitungshandbuch

Bitte lesen Sie diese Anleitungen sorgfältig durch und vergewissern Sie sich, daß Sie diese verstehen, bevor Sie die Maschine in Betrieb nehmen.

Manuel d'instructions

Merci de lire très attentivement le manuel d'instructions. Assurez-vous d'avoir tout compris avant d'utiliser ce tracteur.

Manual de las instrucciones

Por favor lea cuidadosamente y comprenda estas instrucciones antes de usar esta máquina.

Manuale di istruzioni

Prima di utilizzare la macchina leggete queste istruzioni con attenzione ed accertatevi di averle comprese bene.

Instructieboekje

Lees deze instructies aandachtig en zorg dat u ze begrijpt voordat u deze machine gebruikt.

532 43 45-09



[You're reading an excerpt. Click here to read official MCCULLOCH M11577 user guide](http://yourpdfguides.com/dref/2881636)

<http://yourpdfguides.com/dref/2881636>

Manual abstract:

Be familiar with the controls and the proper use of the equipment. Local regulations may restrict the age of the operator. Such instruction should emphasize: - the need for care and concentration when working with ride-on machines; - control of a ride-on machine sliding on a slope will not be regained by the application of the brake. The main reasons for loss of control are: a) insufficient wheel grip; b) being driven too fast; c) inadequate braking; d) the type of machine is unsuitable for its task; e) lack of awareness of the effect of ground conditions, especially slopes; f) incorrect hitching and load distribution. Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect. Mow only in daylight or in good artificial light. Before attempting to start the engine, disengage all blade attachment clutches and shift into neutral. Do not use on slopes of more than 15°. Remember there is no such thing as a "safe" slope. travel on grass slopes requires particular care.

To guard against overturning; - do not stop or start suddenly when going up or downhill; - engage clutch slowly, always keep machine in gear, especially when traveling downhill; - machine speeds should be kept low on slopes and during tight turns; - stay alert for humps and hollows and other hidden hazards; - never mow across the face of the slope, unless the lawnmower is designed for this purpose. Use care when pulling loads or using heavy equipment. Use care when reversing. - Use counterweight(s) or wheel weights when suggested in the instruction handbook. Watch out for traffic when crossing or near roadways. Stop the blades from rotating before crossing surfaces other than grass. When using any attachments, never direct discharge of material toward bystanders nor allow anyone near the machine while in operation. Never operate the lawnmower with defective guards, shields or without safety protective devices in place. Do not change the engine governor settings or overspeed the engine. Operating the engine at excessive speed may increase the hazard of personal injury.

Before leaving the operator's position: - disengage the power take-off and lower the attachments; - change into neutral and set the parking brake; - stop the engine and remove the key. Disengage drive to attachments, stop the engine, and disconnect the spark plug wire(s) or remove the ignition key - before cleaning blockages or unclogging chute; - before checking, cleaning or working on the lawnmower; - after striking a foreign object. Inspect the lawnmower for damage and make repairs before restarting and operating the equipment; - if the machine starts to vibrate abnormally (check immediately). Disengage drive to attachments when transporting or not in use. While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals. Thoroughly inspect the area where the equipment is to be used and remove all objects which may be thrown by the machine. - Refuel outdoors only and do not smoke while refueling. - Add fuel before starting the engine. Never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot.

- If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapors have dissipated. Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged. replace worn or damaged blades and bolts in sets to preserve balance. Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition. Never store the equipment with petrol in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure. To reduce the fire hazard, keep the engine, silencer, battery compartment and petrol storage area free of grass, leaves, or excessive grease. If the fuel tank has to be drained, this should be done outdoors. Learn and understand their meaning. Learn and understand their meaning.

Check that the front wheels are aligned forward and place the wheel on the hub. Remove the hardware securing seat to the cardboard packing and set the hardware aside for assembly of seat to tractor. Pivot seat upward and remove from cardboard packing. remove the cardboard packing and discard. Place seat on seat pan so head of shoulder bolt is positioned over large slotted hole in pan (1).

Push down on seat to engage shoulder bolt in slot and pull seat towards rear of tractor. the seat is adjustable for individual setting in relation to the clutch and brake pedal. Set the seat to the correct position by moving it forwards or backwards. Check that the flex connector is correctly connected to the safety switch (3) on the seat holder. INSTALL BATTERY NOTE: If battery is put into service after month and year indicated on label, charge battery for minimum of one hour at 6-10 amps.

WARNING: Before installing battery remove metal bracelets, wrist watch bands, rings, etc. from your person. Touching these items to battery could result in burns. WARNING: Positive terminal must be connected first to prevent sparks from accidental grounding. remove terminal caps and discard. Connect the red cable to + and then the black earth cable to -. The accelerator control regulates the motor speed and also the speed of the blades. Full speed lies between these two positions. Used for declutching and braking the tractor and starting the engine. The gear box has positions forward, neutral and reverse.

Gear changing can take place from neutral to top gear without stopping in each gear position. Stop the machine before changing from reverse to forward gear, or the opposite. Gear changing between the forward gears must not take place when the machine is in motion. Press down the brake pedal to bottom position. 2. Move the parking brake lever upwards and hold in this position. The engine should be run of pure (not oil mixed) unleaded petrol. Do not fill beyond the lower edge of the filling hole. Proceed with care and fill up with petrol outdoors. Do not overfill the tank since the petrol can expand and overflow.

Make sure that the petrol cap is securely tightened after filling. The oil level in the engine should be checked before each run. Replace the oil stick and screw tight. The oil level should lie between the two markings on the oil stick. The pressure in the front tire should be 1 bar (14 PSI) and 0. Press down the clutch/brake pedal completely and hold down. Turn the ignition key to "START position". Do not run the start motor more than 5 seconds at once. Lower the cutting unit by moving the lever forwards. connect the cutting unit.

Your tractor is equipped with a Reverse Operation System (ROS). WARNING! Do not mow in reverse unless absolutely necessary. Look down and behind before backing.



[You're reading an excerpt. Click here to read official MCCULLOCH M11577 user guide](http://yourpdfguides.com/dref/2881636)
<http://yourpdfguides.com/dref/2881636>

@@@ localize and mark stones and other fixed objects to avoid collision. @@@@ the best lawn is achieved if the grass is cut often. @@@@ avoid cutting wet grass. The cutting results will be worse since the wheels will sink into the soft lawn. Spray the cutting unit with water underneath after use. Do not drive in terrain at an angle of more than max. Drive in right turns so that the cut grass is thrown away from flower beds and paved surface, depress brake pedal all the way down and engage parking brake.

The rear wheels must lock and skid when you try to manually push the tractor forward. If the rear wheels rotate, then the brake needs to be serviced. Lower attachment lift lever to its lowest position. Have a tight grip on rod and release slowly. Push in the cutting unit under the machine. Lower attachment lift lever to its lowest position. 3. Remove any dirt or grass clippings which may have accumulated around mandrels and entire upper deck surface. Install belt around both mandrel pulleys (R) and around idler pulleys (V) as shown.

Make sure tires are properly inflated to the PSI shown on tires. If tires are over or under inflated, it may affect the appearance of your lawn and lead you to think the mower is not adjusted properly. VISUAL SIDE-TO-SIDE ADJUSTMENT 1. With all tires properly inflated and if your lawn appears unevenly cut, determine which side of mower is cutting lower. 2.

With a 3/4" or adjustable wrench, turn lift link adjustment nut (A) to the left to lower the mower, or, to the right to raise the mower (Fig. 1). @@ 3.

@@ Readjust, if necessary, until you are satisfied with the results. PRECISION SIDE-TO-SIDE ADJUSTMENT 1.

@@ CAUTION: Blade is sharp. Protect your hands with gloves and/or wrap blade with heavy cloth. 2. Raise mower to its highest position. 3. At both sides of mower, position blade at side and measure the distance (A) from bottom edge of blade to the ground. The distance should be the same on both sides (Fig. If adjustment is necessary, see step 2 in Visual Adjustment instructions above. 5. Recheck measurements, adjust if necessary until both sides are equal.

IMPORTANT: Deck must be level side-to-side. To obtain the best cutting results, the mower blades should be adjusted so the front tip is 1/8" to 3/8" lower than the rear tip when the mower is in its highest position. CAUTION: Blade is sharp. Protect your hands with gloves and/or wrap blade with heavy cloth.

Measure distance (B) to the ground at front and rear tip of the blade (Fig. If front tip of blade is not 1/8" to 3/8" lower than the rear tip, go to the front of tractor. â With an 11/16" or adjustable wrench, loosen jam nut A several turns to clear adjustment nut B. â With a 3/4" or adjustable wrench, turn front link adjustment nut (B) clockwise (tighten) to raise the front of mower, or, counterclockwise (loosen) to lower the front mower (Fig. 4). NOTE: Each full turn of the adjustment nut will change mower height about 1/8".

â Recheck measurements, adjust if necessary until front tip of blade is 1/8" to 3/8" l.



[You're reading an excerpt. Click here to read official MCCULLOCH M11577 user guide](http://yourpdfguides.com/dref/2881636)
<http://yourpdfguides.com/dref/2881636>