



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MCCULLOCH M12592RB. You'll find the answers to all your questions on the MCCULLOCH M12592RB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MCCULLOCH M12592RB  
User guide MCCULLOCH M12592RB  
Operating instructions MCCULLOCH M12592RB  
Instructions for use MCCULLOCH M12592RB  
Instruction manual MCCULLOCH M12592RB

**HURRICANE 125 RB**  
**LZ1292RB**  
**LZ13592RBK**  
**M12592RB**  
**M13592RB**  
**MBA14592BRK**  
**P12592RB**

**P13592RB**  
**PF1292RB**  
**RB135B92**  
**RE13592RBK**  
**REN11592RB**  
**REN13592RB**  
**YP12592RB**



**Instruction manual**  
Please read these instructions carefully and make sure you understand them before using this machine.

**Anleitungshandbuch**  
Bitte lesen Sie diese Anleitungen sorgfältig durch und vergewissern Sie sich, daß Sie diese verstehen, bevor Sie die Maschine in Betrieb nehmen.

**Manuel d'instructions**  
Merci de lire très attentivement le manuel d'instructions. Assurez-vous d'avoir tout compris avant d'utiliser ce tracteur.

**Manual de las instrucciones**  
Por favor lea cuidadosamente y comprenda estas instrucciones antes de usar esta máquina.

**Manuale di istruzioni**  
Prima di utilizzare la macchina leggete queste istruzioni con attenzione ed accertatevi di averle comprese bene.

**Instructieboekje**  
Lees deze instructies aandachtig en zorg dat u ze begrijpt voordat u deze machine gebruikt.



[You're reading an excerpt. Click here to read official MCCULLOCH M12592RB user guide](http://yourpdfguides.com/dref/2880486)

<http://yourpdfguides.com/dref/2880486>

**Manual abstract:**

Be familiar with the controls and the proper use of the equipment. @@Local regulations may restrict the age of the operator. @@@@Such instruction should emphasize: - the need for care and concentration when working with ride-on machines; - control of a ride-on machine sliding on a slope will not be regained by the application of the brake. The main reasons for loss of control are: a) insufficient wheel grip; b) being driven too fast; c) inadequate braking; d) the type of machine is unsuitable for its task; e) lack of awareness of the effect of ground conditions, especially slopes; f) incorrect hitching and load distribution. Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect. Mow only in daylight or in good artificial light. Before attempting to start the engine, disengage all blade attachment clutches and shift into neutral. Do not use on slopes of more than 5°. Remember there is no such thing as a "safe" slope. travel on grass slopes requires particular care.

To guard against overturning; - do not stop or start suddenly when going up or downhill; - engage clutch slowly, always keep machine in gear, especially when traveling downhill; - machine speeds should be kept low on slopes and during tight turns; - stay alert for humps and hollows and other hidden hazards; - never mow across the face of the slope, unless the lawnmower is designed for this purpose. Use care when pulling loads or using heavy equipment. Use care when reversing. - Use counterweight(s) or wheel weights when suggested in the instruction handbook. Watch out for traffic when crossing or near roadways. Stop the blades from rotating before crossing surfaces other than grass. When using any attachments, never direct discharge of material toward bystanders nor allow anyone near the machine while in operation. Never operate the lawnmower with defective guards, shields or without safety protective devices in place. Do not change the engine governor settings or overspeed the engine. Operating the engine at excessive speed may increase the hazard of personal injury.

Before leaving the operator's position: - disengage the power take-off and lower the attachments; - change into neutral and set the parking brake; - stop the engine and remove the key. Disengage drive to attachments, stop the engine, and disconnect the spark plug wire(s) or remove the ignition key - before cleaning blockages or unclogging chute; - before checking, cleaning or working on the lawnmower; - after striking a foreign object. Inspect the lawnmower for damage and make repairs before restarting and operating the equipment; - if the machine starts to vibrate abnormally (check immediately). Disengage drive to attachments when transporting or not in use. @@While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals. @@- Refuel outdoors only and do not smoke while refueling. - Add fuel before starting the engine. @@- If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapors have dissipated. Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged.

replace worn or damaged blades and bolts in sets to preserve balance. On multi-bladed machines, take care as rotating one blade can cause other blades to rotate. Stop the engine and disengage drive to attachment - before refueling; - before removing the grass catcher; - before making height adjustment unless adjustment can be made from the operator's position. Reduce the throttle setting during engine run-out and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing. Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition. â· Never store the equipment with petrol in the tank inside a building where fumes may reach an open flame or spark. â· Allow the engine to cool before storing in any enclosure. â· To reduce the fire hazard, keep the engine, silencer, battery compartment and petrol storage area free of grass, leaves, or excessive grease. If the fuel tank has to be drained, this should be done outdoors. â· On multi-bladed machines, take care as rotating one blade can cause other blades to rotate. â· When machine is to be parked, stored or left unattended, lower the cutting means unless a positive mechanical lock is used. @@@@Learn and understand their meaning. @@Learn and understand their meaning. @@@@Pivot seat upward and remove from cardboard packing. remove the cardboard packing and discard.

@@@@@@Set the seat to the correct position by moving it forwards or backwards. Check that the flex is correctly connected to the safety switch (3) on the seat holder. NOTE: If battery is put into service after month and year indicated on label, charge battery for minimum of one hour at 6-10 amps. WARNING: Before installing battery remove metal bracelets, wrist watch bands, rings, etc. from your person.

Touching these items to battery could result in burns. WARNING: Positive terminal must be connected first to prevent sparks from accidental grounding. remove terminal caps and discard. Connect the red cable to + and then the black earth cable to -. Gauge wheels are properly adjusted when they are slightly off the ground when mower is at the desired cutting height in operating position. Gauge wheels then keep the deck in proper position to help prevent scalping in most terrain conditions. â· Adjust gauge wheels with tractor on a flat level surface. With mower in desired height of cut position, gauge wheels should be assembled so they are slightly off the ground. Unhook the two (2) straps and pull chute out and away from tractor. Remove the two (2) 3/8 nuts and flat washers from the bolts at the tractor back plate.

Install the two upper support brackets through the back plate and to the chassis, install the clevis pin 10x17mm and secure with retainer spring. Assemble both support brackets to the outside of the bagger support tube using two each 3/8 x 63,5mm hex bolts 13/32" I. Using the nuts and flat washers removed from tractor back plate, install the bagger support tube to the back plate as shown. Replace discharge chute into rear opening of tractor. Secure the chute with the two hook straps. NOTE: The strap hook must go through the discharge chute only. Do not allow the hook to enter the slot in the tractor back plate. This will allow the discharge chute to float with the mower deck when moving on uneven terrain. Unfold bag by pivoting front bagger tube all the way forward and pressing the bottom vinyl binding onto the tube. â· Inside the bag, install spreader bars and retainer springs onto pins on both sides of bag as shown. @@@@If necessary, repeat the procedure until proper fit is attained.



[You're reading an excerpt. Click here to read official MCCULLOCH](#)

[M12592RB user guide](#)

<http://yourpdfguides.com/dref/2880486>

@@@Quick lifting/lowering of the cutting unit 7. @@@The gear box has positions forward, neutral and reverse.

@@@@@@@@@@@@@@@@@@@@Pull the lever back until it locks. to lower the unit: Pull the lever backwards (1).

Push in the button (2) and then move the lever forward (3). @@@@Press down the brake pedal to bottom position. 2. Move the parking brake lever upwards and hold in this position. @@@@The engine should be run of pure (not oil mixed) unleaded petrol.

Do not fill beyond the lower edge of the filling hole. Proceed with care and fill up with petrol outdoors. @@Do not overfill the tank since the petrol can expand and overflow. Make sure that the petrol cap is securely tightened after filling. @@The oil level in the engine should be checked before each run.

Replace the oil stick and screw tight. The oil level should lie between the two markings on the oil stick. @@@@The pressure in the front tire so the opening in the backplate and onto the mower deck adaptor. Do not drive in terrain at an angle of more than max. Switching off the engine move the attachment clutch control to disengaged position.

Move the throttle control between half and full speed (fast) position. Lift up the cutting unit and turn the ignition key to "STOP" position. Do not leave the ignition key in the machine when not in use to prevent children and other unauthorized persons starting the engine. Before servicing the engine or cutting unit the following shall be carried out: ^ Grasp hood at sides, tilt forward and lift off of tractor. NOTE: Periodic maintenance should be performed on a regular basis in order to keep your tractor in good running condition. WARNING: Disconnect spark plug wire to prevent accidental starting before attempting any repair, inspection, or maintenance. Check to see all bolts, nuts, and cotter pins are in place and secure. Keep tractor free of dirt and chaff to prevent engine damage or overheating. Cleaning Do not use high pressure washer for cleaning. @@To open valve, push in slightly, turn counterclockwise and pull out. ^ To close valve, push in and turn clockwise. @@ 50 hours Every . 100 hours Every 200 hours Change engine oil (without oil filter) . Change engine oil (with oil filter) . @@If your tractor does not function as described, repair the problem immediately.

^ The engine should not start unless the brake pedal is fully depressed, and the attachment clutch control is in the disengaged position. CHECK OPERATOR PRESENCE SYSTEM: ^ When the engine is running, any attempt by the operator to leave the seat without first setting the parking brake should shut off the engine. ^ When the engine is running and the attachment clutch is engaged, any attempt by the operator to leave the seat should shut off the engine. ^ The attachment clutch should never operate unless the operator is in the seat. When the engine is running with the ignition switch in the Engine "ON" position and the attachment clutch engaged, any attempt by the operator to shift into reverse should shut off the engine.

^ When the engine is running with the ignition switch in the ROS "ON" position and the attachment clutch engaged, any attempt by the operator to shift into reverse should NOT shut off the engine. Sharpening can be carried out with a file or grinding disc. NOTE: It is very ^ The machine should be stored indoors in a dry, dust-free place. Never use gasoline when cleaning. When ordering, we need the following information: Date of purchase, model, type and serial number of the mower. Always use original spare parts. .



[You're reading an excerpt. Click here to read official MCCULLOCH M12592RB user guide](http://yourpdfguides.com/dref/2880486)  
<http://yourpdfguides.com/dref/2880486>