



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE CVA 2650. You'll find the answers to all your questions on the MIELE CVA 2650 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE CVA 2650
User guide MIELE CVA 2650
Operating instructions MIELE CVA 2650
Instructions for use MIELE CVA 2650
Instruction manual MIELE CVA 2650

Miele

Operating and Installation Instructions



Coffee System
CVA 2650

To prevent accidents
and machine damage
read these instructions
before
installation or use.

en - US, CA

M.-Nr. 07 173 910



[You're reading an excerpt. Click here to read official MIELE CVA 2650 user guide](http://yourpdfguides.com/dref/3238995)

<http://yourpdfguides.com/dref/3238995>

Manual abstract:

.....
.....
.....
.....

.. 5 Guide to the machine.....

.....
.....
.....

.....
.....
.... 8 Displays .
.....

.....
.....
.....

.....
.....
10 First steps to use.....
.....

.....
.....
.....
.....

.... 11 Turning the machine on and off.....

.....
.....
.....

.....
... 11 Filling water and coffee capsules. .

.....
.....

.....
.... 13 Filling the coffee capsule carousel .

.....

.....
.....
..... 14 Changing the coffee capsules.

.....
.....
.....
.....

..... 14 Allocating various coffee types

.....
.....
.....

.....
.. 15 Making coffee ...

.....
.....

.. 35 *Factory setting*

.....
.....
.....

.....
.....
.....

.... 35 *System lock*

.....
.....
.....
.....

.....
.....

.. 36 3 *Contents Cleaning and care* ...

.....
.....
.....
.....

..... 37 *Daily coffee system care*

.....
.....
.....

.....
.....

.... 37 *Common coffee system care* .

.....
.....
.....
.....

38 *Cleaning and care*

.....
.....
.....

.....
.....

... 42 *Descaling the appliance* ..

.....
.....
.....
.....

. 43 *Descaling prompts*

.....
.....
.....

.....
.....
.....

45 *Fault messages*

.....

.....
... 62 Setting the language.
.....
.....

.....
.....
... 62 Setting the water hardness .
.....

.....
.....
.....
.....
..... 63 Coffee glossary .

.....
.....
.....

.....
.....
... 64 The Espresso range.
.....

.....
.....
.....

..... 65 The Lungo range
.....
.....

.....
.....
.....

..... 66 Caring for the environment
.....
.....
.....

..... @@This appliance is for household use only. Use appliance only for its intended use. Any other use could be dangerous. This appliance complies with current safety requirements.

@@@properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. The manufacturer cannot be held responsible for damages caused by the lack or inadequacy of an effective grounding system.

~ Do not use an extension cord to connect the appliance to electricity. Extension cords do not guarantee the required safety of the appliance (danger of overheating). Electrical safety ~ Before connecting the appliance to the electrical supply make sure that the voltage and frequency details listed on the data plate correspond with the household electrical supply. If in doubt, consult a qualified technician. ~ This appliance is not designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft.

However, under certain conditions it may be possible for installation in these applications. Please contact the Miele Technical Service Department with specific requirements. ~ The appliance must be properly installed before operation to ensure that no electrical components are accessible. Ensure that power is not supplied to the appliance while installation, repairs or maintenance work is performed. ~ Before service or maintenance work disconnect the power supply by either removing the fuse, "tripping" the circuit breaker or unplugging the unit. 5 IMPORTANT SAFETY INSTRUCTIONS ~ Installation work and repairs should only be performed by a trained technician in accordance with national and local safety regulations. Repairs and other work by unauthorized persons could be dangerous. ~ Never open the outer casing of the appliance. Tampering with electrical connections or components and mechanical parts is dangerous and may cause machine damage. ~ If the machine is installed in combination with other appliances, it should be installed with a protective base between the appliance and the unit.

Use ~ Only use Nespresso-coffee capsules with this machine. The coffee system must be cleaned daily to prevent the growth of harmful bacteria and mold.

Please read the "Coffee system care" section of this booklet. Caution! There is a risk of burns when dispensing hot beverages, they are extremely hot. ~ Do not touch hot surfaces. Use the jog shuttles or steam lever. ~ To protect against fire, electric shock and injury to persons do not submerge the cord or plug in water or any other liquid. ~ Do not let the cord hang over the edge of the table or counter, or touch hot surfaces. ~ Children should not use the appliance unsupervised. Danger of scalding! ~ This appliance must not be installed or operated outdoors.

~ To avoid injuries allow the coffee system to cool before cleaning or putting on or taking off parts. Turn the machine off at the main switch when not in use and before cleaning. ~ Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized Miele dealer for examination, repair or adjustment.



[You're reading an excerpt. Click here to read official MIELE CVA](http://yourpdfguides.com/dref/3238995)

[2650 user guide](http://yourpdfguides.com/dref/3238995)

<http://yourpdfguides.com/dref/3238995>

~ Only fill the water tank with cold, fresh tap water.

Warm or hot water or any other liquids may damage the machine. The water should be changed daily to prevent bacteria or mold growth. ~ Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn the machine off by pressing the left jog shuttle, then remove the plug from the wall outlet. **6 IMPORTANT SAFETY INSTRUCTIONS** ~ The water lines must be rinsed and the machine cleaned thoroughly before the first coffee is prepared.

See "Daily coffee system care". ~ The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or injury. ~ Do not reach into the perforator. Injuries may occur. ~ Do not use damaged, broken or dented capsules! They may jam in the machine and damage it. ~ Only use the descaling tablets provided by Miele and be sure to use the correct mixture of water and descaler. Otherwise appliance damage may occur. ~ The capsule plate will soil more or less depending on the coffee capsule used. Clean the capsule plate every 1 to 2 months with a cleaning tablet, available from Miele. ~ Do not hang, lean, sit or place heavy items on the door.

The machine may be damaged. ~ The hot water and steam dispensed could cause scalding! Use these functions carefully. The machine must never be used to clean objects. ~ Do not place the coffee system on or near a hot gas or electric burner, or in a heated oven. ~ Never use a steam cleaner to clean the appliance. Pressurized steam could damage electrical components and cause a short circuit. ~ The coffee system must be descaled regularly with the supplied descaling tablets. In areas with very hard water the machine will need to be descaled more often. The manufacturer cannot be held responsible for damages resulting from insufficient descaling. **SAVE THESE INSTRUCTIONS** 7 Guide to the machine Front view a Left display b Left jog shuttle Press this jog shuttle to turn the machine on and off.

Turning it selects a desired program, option or setting. c Right jog shuttle Press this jog shuttle: to start and stop the dispensing of coffee or hot water. to select an option to alter or customize a program. to save a setting into memory when the machine is turned off. Turning it selects a desired program, option or a setting.

8 d Right display e Upper door handle (for installation at countertop height) f Lower door handle (for installation at a higher level, e.g. upper cabinets) g Plastic drip grill h Metal drip catch i Coffee dispenser j Inset for Cappuccinatore k Valve / Lever for steam and hot water Guide to the machine Interior view l Main switch m Capsule plate (replaced with the descaling funnel when descaling is performed) n Perforatgram other coffee types according to your preference. See "Allocating various coffee types". ^ Pull the carousel tray, a, all the way out.

^ Take the carousel, c, out. ^ Insert the capsules into the chambers, d, with the flat, silver side down. Take care that the capsules sit loosely in the chambers so they do not jam. ^ Insert the carousel into the carousel tray. ^ Push the carousel all the way into the machine. ^ Close the door. The machine aligns the carousel automatically. A sound will be heard. Changing the coffee capsules ^ Pull out the carousel tray and lift out the carousel. ^ Push the carousel ring, b, up and take out the capsules.

14 Allocating various coffee types Twelve different Nespresso coffee types are available for this coffee system. They differentiate in terms of acidity, fruitness, bitterness and roast. Therefore the preparing times will vary. See "The Espresso / Lungo range" for more information on the coffee types. ^ Take the carousel from the machine to see which coffee type is filled in each chamber. **TYPE ARPEGGIO K 1 23 4 5 A** Allocating the coffee types Five different coffee types can be filled in the five chambers of the capsule carousel. The chambers can be either allocated to the desired coffee types or filled with the same coffee type in all chambers. **SETTINGS F K1 2 3 4 5 Lo n G** ^ Turn the right jog shuttle to the desired chamber and press to confirm. **kC** ^ Turn the left jog shuttle to "Settings". **ALLOCATE TYPE F Y Kn I I JZ** ^ Turn the right jog shuttle to the "Coffee bean" symbol.

Press to confirm. **TYPE COSI K1 2345 A** The upper line shows the coffee type, the lower line shows the chamber number. If no type is allocated to the chamber, the upper display line shows: empty. Some coffee types are factory set, which you can either accept or change. **15 Allocating various coffee types** Allocating different coffee types **CHAMBER 5 ARPEGGIO** ~ To enter text ^ Turn the right jog shuttle to the first letter or number and press to confirm. The selected letter shows in the upper line. ^ Repeat until the desired name is entered. To delete text ^ If you made a mistake, turn the right jog shuttle until "delete" appears in the display. ~ ^ Turn the right jog shuttle to the desired coffee type and press to confirm it to that chamber. Setting a new coffee type **CHAMBER 5 + save as** ^ Pressing it deletes the last letter entered.

^ Turn the right jog shuttle counterclockwise to the alphabet and continue entering the name. Saving an entry **CHAMBER 5 TEST...** ^ Turn the right jog shuttle to "save as" if no coffee type is allocated yet, to save a new coffee type or to name a coffee type yourself. ^ Press the right jog shuttle. **CHAMBER 5 ...**

..... **A B C D E F G H I J K L M** ~ + **OK** ~ The alphabet is displayed. Turn the right jog shuttle to the right to display the rest of the alphabet and the numbers 0 through 9.

^ When the entry is complete, turn the right jog shuttle until "OK" is displayed. ^ Press to confirm. The main menu is displayed, the last selected chamber is highlighted. ^ To leave the menu turn the right jog shuttle to the "back" symbol A and press to confirm. Not saving an entry ^ If you do not want to save an entry turn the right jog shuttle until "back" is displayed.

Press and the entry will not be saved. **16 Making coffee** Rinse the water lines before preparing the first drink of the day. If the "Automatic rinsing" option is set to "on" and the machine is still cold this will take place automatically. The heating system will heat and the water lines will be rinsed. If the "Automatic rinsing" option is set to "off", use the option "Rinse" in the left display to rinse the lines.

See "Daily coffee system care". ^ Press the left jog shuttle to turn the machine on. **COSI K1 2 3 4 5 Lo n G** If the "Automatic rinsing" option is set to "on" (default setting) the next message shows: Rinsing in progress - please wait Water will run out of the coffee dispenser and a sound will be heard as the carousel aligns.



[You're reading an excerpt. Click here to read official MIELE CVA 2650 user guide](http://yourpdfguides.com/dref/3238995)

The right display shows: ESPRESSO qrst kC The left display lights. The right display shows briefly: Please fill with fresh water This is a reminder to fill the water tank with fresh water. The next message shows: Heating up Please wait 17 Making coffee Pre-warming the cups Prewarming the cups allows the coffee to fully develop the flavor and aroma. Use caution. Steam and hot water are very hot. ^ Place a cup under the steam / hot water valve. To pre-warm with hot water HOT WATER KI 2 3 4 5 Lon G kC ^ Turn the left jog shuttle to the "Hot water" option.

^ Press the right jog shuttle and half fill the cup with hot water. ^ Press the right jog shuttle again to stop the water from dispensing. ^ Leave the cup for a few seconds to warm, then pour the water away. To pre-warm with steam HEATING WITH STEAM KI 2 3 4 5 Lo n G kC ^ Turn the left jog shuttle to the "Heating with steam" option. ^ Press the steam lever down. The steam supply is temporary. If the steam stops prematurely push the steam lever up then down again. ^ Push the lever up to stop the steam from dispensing. ^ Pour away any excess water. 18 Making coffee Espresso and coffee The flavor of the coffee depends on the coffee capsule and the quantity of water used.

To ensure the machine uses exactly the amount of water to suit your taste and your cup size, there is a choice of four serving sizes for espresso / coffee. Aside from the serving size, making coffee and espresso are done the same way. ^ Place a cup under the coffee dispenser. COSI KI 2 3 4 5 Lo n G Interrupting the brewing ^ Press the right jog shuttle to interrupt the coffee dispensing immediately. For coffee / espresso recipes see the "Coffee glossary".

Dispensing hot water Hot water ^ Place a cup under the hot water / steam valve. kC HOT WATER KI 2 3 4 5 Lon G ^ Turn the left jog shuttle to the desired coffee type. ESPRESSO qrst kC ^ Turn the left jog shuttle to "Hot water". ^ Press the right jog shuttle to confirm. ^ Press again to stop the water from dispensing.

^ Turn the right jog shuttle to the desired coffee or espresso size. q r s t Espresso Coffee Double espresso Double coffee When selecting a double coffee or espresso, two capsules will be dispensed one after another. You can set the water amount to your taste. See "Setting the serving sizes". ^ Press the right jog shuttle to confirm and the drink will be dispensed. 19 Making coffee Cappuccinatore (milk froth mug) This appliance includes a Cappuccinatore (milk froth mug), which can be used to easily prepare warm milk, frothed milk, and cappuccino. Before using the cappuccinatore for the first time, wash it either in the dishwasher or with hot water and liquid dish soap. See "Common coffee system care". The steam is regulated by turning the valve. Left: hot milk is prepared Right: froth is prepared Be sure not to set the valve between these two settings - this may cause the milk to splatter.

When milk is frothed in the cappuccinatore the froth is hotter and has more volume. Above the handle on the cappuccinatore there is a valve a, and a milk spout b on the side. Cold, skim milk is best for creating froth. When frothing milk into a cup while dispensing a coffee, the steam system must be turned on. See "Settings - Steam system". 20 Making coffee Frothing milk into a cup Pushed in: Milk is frothed into the cup Pulled out: Milk is frothed into the cappuccinatore The steam supply is temporary. If the steam stops and there is not enough froth prepared, push the steam lever up then down again. ^ Pre-warm the cup before filling with froth. ^ Push the cappuccinatore spout into the "in" position. ^ Turn the valve all the way to the right for frothing.

^ Fill the cappuccinatore a no higher than the upper mark with cold milk and cover with the lid. ^ Place the cappuccinatore under the steam valve, and a cup under the spout b. ^ Slowly press the steam lever down. The steam lever must click into the down position - otherwise the valve is not properly connected to the cappuccinatore. ^ Push the steam lever up when enough froth is prepared.

21 Making coffee Frothing milk in the cappuccinatore Heating milk in the cappuccinatore ^ Fill the cappuccinatore to the upper mark with cold milk and put the lid on. ^ Pull the cappuccinatore spout into the "out" position. ^ Turn the valve all the way to the right for frothing. ^ Fill the cappuccinatore to the lower marking with cold milk and cover with the lid. ^ Place the cappuccinatore under the steam valve.

^ Slowly press the steam lever a down. The steam lever must click into the down position - otherwise the valve is not properly connected to the cappuccinatore b. ^ Push the steam lever up when enough froth is prepared. ^ Pull the cappuccinatore spout into the "out" position. ^ Turn the valve all the way to the left for heating. ^ Place the cappuccinatore under the steam valve. ^ Slowly press the steam lever down and carefully "connect" the valve to the cappuccinatore. 22 Making coffee Rinsing the lid For a quick cleaning between froths the cappuccinatore lid can be rinsed with the steam valve. The rinsing does not replace the cleaning of the cappuccinatore in a dishwasher. RINSE KI 2 3 4 5 Lon G kC ^ Turn the left jog shuttle to the "Rinse" setting.

^ Push the cappuccinatore spout into the "in" position. ^ Place an empty cup under the spout. ^ Press the steam lever down. In the right-hand display you will see: Rinsing cappuccinatore Hot water now runs through the lid and flushes it clean. The process will stop automatically when the lid is rinsed. 23 Setting serving sizes The flavor of the coffee depends on the coffee type and the quantity of water used. To ensure the machine uses exactly the amount of water to suit your taste and your cup size, there is a choice of two serving sizes for espresso / coffee. q The espresso symbol dispenses a standard size espresso. The espresso water amount can be set between 1 and 2.5 oz (30 and 75 ml).

r The coffee symbol dispenses coffee for a standard size coffee cup. It uses the same quantity of coffee as an espresso, but adds more water. The water amount can be set between 1 and 6 oz (30 and 175 ml). The double espresso s and double coffee t symbols dispense two portions of espresso or coffee one after another. This requires two coffee capsules and double the amount of water set for a single coffee or espresso.

Setting a default serving size Have the correct cups handy. ^ Place the desired cup under the coffee dispenser. COSI KI 2 3 4 5 Lo n G kC ^ Turn the left jog shuttle to the desired coffee type. ESPRESSO qrst ^ Select the drink you would like to program. ESPRESSO q PROGRAM THE AMOUNT ^ Press and hold the right jog shuttle until "Program the amount" shows in the display.

^ Release the jog shuttle. ^ Press the right jog shuttle again when the cup is filled to the desired preference.



[You're reading an excerpt. Click here to read official MIELE CVA 2650 user guide](http://yourpdfguides.com/dref/3238995)
<http://yourpdfguides.com/dref/3238995>

The programmed amount will now be dispensed every time the drink is selected. The water flow stops automatically when it reaches the maximum amount possible (espresso 2.5 oz = 75 ml, coffee 6 oz = 175 ml). The maximum water amount will then be saved for the drink selected. 24 Setting user profiles Setting the user name Up to four different user profiles can be programmed to accommodate different preferences and serving sizes. See "Setting serving sizes".
SETTINGS F K1 2 3 4 5 Lo n G To enter text ^ Turn the right jog shuttle to the first letter or number and press to confirm. The selected letter shows in the upper line.

^ Repeat until the desired name is entered. To delete text ^ Turn the right jog shuttle until "delete" appears in the display. ^ Pressing the jog shuttle deletes the last letter entered. ^ Turn the jog shuttle counterclockwise to the alphabet and continue entering the name. Saving an entry USER TEST kC ^ Turn the left jog shuttle to "Settings". USER NAME F Y K nI I JZ ^ Turn the right jog shuttle to the "User name" symbol, then press to confirm the selection. USER 2 n 1 2 3 4

A ^ Turn the right jog shuttle to the desired user and press to enter a user name. USER ...

.... A B C D E F G H I J K L M ~ + OK ~ ^ When the entry is complete, turn the jog shuttle until "OK" is displayed.

Press to confirm. The display shows the main menu. The "back" symbol A is selected. ^ Press the right jog shuttle to get to the main display menu. Not saving an entry ^ Turn the right jog shuttle until "back" is displayed.

^ Press the jog shuttle and the entry will not be saved. The alphabet is displayed. When turning the jog shuttle to the right, the rest of the alphabet and the numbers 0 through 9 are shown. 25 Setting user profiles Setting user profiles (serving sizes) In addition to the default, different serving sizes can be programmed for four additional users. PROFILE K1 2 3 4 5 Lo n G Making espresso / coffee with user profile If a user profile was set, select the profile first before preparing a drink. PROFILE K1 2 3 4 5 kC Lo n G kC ^ Turn the left jog shuttle to "Profile". USER TEST n 1 2 3 4 ^ Turn the left jog shuttle to "Profile". USER TEST n -> <- 1 2 3 4 ^ Turn the right jog shuttle until the desired user name is selected. Press to confirm. The n symbol will appear in the upper right hand corner of the left display to show that a user profile has been selected.

^ Proceed as if setting a default serving size. All water quantities will now apply for the selected user. ^ With the right jog shuttle select the user. Press to confirm. The user symbol n will be shown in the upper right hand corner of the left display to signify that a user was selected. ^ Place a cup under the coffee dispenser. COSI K1 2 3 4 5 Lo n G n kC ^ Turn the left jog shuttle to the desired coffee type. ESPRESSO qrst ^ Turn the right jog shuttle to the desired coffee / espresso size. ^ Press to confirm and the drink will be dispensed. 26 Settings The coffee system can be customized to suit individual preferences.

Selecting a language SETTINGS F K1 2 3 4 5 Lo n G kC ^ Turn the left jog shuttle to "Settings". LANGUAGE F Y KnI I JZ The language symbol is selected in the right display. ^ Press the right jog shuttle to select the language option. LANGUAGE English B ~ ^ Turn the right jog shuttle until the desired language shows in the display. A check marks the selected language.

Selectable languages: English US and GB, German, French, Dutch, Italian, Spanish, Portuguese, Turkish, Swedish, Norwegian, Danish, Finnish, Polish, Czech, Hungarian, Greek and Russian. ^ Press the right jog shuttle to select the language option. The setting will be automatically saved and the display will go back to the previous screen. All displays will now appear in the selected language. If a language is accidentally selected, follow the flag to return to the language setting.

27 Settings Setting the time of day SETTINGS F K1 2 3 4 5 Lo n G TIME OF DAY kC 12 : 00 ^ Turn the left jog shuttle to "Settings". LANGUAGE F Y ^ Turn the right jog shuttle to select the hours, press to confirm. TIME OF DAY KnI I JZ 12 : 00 The language symbol is highlighted in the right display. TIMES F Y ^ Turn the right jog shuttle to select the minutes, press to confirm. TIME OF DAY KnI I JZ Yo f) A ^ Turn the right jog shuttle to the clock symbol, press to confirm. TIME OF DAY Yo A The setting will be automatically saved and the display will go back to the previous screen. Two symbols for preset times now be will shown. ^ Press the right jog shuttle again. TIME OF DAY + 24 h clock ^ Turn the right jog shuttle to select the time format, press to confirm. 28 Settings Turning off after Standby time To conserve energy the coffee system can be set to turn off automatically after a programmed time interval.

A time period between 20 minutes and 2 hours can be selected. The time is measured from the last time coffee / espresso was dispensed. SETTINGS F K1 2 3 4 5 Lo n G The setting will be automatically saved and the display will go back to the previous screen. The coffee system will turn off at the preset time. If rinsing is set to "on" and the machine has been used, the coffee system will automatically rinse the lines before turning off. kC ^ Turn the left jog shuttle to "Settings". TIMES F Y KnI I JZ ^ Turn the right jog shuttle to the clock symbol, press to confirm. SWITCH OFF AFTER Y o f) A ^ Turn the right jog shuttle to "SWITCH OFF AFTER". Press to confirm the setting. SWITCH OFF AFTER __: __ ^ Turn the right jog shuttle until the desired turn off time is set, press to confirm.

29 Settings Turning on at a preset time A specific time can be set to turn the machine on, e.g. for breakfast. In order to use this function the clock has to be set. SETTINGS F K1 2 3 4 5 Lo n G The setting will be automatically saved and the display will go back to the previous screen.

The coffee system will turn on at the preset time. If rinsing is set to "on", the coffee system will automatically rinse the lines when turned on. If the coffee system automatically turns on three times and no beverage is dispensed, the machine will not turn on automatically after that. The preset times will remain saved and will be activated when the machine is manually turned on again. This is a safety measure so that the machine does not turn on daily during a longer absence.

kC ^ Turn the left jog shuttle to "Settings". TIMES F Y KnI I JZ ^ Turn the right jog shuttle to the clock symbol, press to confirm. SWITCH ON AT Yo f) A ^ Turn the right jog shuttle to "Switch on at" (this will only be seen if the clock is correctly set).



[You're reading an excerpt. Click here to read official MIELE CVA](http://yourpdfguides.com/dref/3238995)

[2650 user guide](http://yourpdfguides.com/dref/3238995)

<http://yourpdfguides.com/dref/3238995>

^ Press the jog shuttle to confirm the setting. SWITCH ON AT ___:___ ^ Turn the right jog shuttle to set the hours, press to confirm. ^ Turn the right jog shuttle to set the minutes, press to confirm. 30 Settings Turning off at a preset time A specific time can be set to turn the coffee system off. In order to use this function the clock has to be set. SETTINGS F K1 2 3 4 5 Lo n G The setting will be automatically saved and the display will go back to the previous screen. The coffee system will turn off at the preset time.

If rinsing is set to "on" and the machine has been used, the coffee system will automatically rinse the lines before turning off. kC ^ Turn the left jog shuttle to "Settings". TIMES F Y Kn I JZ Deleting the preset times ^ Repeat the steps to set the preset time until you are prompted to set the actual time of day. ^ Turn the jog shuttle until only dashes are shown in the second line of the display. ^ Press the right jog shuttle to confirm. ^ Turn the right jog shuttle to the clock symbol, press to confirm. SWITCH OFF AT Yo f) A ^ Turn the right jog shuttle to "Switch off at" (this will only be seen if the clock is correctly set). Press to confirm the setting. SWITCH OFF AT ___:___ ^ Turn the right jog shuttle to set the hours, press to confirm. ^ Turn the right jog shuttle to set the minutes, press to confirm.

31 Settings Setting lighting, display contrast and brightness SETTINGS F K1 2 3 4 5 Lo n G ^ Turning the right jog shuttle clockwise increases the bar size and brightens the settings. kC ^ Press the right jog shuttle to save the settings. The display shows the previous screen. The "back" symbol A is selected. ^ Press the right jog shuttle to display the main menu.

^ Turn the left jog shuttle to "Settings". PROGRAMMING F Y Kn II JZ ^ Turn the right jog shuttle to the "Programming" symbol, press to confirm. LIGHTING n IA M T U N A ^ Turn the right jog shuttle to the desired option: Lighting n, Display contrast U, Display brightness N. ^ Press to confirm. A bar shows in the display.

^ Turning the right jog shuttle counterclockwise, reducing the bar size, will decrease the lighting, display contrast and brightness. 32 Settings Automatic rinsing The rinsing feature flushes out coffee residue and pre-warms the coffee system. When "Automatic rinsing - on" is selected the system will automatically be rinsed when the appliance is turned on or off. "Heating - up please wait" is shown in the display. If this feature is set to "Automatic rinsing - off" the system will only be flushed and pre-warmed when selected manually. ^ Place an empty cup under the coffee dispenser. SETTINGS F K1 2 3 4 5 Lo n G AUTOMATIC RINSING + on B ~ ^ Turn the right jog shuttle to select "on" or "off", press to confirm. A check marks the current setting. It is recommended to set this option to "on" so that the rinsing process will not be forgotten. The display now shows the main screen.

The "back" symbol A is selected. ^ Press the right jog shuttle to return to the main display menu. kC ^ Turn the left jog shuttle to "Settings". PROGRAMMING F Y Kn II JZ ^ Turn the right jog shuttle to the "Programming" symbol, press to confirm. AUTOMATIC RINSING n IA M T U N A ^ Turn the right jog shuttle to the "Automatic rinsing" option. Press to confirm. 33 Settings Steam system To conserve energy, the steam system can be turned off if steam is not used all the time. Residual heat may allow the machine to dispense some steam when the steam system is turned off. Use caution. SETTINGS F K1 2 3 4 5 Lo n G STEAM SYSTEM + on B ~ ^ Turn the right jog shuttle to select "on" or "off".

A check marks the current setting. ^ Press the right jog shuttle to save the settings. The display now shows the previous screen. The "back" symbol A is selected. ^ Press the right jog shuttle to return to the main display menu.

kC ^ Turn the left jog shuttle to "Settings". PROGRAMMING F Y Kn II JZ ^ Turn the right jog shuttle to the "Programming" symbol, press to confirm. STEAM SYSTEM n IA M T U N A ^ Turn the right jog shuttle to the "Steam system" option. Press to confirm. 34 Settings Total coffee counter (INFO) If the option "Info" is selected, the display will show the number of cups of coffee dispensed to date (espresso, coffee, double espresso / coffee).

SETTINGS F K1 2 3 4 5 Lo n G Factory setting This option allows you to reset all saved settings to the factory default. SETTINGS F K1 2 3 4 5 Lo n G kC kC ^ Turn the left jog shuttle to "Settings". FACTORY DEFAULT F Y ^ Turn the left jog shuttle to "Settings". INFO F Y Kn I J Z Kn I JZ ^ Turn the right jog shuttle to the "Factory default" symbol. ^ Press to confirm. FACTORY DEFAULT reset B ^ Turn the right jog shuttle to the "Info" symbol, press to confirm. The number of coffees already dispensed will appear in the display. @@@@The appliance is now locked and will not operate. @@@@Allow the coffee system to cool before cleaning. Danger of burns! Do not clean the unit with a steam cleaner.

Never use abrasive cleaning agents. These will damage the machine. @@@@^ Press the right jog shuttle. Water runs from the coffee dispenser. ^ Press the steam lever down. Water runs from the steam valve. ^ Push the steam lever up after a few seconds. The lines are rinsed. @@See below for more details. Capsule carousel and tray ^ Pull out and remove.

Both pieces are dishwasher safe. @@Close the door. Coffee dispenser cover ^ Clean the sensor in the carousel tray niche. Dry with a soft cloth. The carousel chambers are read by the sensor.

Waste container niche ^ Push in and up to remove. Cover is dishwasher safe. @@@@^ Dissolve one cleaning tablet in hot water. @@^ Rinse thoroughly and dry the capsule plate. @@Dry with a soft cloth.

Only use a slightly damp sponge when cleaning the controls. Water could penetrate into the electronics and cause damage. Wipe any spills from descaling immediately! Stainless steel surfaces Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner. To help prevent soiling, a conditioner for stainless steel can also be used. Apply sparingly with even pressure. Jog shuttles Clean the jog shuttles with a sponge and a solution of warm water and liquid dish soap. ^ These jog shuttles may become discolored or damaged if not cleaned regularly. Do not use a stainless steel cleaner on the jog shuttles. Maintenance The perforator should be changed after 15000 cups of coffee / espresso. The perforator can be purchased from Miele.

It is recommended to contact the Miele Service department for assistance in performing this maintenance task.



[You're reading an excerpt. Click here to read official MIELE CVA](http://yourpdfguides.com/dref/3238995)

[2650 user guide](http://yourpdfguides.com/dref/3238995)

<http://yourpdfguides.com/dref/3238995>

SETTINGS F K1 2 3 4 5 Lon G kC ^ Turn the left jog shuttle to "Settings". MAINTENANCE F Y KnI I JZ ^ Turn the right jog shuttle to "Maintenance".

MAINTENANCE carry out A ^ Press the right jog shuttle and turn it to "carry out". ^ Press the right jog shuttle. 40 Cleaning and care The right display goes dark and the appliance is now lowering the perforator. Remove capsule plate and change the capsule hopper ^ Open the appliance door. ^ Pull out the capsule plate. ,Do not reach up into the perforator opening. Danger of injury! ^ Screw the new perforator firmly into the unit.

The spring and ball bearing must be inserted in the perforator opening so that the ball bearing is on top. ^ Insert the rubber disc from the bottom up (with the funnel pointing downwards). ^ Insert the capsule plate and close the door. ^ Pull the rubber disc top, down and out. ^ Insert the tool for removing the perforator up into the unit, a.

Turn it to the left, b, to loosen and remove the perforator. 41 Cleaning and care Cappuccinatore Clean the cappuccinatore after every use, otherwise it may become blocked with dried milk and hard to clean. The cappuccinatore can be disassembled into parts for thorough cleaning. For best results, use a dishwasher - all parts are dishwasher-safe. ^ Separate the lid, remove all parts and clean.

To remove the valve, the dot needs to be in the 12 o'clock position (between the hot milk and froth symbols). Be sure that the parts are assembled properly e.g., no gap between each half of the lid. Be sure that the re-assembled lid is seated correctly on the pitcher. The valve belongs over the handle of the cappuccinatore. If the valve is in the wrong position, the cappuccinatore will not work properly. ^ Re-assemble the lid as shown in the illustration. When replacing the valve be sure the dot is facing the upper right. 42 Descaling the appliance The coffee system must be descaled regularly.

The time period depends on the water hardness set. The appliance will display a reminder message and will eventually lock if not descaled. Once the system is at the point where only 50 drinks can be prepared before descaling must be performed, the display will show "50 no. of uses until descaling has to be done". This message will appear and countdown after each drink. When the count is to zero, the coffee system will lock and the left display will show "Descal" k . The right display will show "confirm to start". The appliance can only be used again once descaling is performed. Only use the enclosed descaling tablets for descaling. The descaling tablets are specially designed for this coffee system.

The descaling tablets can be purchased from your local Miele dealer or Miele. Other agents may damage the machine and affect the taste of coffee and hot water. Be sure that the correct mixture of descaling agent and water are used to prevent damage to the machine. To prevent damage to the exterior wipe up any descaling solution spills immediately! Thoroughly clean the water tank and the drip tray of descaling residue. Descaling DESCALING K1 2 3 4 5 Lon G k C ^ Turn the left knob to the "Descaling" symbol.

Confirm to start ^ Press the right jog shuttle to start the descaling process. The descaling cannot be interrupted once the right knob is pressed. This is a safety feature to ensure the process will be completed. Descaling is important to increase the life of the machine and to ensure the best results possible. 43 Descaling the appliance The right display will prompt you through the single steps of the descaling process.

Follow these prompts. See "Descaling prompts" for more information. Do not skip any steps and do not remove a part unless prompted by the display. This will cause the program to fault and descaling will restart. At the beginning of the descaling program there will be a delayed start to allow the tablets to completely dissolve. If the machine has not sufficiently cooled after use to begin the descaling program the delay start time will be extended. A pump will introduce a small amount of descaling solution into the system then rest briefly to allow the solution to take effect. The right display indicates how long the process will take. 44 Descaling the appliance Descaling prompts For clarification regarding the prompts see the following: Please add descaling agent to the water container ^ Remove the water tank. ^ Fill the water tank with cold tap water to the k mark.

If not filled to the mark, descaling will be prematurely canceled. ^ Dissolve two of the enclosed descaling tablets in the water tank. ^ Close the water tank and insert it into position. Please use the waste container ^ Take the waste container from the interior and set it under the coffee dispenser and steam valve. Please use descaling funnel and close the door ^ Open the door and remove the capsule plate. Please empty drip tray (and waste container) ^ Since the machine is also rinsed inside, the drip tray needs to be emptied to continue. ^ Also empty the waste container at this time. Please fill with fresh water ^ Take the water tank out, rinse out any descaling residue thoroughly with water. ^ Fill with fresh water to the "Max." mark and reinsert the tank.

^ Insert the colored funnel into the capsule plate opening. 45 Fault messages If an error occurs a fault message will appear in the right display. Minor problems can be fixed without a service call. Message Chamber empty please refill Possible fault The selected coffee chamber is empty. Solution Fill with coffee capsules.

Please fill with fresh water This is a reminder to fill the water tank with fresh water when the machine is turned on. Please set the time of day The machine was disconnected from the power supply and the time of day needs to be reset. Empty drip tray and clean The drip tray is full and/or the metal contacts contact sensors on the tray are soiled. Please use descaling The capsule plate needs to be taken funnel and close the door out and replaced by the descaling funnel. Please insert capsule plate Please insert carousel Please open the valve Please close the valve Maintenance required The capsule plate or perforator are missing or the descaling funnel is still in the machine.

The carousel is missing or the sensor under the carousel tray is soiled. Steam cannot be supplied if the steam valve is closed. The steam lever is still pressed down. The perforator needs to be replaced after about 15,000 cups of coffee. Set the time of day. Empty and clean the drip tray. Clean and dry the contacts. Remove the capsule plate and insert the colored funnel. Insert the capsule plate or perforator. Insert the carousel and clean the sensor with a cloth.

Press the steam lever down. Push the steam lever up. Turn the left jog shuttle to "Settings". Turn the right jog shuttle to maintenance and change the perforator (see "Common coffee system care Maintenance").



[You're reading an excerpt. Click here to read official MIELE CVA](http://yourpdfguides.com/dref/3238995)

[2650 user guide](http://yourpdfguides.com/dref/3238995)

<http://yourpdfguides.com/dref/3238995>

Press the right jog shuttle. Press the right jog shuttle. Confirm to start Confirm to continue Empty The selected process is prompted to start. The descaling needs to be continued. A coffee chamber was selected which Allocate a type of coffee to the has not been allocated to a coffee type. chamber.

Descal the machine (see "Descaling the appliance"). No. of uses until The machine counts the number of descaling has to be done drinks made before descaling has to be carried out. Once this number reaches zero, the machine locks until the descaling process has been successfully completed. 46 Frequently asked questions Repairs to electrical appliances should only be carried out by a suitably qualified person in accordance with local and national safety regulations.

Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held responsible for unauthorized work. Machine Problems What if the light does not illuminate when turned on? Is the unit locked? Is the lighting set too low? If not, the light bulb has burnt out. Contact the Miele Service Department. Adjust the lighting.

What if the display messages are difficult to read? The contrast or brightness of the displays are too low / high. Adjust the display contrast / brightness. What if there is no prompt in the display? The unit has no power. Is the main switch turned off? Is the machine plugged in? Check that the fuse is not defective. If so contact the Miele Service Department. What if the unit suddenly turns off? Is the machine plugged in? Plug the machine in. Is the machine programmed to The machine turns off into standby mode when not used for the switch off after a programmed programmed time. time? The water temperature may be too The unit is blocked until the water has high. cooled. 47 Frequently asked questions What if the light turns suddenly off? The light turns off automatically when the machine has not been used for 10 minutes.

What if the door cannot be opened or closed? The steam lever is not pushed up all the Press the lever down and then up again way. all the way. What if the time of day needs to be reset? If the machine was unplugged or a power failure occurred. Reset the time of day. The preset times for turning on or off automatically are saved in the memory and do not need to be reset. What if despite the empty drip tray a message to empty it shows up? The contacts are soiled. Clean and dry the contacts. The drip tray is not inserted correctly. Insert the drip tray correctly. Turn the machine off and on again with the main switch.

If the message still appears contact Technical Service. What if the machine does not rinse when turned on although the automatic rinsing function is set to "On"? If the coffee system has still a temperature of 140 °F (60 °C) or higher, the machine will not be rinsed. 48 Frequently asked questions Preparing / dispensing problems What if no drink is prepared although there are coffee capsules and water in the tank? Take out the water tank and then insert it again. What if no coffee is prepared although water is in the tank and coffee capsules are in the carousel? A coffee capsule is jammed in the carousel. ^ Open the appliance door.

^ Pull the carousel tray out, lift out the capsule carousel and make sure all capsules can move easily. ^ Insert the carousel in the tray and push it all the way in. ^ Close the door. What if no hot water or steam is dispensed from the steam valve? ^ Take out the water tank and then insert it again. If still no or little water is dispensed the steam valve is clogged.

^ Open the appliance door. ^ Press the steam lever down and pull off the rubber sleeve. ^ Using the small end of the provided tool unscrew the top of the steam valve counterclockwise. ^ Clean the tip and screw it on again. 49 Frequently asked questions What if the steam heating system is turned off but steam can still be dispensed? Steam can be dispensed as long as the Once cooled the system will no longer steam heating system is warm. dispense steam. What if the steam smells like rubber? The rubber odor will wear off with time and usage. What if the cappuccinatore dispenses no frothed milk? Is the spout turned to the side so that Turn the spout to the cup. froth can only be prepared in the cappuccinatore? Are the valve and the froth dispenser See "Common coffee system care of the cappuccinatore properly Cappuccinatore". inserted in the lid? Are any single parts of the Clean the cappuccinatore.

cappuccinatore clogged? What if the coffee dispensing is interrupted? If a double espresso/coffee was selected the machine uses two coffee capsules. Dispensing is interrupted when the carousel chambers are empty. Refill coffee capsules. 50 Frequently asked questions Coffee results What if the dispensed coffee has some ground coffee in it? The capsule plate is soiled. Clean the capsule plate. What if the water flow stopped when programming the serving size? If the maximum water amount is reached, the water dispensing stops automatically. The maximum water amount is saved. There was not enough water in the Refill the water tank and reset the tank. The dispensed water amount serving size. will not be saved.

What if the preparing time and amount of coffee is very different? Depending on coffee type the grinding level will differ between coarse and fine. Preparing time and amount will vary. What if the espresso/coffee is not hot enough? Check if the capsule plate is clogged. What if water is in the waste unit? This is residual water from the cleaning process. Pour water away.

What if "coffee water" is in the waste unit? The capsule plate is not inserted all the Take the capsule plate out and insert it way. again. What if the coffee is too thin? Check the water amount saved in the Adjust if necessary. memory per coffee. See "Common coffee system care After 15,000 cups of coffee the Maintenance" after checking the perforator needs to be replaced.

coffee counter. Clean the capsule plate. Pre-warm the cup. 51 Frequently asked questions Descaling problems What if the descaling process was started accidentally? The descaling process cannot be interrupted once the right jog shuttle is pressed. The process now needs to be completed as a safety measure. Descaling is important to increase the life of the machine and to ensure the best results possible. What if the preheating time is increased, the water flow amount is not correct and the unit performs less? The machine needs to be descaled. See "Descaling the appliance". 52 Frequently asked questions "F" messages What if F 10 shows? No water can be pumped from the water tank. Fill the system with water.

See "Before using the coffee system for the first time".



[You're reading an excerpt. Click here to read official MIELE CVA 2650 user guide](http://yourpdfguides.com/dref/3238995)
<http://yourpdfguides.com/dref/3238995>

Remove and reinsert the water tank. Refill to the mark and restart descaling. If the message still shows, contact Technical Service. F 10 also shows, if the water tank was not filled correctly during descaling. What if F 42 or F 45 shows briefly in the right display when the machine is turned off? There is a slight fluctuation in the electrical supply. What if F 72 shows? A coffee capsule has jammed above ^ Open the appliance door. the waste unit. ^ Remove, empty and return the waste unit. ^ Close the door.

^ If the message still shows, see "Removing a jammed capsule - From the carousel tray". What if the message F 75 or F 76 shows in the display? A coffee capsule has jammed. ^ Open the appliance door. ^ Remove, empty and return the waste unit. ^ If the message still shows, open the appliance door and follow the prompts in the right display.

See "Removing a jammed capsule from the capsule plate". What if any other fault messages "F" appear in the display? Call the Miele Technical Service Department. 53 Call Technical Service if the message appears regularly. Removing a jammed capsule .Turn the machine off at the main switch in the upper left corner. Danger of electric shock.

The machine must be turned off before performing the next steps. From the carousel tray ^ Open the appliance door. ^ Turn the machine off at the main switch. From the capsule plate ^ Take the carousel and the capsule plate out. ^ Insert a spoon handle underneath the carousel tray on the right side. Move the spoon handle with care to the left side. ^ Pull out the carousel and remove the coffee capsule. ^ Throw out the capsule so it does not jam again. It may be damaged or dented. ^ Remove the tray by pulling it completely out then pushing it up slightly.

Clean the area underneath it, making sure to wipe clean the sensor. Reinsert the tray. ^ Turn the machine on at the main switch. ^ Close the door. ^ If the message still appears call Technical Service. ^ On the right side of the capsule plate is an opening. Check if a coffee capsule has jammed in there or further up in the unit. ^ Remove the coffee capsule only with a wooden spoon handle. ^ Reinsert the capsule plate and the carousel in the tray platform. ^ Turn the machine on at the main switch.

^ Close the door. ^ If the message still appears contact Technical Service. 54 After sales service In the event of a fault which you cannot easily fix yourself, please contact the Miele Technical Service Department at the contact information on the back of this booklet. When contacting the Technical Service Department, please quote the model and serial number of your appliance given on the data plate inside the appliance. MieleCare MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: www.store.miele.com

55 Electrical connection The coffee system comes equipped with a 6 ft. (1.8 m) power cord with a NEMA 5-15P molded plug for connection to a 120 V, 15 A, 60 Hz power supply. Connection should be made via a suitable isolator, with an on-off switch which should be easily accessible for servicing work. Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held responsible for unauthorized work. Verify that the voltage, load and circuit rating information found on the data plate match that of the household electrical supply before installing the coffee system. If there is any question concerning the electrical connection of this appliance to your power supply, please consult a licensed electrician or call Miele's Technical Service Department.

U 1-800-999-1360 V 1-800-565-6535 56 Installation Installation options A countertop option for the CVA 2650 is possible with the CVSG 50 casing. The coffee system is designed to be built into cabinetry. 57 Installation 58 Installation 59 Installation To install the CVA 2650 below a hanging cabinet a CVUG 50 casing (optional accessory) is required. 60 Installation Installation Make sure power is not supplied to the appliance while installation or maintenance work is performed. Disconnect the power supply to the work area by unplugging the unit, tripping the circuit breaker or removing the fuse. The coffee system must be properly installed before being used. ^ Plug the appliance into the electrical outlet. ^ If you have a cabinet with 3/4" (19 mm) side panels, you will need to drill four holes first. Center the machine in the cabinet. Tighten the screws just so they leave a mark in the panel.

Remove the machine from the cabinet and drill four holes 1/16" (2 mm) with a diameter of 3/16" (4.5 mm). ^ Open the door and partially tighten the screws by hand. Do not use an electric screwdriver. ^ Carefully turn the lower screws to center the machine. ^ To fix the machine in the cabinet, tighten the upper screws. ^ Level the machine with the four height adjustable feet. The feet can be turned out up to 3/8" (10 mm). ^ Push the appliance all the way back into the cabinet. 61 Installation Programming The appliance must be correctly installed and connected before the first use.

Setting the language ^ Press the left jog shuttle to turn the machine on. You will then be prompted to select a language. ^ Turn the right jog shuttle until the desired language shows in the display. ^ Press the right jog shuttle to confirm. To turn off the machine ^ Press and hold the left jog shuttle until the displays go dark. Miele Welcome! When turned on for the first time, a welcome screen as well as other messages will appear in the right display. The welcome screen will be displayed each time the machine is turned on until 5 drinks (including steam) have been prepared. COSI K1 2 3 4 5 Lo n G kC The displays light. 62 Installation Setting the water hardness The hardness of the water used in the coffee system must be determined and programmed into the appliance. The water hardness will determine how frequently the unit must be descaled to properly maintain the coffee system.

The machine monitors the volume of water passing through it in conjunction with the hardness of the water and will indicate when descaling is necessary.



[You're reading an excerpt. Click here to read official MIELE CVA 2650 user guide](http://yourpdfguides.com/dref/3238995)
<http://yourpdfguides.com/dref/3238995>

Your local water authority can inform you of the hardness of your tap water or you can measure the hardness yourself using the enclosed test strip. Program setting Water Hardness gr/gal 0-3 4-7 7 - 14 ppm 0 - 130 130 - 250 250 - 380 over 380 Hardness 1 1 (soft) Hardness 2 1 (soft) Hardness 3 2 (medium) Hardness 4 3 (hard) 14 - 21 4 (very hard) over 21 To adjust or set the water hardness SETTINGS F K1 2 3 4 5 Lo n G kC ^ Turn the left jog shuttle to "Settings". PROGRAMMING F Y Kn II JZ ^ Turn the right jog shuttle to the "Programming" symbol, press to confirm. WATER HARDNESS n IA M TU N A ^ Dip the strip into your tap water for one second, then shake off any excess water. The result will be evident after one minute. If your water hardness is greater than 40 gr/gal (700 ppm), the water must be mixed in equal parts with non-carbonated mineral water to prevent excessive lime scale build up. Never use distilled water. ^ Turn the right jog shuttle to the "Water hardness" symbol, press to confirm. WATER HARDNESS + very hard - 4 B ~ ^ Turn the right jog shuttle to set the water hardness.

A check marks the current setting. ^ Press the right jog shuttle to save the setting. The display now shows the main screen. The "back" symbol A is selected. ^ Press the right jog shuttle to return to the main display menu.

63 Coffee glossary Caffè is the Italian term for a standard espresso. Caffè americano is a thin espresso with water added. Caffè corretto is espresso with a splash of liquor. Caffè freddo is iced coffee. An extended version of espresso served with ice.

Caffè latte is a double espresso in a large cup filled with hot milk, topped with little or no foam. Caffè moca consists of equal parts of espresso, hot milk and cocoa. Caffè ristretto is the strongest most concentrated espresso. The water is reduced to 2 tablespoons (30 ml) per serving. Caffeine - the caffeine content of espresso is only a third or half of that found in coffee. The stronger the roast, the less caffeine the espresso will contain. Cappuccino is espresso with frothed milk. It is equal parts of espresso, hot milk and foam. Cappuccino chiaro is a "light" cappuccino with less espresso and more hot milk. @@Cappuccino senza schiuma is a cappuccino without the froth.

@@The crema contains foamed oils which are rich in flavor and aroma. Espresso, see Caffè. Espresso corto is a "short", strong espresso. Espresso doppio is a double portion of normal espresso. @@Espresso ristretto is a double strength, bitter tasting espresso. @@Pre-warming the cup is recommended to prevent the espresso from cooling too quickly. 64 The Espresso range Ristretto (black) is the typical Italian espresso. It is a short, strong, full-bodied espresso with a touch of acidity. It has a pleasantly lingering taste. Strength: 10 Ideal cup size: Ristretto, Espresso or Cappuccino Arpeggio (dark purple) is a Mediterranean blend par excellence with a strong character, intense body and long exquisite after-taste.

Its thick, smooth crema remains to the last sip. Strength: 9 Ideal cup size: Ristretto, Espresso or Cappuccino Roma (dark gray) With its sweetness and its woody notes, Roma is the ideal coffee for a short espresso that is not too strong. Strength: 8 Ideal cup size: Ristretto or Espresso Decaffeinato Intenso (brick red) An intense, rich taste with slightly elevated acidity gives this decaffeinated coffee all the strength of a true espresso. Strength: 7 Ideal cup size: Espresso or Cappuccino Livanto (copper brown) A very well balanced blend, Livanto is characterized by a dense and velvety aroma. It is a uniquely rounded espresso. Strength: 6 Ideal cup size: Espresso or Lungo Capriccio (dark green) is a full-bodied espresso, which is also creamy, mild and rich. Its crema is very dense, and so delicate that it reflects the light. Strength: 5 Ideal cup size: Espresso Volluto (yellow gold) Lightly roasted but full-bodied, Volluto's flavor is round and fresh with a cereal hint. Volluto's character is reinforced by a touch of acidity. Strength: 4 Ideal cup size: Espresso Così (dark brown) is perfect for espresso lovers who enjoy a mild, smooth crema coupled with the refreshing acidity of a hint of lemon.

Strength: 3 Ideal cup size: Espresso or Lungo Decaffeinato (red) This is the lighter and creamier decaffeinated blend, offering a rich and delicate balance between mildness and acidity. Decaffeinato's crema is distinguished by its hazel color and consistent texture in the mouth. Strength: 2 Ideal cup size: Espresso or Lungo 65 The Lungo range Vivalto (sky blue) is an intense Lungo which combines a beautifully roasted note with a subtle floral note. With its noticeable crema and mild aroma, it is also delicious prepared with milk. Strength: 6 Ideal cup size: Lungo Decaffeinato Lungo (coral) delivers a smooth body and a fine roundness in the mouth. Its sustained roasting reveals flavorful grilled notes. Strength: 5 Ideal cup size: Lungo Finezzo (butter yellow) Extremely balanced, Finezzo is a mellow, gently fruity blend that blossoms within its light body. Its character is reinforced by a hint of acidity. Strength: 4 Ideal cup size: Lungo 66 Caring for the environment Disposal of packing material The cardboard box and packing materials protect the appliance during shipping. They have been designed to be biodegradable and recyclable.

Please recycle. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old appliance Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. Ensure that the appliance presents no danger to children while being stored for disposal. Before discarding an old appliance, unplug it from the outlet, cut off its power cord and remove any doors to prevent hazards. 67 Alteration rights reserved / 3607 CVA 2650 M.-Nr. 07 173 910 / 00 For the most updated manual please see the Miele website.



[You're reading an excerpt. Click here to read official MIELE CVA 2650 user guide](http://yourpdfguides.com/dref/3238995)

<http://yourpdfguides.com/dref/3238995>