



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE CVA 4062 COFFEE SYSTEM. You'll find the answers to all your questions on the MIELE CVA 4062 COFFEE SYSTEM in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE CVA 4062 COFFEE SYSTEM
User guide MIELE CVA 4062 COFFEE SYSTEM
Operating instructions MIELE CVA 4062 COFFEE SYSTEM
Instructions for use MIELE CVA 4062 COFFEE SYSTEM
Instruction manual MIELE CVA 4062 COFFEE SYSTEM

Miele

Operating and Installation Instructions



Coffee System
CVA 4062
CVA 4068

To prevent accidents
and appliance damage
read these instructions
before
installation or use.

en - US, CA

M.-Nr. 07 816 880



[You're reading an excerpt. Click here to read official MIELE CVA 4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)
<http://yourpdfguides.com/dref/3353956>

Manual abstract:

.....
.....
.....
.....

.. 4 Guide to the coffee system

.....
.....
.....

..... 8 Included accessories .

.....
.....

.....
.....
.....
.....

10 First steps to use

.....
.....
.....

..... 11 Touch controls .

.....

.....
.....
.....
.....

. 11 Display

.....
.....

.....
.....
.....
.....

..... 11 Before the first use .

.....
.....
.....

..... 11 Filling water, beans or ground coffee ..

.....
.....
.....
.....

13 Filling the water tank

.....
.....
.....

.....
.....
.. 13 Filling the bean container ...
.....

.....
.....
.....
.....
14 Filling ground coffee
.....
.....
.....

.....
.....
.. 14 Preparing drinks ...
.....

.....
.....
.....
.....

..... 15 Turning on
.....
.....
.....

.....
.....
.....
.....

. 15 Pre-warming cups
.....
.....
.....

.....
.....
.....
.....
15 Adjusting main dispenser height
.....

.....
.....
.....
.....
..... 16 Coffee and espresso prepared from coffee beans ..

.....
.....
.....
.....
.. 16 Coffee and espresso prepared from ground coffee
.....

.....
.....
.....
.....
17 Beverages with milk
.....

.....
.....
.....
.....
..... 18 User profile beverages
.....

.....
.....

.....
.....
... 20 *Adjusting the coffee grinder* ..
.....

.....
.....
.....
..... 21 *Settings* ..

.....
.....
.....

.....
.....
.....
..... 22 *Language*

.....
.....
.....

.....
.....
.....
..... 22 *Time of day*

.....
.....
.....

.....
.....
..... 23 *Timer*

.....
.....
.....

.....
..... @@ ..
.....
... 25 *Amount of coffee*

.....
.....
.....

.....
... 26 *Pre-brewing* ..
.....

.....
.....
.....

..... 26 Temperature ...

.....
.....
.....
.....
.....
.....

27 Automatic rinsing

.....
.....
.....
.....
.....

27 Steam system

.....
.....
.....
.....

.. 28 Lighting: Adjusting the brightness ...

.....
.....
.....
.....

.... 28 Lighting: Setting the switch-off time.

.....
.....
.....
.....

..... 29 Info (displaying No. of drinks)

.....
.....
.....
.....

..... 29 System lock

.....
.....
.....
.....
.....
.....

30 Water hardness

.....
.....
.....
.....
.....
.....

. 30 2 Contents Display

.....

other than for its intended use. @@@@If in doubt, consult a qualified technician. ~ Be certain your appliance is properly installed and grounded by a qualified technician.

To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. ~ Before service or maintenance disconnect the power supply by either removing the fuse, "tripping" the circuit breaker or unplugging the unit. ~ This appliance is not designed for maritime use or for use in mobile installations such as recreational vehicles or aircraft. However, under certain conditions it may be possible for installation in these applications. Please contact the Miele Technical Service Department with specific requirements. ~ Installation work and repairs must only be performed by a trained technician in accordance with national and local safety regulations. Repairs and other work by unauthorized persons could be dangerous and may void the warranty. ~ The appliance must be properly installed before operation to ensure that no electrical components are accessible.

Ensure that power is not supplied to the appliance while installation work, repairs or maintenance is performed. ~ Do not use an extension cord to connect the appliance to electricity. Extension cords do not guarantee the required safety of the appliance (danger of overheating and open ground circuit). ~ Do not install or use outdoors even if installed in the display cabinet. ~ While the appliance is under warranty repairs should only be performed by an authorized service technician. Otherwise the warranty is void. ~ Defective components should be replaced by Miele original spare parts only. Only with these parts can the manufacturer guarantee the safety of the appliance. ~ To protect against fire, electric shock and injury to persons do not submerge the cord or plugs in water or other liquids. 5 IMPORTANT SAFETY INSTRUCTIONS ~ Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.

~ Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Miele. ~ Always attach the cord to the appliance first, then plug it into the wall outlet. To disconnect, turn the machine off, then remove the plug from the wall outlet. ~ Never open the outer casing of the appliance.

Tampering with electrical connections or components and mechanical parts is dangerous and may cause machine damage. ~ If installed in combination with another appliance, a protective base must be installed between the coffee system and the appliance. ~ Install or locate this appliance only in accordance with the provided installation instructions.



[You're reading an excerpt. Click here to read official MIELE CVA](http://yourpdfguides.com/dref/3353956)

[4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)

<http://yourpdfguides.com/dref/3353956>

Use Caution! Do not look directly or with an optical instrument into the lighting - laser radiation. Caution! Risk of burns when dispensing hot beverages, they are extremely hot.

~ Before the first use, flush the supply lines for water and milk and thoroughly clean the coffee system and stainless-steel milk container. ~ Only fill the water tank with cold, fresh tap water. Warm or hot water, or any other liquids may damage the machine. The water should be changed daily to prevent bacteria or mold growth. ~ Do not use deionized or mineral water. They may lead to heavy calcium built-up in the machine that can damage the unit. ~ Do not put anything but coffee beans into the beans container. Do not put ground coffee in the beans container, it will damage the grinding unit. ~ Do not fill anything but ground coffee or a cleaning tablet (for the brew unit) in the funnel for ground coffee, otherwise it will get damaged. ~ Only use plain milk.

Flavored milk products contain substances that can clog the coffee system. 6 IMPORTANT SAFETY INSTRUCTIONS ~ Sugar can damage the appliance! Caramelized or otherwise pre-treated coffee beans or other sugar containing beverages must not be put in the machine. ~ Never place a cup with an alcohol-coffee mixture underneath the main dispenser. Plastic parts of the unit could catch fire! ~ The hot water and steam dispensed could cause scalding. These functions must be used carefully. Never hold any parts of the body under the steam nozzle or the hot water dispenser. The machine must never be used to clean objects. ~ Never use a steam cleaner to clean the appliance. Pressurized steam could damage electrical components and cause a short circuit. ~ The appliance must be descaled regularly with the supplied descaling tablets.

In areas with very hard water the machine may need to your coffee system ^ Use the arrow buttons to select a program item from the display. Once highlighted, confirm with OK. During the very first use, you will be prompted to select a language. ^ Tap < or > until the desired language appears in the display. ^ Confirm with OK.

The language is now set. 11 First steps to use You will then be prompted to set the Time format. ^ Tap < or > until the time format you wish to select (12-hour or 24-hour) is highlighted, confirm with OK. ^ Enter the Time of day: First set the hours using < or >, confirm with OK. Repeat to set the minutes.

^ Now specify when the time of day should be dispensed. The smaller the amount of coffee or espresso and the thicker the cups, the more important it is to pre-warm the cups. ^ Place an empty cup under the hot water spout. ^ Select hot water -. ^ Hot water is dispensed. Select OK to stop the flow. ^ Let the hot water sit for a moment to pre-warm the cup, then empty the cup and prepare the beverage. Turning on ^ Select On/Off s. The following message appears in the display: Heating phase If the automatic rinse feature is set to "on" (factory default), the following message is displayed after the heating phase: Rinsing 15 Preparing drinks Adjusting main dispenser height The height of the main dispenser can be adjusted, to keep the shortest distance to the cup and retain heat, and maintain a better crema and froth. q r H Espresso I J L n m C ^ Use the arrow buttons to select the desired beverage, confirm by tapping OK once.

The machine grinds the beans and pre-brews the coffee (if "On" is selected under "Pre-brewing"). The selected beverage is dispensed. Do not open the appliance door during the brewing process. The appliance will be damaged. Discard the very first two coffees dispensed once you have started to using the appliance, this will ensure that any coffee residue from factory testing is eliminated from the brew unit. ^ Slowly pull the main dispenser up or down as desired. Coffee and espresso prepared from coffee beans Espresso, coffee, double espresso, and double coffee are all prepared in the same way: ^ Place a cup under the main dispenser. The beverage is dispensed through both dispensers at the same time. 16 Preparing drinks Double portion If you would like a double portion of coffee or espresso, or to prepare two portions at the same time, ^ tap the OK button a second time, while the display reads "2 portions?". The two portions are always prepared one after the other.

Coffee and espresso prepared from ground coffee After filling the funnel with ground coffee (see "Filling water, beans or ground coffee - Filling ground coffee"), the display shows: Make the coffee? Yes No ^ Tap < or > until "Yes" is highlighted. Select "No" if no ground coffee is filled in the funnel. Otherwise the coffee system assumes that ground coffee is in the machine and dispenses only water the next time coffee is made. The display reverts to the main menu, and you can select the desired beverage type. ^ To fill two cups at the same time, place one cup under each spout.

Be sure to wait for 2 dispensing cycles to be completed before removing the cups. Interrupting preparation ^ Tap OK when you see "Stop" in the display.

Preparation will immediately stop. 17 Preparing drinks Prepare beverages ^ Place a cup under the main spout. ^ Tap the OK button.

The appliance brews the espresso or coffee, and the selected beverage is dispensed from the main spout. Do not open the appliance door during the brewing process. The appliance will be damaged. After dispensing, the appliance automatically reverts to bean operation. Interrupt preparation ^ During preparation, tap the OK button when "Stop" appears in the display. Preparation will immediately stop. If you use ground coffee, only one serving is prepared at a time. The appliance always uses the entire portion of ground coffee loaded into the funnel, for one beverage. Make sure to keep the top and seals of the container clean. Soiling can cause affect the functioning of the milk container.

Cold milk is best for creating froth. Always pre-warm the cup with hot water, before you prepare a beverage. Do not fill the container to the rim, leave a gap of approx. 1" - 1 1/2" (2 - 3 cm) from the top. Beverages with milk Stainless steel milk container The stainless steel milk container is vacuum insulated, to keep milk cold for a period of time. With an ambient temperature of about 68°F (20°C), milk at 43°F (6°C) can be stored for 11-12 hours and remain under 55°F (13°C). (Milk that is warmer than 55°F (13°C) should not be used because it will not make good milk froth.) Milk cannot be stored as long if there is a warming drawer underneath the coffee machine. 18 Preparing drinks To prepare beverages with milk, Cappuccino, latte macchiato, hot milk, froth ^ Place a suitable cup or glass under both dispensers. For best results when preparing a latte macchiato, place the glass under the spout in such a way that the espresso flows into the middle of the froth.



[You're reading an excerpt. Click here to read official MIELE CVA](http://yourpdfguides.com/dref/3353956)

[4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)

<http://yourpdfguides.com/dref/3353956>

^ place the lid on the stainless steel milk container and turn the lid to the left, so that it clicks into place. Cappuccino q r H I J L n m C ^ Tap the right arrow button until the beverage symbol is highlighted, tap OK once. ^ To interrupt preparation, tap OK again. ^ Open the appliance door and hang the milk container in the appliance (as shown). ^ Close the appliance door.

To set the proportions for beverages (coffee, espresso, froth, hot milk), see "Setting serving sizes". After preparing the first drink with milk the reminder "Clean the milk pipework" will appear in the display. ^ Tap OK to return to the main menu. This reminder will not appear after each additional drink. 19 Preparing drinks User profile beverages The user profile function is used to prepare beverages to suit your taste, by adjusting the amounts of water, milk, and ground coffee, as well as temperature and pre-brewing (see "Creating a user profile").

If you have already created a user profile, first select it then prepare the beverage. User profile q r H I J After use Before turning the machine off, or at the end of the day, flush the water lines, the brew unit, the spouts and the milk pipework in order to prevent the machine from clogging (see "Cleaning and care"). L n m C ^ Tap < or > until "User profile" is highlighted, confirm with OK. ^ Tap < or > to select "Select", confirm with OK. ^ Use < or > to select the desired user profile, confirm with OK. A large user profile n symbol will appear in the display to show that a profile has been selected. You can now operate the appliance as you would for a "standard" profile. 20 Adjusting the coffee grinder The finer the coffee beans are ground determines the strength of the coffee and the quality of the crema. To adjust the grinder setting To prevent machine damage adjust the coffee grinder one level at a time and let the beans grind before adjusting another notch. Otherwise the machine will be damaged.

The grinder should be adjusted: If the espresso flows too quickly into the cup, the pressure cannot be built up because the beans have been ground too coarsely. The grinder should be adjusted to a finer setting. If the espresso only trickles into the cup, the beans have been ground too fine and the coffee will be bitter. The grinder should be adjusted to a coarser setting. If the crema is evenly colored but pale, the ground coffee is too coarse. If the crema is very dark brown on one side, graduating almost to white on the other, the ground coffee is too fine. ^ Push the slide control to the left for a finer grind or to the right for a coarser grind. You should be able to feel the notches when moving the slide control. If the slide control will not move: ^ Close the machine and dispense a cup of coffee. Then try to move the slide control again.

21 Settings The coffee system can be customized to suit individual preferences. Language You can select the language for all text and messages displayed on your machine. ^ Select "Settings F" and confirm with OK. Settings menu Settings F q r H I J L n m C ^ Tap < or > until Settings C is highlighted. Confirm with OK.

^ Tap < or > until the desired option is highlighted and confirm with OK. The current setting(s) will be marked with a check. To return to the previous options in the manu, select "Back A". The possible setting options are described in detail on the following pages. Settings Language F Time of day ^ Tap OK. ^ Tap < or > until the language you wish to select is highlighted. ^ Confirm with OK. This setting is automatically saved, and the display returns to the previous screen. All display text will now appear in the language selected. If you select the wrong language accidentally, follow the flag icon F to find the "Language" option. 22 Settings Time of day ^ Select "Settings F", confirm with OK. Settings Time of day Timer Clock format ^ Use < or > to select "Clock format". ^ Tap < or > to select a 24-hour or 12-hour display. ^ While the desired option is highlighted, confirm with OK. The clock format is now saved.

Setting the time of day ^ Tap < or > until "Time of day" is highlighted, confirm with OK. Three options are now available: Display The time display can be turned on or off. ^ Use < or > to select "Display". You can now choose from among three settings: "On": The time will be displayed even when the machine is turned off. "On for 60 seconds": The time will be displayed for 60 seconds after the machine has been turned off. "Do not display": The display will go dark as soon as the machine is turned off. ^ Once a display format has been selected, confirm the setting with OK. ^ Use < or > to select "Set". ^ Tap < or > to set the hours. Confirm with OK.

Repeat to set the minutes. The time of day is now saved. 23 Settings Timer ^ Select "Settings F", confirm with OK Settings Timer Coffee jug Switch off after The machine will turn off automatically to save energy after a programmed period of time (ranging from 15 minutes to 9 hours after the last use). When the "Switch off after" option is set, the machine will turn off automatically after the programmed amount of time. ^ Use < or > to select "Switch off after", confirm with OK.

A display of 1:00, for example, indicates that the machine will turn off after one hour. ^ Tap < or > to set the hours. Confirm with OK. Repeat to set the minutes. The machine will now turn off after the programmed amount of time.

If the automatic rinse feature is turned on, and the machine has been used to prepare a beverage, it will always run a brief rinse cycle before turning off. ^ Select < or > until "Timer" is highlighted, confirm with OK. ^ Use < or > to select "Set", confirm with OK. Three options are now available: Switch on at You can program your machine to turn on automatically at a certain time, for example, at breakfast time. ^ Tap < or > to select "Switch on at", confirm with OK. ^ Tap < or > to set the hours. Confirm with OK. Repeat to set the minutes. The machine will turn on each day at the specified time once you have activated the timer (see "Activate"). If the machine is turned on automatically three times and no beverages were dispensed, the machine will no longer turn on automatically.

The programmed times stay saved and will be activated again when the machine is manually turned on the next time. This safety measure is designed so that the machine does not turn on every day if the setting was not canceled before a longer time of absence, e.g. vacationing. 24 Settings Switch off at A specific time of day can be set to turn the coffee system off.



[You're reading an excerpt. Click here to read official MIELE CVA 4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)
<http://yourpdfguides.com/dref/3353956>

^ Use < or > to select "Switch off at", confirm with OK. ^ Tap < or > to set the hours. Confirm with OK. Repeat to set the minutes. The machine will turn on each day at the specified time when you have activated the timer (see "Activate").

If the automatic rinse feature is turned on, and the machine has been used to prepare a beverage, it will always run a brief rinse cycle before turning off. Activate ^ Use < or > to select "Activate", confirm with OK. The program items "Switch on at" and "Switch off at" are displayed. Activate 8 Switch on at 8 Switch off at Coffee jug (dispensing several servings, one directly after another) With this function, you can dispense up to eight servings of coffee, one immediately after another (max. 1 qt / 1 l).

The brewing process will run automatically for all servings. ^ In the main menu, select item "Settings F", then tap ok. Settings Coffee jug Prog. the amount ^ Tap the right arrow until "Coffee jug" is highlighted, then tap OK. ^ Using the arrows to select the number of servings you wish to be dispensed (3 to 8) and confirm with OK.

^ Place the desired container under the main dispenser and follow the instructions on the display. Each cup of coffee will be individually ground, brewed, and dispensed. The display will report the progress made. You can interrupt the process at any time by tapping the OK key (Stop). ^ When the display reads process completed confirm with OK. ^ Use < or > to select the program item(s) you wish to activate. Tap OK to activate (select the check box) or deactivate (clear the check box) the desired option. ^ Use < or > to select "Accept", confirm with OK. ^ Use < or > to select "Back A", confirm with OK. 25 Settings Amount of coffee The amount of coffee will determine both the strength and the crema of your brewed coffee.

Depending on the type of coffee, the ideal amount ranges from approximately 0.2 ounces and 0.5 ounces (6 g to 14 g) per cup. The higher the value, the stronger the prepared espresso, coffee, latte macchiato, or cappuccino will be. The crema is also influenced by the amount of coffee. If the crema has an even but white/yellow coloring, the ground amount might be too little. If the crema is dark brown to black in color on the one side and almost white on the other side, the amount of coffee might be too much. ^ Using < or > select "Settings F", and confirm with OK. Settings Amount of coffee Pre-brewing Pre-brewing During the pre-brew step, the freshly ground coffee is first moistened with hot water. After a short steeping period, the remaining water is then forced through the moistened coffee at high pressure.

This process produces a much more intense coffee aroma. If the function is turned off, the hot water will be immediately pushed at a high pressure through the ground coffee. You can program normal or long pre-brew or turn the pre-brew function off. The default factory setting for the pre-brew function of your machine is Off (= without). ^ Select "Settings F", and confirm with OK.

Settings Pre-brewing Temperature ^ Tap < or > until "Pre-brewing" is highlighted, confirm with OK. ^ Tap < or > until the desired pre-brew setting is highlighted. ^ Tap OK to save the setting. ^ Tap < or > until "Amount of coffee" is highlighted, confirm with OK. ^ Use < or > to select a beverage, confirm with OK.

^ Using < or > adjust the amount of coffee to "more" or "less". ^ To save the setting, tap OK. 26 Settings Temperature Three temperature settings are available for each coffee beverage and two settings for hot water. Not every coffee type allows high temperatures. Some types react so sensitively that the crema cannot be properly built. ^ Select "Settings F", and confirm with OK. Settings Temperature Automatic rinsing Automatic rinsing It is important to flush out any residual coffee from the lines when starting to use the machine for the day. If the automatic rinse function is activated and the machine is cold, the rinse cycle will begin automatically as soon as the machine is turned on. This will also pre-heat the lines with the hot water used during the rinse cycle. This is indicated by a message in the display.

If a beverage has already been made, the machine will also automatically run a rinse cycle just before turning off. The factory default setting for the automatic rinse function is On. If you do not want the rinse water to collect in the drip tray, always place an empty cup or the small cleaning container underneath the main dispenser. ^ Select "Settings F", confirm with OK. Settings Automatic rinsing Steam system ^ Tap < or > until "Temperature" is highlighted, confirm with OK. ^ Tap < or > until the beverage is highlighted in which you wish to set the temperature for. Confirm with OK. ^ Tap < or > until the desired temperature is highlighted. ^ Tap OK to save the setting. ^ Tap < or > until "Automatic rinsing" is highlighted, confirm with OK.

^ Tap < or > to select "On" or "Off", confirm with OK. It is recommended that you set this program option to "On" to ensure that the rinse cycle will not be forgotten. 27 Settings Steam system This appliance has two heating systems, making it possible for you to prepare milk froth/hot milk and coffee/espresso, one right after the other. If you seldom need milk froth or hot milk, you can turn the steam heating system off to save energy. If you select milk froth or hot milk with the steam heating system turned off, the machine must first heat up.

The steam heating system will remain On until the machine has been turned off completely. ^ Select "Settings F", confirm with OK. Settings Steam system Lighting Lighting: Adjusting the brightness The brightness of the machine lighting can be adjusted. ^ Select "Settings F", confirm with OK. Settings Lighting Info ^ Tap < or > until "Lighting" is highlighted, confirm with OK.

^ Select "Brightness", confirm with OK. ^ Tap < or > to select a lighter or darker setting. ^ Tap OK to save the setting. If you continue to tap < all the way to the left until you can no longer see the small white bars, the lighting will turn off. ^ Tap < or > until "Steam system" is highlighted, confirm with OK. ^ Tap < or > to select "On" or "Off". ^ Tap OK to save the setting. 28 Settings Lighting: Setting the switch-off time Whenever the machine is On, the machine lighting is also On. The lighting turns off automatically when the machine has been idle for 15 minutes. When the machine is turned off, you can program the lighting to remain On and to shut off automatically after a certain amount of time if the machine is not used You can choose a duration from 15 minutes to 6 hours.



[You're reading an excerpt. Click here to read official MIELE CVA](http://yourpdfguides.com/dref/3353956)

[4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)

<http://yourpdfguides.com/dref/3353956>

^ Turn the machine off. ^ With the machine turned off, tap OK. ^ Select "Lighting", confirm with OK. ^ Select "Switch off after", confirm with OK. ^ Use < or > to select a switch-off time, confirm with OK. ^ Select "Brightness" and tap OK ^ Tap the arrow button to increase or decrease the brightness, then tap OK to save the setting (Factory Default: Off). ^ Select "Back" symbol twice to exit the menu. The machine will now automatically turn the lighting off after the programmed amount of time. Info (displaying No. of drinks) The "Info" option allows you to display the number of beverages that have been dispensed from the machine and the number of beverages the machine can still make before it requires descaling.

^ Select "Settings F", confirm with OK. Settings Info Safety ^ Tap < or > until "Info" is highlighted, confirm with OK. ^ Use < or > to select "No. of drinks" or "Portions until descaling", confirm with OK. Under "No.

of drinks", you can display "Total number of coffees" or a breakdown according to each individual coffee beverage, milk froth, milk, and hot water. ^ Tap OK to go back to previous menu. When the machine requires descaling, you will be notified automatically. It is not necessary to check these messages regularly.

29 Settings System lock The coffee system can be locked so that it cannot be used by children or those not familiar with the operating instructions. When the machine is locked, the timer setting "Switch on at" will not work. Activating/Deactivating the System lock ^ Select "Settings F", confirm with OK. Settings Safety Water hardness Water hardness The hardness of the water used in the coffee system must be determined and programmed into the appliance.

The water hardness will determine how frequently the unit must be descaled to maintain the coffee system properly. The machine monitors the volume of water used (including the amount required for producing steam), and will then let you know when a descaling cycle is necessary. To measure the hardness of your water, use the test strip that is included in your installation kit. ^ Use < or > to select "Safety", confirm with OK. ^ Tap < or > until "System lock" is highlighted, confirm with OK. ^ Use < or > to select "On", confirm with OK. As soon as the machine is turned off, it will lock and cannot be turned back on.

A closed padlock X and a message will appear in the display, whenever a button is touched. To deactivate the system lock, follow the same procedure as above, but select "Off". Overriding the system lock ^ Press and hold OK for approx. 3 seconds. The machine is now temporarily unlocked and can be used to prepare beverages. It will lock again as soon as it is turned off. 30 ^ Place the test strip under your kitchen tap for a second and shake off any remaining water. The result is visible in about 1 minute. If the water hardness is greater than 40 gr/gal (40°D), the water must be descaled more often than displayed.

Calcium will build up faster than at a lower water hardness and may damage the machine. Settings You can program four hardness levels on the machine: Level 1 (soft): 0 - 3 gr/gal (0 - 3 °d) Level 2 (moderately hard): 4 - 7 gr/gal (4 - 7 °d) Level 3 (hard): 7 - 15 gr/gal (7 - 14 °d) Level 4 (very hard): 15 - 22 gr/gal (14 - 21 °d) ^ Select "Settings F", confirm with OK. Settings Water hardness Display Display The display contrast and brightness can be adjusted. ^ Select "Settings F", confirm with OK. Settings Display Volume ^ Tap < or > until "Display" is highlighted, confirm with OK. ^ Tap < or > to select "Contrast" or "Brightness", confirm with OK.

@@@The volume of the tone can also be adjusted. @@@@^ Tap < or > to increase or decrease the volume. @@@@The user profiles are deleted. @@@@Not every espresso or cappuccino cup is the same size. @@@@^ Select the beverage type.

^ Press and hold OK until the display reads "Prog. the amount". ^ Tap OK again once the cup is filled to your desire. "Save" appears in the display. @@@@The maximum fill amount for each beverage is then stored. @@@@ Select cappuccino or latte macchiato. @@@@ Tap - until the display reads "Prog. the amount". ^ Tap - again once the cup is filled as desired and "Save" appears in the display. Each time the hot water is prepared the programmed amount will be dispensed.

Setting serving sizes via "Settings" ^ Select "Settings F", confirm with OK. Settings Prog. the amount Amount of coffee ^ Tap < or > until "Prog. the amount" is highlighted, confirm with OK. ^ Use < or > to select the beverage you wish to set a serving size for. ^ Select "Start", confirm with OK. Proceed as you would for programming using OK or - . 36 User profiles If the appliance is used by several people with different preferences, you can save up to 9 individual user profiles. The following settings can be programmed for each user profile: Serving size for coffee beverages and hot water Serving size of milk for beverages with milk Amount of coffee Water temperature Pre-brew See "Setting the serving sizes" and "Settings". User profile q r H I J The following options appear only if you have already created a user profile: Change user profile to change a user profile.

Delete user profile to delete a user profile. Revert: The appliance can be set so that it automatically reverts to the Standard user profile or continues to use the most recently selected user profile set. Selecting a user profile ^ Use < or > to select the user profile you wish to use, confirm with OK. + q n Espresso John r H I J L m C L n m C ^ Tap < or > until "User profile" is highlighted, confirm with OK. You can now either: Select user profile from the profiles already set.

Create user profile to enter a new user profile. To show that a user has been selected, the upper display line shows a large user n symbol. 37 User profiles Creating a user profile ^ Tap < or > until "Create" is highlighted, confirm with OK. Up to 9 user profiles can be created. If you try to create more than 9 user profiles, the message "Memory full" will appear, you will need to delete a profile to create space.

Letters and numbers will now appear in the display. Use < or > to select the desired letters or numbers. A new word will always be capitalized, the appliance will then switch to lower-case letters. ^ Use < or > to select the desired characters. ^ Tap OK to confirm a character. You will see the selected characters in the top line of the display.



[You're reading an excerpt. Click here to read official MIELE CVA 4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)

^ Replace the cover and slide the main dispenser up. ^ Pull the nozzles of the main dispenser out. 46 *Cleaning and care Water tank* Empty the water tank daily and refill before preparing the first drink with fresh, cold tap water. Check if the valve is clean. If the valve has residues on it, the water tank will not connect properly and might leak. Waste unit The display shows a message to empty the waste unit. Clean the waste unit daily. Coffee waste can mold if there is water in the waste unit from the rinse process. There may be water in the waste container from the rinsing process. This is normal. Line the waste unit with a paper towel to make for easier cleaning. ^ Pull the waste unit out. ^ Wash the waste container in the dishwasher or by hand with hot water and liquid dish soap. Dry with a soft cloth.

^ Clean the niche of the waste unit in the machine. ^ Wash the water tank in the dishwasher or by hand with hot water and liquid dish soap. Dry with a soft cloth. ^ Clean the niche of the water tank. ^ Push the waste unit completely into the machine. 47 *Cleaning and care Drip tray* The drip tray contains a sensor which causes the display to show when the tray is full and needs to be emptied. Clean the drip tray daily. Remove the drip tray after the final rinse when no more water runs from the lines. Carefully remove the drip tray from the machine; the water may be very hot and could cause scalding. ^ Open the door and pull the drip tray out.

The drip tray contains a grid to avoid spilling during transport. ^ Push the drip tray with grid along the right edge all way in the machine. ^ Close the door. ^ Wash the drip tray and grid in the dishwasher or by hand with hot water and liquid dish soap, then dry with a soft cloth. Take care that the metal contacts at the back of the drip tray are clean and dry.

If the contacts are soiled or wet the unit cannot detect when the drip tray is full and needs to be emptied. Drip tray cover ^ Remove the drip tray cover and wash it. 48 *Cleaning and care Bean container* The bean container must be cleaned by hand with hot water and liquid dish soap. Do not use a dishwasher. ^ Pull the bean container out and push the lid back.

^ Wash the bean container by hand with hot water and liquid dish soap, then dry with a soft cloth. ^ Push the lid back and reinsert the bean container into the machine. Interior and door ^ Once all movable parts are removed clean the interior with a solution of hot water and liquid dish soap. Dry ground coffee can be vacuumed. Main dispenser connector ^ The lower part of the inner door has a drip tray. Clean the drip tray. A connecting piece between the brew unit and the main dispenser is located on the inside of the door. ^ Clean this connector regularly with a damp cloth without removing the lubricant for the cap. ^ Lubricate the cap once a month with the supplied silicone grease. 49 *Cleaning and care Brew unit* Manually clean the brew unit weekly.

The movable parts are lubricated and the cap will get damaged in the dishwasher. Do not use a dishwasher this will cause damage. ^ Take out the water tank, waste unit and the storage drawer. ^ Rub off any coffee residue from the filters with a sponge. One filter is in the funnel, a, the second is to the left of the funnel, b. ^ Dry the funnel, a, to prevent ground coffee from sticking. ^ Clean the interior and remove coffee residues. Dry coffee grounds can be vacuumed. ^ Press the light colored button on the brew unit handle, a, and turn the handle to the left, b. ^ Press the brew unit catch, c, downwards and pull the brew unit out.

The brew unit is not in the correct position if it is hard to pull out. See "Frequently asked questions". ^ Clean the brew unit under running warm water. Do not use soap. Leave the handle in position or the brew unit cannot be inserted properly.

^ Press the light colored button on the brew unit handle, a, and turn the handle to the right, b, to lock it into place. ^ Push the brew unit in the track straight into the appliance. 50 *Cleaning and care Cleaning/Degreasing the brew unit* Depending on the oil content of the coffee, the brew unit can clog. Clean the brew unit approx. every 200 cups with the enclosed detergent tablets.

They are specially developed for the coffee maker to optimize the degreasing. The cleaning tablets can be purchased from Miele. As a reminder the display shows "Please run cleaning program" after 200 cups and then until the machine is cleaned. The cleaning process takes about 6 minutes. Maintenance q r H I J L n m C ^ Tap < or > until "Maintenance m" is highlighted, confirm with OK. ^ Select "Clean brew unit", confirm with OK. ^ Select "Start", confirm with OK. ^ Follow the instructions in the display. To avoid having to empty the drip tray too frequently, place the small cleaning container beneath the main dispenser. The inside of the machine is also rinsed, therefore you will still have to empty the drip tray during the cleaning process.

51 *Cleaning and care* When the display prompts you to Please drop the cleaning tablet in the ground coffee funnel. Only use a slightly damp sponge when cleaning the controls. Water could penetrate into the electronics and cause damage. The external surfaces of the coffee machine are susceptible to scratching. Scratches on the glass surface could also weaken the glass making it more susceptible to breakages. ^ Remove the storage drawer and open the funnel lid. ^ Drop a cleaning tablet into the funnel. ^ Close the lid, replace the cover, and close the machine door. ^ Follow the instructions in the display. ^ When the display shows Process finished, tap OK.

The brew unit is now degreased, and the machine is ready for use. Glass cleaners may be used to clean the exterior. However do not allow them to sit or "puddle", this can cause damage to the surface. Remove the cleaner promptly. To better maintain your appliance avoid the following: cleaners containing soda, ammonia, thinners, or chlorides cleaners containing descaling agents or lime removers, abrasive cleaners, stainless steel cleaners, If soiling is not removed promptly it could cause the surface of the machine to alter or discolor.

Be sure to remove soiling immediately. ^ Turn off the machine using the On/Off button. ^ The front of the appliance can be cleaned with a sponge and a solution of warm water and non abrasive liquid dish soap. Dry with a soft cloth. caustic (oven) cleaners, scouring pads, steel wool, hard brushes, eraser sponges, metal scrapers.

Wipe any spills from descaling immediately! Exterior 52 *Descaling the appliance* The coffee system must be descaled regularly. The appliance will display a reminder message to descale and will eventually lock if not descaled. The display will show "Please descale the coffee system. Remaining number of servings: 50". This message will now appear after each preparation.



[You're reading an excerpt. Click here to read official MIELE CVA 4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)
<http://yourpdfguides.com/dref/3353956>

^ Tap OK to acknowledge this message. If the counter has elapsed to 0, the appliance will be locked, and the display reads: Descaling program must be carried out. ^ Tap OK to start the descaling cycle immediately. Descaling takes about 20 minutes. If you want to continue at a later point in time, turn the unit off.

The appliance can only be used again once descaling is performed. Only use the enclosed descaling tablets for descaling. They are specially developed for the coffee system to optimize the descaling. The descaling tablets can be purchased from Miele. Other agents may damage the machine and affect the taste of coffee and hot water. The machine could also be damaged. Use the correct proportion of descaling agent in solution to prevent damage to the machine. Use the supplied cleaning containers to protect the appliance front from the descaling agent. Clean up any descaling spills immediately to avoid damage to the appliance front. Thoroughly clean the water tank and the drip tray of descaling residues.

53 Descaling the appliance Descaling Maintenance q r H I J To dissolve the descaling tablets: ^ Remove the water tank and fill it up to the k mark with lukewarm water. (Do not under-fill the water tank, because this will cause the descaling cycle to end prematurely, before completion.) ^ Add 2 descaling tablets to the water and allow them to dissolve completely before closing the water tank and placing it back into the machine. During the descaling cycle, the descaling agent-water solution will run out of the hot water spout and the main dispenser. This will be followed by a pause to allow the solution to dissolve the internal mineral buildup, after which more descaling solution will be released from the spouts.

This process will repeat itself until the cycle is finished. ^ When the display prompts you to Add fresh water to tank, rinse the tank thoroughly with clear water (all traces of descaling residue must be removed) and fill it with clean drinking water up to the k mark. During rinsing, water will run out of the dispensing spouts. Because the inside of the machine is also rinsed out, you must empty the drip tray in the final step. ^ When the display shows Prog.

finished, tap OK. The appliance is now fully descaled and ready for use. L n m C ^ Tap < or > until "Maintenance m" is highlighted, confirm with OK. ^ Select "Descal" confirm with OK or, if the appliance is switched off: tap OK while switched off. ^ Select "Start", tap OK to begin the descaling process. The display prompts the user through the single steps of the descaling process. Follow the prompts. If the descaling is started while the machine is still hot, the appliance will cool down for 10 minutes before the descaling begins. The descaling process cannot be canceled once "OK" is selected. The process now needs to be completed.

This is a safety feature to ensure the process will be completed. It is important for best results and the longevity of the machine. 54 Frequently asked questions ,Repairs to electrical appliances should only be carried out by a suitably qualified person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The light does not illuminate when the appliance is turned on. Possible fault Is the lighting turned off? Solution See "Settings - Lighting". If not, the lighting is defective. Contact Miele. The display remains dark. Possible fault The unit has no power.

Solution The main switch is turned off. The machine is not plugged in. Check that the fuse had not blown or is defective. If the fuse has blown contact Miele's Technical Service Department. The unit suddenly turns off.

Possible fault Is the machine programmed to switch off after a programmed time? Solution The machine goes into standby mode when not used for a programmed time. See "Settings Timer - Switching off after". There could be pebbles within the Call Miele's Technical Service coffee beans. The unit shuts off after Department. 20 secs.

to avoid damage. Is the machine plugged in? Plug in the machine. The light turns off suddenly. The light turns off automatically when the machine has not been used for 15 minutes. See "Settings - Lighting". 55 Frequently asked questions What if the machine does not switch on, even though the "Switch on at" timer setting is activated? Possible fault The System Lock is activated. Solution See "Settings - System Lock". The display messages are difficult to read.

Possible fault Solution The contrast or brightness of the Adjust the display contrast / brightness. displays are too low / high.

See "Settings - Display". No milk or milk froth comes out of the main dispenser. Possible fault The dispenser is clogged. Solution See "Cleaning and Care". The display prompts me to fill or insert the stainless steel milk container even though the container has already been filled and inserted Possible fault The container needs to be cleaned. Solution See "Cleaning and Care". The grinding sounds louder than usual. Possible fault There could be pebbles within the coffee beans. Solution Turn off the unit immediately. Contact the Miele's Tech.

Service if the bean container is not empty. Otherwise fill the container with fresh beans. The coffee/espresso flows too fast into the cup. Possible fault The grind control is set too coarse. Solution Set the grind control slide to a finer grind.

The coffee/espresso flows too slow into the cup. Possible fault The grind control is set too fine. Solution Set the grind control slide to a coarser grind. 56 Frequently asked questions The coffee/espresso is not hot enough. Possible fault Were the supply lines and cup pre-heated? The temperature is set too low.

Solution The smaller the cup, the more important it is to pre-heat. Check on what temperature range the coffee type is set. Check if the brew unit is clogged.

Clean the brew unit. No drink is prepared although the beans were grinded and enough water is in the container. Possible fault Solution Adjust the grind control slide to a The grind control is set to the different position, or the amount of finest or the amount of coffee is coffee more or less. set to the maximum. The process is timed, the process might need so long, there is no time for brewing any more. The door cannot be closed. Possible fault Check if all containers are properly inserted.

The door hinges need to be adjusted. Solution See "Installation Instructions". The steam heating system is turned off but steam can still dispensed. Steam can be dispensed as long as the steam heating system is heated. Once it has cooled, steam can only be dispensed once the steam system has heated. The coffee dispensing is interrupted.



[You're reading an excerpt. Click here to read official MIELE CVA 4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)
<http://yourpdfguides.com/dref/3353956>

Possible fault The water tank is empty. Solution Refill the water tank with fresh cold tap water. You will be asked whether you would like the coffee dispensing to continue after the water tank has been filled. If you do not confirm with "OK" within 5 minutes the coffee preparation will be canceled.

57 Frequently asked questions Instead of coffee only water is dispensed. Possible fault The beans may have gotten stuck. The ground coffee funnel cover was opened and closed and a preparation with ground coffee was selected but no ground coffee was inserted. The coffee system switches automatically back to bean use after preparation. The drip tray is empty but a message to empty it is displayed.

Possible fault Solution Pull the bean container out and push it back in. The metal contacts are soiled or wet. Clean and dry the contacts. Check if the drip tray is inserted. Insert the drip tray as described in correctly. "Cleaning and Care - Drip tray".

Turn the machine off and on again with the main switch. If the message still appears contact Technical Service. The machine does not rinse when turned on although the automatic rinse feature is set to "On". When the machine is still at a temperature of about 140°F (60°C). The machine will not rinse when it is too hot. The water (or milk) dispensing stops when programming the serving size. Possible fault Solution Fill the water tank or milk container. There was not enough water in the tank or milk in the milk container. The before programming the serving dispensed amount will not be saved. size. If the maximum amount is dispensed, the flow stops automatically.

The maximum amount is saved. 58 Frequently asked questions Water is in the waste unit. Possible fault This is not a fault. "Coffee water" is in the waste unit. Possible fault If the grind setting is too coarse, this can result in too much coffee water in the waste unit. Solution Adjust the grind setting and/or amount of coffee. Solution This is residual water from the cleaning process. The descaling process was started accidentally. The descaling process cannot be canceled once it is started. The process needs now to be completed.

This is a safety feature to ensure the process will be completed. It is important for best results and the longevity of the machine. See "Descaling". The machine makes loud noises during descaling. During a descaling cycle, the machine is relatively loud because water is being forced through the lines at high pressure. This is not a fault.

The preheating time is increased, the water flow amount is not correct and the unit performs less? Possible fault The machine needs to be descaled. Solution See "Descaling the appliance". No water flows from the main dispenser. Possible fault Solution The filters in the brew unit are clogged. Rub any residue off the filters with a sponge.

See "Cleaning and Care". The brew unit or waste unit could not be pulled from the machine. Possible fault The brew unit is not in the correct position. The door was opened during grinding or brewing. Solution Close the door. The brew unit automatically gets into the correct position. 59 Frequently asked questions No crema has formed or it is "different". Possible fault Check if the grind setting is too coarse or too fine. Check what temperature range the coffee type is set. If the temperature is too high, there are black areas in the crema.

Some coffee types produce too much crema when the coffee / espresso temperature is set to the maximum and the amount of ground coffee is too much. Solution Adjust the grind setting. Lower the temperature and amount of ground coffee. See "Settings". The coffee is not fresh enough. The coffee is unsuitable for use in this machine. The coffee dispensers are set too high. The message "Push water container in as far as it will go" appears Possible fault No water is dispensed. Solution The water tank is not inserted properly. Take it out and reinsert correctly.

The water tank was not filled correctly during the descaling process. Fill the water tank up to the correct mark. If the message still appears contact Technical Service. Too much crema has formed and is above the coffee dispensers. Possible fault Solution Some coffee types produce too much Lower the temperature and amount of crema when the coffee / espresso coffee.

temperature is set to the maximum and the amount of ground coffee is too much. The grind control slide will not move. Close the unit and prepare a coffee/espresso. The grind grade can now be reset. 60 Frequently asked questions The storage drawer cannot be pushed in properly. Close the lid of the ground coffee funnel. The door is hard to open and close. Adjust the door with the door hinges. See "Installation - Adjusting the door hinges". Lubricate the cap of the connecting piece with the supplied silicone grease. The message "Check brew unit" appears on the display? Possible fault The brew unit is clogged. Solution Follow the display prompts. Clean the brew unit (see "Cleaning and care" - "Brew unit"). Set the amount of ground coffee and the grinder setting to the medium settings, also adjust these settings in the user profiles. See the respective chapters in this manual.

Solution The message "Fault - 28" appears on the display? Possible fault If too much ground coffee passes Tap the button next to OK. through the coffee chute the machine is The machine is again ready for use. unable to process it so it can be emptied into the waste container. One of the messages "Fault - 1" to "Fault - 4" or "Fault - 80" to "Fault - 83" appears in the display. Possible fault Use the On/Off button to switch off the appliance and wait approx. 1 hour before you switch it back on. Possible fault Switch off the appliance, wait a short while, then switch it back on. Solution If the message still appears, contact Technical Service. One of the messages "Fault - 74" or "Fault 77" appears in the display. Solution If the message still appears, contact Customer Service.

61 Frequently asked questions The message "Fault - 73" appears in the display. The brew unit cannot reset to the correct position. ^ Take out and clean the brew unit. See "Cleaning and Care - Brew unit". ^ Push the coffee ejector of the brew unit into the correct position.

^ Set the brew unit aside and insert the waste unit and the water tank. ^ Close the door. The brew unit motor will automatically move to the correct position. @@@@ Close the door. @@@@ Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance.

Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele.



[You're reading an excerpt. Click here to read official MIELE CVA 4062 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353956)
<http://yourpdfguides.com/dref/3353956>