




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE CVA 4070 COFFEE SYSTEM. You'll find the answers to all your questions on the MIELE CVA 4070 COFFEE SYSTEM in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE CVA 4070 COFFEE SYSTEM
User guide MIELE CVA 4070 COFFEE SYSTEM
Operating instructions MIELE CVA 4070 COFFEE SYSTEM
Instructions for use MIELE CVA 4070 COFFEE SYSTEM
Instruction manual MIELE CVA 4070 COFFEE SYSTEM

Miele

Operating and Installation Instructions

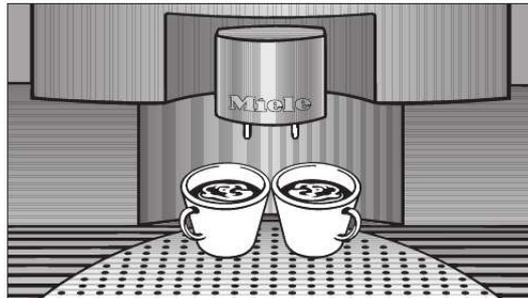

Coffee System
CVA 4070

To prevent accidents
and machine damage
read these instructions
before
installation or use.

en - US, CA

M.-Nr. 07 194 170



[You're reading an excerpt. Click here to read official MIELE CVA 4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)
<http://yourpdfguides.com/dref/3353959>

Manual abstract:

.....
.....
.....
.....

.. 4 Guide to the machine

.....
.....
.....

... 7 First steps to use ..

.....
.....
.....
.....
.....

..... 9 Filling water, beans or ground coffee ..

.....
.....
.....

10 Filling the water tank

.....
.....

..... 10 Filling the beans container. ...

.....
.....
.....
.....

11 Filling ground coffee

.....
.....

..... 11 Making coffee ...

.....
.....
.....
.....

..... 12 Turning on .

.....
.....
.....
.....

.....
.... 12 Prewarming cups .

.....
.....

.....
.....

.....
.....

.... 13 Adjust the dispenser height

.....
.....
.....

.....
.....

. 13 Espresso and coffee made from coffee beans

.....

... 14 Espresso and coffee made from ground coffee . .

.....

.....
.....

..... 15 Cappuccino and milk froth .

.....
.....
.....

.....
.....

. 16 Adjusting the coffee grinder

.....
.....
.....
.....

. 18 Settings

.....
.....
.....

.....
.....

.....

..... 19 Language . .

.....
.....
.....
.....

.....
.....

.... 19 Clock

.....
.....
.....
.....

.....
.....

.....
... 20 *Timer*

.....
.....
.....
.....

.....
.....
.....

.. 21 *Grind amount*

.....
.....
.....
.....

.....
.....

24 *Pre-brewing*

.....
.....
.....
.....

..... 24 *Temperature* .

.....
.....
.....
.....
.....
.....
.....

.. 25 *Rinse automatic*

.....
.....
.....
.....
.....

... 25 *Steam system*

.....
.....
.....
.....
.....

26 *Lighting*

.....
.....
.....
.....

.. 26 *Total no. coffees* ..

.....
.....

.....
.....
.....
.....

... 27 System Lock

.....
.....
.....

.....
.....
.....

..... 27 Water hardness

.....
.....
.....
.....

.....
.....

.. 28 User profiles

.....
.....
.....
.....

..... 29 Display

.....
.....
.....
.....
.....

..... 31 Tone options

.....
.....
.....
.....
.....
.....

.. 31 Reset

.....
.....
.....
.....
.....
.....

. 32 Setting the serving sizes

.....
.....
.....
.....

.... 33 2 Contents Cleaning and Care .
.....
.....
.....
.....
.....
.. 34 Descaling the appliance
.....
.....
.....
.....
.....
44 Frequently asked questions
.....
.....
.....
.....
..... 46 After sales service
.....
.....
.....
.....
.....
..... 53 Installation instructions ..
.....
.....
.....
.....
..... 55 Caring for the environment
.....
.....
.....
.....
..... 56 Electrical connection ...
.....
.....
.....
.....
.....
..... 57 Installation
.....
.....
.....
.....
.....
..... 58 Adjusting the door hinges ...
.....
.....
.....
.....

.....

@@@This appliance complies with current safety requirements. @@This appliance is for household use only, to prepare espresso, cappuccino and coffee. Do not use this appliance other than for its intended use. Any other use could be dangerous. The manufacturer cannot be held responsible for damage caused by improper use of the appliance. ~ Be certain your appliance is properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. The manufacturer cannot be held responsible for damages caused by the lack, or inadequacy, of an effective grounding system.

connect the appliance to electricity. Extension cords do not guarantee the required safety of the appliance (danger of overheating). disconnect the power supply by either removing the fuse, "tripping" the circuit breaker or unplugging the unit. in accordance with the provided installation instructions. ~ Do not use an extension cord to ~ Before service or maintenance Electrical safety ~ Before connecting the appliance to the electrical supply make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply.

If in doubt, consult a qualified technician. ~ The appliance must be properly installed before operation to ensure that no electrical components are accessible.

Ensure that power is not supplied to the appliance while installation work, repairs or maintenance is performed. ~ Install or locate this appliance only 4
IMPORTANT SAFETY INSTRUCTIONS ~ Installation work and repairs must only be performed by a trained technician in accordance with national and local safety regulations. Repairs and other work by unauthorized persons could be dangerous and may void the warranty.

~ Only use Miele original spare parts. Only then can the manufacturer guarantee the safety of this machine. ~ Never open the outer casing of the appliance.

Tampering with electrical connections or components and mechanical parts is dangerous and may cause machine damage. combination with other appliances, a protective base should be installed between the appliance and the unit. installed in the display cabinet. Use The coffee system must be maintained daily to prevent the growth of harmful bacteria and mold. Please read the "Cleaning and care" section of this booklet. All parts are dishwasher safe except the brew unit and bean container. Caution! Do not look directly or with an optical instrument into the lighting - laser radiation.

~ If the machine is installed in Caution! Risk of burns when dispensing hot beverages, they are extremely hot. ~ Do not install or use outdoors even if ~ Persons which lack physical, ~ To protect against fire, electric shock and injury to persons do not submerge the cord or plugs in water or other liquids. ~ Do not let the cord hang over the edge of a table or counter, or touch hot surfaces. ~ Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Miele. ~ Always attach the cord to the appliance first, then plug it into the wall outlet. To disconnect, turn the machine off, then remove the plug from the wall outlet. sensory or mental abilities or experience with the machine should not use it without supervision or instruction by a responsible person. when any appliance is used by or near children. handles or knobs.

~ Close supervision is necessary ~ Do not touch hot surfaces. Use ~ Rinse the lines and the froth dispenser, and clean the unit before the first use. system to cool before cleaning or putting on and taking off parts. Turn the machine off at the main switch when not in use and before cleaning. ~ To avoid injuries allow the coffee 5 **IMPORTANT SAFETY INSTRUCTIONS** ~ Only fill the water tank with cold, fresh tap water.



[You're reading an excerpt. Click here to read official MIELE CVA 4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)
<http://yourpdfguides.com/dref/3353959>

Warm or hot water, or any other liquids may damage the machine. The water should be changed daily to prevent bacteria or mold growth. ~ Do not use mineral water. Mineral water leads to heavy calcium buildup in the machine that can damage the unit. ~ Do not put anything but coffee beans into the beans container.

Do not put ground coffee in the beans container, it will damage the grinding unit. ~ Do not fill anything but ground coffee or a cleaning tablet (for the brew unit) in the funnel for ground coffee, otherwise it will get damaged. ~ Sugar can damage the appliance! Caramelized or otherwise pre-treated coffee beans or other sugar containing beverages must not be put in the machine. ~ Never place a cup with an alcohol-coffee mixture underneath the coffee dispenser. Plastic parts of the unit could catch fire! could cause scalding. These functions must be used carefully. Never hold any parts of the body under the steam nozzle or the hot water dispenser. The machine must never be used to clean objects. ~ Do not use the machine when the froth dispenser is removed. Danger of scalding with hot steam! the appliance.

Pressurized steam could damage electrical components and cause a short circuit. regularly with the supplied descaling tablets. In areas with very hard water the machine may need to be descaled more often. The manufacturer cannot be held responsible for damages resulting from insufficient descaling. provided by Miele. Take care to use the correct mixture of water and descaler, otherwise it may cause damage. coffee, the brew unit may clog. Clean the brew unit every 200 cups with a cleaning tablet. The display shows a respective request. trash can, not in the sink.

The sink could get clogged. ~ Never use a steam cleaner to clean ~ The appliance must be descaled ~ Only use the descaling tablets ~ Depending on the fat content of the ~ Dispose of the coffee waste in a ~ Do not hang, lean, sit or place heavy items on the door. The machine could be damaged. ~ The hot water and steam dispensed ~ The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons. SAVE THESE INSTRUCTIONS 6 Guide to the machine Front view a Touch controls (lowest control "On/Off" button) b Display c Touch controls (lowest control "Clear" button) d Top lighting e Door grip f Hot water spout g Bottom lighting h Plastic drip tray i Metal drip tray j Coffee dispenser (height adjustable) k Froth dispenser (removable for better cleaning) l Intake hose (removable together with dispenser) 7 Guide to the machine Interior view a Main switch b Cover for ground coffee funnel c Funnel for ground coffee d Grind control lever e Coffee bean container f Drip tray with no-spill grid for transport g Water tank h Brew unit i Waste unit 8 First steps to use Touch controls Select a touch control with your fingertip to use the machine.

Turning on ^ Select "On/Off" to turn the coffee system on. The display shows the clock. See "Settings - Clock - Setting the time of day" to set the time. During the very first use, you will be prompted to select a language. ^ Select the desired language touch control and then "OK&q.

^ Select the "On/Off" touch control. A reminder to fill the water tank with fresh water is displayed. Please fill and reinsert the water tank i Then the upper line in the display shows: Preheating + DESCALING + USER PROFILE: STANDARD + SETTINGS F ... If "Rinse automatic" is set to "On" (default), the machine rinses after the heating phase and the main menu is displayed. 12 Making coffee Prewarming cups All beverages should be made in a warm cup, to develop the aroma. The smaller the amount of coffee or espresso and the thicker the cups, the more important it is to prewarm the cups. ^ Set the cup under the hot water spout. + ESPRESSO + COFFEE + CAPPUCCINO HOT WATER ~ MILK FROTH ~ more ~ Adjust the dispenser height Depending on the cup height, the coffee dispensers can be adjusted so that the coffee and espresso have a shorter distance to the cup, do not cool and have a better crema.

^ Select "Hot water" from the main menu. ^ Hot water is dispensed. Select "Stop" to stop the flow. ^ Let the hot water sit for a moment to prewarm the cup, then empty the cup. ^ Pull the coffee dispenser slowly up or down. 13 Making coffee Espresso and coffee made from coffee beans Preparing two cups at the same time ^ Set a cup under the coffee dispenser. The drink is dispensed through both dispensers at the same time. ^ Select "Espresso" or "Coffee". The machine grinds the beans and pre-brews the coffee (if "On" is selected under "Pre-brewing"). The selected beverage is dispensed.

Do not open the door during brewing. The machine will be damaged. Canceling ^ Select "Stop" to cancel the process. The portion sizes for espresso, coffee and cappuccino can be set individually. See "Setting the serving sizes".

^ Set a cup under each coffee dispenser. ^ Select "Espresso" or "Coffee". ^ Select "2 portions" when displayed. The coffee system makes two portions of espresso or coffee with a few seconds in between. Keep the cups under the dispenser until the main menu shows in the display.

14 Making coffee Espresso and coffee made from ground coffee After filling the funnel with ground coffee (see "Filling water, beans or ground coffee - Filling ground coffee"), the display shows: Did you fill ground coffee and do you want to prepare it? Yes ~ Preparing two cups at the same time When using ground coffee, only one portion at a time can be prepared. The unit uses the whole portion of ground coffee which was filled in the funnel to prepare one drink. i + No

^ Select "Yes". Select "No" if no ground coffee is filled in the funnel. Otherwise the coffee system assumes that ground coffee is in the machine and dispenses only water next time coffee is made. ^ Set a cup under the coffee dispenser. The drink is dispensed through both dispensers at the same time. ^ Select "Espresso" or "Coffee". The coffee system brews the espresso or coffee and the drink is dispensed. Do not open the door during the brewing process.

It will damage the machine. The unit will switch automatically back to brewing with beans after preparation. Canceling ^ Select "Stop" to cancel the process. 15 Making coffee Cappuccino and milk froth When using for the first time or using after descaling The lines were completely drained before the unit left the factory. They will also be drained when the machine is descaled. Before preparing cappuccino or froth, the lines must be filled with water. ^ Set a cup under the cappuccino dispenser. ^ Select "Milk froth". The intake hose takes in water from the tank and fills the lines with water.



[You're reading an excerpt. Click here to read official MIELE CVA 4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)
<http://yourpdfguides.com/dref/3353959>

A small amount of water runs from the froth dispenser.

Prompts to clean the froth dispenser appear in the display. ^ Confirm by selecting "OK". ^ Once the machine stops, select "Milk froth" again. The froth dispenser dispenses steam and the lines are filled with water. ^ Select "Clear" to get back to the main menu.

The coffee system is ready to use. 16 Making coffee Cappuccino To prepare a cappuccino you need a large ceramic or porcelain cup and a small mug (supplied) of milk. The best milk froth is achieved with cold milk. Only one cup of cappuccino can be prepared at a time because of the milk frothing process.

Milk froth If you need additional milk froth, prepare cold skim milk in a stainless steel mug which narrows towards the top.

^ Set the supplied glass mug with milk under the intake hose and the stainless steel mug under the froth dispenser. ^ Select "Milk froth". The milk is frothed into the stainless steel mug. ^ Select "Stop" to cancel the milk frothing. After preparing milk froth and cappuccino Clean the froth dispenser and intake hose immediately after use. If the milk is allowed to dry, the parts may get clogged and difficult to clean. See "Cleaning and Care". ^ Set the mug of milk under the intake hose and the cup under the froth dispenser. ^ Select "Cappuccino". The milk is frothed into the cup.

At the same time the beans are ground. Select "Stop" to cancel the milk frothing. ^ Once the milk is frothed, set the cappuccino cup under both dispensers and select "OK". The cappuccino will be prepared. ^ Select "Stop" when enough espresso has been prepared. 17 Adjusting the coffee grinder The finer the coffee beans are ground determines the strength of the coffee and the quality of the crema. To adjust the grinder setting To prevent machine damage adjust the coffee grinder one notch at a time and let the beans grind before adjusting another notch. Otherwise the machine will be damaged. The grinder should be adjusted: If the espresso flows too quickly into the cup, the pressure cannot be built up because the beans have been ground too coarsely. The grinder should be adjusted to a finer setting.

If the espresso only trickles into the cup, the beans have been ground too fine and the coffee will be bitter. The grinder should be adjusted to a coarser setting. If the crema is evenly colored but pale, the ground coffee is too coarse. If the crema is very dark brown on one side, graduating almost to white on the other, the ground coffee is too fine. ^ Push the slide control to the left for a finer grind or to the right for a coarser grind.

You should be able to feel the notches when moving the slide control. If the slide control will not move: ^ Close the machine and dispense a cup of coffee. Then try to move the slide control again. 18 Settings The coffee system can be customized to suit individual preferences. Language To show the displays in the desired language, select the language before the first use.

Preheating + DESCALING + USER PROFILES: STANDARD + SETTINGS F ... ^ Select "Settings" from the main menu during the pre-heating phase or, + back + CARE ... + USER PROFILES SETTINGS F ... ~ ^ in the main menu.

SETTINGS + LANGUAGE F ... + CLOCK + TIMER ... GRIND AMOUNT ... ~ PRE-BREWING ~ more ~ ^ Select "Language".

LANGUAGE english + english + deutsch + español français ~ more ~ OK ~ ^ Select the desired language. To see more language options, select "more". The language options are: English, German, Español, Français, Italiano, Polski and Português. ^ Select "OK" to save the selection. All displays are shown in the selected language.

^ To go back to the main menu, select "Clear". 19 Settings Clock + back + CARE ... + USER PROFILES SETTINGS F .

.. ~ Clock display size The size of the clock display can be adjusted. The options are "normal" or "large". ^ Select "Size". The selected size is highlighted in the display. ^ Select "Size" until the desired size is highlighted. ^ Select "OK" to save the selection. 12 or 24 hour clock ^ Select "Settings". SETTINGS + LANGUAGE F .

.. + CLOCK + TIMER ... GRIND AMOUNT ... ~ PRE-BREWING ~ more ~ ^ Select "Clock". Setting the time of day ^ Select "Enter Time".

^ Select "+" or "-" with the right touch controls to select the hours. ^ Set the minutes by selecting "Minutes". ^ Select "+" or "-" with the right touch controls to select the minutes. ^ Select "OK". The time of day is saved.

The clock display can be set to the 12 or 24 hour clock. ^ Select the respective touch control. The selected display is highlighted. ^ Select "OK" to save the selection. Clock display on/off The clock can be displayed or turned off.

If the display is turned on, the time of day is displayed when the machine is turned off. If the option is set to off, the display turns off after 60 seconds. ^ Select "Clock display". The selected display is highlighted. ^ Select "OK" to save the selection. 20 Settings Timer Setting a timer + back + CARE ... + USER PROFILES SETTINGS F ..

. ~ Turn on at A specific time of day can be set to turn the machine on, e.g. for breakfast. ^ Select "Turning on at". ^ Set the hours to when the appliance should turn on by selecting "+" or ""'. ^ Switch to "Minutes" and repeat. ^ Select "OK". The machine will turn on every day at the selected time. If the "Rinse" function was set to "On", the lines will be rinsed when the machine is turned on.

If the machine is turned on automatically three times and no beverages were dispensed, the machine will no longer turn on automatically. The programmed times stay saved and will be activated again when the machine is manually turned on the next time. This safety measure is designed so that the machine does not turn on every day if the setting was not canceled before a longer time of absence, e.g. vacationing.

GRIND AMOUNT ... ~ PRE-BREWING ~ more ~ ^ Select "Settings". SETTINGS + LANGUAGE F .

.. + CLOCK + TIMER ... ^ Select "Timer". ^ Select "Setting". 21 Settings Turn off after The machine will turn off automatically to save energy after a programmed period of time. Time periods between 15 minutes and 6 hours can be selected. If the machine is not used after dispensing beverages, it will turn off after the selected time.

^ Select "Turning off after". For example a 0:15 display means that the unit will turn off after 15 minutes of no use. ^ Set the hour when the appliance should turn off by selecting "+" or ""'. ^ Switch to "Minutes" and repeat. ^ Select "OK" to save the selection. The machine will turn off after the desired time.



[You're reading an excerpt. Click here to read official MIELE CVA](http://yourpdfguides.com/dref/3353959)

[4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)

<http://yourpdfguides.com/dref/3353959>

If rinsing is set to "On" and a beverage was already dispensed, the lines will be automatically rinsed before turning off. Turn off at A specific time of day can be set to turn the coffee system off. ^ Select "Turning off at". ^ Set the hour when the appliance should turn on by selecting "+" or "".

^ Switch to "Minutes" and repeat. ^ Select "OK" to save the selection. The machine will turn off at the selected time. ^ Select "Clear" until the display shows the desired menu. If rinsing is set to "On" and a beverage was already dispensed, the lines will be automatically rinsed before turning off.

22 Settings Activating a timer + back + CARE ... + USER PROFILES SETTINGS ~ The timer function "Turning on at" or "Turning off at" can be activated or deactivated. ^ Select "Activate".

^ Select "On" to activate the desired function. ^ Select "Settings". SETTINGS + LANGUAGE F ... + CLOCK + TIMER ... GRIND AMOUNT ..

~ PRE-BREWING ~ more ~ Select "Off" to deactivate the desired function. The selected times in the function will stay stored in the memory. ^ Select "OK" to confirm the setting. ^ Select "Timer". 23 Settings Grind amount The grind amount can be set, depending on the coffee type, between 0.2 ounces and 0.5 ounces (6 - 14 grams). The more the coffee is ground the stronger the espresso, coffee or cappuccino will be. The crema is also influenced by the grind amount. If the crema has an even but white/yellow coloring, the grind amount might be too little. If the crema is dark brown to black in color on the one side and almost white on the other side, the grind amount might be too much. ^ Select the User profile, for which you would like to set the grind amount. ^ Select "Settings". SETTINGS + LANGUAGE F .

.. + CLOCK + TIMER ...

GRIND AMOUNT ... ~ PRE-BREWING ~ more ~ + CLOCK + TIMER ... Pre-brewing During pre-brewing a small amount of water is released onto the ground coffee. After a short time the remaining water is pushed through the ground coffee at a high pressure. If the function is turned off, the hot water will be immediately pushed at a high pressure through the ground coffee. Pre-brewing is set to off by default.

^ Select the User profile, for which you would like to set the pre-brewing. + back + CARE ... + USER PROFILES SETTINGS J... ~ ^ Select "Settings". SETTINGS + LANGUAGE F ..

. GRIND AMOUNT ... ~ PRE-BREWING ~ more ~ ^ Select "Pre-brewing".

PRE-BREWING + Long + Normal + Without OK ~ Normal ^ Select "Grind amount". The grind amount can be set to individual preferences for espresso, coffee and cappuccino. ^ Select the desired beverage. ^ Select the center left or right touch control to set the grind amount to more or less. ^ Select "OK" to save the setting in the User profile.

^ Select "Clear" until the display shows the desired menu. 24 The second line shows the currently selected pre-brewing option. ^ Set the desired option and select "OK" to save the setting. Settings Temperature Five temperatures are available for each beverage, three for hot water. Maximum is the highest temperature, minimum the lowest. Not every coffee type allows high temperatures. Some types react so sensitively that the crema cannot be properly built. ^ Select the User profile, for which you would like to set the temperature. ^ Select "Settings" and then "more". SETTINGS + back + TEMPERATURE + RINSE AUTOMATIC STEAM SYSTEM ~ LIGHTING .

.. ~ more ~ Rinse automatic It is important to flush out any residual coffee from the lines when starting to use the machine for the day. If "Rinse Automatic" is set to "on", the rinsing starts automatically once the machine is turned on and still cold. The lines are rinsed with hot water and in return prewarmed. A message shows in the display. The machine will also run an automatic rinse, before it switches off, if it has been used to prepare a drink. The rinse automatic is set to on by default. To turn rinse automatic off/on ^ Select "Settings" and then "more". SETTINGS + back + TEMPERATURE + RINSE AUTOMATIC STEAM SYSTEM ~ LIGHTING .

.. ~ more ~ ^ Select "Temperature". The temperature can be set individually for espresso, coffee, cappuccino and hot water. ^ Select the desired beverage. ^ Each beverage shows the currently selected temperature. ^ Select the respective touch control until the desired temperature is highlighted. ^ Select "OK". ^ Select "Rinse automatic". RINSE AUTOMATIC On + Off + On OK ~ The second line shows if the rinse automatic is turned on or off.

^ Select "On" or "Off" and then "OK" to save the setting. It is recommended to set this option to "On" so that the rinse process cannot be forgotten. 25 Settings Steam system The appliance has two heating systems. They allow for independent preparation of froth/cappuccino or espresso/coffee. The second heating system can be turned off to save energy during the heating phase e.g. if froth is not prepared very often. When the steam system is turned off and froth or cappuccino is selected, the unit must heat up first to produce steam. As long as the coffee system was not completely turned off, the steam system is on. The steam system is turned on by default.

To turn the steam system off ^ Select "Settings". ^ Select "Steam system". The second line shows if the steam system is turned on or off. ^ Select "On" or "Off" and then "OK" to save the setting. Lighting Lighting sets the type of light used when the appliance is turned on. The lighting can be turned on/off automatically or dimmed to the desired brightness. The dimming functions can be set independently for the upper or lower lighting. ,Caution! Do not look directly or with an optical instrument into the lighting. Laser! To change the lighting ^ Select "Settings" and then "more". ^ Select "Lighting".

^ Select "On during use" or "Dimming". On during use On: The lighting turns on and off when the unit is turned on and off. Off: The lighting stays turned off. Dimming The brightness of the upper and lower lighting can be set independently of each other. ^ Select "Top" or "Bottom".

^ Set the brightness by selecting the center touch control to the left or right. ^ Select "OK" to save the selection. ^ Select "Clear" to get back to "Settings". 26 Settings Total no. coffees ^ Select "Total no. coffees" to check the number of previously dispensed espresso, coffee and cappuccino. After a few seconds the display switches back to the "Settings" menu or touch "OK". System Lock The coffee system can be locked so that it cannot be used by children or those not familiar with the operating instructions.



[You're reading an excerpt. Click here to read official MIELE CVA 4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)
<http://yourpdfguides.com/dref/3353959>

To activate the System Lock, it must be set in the settings. ^ Select "Settings" and then select "more" twice. ^ Select "System Lock". The second line shows if the System Lock is currently activated or not. ^ Select "On" and confirm with "OK". If "Off" is selected, the unit cannot be locked (safety measure). ^ Turn the appliance off with the "On/Off" touch control.

^ Select the touch control next to W. SYSTEM LOCK Off + Off + On OK ~ ^ Select "On" and then "OK". The appliance is now locked and will not operate. The display shows a locked padlock X. Unlocking the coffee system ^ Select the X symbol. ^ Select "Off" and then "OK". The appliance is now unlocked and ready for use. 27 Settings Water hardness The hardness of the water used in the coffee system must be determined and programmed into the appliance. The water hardness will determine how frequently the unit must be descaled to maintain the coffee system properly. The machine monitors the volume of water passing through it in conjunction with the hardness of the water and will indicate when descaling is necessary.

Your local water authority can tell you the hardness of your tap water or you can measure it yourself using the enclosed test strip. To set the correct water hardness: + back + CARE ... + USER PROFILES SETTINGS J.

.. ~ ^ Select "Settings" and then "more" twice. ^ Select "Water hardness". ^ Select the center touch control to set the water hardness harder (right) or softer (left).

@@The result is visible in about 1 minute. @@@@^ Select "User profiles". @@The "Standard" profile has standard settings. ^ Select "Creating". ^ Select the center left or right touch control to select a letter. ^ Touch "Select". ^ Repeat the step until the desired name is spelled out. To delete a letter: ^ Select "Backspace". The last letter will be deleted. To save a name: ^ Select "OK".

The display shows the typed name. @@@@^ Select "Clear" to go back to the previous screen. @@^ Select the touch control next to the name to be deleted.

@@The selected name will be deleted from the list. @@^ Select "Change". @@@@^ Select "OK". @@@@~ RESET ~ ^ Select "Display".

@@The higher the number the higher the contrast or brightness. @@@@If the keypad tones are turned on, the volume can be adjusted. The higher the number the louder the tone.

^ Confirm the selection with "OK". @@@@To ensure the machine uses exactly the amount of water to suit your taste and your cups, there is a choice of two serving sizes for espresso/coffee. The fill height can be programmed. Espresso serving size approx. 30 - 125 ml.

Coffee serving size approx. 30 - 250 ml. Hot water serving size approx. 30 - 250 ml. ^ Set the desired cup size under the coffee dispenser.

^ Select the drink you would like to program. Press and hold the touch control until "Serving setting" is displayed under the drink type. ^ Release the touch control. ^ Select "OK" once the cup is filled to your desire. Cappuccino is a combination of milk froth and espresso. When preparing milk froth the froth-time can be individually set. The amount of espresso can be set to approx. 30 - 125 ml. ^ Set the desired cup size under the froth dispenser first. ^ To set the amount of froth, press and hold "Cappuccino" until the display shows "Serving setting".

^ Select "OK" once steam and froth are dispensed to your desire. The froth time has been set. ^ You will then be prompted to move the coffee cup from under the froth dispenser to the coffee dispenser. ^ Press and hold "OK" until the display shows "Serving setting". ^ Release the touch control. ^ Select "OK" once the cup is filled to your desire. The programmed amount will be dispensed every time the drink is made. The water flow stops automatically when it reaches the maximum amount possible. The maximum filling quantity will then be saved for the drink. 33 Cleaning and Care Allow the coffee system to cool before cleaning.

Danger of burns! Do not clean the unit with a steam cleaner. Never use cleaners containing chlorides, sand, soda or scouring agents. These will damage the surface. To avoid mold of coffee waste, clean the unit regularly. All parts can be cleaned in the dishwasher, except the brew unit and the bean container.

When the parts are cleaned in the dishwasher they might get discolored by food residues such as tomatoes. + back + CARE ... + USER PROFILES SETTINGS J.

.. ~ ^ In the main menu touch "more" until "Care" shows. Select "Care". ^ Select "System rinse". ^ Select "OK". Hot water will flow through and clean the brew unit, hot water and coffee dispensers. ^ When finished select "OK", then "Clear" to go back to the main menu. Rinse If you do not wish to rinse the lines automatically, they have to be flushed manually. Rinse them twice daily, once before using the machine and before turning it off for the day.

34 Cleaning and Care Water tank Empty the water tank daily and refill before preparing the first drink with fresh, cold tap water. Check if the valve is clean. If the valve has residues on it, the water tank will not connect properly and might leak. Waste unit The display shows a message to empty the waste unit. Clean the waste unit daily. Coffee waste can mold if there is water in the waste unit from the rinse process. Line the waste unit with a paper towel to make for easier cleaning. ^ Pull the waste unit out. ^ Wash the waste container in the dishwasher or by hand with hot water and liquid dish soap and dry with a soft cloth. ^ Clean the niche of the waste unit in the machine.

^ Push the waste unit completely into the machine. ^ Clean the niche of the water tank. 35 Cleaning and Care Drip tray The drip tray contains a sensor which causes the display to show when the tray is full and needs to be emptied. Clean the drip tray daily. Remove the drip tray after the final rinse when no more water runs from the lines.

^ Open the door and pull the drip tray out. The drip tray contains a grid to avoid spilling during transport. ^ Wash the drip tray in the dishwasher or by hand with hot water and liquid dish soap, then dry with a soft cloth. Take care that the metal contacts at the back of the drip tray are clean and dry. If the contacts are soiled or wet the unit cannot detect when the drip tray is full and needs to be emptied.

^ Push the drip tray with grid along the right edge all way in the machine. ^ Close the door. 36 Cleaning and Care Drip catch with metal insert Bean container The bean container must be cleaned by hand with hot water and liquid dish soap. ^ Pull the bean container out and push the lid back. ^ Wash the bean container by hand with hot water and liquid dish soap, then dry with a soft cloth.



[You're reading an excerpt. Click here to read official MIELE CVA 4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)
<http://yourpdfguides.com/dref/3353959>

^ Take out and clean the drip catch and metal plate. ^ Push the lid back and reinsert the bean container into the machine. 37 Cleaning and Care Coffee dispenser connector Interior and door ^ Once all movable parts are removed clean the interior with a solution of hot water and liquid dish soap. Dry ground coffee can be vacuumed. A connector between the brew unit and coffee dispenser is located on the inner door.

^ Gently clean the connector regularly with a damp cloth without removing the lubricant for the gasket. ^ Lubricate the gasket once a month with the supplied silicone grease. ^ The lower part of the inner door has a drip tray. Clean the drip tray. 38 Cleaning and Care Brew unit Manually clean the brew unit weekly.

The movable parts are lubricated and the gaskets will get damaged in the dishwasher. ^ Take out the water tank, waste unit and the cover for the ground coffee funnel. ^ Rub off any coffee residue from the filters with a sponge. One filter is in the funnel, a, the second is to the left of the funnel, b. ^ Dry the funnel, a, to prevent ground coffee from sticking.

^ Clean the interior and remove coffee residues. ^ Press the light colored button on the brew unit handle, a, and turn the handle to the left, b. ^ Press the brew unit catch, c, downwards and pull the brew unit out. The brew unit is not in the correct position if it is hard to pull out. See "Frequently asked questions".

^ Clean the brew unit under running warm water. Do not use soap. Leave the handle in position or the brew unit cannot be inserted properly. Dry coffee grounds can be vacuumed. ^ Push the brew unit in the track straight into the appliance.

^ Press the light colored button on the brew unit handle, a, and turn the handle to the right, b. 39 Cleaning and Care Cleaning/Degreasing the brew unit Depending on the oil content of the coffee, the brew unit can clog. Clean the brew unit approx. every 200 cups with the enclosed detergent tablets. They are specially developed for the coffee maker to optimize the degreasing. The cleaning tablets can be purchased from Miele. As a reminder the display shows "Cleaning must be started" after 200 cups and then until the machine is cleaned. The cleaning process takes about 6 minutes. ^ Select "Care". ^ Select "Cleaning" and then "OK".

The display guides you through the cleaning process. Please follow the single steps. ^ Insert the cleaning tablet in the funnel. ^ Close the lid, reinsert the cover and close the door. ^ Select "OK". Follow the display messages. When the display shows: Process finished. Please confirm. The brew unit is cleaned and rinsed. ^ Select "OK" and then "Clear" to go back to the main menu.

^ Set a 1 quart container under the coffee dispenser. The interior is also rinsed, therefore the drip tray must be emptied. When the display shows: Please drop the cleaning tablet in the funnel for ground coffee ^ Take out the funnel cover and open the funnel lid. 40 Cleaning and Care Froth dispenser/Intake hose Clean the froth dispenser after each use, otherwise it may become blocked with dried milk and hard to clean. Rinsing does not replace cleaning in the dishwasher.

^ Select "Care". ^ Select "System rinse". ^ Set a glass with water under the intake hose and select "OK". The intake hose takes in the water and rinses it. Cleaning in the dishwasher To clean the froth dispenser in the dishwasher, take the parts from the machine.

Regular cleaning in the dishwasher is important, so that the froth dispenser does not clog over time, when milk is not removed during rinsing. Take care that the small holes of the single pieces are not clogged (see arrow). Pinch the soft parts to loosen the soiling, then blow them out. Do not use a needle to remove residues, the parts may get damaged. ^ Pull all pieces apart. Remove the piece with the gaskets by turning and pulling it apart. ^ Insert the pieces in the dishwasher and then lubricate the gaskets with the supplied silicone grease. ^ Turn the cover above the spout to the left, a. ^ Pull the froth dispenser out of the machine, b, holding it by the spout and the intake hose. 41 Cleaning and Care ^ Reassemble the parts as shown.

Take care that the raised parts (see arrow) point downwards and, ^ Push the froth dispenser into the machine from below, a, and turn the cover above the spout to the right, b. Do not use the machine without the froth dispenser installed. Steam will spit uncontrollably. Danger of scalding and machine damage. ^ that the marks are lined up. 42 Cleaning and Care Exterior The front of the appliance can be cleaned with a sponge and a solution of warm water and non-abrasive liquid dish soap. Dry with a soft cloth. Only use a slightly damp sponge when cleaning the controls. Water could penetrate into the electronics and cause damage. Stainless steel surfaces Stainless steel surfaces can be cleaned using a non-abrasive stainless steel cleaner (available from Miele). To help prevent soiling, a conditioner for stainless steel can also be used. Apply sparingly and with even pressure. Stainless steel colored controls Clean the buttons and knobs with a sponge and a solution of warm water and liquid dish soap. These controls may become discolored or damaged if not cleaned regularly. Do not use a stainless steel cleaner on the knobs or buttons.

Clean immediately after use. Abrasive cleaning agents, glass cleaning agents, all-purpose cleaners, thinner or ammonium cleaners should not be used on the machine. They will damage the surface. Wipe any spills from descaling immediately! 43 Descaling the appliance The coffee system must be descaled regularly. The appliance will display a reminder message to descale and will eventually lock if not descaled.

The display will show "Please descale the coffee system. Remaining number of servings: 50". This message will now appear after each preparation. If the counter has elapsed to 0, the appliance will be locked. Descaling ^ To descale the unit before it is heated up, select "Descaling" in the main menu. ^ To start the descaling process before prompted by the machine (e.g. because of very hard water), select "Care". ^ Select "Descaling" and then "OK". The display prompts the user through the single steps of the descaling process.

Follow the prompts. If the descaling is started while the machine is still hot, the appliance will cool down for 10 minutes before the descaling begins. The descaling process cannot be canceled once "OK" is selected. The process now needs to be completed. This is a safety feature to ensure the process will be completed. It is important for best results and the longevity of the machine. Select "Descaling" to start the descaling immediately. The descaling takes about 20 minutes. If you want to continue at a later point in time, turn the unit off. The appliance can only be used again once descaling is performed.



[You're reading an excerpt. Click here to read official MIELE CVA 4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)
<http://yourpdfguides.com/dref/3353959>

Only use the enclosed descaling tablets for descaling. They are specially developed for the coffee system to optimize the descaling. The descaling tablets can be purchased from Miele. Other agents may damage the machine and affect the taste of coffee and hot water. The machine could also be damaged. Use the supplied descaling funnel to protect the appliance front from the descaling agent. Clean up any descaling spills immediately to avoid damage to the appliance front. Thoroughly clean the water tank and the drip tray of descaling residues. 44 Descaling the appliance ^ The display will prompt you through the next steps: to fill the descaling agent into the water tank take the water tank out fill the water tank with fresh lukewarm tap water to the mark k. If not filled to the mark, the descaling will be canceled prematurely and incomplete Dissolve two of the enclosed descaling tablets in the water. Close the water tank and insert into position. ^ Please fill the water tank with tap water to the descaling mark and reinsert it: Take the water tank out, rinse out any descaling residues thoroughly with water. Fill with fresh water to the k mark. During rinsing water runs from the dispensers. When the display shows Please empty the drip tray: Empty the drip tray. Since the machine is also rinsed inside, the drip tray needs to be emptied to continue rinsing. When the display shows: Process finished: Descaling is complete. Follow the prompts in the display. The appliance is rinsed a final time. Since the lines are drained during descaling, they must be filled with water before the next use.

See "Making coffee - Cappuccino and milk froth". ^ Set the descaling funnels under the hot water and froth dispensers. Set the funnel in the holes of the drip tray so the dispensed liquids are guided in the drip tray. During the descaling process the descaling solution will flow from the hot water and froth dispensers. The machine rests briefly to allow the solution to take affect before dispensing again. 45 Frequently asked questions Repairs to electrical appliances should only be carried out by a suitably qualified person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held responsible for unauthorized work. Machine Problems The light does not illuminate when the appliance is turned on. Is the unit locked? Is the lighting turned off? See "Settings - Lighting".

If not, the light bulb has burnt out. Contact Miele's Technical Service Department. The heating phase takes a long time. When the door is opened during the Keep the door closed during the heating heating up phase, e.g. to fill the phase. water tank, the heating element turns off. The unit heats only with the door closed. The light turns off suddenly. The light turns off automatically when the machine has not been used for 10 minutes.

The display messages are difficult to read. The contrast or brightness of the displays are too low / high. The display remains dark. The unit has no power. The main switch is turned off. The machine is not plugged in. Check that the fuse had not blown or is defective. If the fuse has blown contact Miele's Technical Service Department. Adjust the display contrast / brightness. See "Settings - Display".

46 Frequently asked questions The unit suddenly turns off. Is the machine programmed to switch off after a programmed time? The water temperature could be to high. There could be pebbles within the coffee beans. The unit shuts off after 20 secs. to avoid damages. Is the machine plugged in? The door cannot be closed. Check if all containers are properly inserted. The door is hard to open and close, and the gasket of the connector is pulled off. Adjust the door with the door hinges. See "Installation - Adjusting the door hinges".

The gasket of the coffee dispenser connector is damaged and leaking. The gasket is worn. Check the door. Is the alignment off from damage to the gasket? Change the gasket with a new one (supplied). Adjust the door with the door hinges.

See "Installation - Adjusting the door hinges". The machine goes into standby mode when not used for a programmed time. See "Settings - Timer - Turning off after". The unit is locked until the water has cooled. Call Miele's Technical Service Department.

Plug in the machine. The grind control lever will not move. Close the unit and prepare a coffee/espresso. The grind grade can now be reset. The brew unit cannot be taken out. The brew unit is not in the correct position. Close the door and turn the appliance on. The brew unit will position itself into the correct position. The cover of the ground coffee funnel cannot be pushed in properly. Close the lid of the ground coffee funnel.

47 Frequently asked questions Preparing / dispensing problems No water, steam or milk is dispensed from the froth dispenser. The water tank is not correctly inserted. The dispenser is clogged. Take out the water tank and reinsert it. Clean the froth dispenser as described in "Cleaning and Care - Froth dispenser/Intake hose". The grinding sounds louder than usual. There could be pebbles within the coffee beans. The grinding is quieter than usual. The coffee bean container is empty. The respective message appears in the display.

Wait until no sound is heard and refill the coffee bean container. Turn off the unit immediately. Contact the Miele's Tech. Service. The coffee/espresso flows too fast into the cup.

The grind control is set too coarse. Set the grind control to a finer grind. The coffee/espresso flows too slow into the cup. The grind control is set too fine. Set the grind control to a coarser grind.

The coffee/espresso is not hot enough. Were the supply lines pre-heated? The smaller the cup, the more important it is to pre-heat. The temperature is set too low. Check on what temperature range the coffee type is set. Check if the brew unit is clogged. Clean the brew unit. No drink is prepared although the beans were grinded and enough water is in the container. The grind control is set to the finest or the grind amount is set to the maximum. The process is timed, the process might need so long, there is no time for brewing any more. Set the grind control or the grind amount to a different position.

48 Frequently asked questions The steam heating system is turned off but steam can still dispensed. Steam can be dispensed as long as the steam heating system is heated. Once it has cooled, steam can only be dispensed once the steam system has heated. The coffee dispensing is interrupted. The water tank is empty. Refill the water tank with fresh cold tap water. You will be asked whether you would like the coffee dispensing to continue after the water tank has been filled.



[You're reading an excerpt. Click here to read official MIELE CVA
4070 COFFEE SYSTEM user guide
http://yourpdfguides.com/dref/3353959](http://yourpdfguides.com/dref/3353959)

If you do not confirm with "OK" within 5 minutes the coffee preparation will be cancelled. Instead of coffee only water is dispensed. The beans may have gotten stuck.

Pull the bean container out and push it back in. The ground coffee funnel cover was opened and closed and a preparation with ground coffee was selected but no ground coffee was inserted. The coffee system switches automatically back to beans use after the preparation. The drip tray is empty but a message to empty it is displayed. The metal contacts are soiled or wet.

Check if the drip tray is inserted correctly. Clean and dry the contacts. Insert the drip tray as described in "Cleaning and Care - Drip tray". Turn the machine off and on again with the main switch. If the message still appears contact Technical Service.

49 Frequently asked questions The machine does not rinse when turned on although the automatic rinse feature is set to "On". When the machine is still at a temperature of about 140°F (60°C). The machine will not rinse when it's too hot. The water dispensing stops when programming the serving size. There was not enough water in the Fill the water tank before programming tank. The dispensed water amount the serving size. will not be saved. If the maximum water amount is dispensed, the water flow stops automatically. The maximum water amount is saved. Water is in the waste unit.

This is not a fault. "Coffee water" is in the waste unit. If the grind control is set to very fine, there might be coffee water in the waste unit. If the grind control is not set to very fine, contact Technical Service. This is residual water from the cleaning process. The descaling process was started accidentally. The descaling process cannot be canceled once it is started. The process needs now to be completed. This is a safety feature to ensure the process will be completed. It is important for best results and the longevity of the machine.

The preheating time is increased, the water flow amount is not correct and the unit performs less? The machine needs to be descaled. No water flows from the spouts. The filters in the brew unit are clogged. Rub any residue off the filters with a sponge. See "Descaling the appliance".

50 Frequently asked questions The brew unit or waste unit could not be pulled from the machine. The brew unit is not in the basic position. The door was opened during grinding or brewing. Close the door. The brew unit automatically gets into the basic position.

No crema has formed or it is "different". Check if the grind control is set too The coffee is not fresh enough. coarse or too fine. The coffee is unsuitable for use in this machine. See "Filling the beans Check what temperature range the coffee type is set. If the container". temperature is too high, there are The coffee dispensers are set too high. black areas in the crema. Too much crema has formed and is above the coffee dispensers. Some coffee types produce too much crema when the coffee / espresso temperature is set to the maximum and the amount of ground coffee is too much.

Lower the temperature and amount of ground coffee. The milk froth does not flow but "spits". Before using for the first time the water lines need to be filled. See "Making coffee - Cappuccino and milk froth". When preparing milk froth for the first time, the milk is spit from the mug. The door was opened during the Keep the door closed during the heating phase. High steam pressure phase. has built making the steam dispensed too strong when the valve is opened.

When preparing milk froth the preparation starts, stops then starts again. This is not a fault.

The start and stop action aids the machine in preparing the best froth possible. 51 Frequently asked questions "F" messages The message F 10 or F 17 appears in the display. No water is dispensed. The water tank is not inserted properly. Take it out and reinsert correctly.

The water tank was not filled correctly during the descaling process. Fill the water tank up to the correct mark. After fixing the fault, the machine turns off then on again. Start the desired preparation again. If the message still appears contact Technical Service.

The message F 73 shows or "Check brew unit" appears in the display. The brew unit is clogged and cannot Select "Clear". reset to the correct position. Take out and clean the brew unit. See "Cleaning and Care - Brew unit". Reinsert the brew unit and close the door. If the message still shows contact Technical Service. The message "Too much ground coffee" appears in the display. Select "OK". If too much ground coffee passes through the coffee chute the machine The machine is now ready for use.

is unable to process it so it can be emptied into the waste container. 52 After sales service In the event of a fault which you cannot easily fix yourself, please contact the Miele Technical Service Department at the contact information on the back of this booklet. When contacting the Technical Service Department, please quote the model and serial number of your appliance given on the data plate inside the appliance. MieleCare (USA only) MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. @@@@They have been designed to be biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children.

@@Please contact your local recycling authority about the possibility of recycling these materials. Ensure that the appliance presents no danger to children while being stored for disposal. Before discarding an old appliance, unplug it from the outlet, cut off its power cord and remove any doors to prevent hazards. 56 Electrical connection Important Ensure that power is not supplied to the machine while installation or maintenance work is performed. All electrical work should be performed by a qualified electrician in strict accordance with national and local safety regulations.

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held responsible for unauthorized work. Verify that the voltage, load and circuit rating information found on the data plate match the household electrical supply before installing the coffee system. If there is any question concerning the electrical connection of this appliance to your power supply, please consult a licensed electrician or contact Miele's Technical Service Department.



[You're reading an excerpt. Click here to read official MIELE CVA 4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)
<http://yourpdfguides.com/dref/3353959>

See back page for contact information.

WARNING: THIS APPLIANCE MUST BE GROUNDED The coffee system comes equipped with a 6 ft (1.8 m) power cord with a NEMA 5-15P molded plug for connection to a 120 V, 15 A, 60 Hz power supply. 57 Installation Installation options The coffee system is designed to be built into cabinetry. Miele appliances can be installed flush or proud. Discuss your installation requirements with your architect, designer and installer. A combination with other Miele built in appliances is possible. If the machine is installed in combination with other appliances, it should be installed with a protective base between the appliance and the unit (exception: installation with a built-in plate warmer). A special display cabinet is also available from your dealer or Miele, as an installation option. 58 Installation Installation Make sure power is not supplied to the appliance while installation or maintenance work is performed. Disconnect the power supply to the work area by unplugging the unit, tripping the circuit breaker or removing the fuse.

The coffee system must be installed into cabinetry before being used. ^ If your cabinet has 3/4" (19 mm) side walls, drill four holes for the mounting. ^ Center the unit and turn the screws a little bit in and then out again. ^ Take the unit out of the niche and drill four holes at the screw markings (1/16" [2 mm], diameter 3/16" [4.5 mm]). ^ Plug the appliance into the electrical outlet. ^ Push the appliance into the niche. ^ Unscrew the height adjustable feet on the underside of the machine about 1/16" (2 mm). ^ Push the appliance all the way back into the cabinet and center it. If necessary level the unit with the four height adjustable feet.

The feet can be turned out up to 3/8" (10 mm). ^ Open the door and partially tighten the screws. ^ Carefully turn the lower screws, a, to center the machine. ^ To secure the appliance in the cabinet, tighten the upper screws, b, by hand. Do not use an electric screwdriver.

59 Installation Adjusting the door hinges The door hinges can be adjusted if the door cannot be opened easily. ^ To adjust the door sideways, a, turn screw a. ^ To adjust the door to the front or back, b, turn screw b. 60 61 62 63 Alteration rights reserved / 0409 CVA 4070 M.-Nr.

07 194 170 / 03 For the most updated manual see the Miele web site. .



[You're reading an excerpt. Click here to read official MIELE CVA 4070 COFFEE SYSTEM user guide](http://yourpdfguides.com/dref/3353959)
<http://yourpdfguides.com/dref/3353959>