




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE DIAMOND G 5975 SCVI. You'll find the answers to all your questions on the MIELE DIAMOND G 5975 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE DIAMOND G 5975 SCVI
User guide MIELE DIAMOND G 5975 SCVI
Operating instructions MIELE DIAMOND G 5975 SCVI
Instructions for use MIELE DIAMOND G 5975 SCVI
Instruction manual MIELE DIAMOND G 5975 SCVI

Miele

Operating Instructions

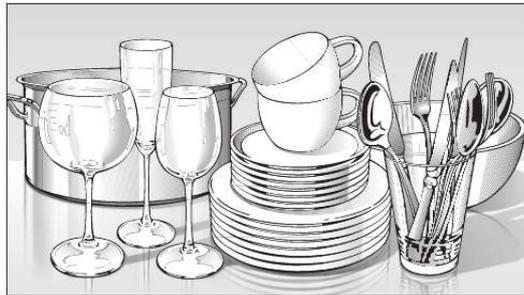

Dishwasher
G 5970
G 5975

To prevent accidents
and appliance damage
read these instructions
before
installation or use.

en - US, CA

M.-Nr. 07 909 280



[You're reading an excerpt. Click here to read official MIELE DIAMOND G 5975 SCVI user guide](http://yourpdfguides.com/dref/4310638)
<http://yourpdfguides.com/dref/4310638>

Manual abstract:

.....
.....
.....
.....

. . 4 Guide to the dishwasher

.....
.....
.....

.....

. 8 Control panel

.....

.....

.....

.....

9 Caring for the environment

.....

.....

.....

.....

. 10 Before using for the first time

.....

.....

.....

.....

11 To open the door

.....

.....

.....

.....

.....

.....

11 Display function

.....

.....

.....

.....

.....

. 12 Welcome screen

.....

.....

.....

.....

.....

. 13 Language setting

.....

.....

.....

.....
.....
.....
.....
. 13 Clock format.

.....
.....
.....
.....
.....
.....
13 Filling the salt container
.....

.....
.....
.....
.....
.....
.....
16 Salt refill message
.....
.....

.....
.....
.....
. . . . 17 Rinse aid .
.....

.....
.....
.....
.....
.....
.....
18 Adding rinse aid
.....

.....
.....
.....
.....
.....
.....
. 18 Rinse aid indicator
.....
.....

.....
.....
.....
. . . . 19 Loading the dishwasher

.....
.....
.....
.....
.....
. 20 Items not recommended for dishwashing
.....
.....

.....
. 21 Typical load for 10 place settings
.....

.....
.....
.....
.....

..... 36 *Selecting a program* ...

.....
.....
.....

.....
.....
.....

..... 36 *Selecting options*

.....
.....
.....
.....

..... 39 *Starting a program* .

.....
.....

.....
.....
.....
.....

... 40 *Time display*.

.....
.....
.....

.....
.....
.....

..... 40 *Standby* ...

.....
.....
.....
.....

.....
.....
.....

..... 41 *At the end of a program*.

.....
.....
.....
.....

..... 41 *Preparing your appliance for an extended vacation* .

.....
.....
.....

.. 42 *Interrupting a program*.

.....
.....
.....
.....

.....
... 42 Changing a program ...

.....

.....

.....

.....

.....

..... 43 2 Contents Additional options

.....

.....

.....

.....

.....

.....

... 44 Delay start

.....

.....

.....

.....

.....

.....

... 44 BrilliantLight ..

.....

.....

.....

.....

.....

... 46 Settings ! ...

.....

.....

.....

.....

.....

.....

..... 47 Water hardness ...

.....

.....

.....

.....

.....

.....

..... 49 Drying Plus. .

.....

.....

.....

.....

.....

.....

.....

... 50 Optimize standby.....

.....

.....

.....

.....
.....
... 51 Refill display .
.....
.....

.....
.....
.....
.....
..... 51 Check filters ...
.....
.....
.....

.....
.....
.....
.....
..... 51 Reorganize programs
.....
.....
.....

.....
.....
..... 52 Save options ...
.....
.....
.....
.....

.....
..... 53 Keypad tone
.....
.....
.....
.....

..... 54 Brightness
.....
.....
.....

.....
.....
..... 54 Memory ..
.....
.....
.....

.....
.....
.....
..... 54 Factory default
.....

.....
.....
.....
.....

.. 55 RemoteVision ...

.....
.....
.....
.....

..... 56 Frequently asked questions .

.....
.....
.....

.... 57 Technical faults .

.....
.....
.....
.....

57 Problems water intake/drain

.....
.....
.....
.....

. 59 General problems with the dishwasher

.....
.....
.....

.... 61 Sounds

.....
.....
.....
.....

.. 63 Poor cleaning results

.....
.....
.....
.....

..... 64 After sales service .

.....
.....
.....
.....

.....
..... 67 Transport ...

.....
.....
.....
.....

.....
.....
.....

.. 68 User Maintenance Instructions.

.....
.....
.....
.....

69 Cleaning and Care

.....
.....
.....

... 70 Triple filter system ..

.....
.....
.....
.....
.....

..... 72 Cleaning the drain pump and non-return valve ...

.....
.....
.....

.... 76 Installation instructions

.....
.....
.....
.....

.. 77 Help to protect the environment. ..

.....
.....
.....
.....

.... 78 Electrical connection

.....
.....
.....
.....

.....
79 Plumbing.

.....
.....
.....
.....
.....

..... 81 Connection to the water supply

. 81 Drainage

.. @@Use the dishwasher only for its intended purpose. This appliance is intended for residential use only. @@This data must correspond to prevent injury and machine damage.

Consult a qualified electrician if in doubt. @@connect this appliance to electricity. Extension cords do not guarantee the required safety of the appliance (e.g. danger of overheating). properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. damaged it must only be replaced by a Miele Service technician with a genuine Miele power cord. @@@@Work by unqualified persons could be dangerous and may void the warranty. dishwasher. A damaged appliance is dangerous. Unplug the machine and contact the Miele Technical Service Department. beneath a cooking surface, oven or any appliance that radiates heat.

High temperatures from these units may damage the dishwasher. dishwasher. If the supplied toe-kick is not used, a cabinet matching toe-kick must be installed. area where it will be exposed to temperatures below freezing. ~ A toe-kick must be used with the ~ Do not install or use a damaged ~ Do not install the dishwasher in an ~ Do not cut the intake hose or ~ Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! a non-stationary location (e.g. on a boat). submerge it in liquid.

This hose contains electrical components that could cause injury or property damage if cut or submerged. when all installation and plumbing work is complete. ~ This appliance must not be used in ~ Only power up the dishwasher ~ , WARNING - Fire hazard! Do not cover or crush the plug of the appliance. Ensure that the cabinet opening for the dishwasher provides ample space for the plug and cord. Installing the dishwasher in a tight space may crimp the power cord or put pressure on the plug which could cause overheating. ~ This dishwasher should only be installed under a continuous counter top secured to adjacent cabinetry.



[You're reading an excerpt. Click here to read official MIELE DIAMOND G 5975 SCVI user guide](http://yourpdfguides.com/dref/4310638)
<http://yourpdfguides.com/dref/4310638>

5 IMPORTANT SAFETY INSTRUCTIONS Use allow children to play in, on or near the dishwasher. It is possible for small fingers may be pinched in the door. are properly in place. ~ To reduce the risk of injury, do not ~ When loading tableware, place sharp items away from the door to prevent damage to the seal.

Load sharp items pointing downwards to prevent injuries. Only use detergents and rinse aids ~ Only use the dishwasher if all panels ~ recommended for residential ~ Do not sit or stand on the door or baskets of the dishwasher. Close the door when not in use. ~ Under certain conditions, humption you may connect the dishwasher to a cold water source. ^ For fastest possible wash times, with slightly higher energy consumption, connect the dishwasher to a hot water source. ^ Make full use of the baskets without overloading for the most economical washing. ^ Use the correct amount of detergent and rinse aid. Detergent dosage is dependent upon the amount of soiling and type of dishware being washed. See the "Program Guide" for more information. ^ When using powder or gel detergent, reduce the amount to 2/3 of the normal amount when washing a small load.

^ Choose a program that best suits the degree of soiling and the type of dishes being washed. 10 Before using for the first time To open the door To close the door ^ Push the baskets in. n used. ^ Remove the lower basket from the wash cabinet and unscrew the salt container lid. When opening the salt container, water will run out. Open the container only to refill salt. Filling the salt container To achieve good cleaning results, the dishwasher needs soft water (water that is low in minerals). Hard water results in calcium deposits on dishware and in the dishwasher. Therefore, if your tap water hardness is above 4 °d (4 gr/gal) the water should be softened. The built-in water softener is designed for this purpose.

The water softener is suitable for a water hardness up to 70 °d (73 gr/gal). Important: The salt container must be filled with 2 quarts (2 l) of water before adding salt for the first time so the salt can dissolve properly. Water does not have to be added with subsequent refills. ,Inadvertently filling the salt container with dishwashing detergent (including liquid detergent) will damage the water softener. ,Only use water softener salt specially formulated for dishwashers. Other salts may contain insoluble additives which can impair the water softener. If using "Tab" products which include salt, still add salt to the machine to achieve optimal cleaning results and ensure long-term functioning of the water softener. 16 Before using for the first time Salt refill message ^ When the display shows Insufficient salt, refill the salt after the program has finished. ^ Confirm with OK. The message will clear from the display. If a sufficiently high concentration of salt has not yet formed, the Insufficient salt message may continue to be displayed after adding the salt. In this case, confirm again with the center button. The Insufficient salt message is turned off if you have programmed the dishwasher to a water hardness below 4 °d (4 gr/gal). ^ Place the provided funnel over the salt container and carefully fill it with salt. The salt container holds approx. 4.4 lbs (2 kg) of salt, depending on the type of salt. ^ Clean any excess salt from the threads of the container opening. Screw the lid on firmly. ^ Immediately after each refill, run the "Rinse & Hold" program (without the Turbo function) without a load.

This will remove any traces of salt from inside the wash cabinet. ,Immediately after each refill, run the "Rinse & Hold" program (without the Turbo function) without a load. This will remove any traces of salt from inside the wash cabinet. If using "Tab" detergent products in your dishwasher, the messages can be turned off if desired (see "Settings - Deactivate indicators"). If you switch to using detergent that does not contain salt or rinse aid, it is important to remember to replenish the salt and rinse aid and to turn the indicators back on. 17 Before using for the first time Rinse aid Rinse aid helps to prevent spotting on dishes and glassware. The rinse aid is filled in the reservoir and the set amount will be automatically dosed. ,Filling the rinse aid reservoir with detergent (liquid or powder) will damage the reservoir. Only pour rinse aid formulated for residential dishwashers into the reservoir. When using "Tab" detergents rinse aid is not needed.

^ Press on the flap until you hear it click shut. Failure to close it all the way allows water to enter the reservoir during the wash program. ^ Clean any spilled rinse aid. This prevents over-foaming occurring during the next program. Adding rinse aid You can adjust the rinse aid dosage for best results (see "Settings - Rinse aid").

^ Press the button on the rinse aid reservoir in the direction of the arrow until the flap springs open. ^ Pour liquid rinse aid into the reservoir until it is visible on the surface of the screen. The rinse aid reservoir holds approximately 3.7 fl. oz.

(110 ml). 18 Before using for the first time Rinse aid indicator When the (Refill rinse aid message appears, the reservoir contains sufficient rinse aid for 2 - 3 programs only. ^ Add rinse aid once the program has finished. ^ Confirm with the OK button. The "Refill rinse aid" message will go out. If using "Tab" detergent products in your dishwasher, the messages can be turned off if desired (see "Settings - Deactivate indicators"). If you switch to using detergent that does not contain salt or rinse aid, it is important to remember to replenish the salt and rinse aid and to turn the indicators back on. 19 Loading the dishwasher ,Do not wash items soiled with ^ The spray arms must not be blocked by items that are too tall or hang through the baskets. Check clearance by manually rotating the spray arms. ^ Place very small items in the cutlery tray or basket so they do not fall to the bottom of the wash cabinet.

^ Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. ash, sand, wax, grease or paint in the dishwasher. Ash and sand do not dissolve and will be distributed throughout the inside of the dishwasher. Wax, grease and paint will cause permanent discoloration and damage to the dishwasher. ^ Scrape food from dishes before placing them in the dishwasher, rinsing is not necessary. ^ Some foods contain natural dyes, e.g. carrots or tomatoes. Plastic items may discolor permanently if they come in contact with food dyes.

^ All items can be placed anywhere in the baskets. ^ Load dishes so that water can reach all surfaces. Do not place dishes or cutlery inside other pieces. ^ Make sure that all items are securely positioned. ^ Hollow items such as cups and glasses should be placed upside down in the baskets.



[You're reading an excerpt. Click here to read official MIELE
DIAMOND G 5975 SCVI user guide
http://yourpdfguides.com/dref/4310638](http://yourpdfguides.com/dref/4310638)

^ To ensure good water coverage, tall, narrow and hollow items, i.e. vases or champagne glasses, should be placed in the center of the basket rather than in the corners. ^ Concave based items such as mugs or bowls, should be placed at an angle so that water does not pool. 20 Loading the dishwasher Items not recommended for dishwashing Cutlery with wooden handles Wooden cutting boards Glued items such as old knives with handles glued together around the shank of the blade Handmade craft items, antique, metal trimmed or decorative glassware Plastic items that are not heat resistant Copper, brass, tin or aluminum Dishes with color painted over the glaze.

These dishes may fade over time Fine glassware and crystal items should only be washed using the "China & Crystal" program*. Otherwise clouding or etching may occur after frequent washing. Cast iron pots and pans Glassware: There are no standard guidelines for washing glassware, when in doubt wash by hand. When purchasing new dishes, glasses and cutlery, make sure they are dishwasher safe. Only wash items marked "dishwasher safe" in the dishwasher. If fine glassware is washed in the dishwasher select the "China & Crystal" program*. This will reduce the risk of clouding. Silver and aluminum: Silver or aluminum items may tarnish. Silverware previously cleaned with a silver polish may be damp or spotted at the end of a program where water has adhered to the polish. This can be rubbed off with a soft, dry cloth.

Silver that has been cleaned in an immersion dip is usually dry at the end of a program, but may tarnish. If left to dry, foods containing sulfur can discolor silver. These include egg yolk, onions, mayonnaise, mustard, fish and marinades. Silverware may tarnish or pit if washed next to stainless steel. Leave space between these metals. Clean aluminum items, e.g. grease filters, with domestic dishwasher detergent only. * depending on model If unsure whether your china and crystal are dishwasher safe, please check with the manufacturer. The China & Crystal program*, although extremely gentle and thorough can cause the china and crystal to "wear" if they are not dishwasher safe.

21 Loading the dishwasher Typical load for 10 place settings Upper basket Lower basket Cutlery tray 22 Loading the dishwasher Typical load for 16 place settings Upper basket Lower basket Cutlery tray 23 Loading the dishwasher Upper basket the upper and lower basket inserted (except during the Tall items program, if available). Foldable spikes The rows of spikes can be lowered to make more room for larger items, such as casserole dishes. Always use the dishwasher with ^ Load the upper basket with small, lightweight, or delicate items such as cups, saucers, glasses, dessert bowls, etc. Shallow pans can also be placed in the upper basket. ^ Long items such as soup ladles, mixing spoons and long knives should be placed lying down across the front of the upper basket. ^ Press the yellow lever down a and fold down the spikes b. Hinged cup rack ^ To make room for tall items, raise the rack upwards. Glasses can be arranged along the cup rack to give them some support during the program. ^ Lower the cup rack and lean the glasses against it. 24 Loading the dishwasher Jumbo cup rack (depending on model): The cup rack can be set at two different widths so that it can also accommodate large cups.

Universal support bar The support bar will hold tall glasses and stem ware securely. ^ Fold the bar down and lean the desired glasses against it. ^ Pull the cup rack upwards and click it back into position at the required width. ^ If desired, a section of the cutlery tray can be removed to allow for even taller glasses. 25 Loading the dishwasher Adjusting the height: You can set the support bar at two different heights. ^ Pull the support bar upwards and click it back into position at the required height. Use the low setting for small glasses and tumblers. Use the high setting for tall glasses and stem ware. 26 Loading the dishwasher Adjusting the upper basket In order to gain more space for taller items the upper basket can be adjusted on three levels with 2 cm between each level. The upper basket can also be set at an angle with one side high and the other side low.

Make sure, however, that the basket can slide smoothly in and out of the cabinet. ^ Slide out the upper basket. To adjust the upper basket downwards: ^ Pull up on the levers at the sides of the upper basket. ^ Adjust the basket to the desired height and then release the levers to lock the basket in place. Depending on the setting of the upper basket, the following plate dimensions can be accommodated. Depending on the setting of the upper basket, a variety of plate dimensions can be accommodated. To adjust the upper basket upwards: ^ Lift the basket up until it clicks into place. 27 Loading the dishwasher Lower basket ^ For larger and heavier items such as plates, serving platters, saucepans, bowls, etc. Glasses, cups, small plates and saucers can also be arranged in the lower basket. Dishwasher with cutlery tray ^ Place large platters and dishes in the center of the lower basket.

When tilted, plates up to 13 3/4" (35 cm) in diameter can be accommodated. Heavily soiled items 28 Loading the dishwasher Removable MultiComfort insert The rear section of the lower basket is used for cups, glasses, plates, pots and pans. You can remove the MultiComfort insert to provide more space for larger items such as pots and pans. Glass rack ^ The glass rack can be raised to make more room for tall items. ^ Stem glassware, e.g. wine glasses, champagne flutes or beer glasses, can be leaned against the glass rack or suspended from it. The height of the glass rack is adjustable. To remove the insert a ^ Press the yellow handle forwards and remove the insert. To replace the insert b ^ Slide the hooks of the insert under the struts of the lower basket.

^ Push down on the insert to snap it into position. ^ Slide the glass rack to the desired height until the catches click into place at the top. 29 Loading the dishwasher Universal support bar The support bar will hold tall glasses and stem-ware securely. Foldable spikes The rows of spikes can be lowered to make more room for larger items, such as casserole dishes. ^ Fold the bar down and lean the desired glasses against it. ^ If desired, a section of the cutlery tray can be removed to allow for even taller glasses. ^ Press the yellow lever down a and fold down the spikes b. Vase / Bottle insert The vase / bottle insert can be used to rinse narrow items, e.g. vases, baby bottles, etc.

^ Pull the insert up a and bend to the side b, if not needed. 30 Loading the dishwasher Cutlery Split cutlery tray (depending on model) Spoons with thick handles may have to be placed as knives and forks with their heads in the holders. ^ Arrange the cutlery as shown in the cutlery tray.



[You're reading an excerpt. Click here to read official MIELE
DIAMOND G 5975 SCVI user guide
http://yourpdfguides.com/dref/4310638](http://yourpdfguides.com/dref/4310638)

For easier unloading cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc. Spoon heads should be placed in contact with at least one of the serrated retainers on the base of the cutlery tray to ensure that water runs off them freely. The upper spray arm must not be blocked by tall cutlery items (e.g. cake servers). The side sections of the tray can be moved into the middle to accommodate tall dishware items in the upper basket. ^ You can use the yellow slide to adjust the height of the middle section of the cutlery tray to make more room for large items of cutlery.

31 Loading the dishwasher Cutlery basket (depending on model) Cutlery insert for the cutlery basket Use the insert supplied for heavily soiled items of cutlery. The insert separates the items so that they can be reached better by the spray jets. The cutlery basket can be placed anywhere on the front rows of spikes in the lower basket. ^ To avoid risk of injury, knives and forks should be placed with the handles upwards in the basket. However, cutlery placed handle down in the basket will come out cleaner and drier.

^ Place small items of cutlery in the individual slots on three sides of the cutlery basket. ^ Fit it onto the cutlery basket if required. ^ Insert cutlery with the handles facing downwards, and distribute them evenly along the insert. 32 Optional accessories Optional dishwasher accessories are available from your Miele dealer, Miele or Mieleusa.com (depending on your model some may already be supplied with your machine as standard). If you would like to... the following accessory will need to be ordered... .. a Cappuccinatore insert for the upper basket.

... a cutlery basket for the lower basket. ... a glassware rack for the lower basket. ...
...wash a Miele Cappuccinatore ...wash additional items of cutlery .

..wash long-stemmed glassware MieleCare Collection Miele branded cleaning and care products, including dishwasher salt, detergent and rinse aid, are available to order from your Miele dealer, Miele or the on-line Miele store www.mieleusa.com 33 Use Detergent You can use powder, gel or tab detergents.

Follow the dosage information on the detergent packaging. If using a Tab detergent see "Settings Deactivate indicators". Detergent tabs are not recommended for use with the program "Express" (depending on model). The tabs may not dissolve completely. ,Dishwasher detergents contain irritant and corrosive ingredients. Avoid inhaling or swallowing dishwasher detergent. Keep children away from detergent. Keep detergent out of the reach of children. Keep children away from the dishwasher when the door is open. There could still be detergent residues in the dishwasher.

Only add detergent just before starting the program and lock the door with the child safety lock (depending on model) . Only use detergents formulated for domestic dishwashers. Use only the recommended amount of detergent. Continued use of too much detergent may cause machine damage. Dishwasher cleaning products are available from Miele. When using the "China & Crystal" program (depending on model) reduce the amount of detergent used to at least 1/2 of the normal dosage. Also make certain your china and crystal are dishwasher safe. 34 Use Adding detergent ^ Press the latch on the detergent dispenser. The flap will spring open. The flap is always open at the end of a program.

^ Add detergent to the compartments and close the container flap. ^ Use one tab or add powder or gel detergent to compartment II and close the flap. ^ If a Pre-rinse is desired, and available for your chosen program, add 1 teaspoon (5 ml) of detergent to compartment I. Compartment I holds a maximum of 2 teaspoons (10 ml), compartment II holds a maximum of 3.5 tablespoons (50 ml) of detergent.

The horizontal marks in compartment II indicate the levels of approximately 1 1/4 and 2 tablespoons (20 and 30 ml) respectively. The marks indicate the approximate fill level in ml when the door is open in a horizontal position. 35 Use Turning on ^ Open the water supply, if closed. ^ Open the door. ^ Make sure the spray arms can rotate freely.

^ Turn the dishwasher on K. The main menu shows in the display. @@See "Settings J - Memory". } Sensor Wash } Express Main menu r Selecting a program Choose your program according to the type of load and soiling. The "Program guide" describes the programs and application. ^ Select the desired program. The display changes to the program menu. Sensor Wash } Options 1:32 h 12:00 Start } Information about the selected program can be displayed by pressing the K button. To choose another program use the U (Clear) button to return to the main menu. 36 Use Program guide When to use Pre-rinse 1 2 Program sequence Main wash Interim rinse 1 2 Final rinse Drying Pots & Pans For normally soiled pots & pans with dried on food, and heavily soiled dishware, use 120% detergent recommended.

X X X X X Normal as Program for completely required washing a full load of normally soiled dishware with the ability to adjust energy and water consumption based on the soil load of the dishware. For temperature sensitive glassware and lightly soiled dishware, use 50% detergent recommended. To sanitize dishware, e.g. baby bottles, cutting boards and preparation dishware. Very quiet program for normally soiled dishware with dried on food. To rinse dishes when a complete program is not needed. "Quick program" for lightly soiled dishware, e.g. party dishware or to remove salt traces from the wash cabinet after refilling salt; not suitable for detergent tabs For heavily soiled dishware with dried starchy food For lightly soiled dishware, e.

g. party dishware X X as required X X X X China & Crystal X as required X X SaniWash X X X X Extra Quiet X X X X Rinse & Hold Express X X X X Heavy Soil Light X X X X X X X X 37 Use Program guide When to use Pre-rinse 1 2 Program sequence Main wash Interim rinse 1 2 Final rinse Drying Energy Saver The water intake temperature must be 115°F (45°C) for light to normally soiled dishware Sensor controlled program for normally soiled dishware For dishware with dried on starchy or cheesy food; 120% detergent recommended To gently clean dishwasher safe plastics and plastic toys For extra large, heat resistant items, e.g. large vases. Remove upper basket For a quick cleaning of glassware for direct reuse; use without detergent and rinse aid To wash glassware without detergent and rinse aid; rinse cycle with warm water as required X X X X X Sensor Wash X as required X X Starch/Cheese X X X X Plastics Tall Items X X X X X X X X X Glass no rinse aid cold X X X Glass no rinse aid warm X X X Usage: Electric: Water: 0.

01 - 1.3 kWh 1.1 - 5 gal (4 - 19 l) 38 Use Selecting options Options can be added to the selected program. ^ Select the Options menu. The display shows the available options for the selected program.

Available options: Turbo: For shortening the program duration.



[You're reading an excerpt. Click here to read official MIELE DIAMOND G 5975 SCVI user guide](http://yourpdfguides.com/dref/4310638)
<http://yourpdfguides.com/dref/4310638>

To achieve optimum results, energy consumption rates will increase. When the "Turbo" function is used in correlation with a program a quick rinse is completed without heating. Use when a complete program is not needed. Pre-rinse: For easily removable soiling Soak: To soak stubborn soiling. When using powder detergent, fill approx. 1 teaspoon (5 g) of detergent in detergent compartment I. Extended drying: To enhance drying of odd shaped dishware and plastic items. Intensive lower basket: For washing heavily soiled dishes in the lower basket at the same time as delicate items in the upper basket. This function will increase the cleaning power in the lower basket in programs which it is selected.

Depending on the program, the run time may be extended slightly. Once this function is set for a program it will remain active for that program until the setting is changed. ^ Select the desired options. The selected options are marked with a L check. ^ To de-select an option press the respective control again. ^ Confirm the selected options with OK. The display changes back to the program menu. The message Options selected will appear in this display. 39 Use Starting a program ^ Select Start. The display shows Close the door.

To select another program or to add options, select Back and cancel the program with Cancel. ^ Start the program by closing the door. The optical interface lights to indicate that a program is running. The program starts and "Items can be added" appears in the display. As long as this reference is shown, tableware can be added to the machine without impairing the cleaning result.

Time display Before the program starts, the time display shows the running time of the selected program in hours and minutes. During the running program the remaining time is shown in the time display. The running time for the same program may vary depending on the intake water temperature, load size and soiling. When a program is selected for the first time, a time is shown which equals an average program running time with cold water. Each time a program is run, the electronic adjusts the program running time according to the intake water temperature and the load size.

The water in the dishwasher is hot, risk of burns by splashing water. Cancel a program only in the first few minutes. Otherwise important program steps (e.g. the water softening) could be interrupted. 40 Use Standby A few minutes after the last key is pressed or at the end of the program the dishwasher switch into Standby mode to save energy. ^ To turn the dishwasher back on press K. @@The dishwasher will then turn off after 6 hours. @@@@Fault messages cannot be turned off. still hot from the dishwasher.

@@@^ Push the baskets in. ^ Turn the dishwasher off K. @@@@The water in the dishwasher is hot. Danger of scalding. Before closing the door again, leave it ajar for approx. 20 secs. This will enable the temperature in the wash cabinet to settle. @@@@The display changes to the main menu. ^ Select the desired program. ^ Select Start.

^ Start the program by closing the door. The optical interface lights. @@The start can be delayed in 15-minute-increments. @@The detergent might stick together and not get completely rinsed out. @^ Turn the dishwasher on K.

The K indicator lights. ^ Select the desired program. ^ Select "Delay start,". @@@@Holding the button will automatically increase or decrease the time. The end time will be automatically adjusted.

@^ Select Start. ^ Close the door. The program starts automatically at the selected time. The indicator , goes out. @@The display and the indicators will turn off. @^ Open the door. ^ Select Cancel and confirm with OK. @^ Select the desired program. ^ Select Start. ^ To start the program, close the door.

@@@^ Open and close the door quickly 3 times. @@From now on the interior lighting is turned off. @@The main menu shows in the display. @@See "Settings J - Memory". @@@@^ Select the desired language and confirm with OK. The flag behind the word Language J serves as a guide when an unfamiliar language is selected. Select the respective menu with a flag until the submenu Language J appears. Time of day This selection allows the clock to be shown as 24 or 12 hours. The clock can also be set from here. Setting the clock format ^ Select "Format".

^ Select the desired clock format and confirm with OK. Set the time of day ^ Select "Set manually". ^ Set the hour with +/- and confirm with OK. Set the minutes and confirm. After confirming the minutes with OK, the display will revert to the previous menu.

^ Touch "Clear" to get back into the Settings J menu. 48 Settings ! Water hardness Your dishwasher is fitted with a water softener which you need to program to the water hardness level in your area, see "Before the first use". ^ Turn the dishwasher on K. If the memory function is on, the program menu instead of the last selected program will be displayed (see "Settings - Memory"). If this is the case use the U button in the main menu.

^ Select Water hardness from the "Settings !" menu. The set water hardness is marked with a check (. ^ Select the water hardness of your local water supply, confirm with OK. °d 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37-45 46-60 61-70 gr/gal 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38-46 47-62 63-73 Setting in display 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 45 60 70 49 Settings ! Rinse aid For best results the rinse aid dosage can be adjusted.

The dosage can be set between 0 and 6 ml. The dosage set by default to 3 ml of rinse aid per program. Use a higher setting if spots appear on dry glassware. - Use a lower setting if streaking appears on dishes or glasses. ^ Selected the desired rinse aid amount and confirm with OK. Adjust Sensor Wash The "Sensor Wash" program can be adjusted to clean stubborn but normal soiling.

^ Select Yes and confirm with OK. Drying Plus To improve the drying process the door will open (except during the "Extra Quiet" program) at the end of the program during the drying phase. This feature can be turned off. ^ Select the desired setting and confirm with OK. ,If you turn the Drying Plus function off and still want to open the door at the end of a program, then open the door completely. Otherwise steam can damage the countertop edges, because the fan will continue to run. 50 Settings ! Optimize standby A few minutes after the last key is pressed or at the end of the program the dishwasher will switch into Standby mode to save energy. This function can also be turned off. The dishwasher will then turn off completely after 6 hours. ^ Select the desired setting and confirm with OK.

If refill salt and/or rinse aid or an fault are present in the display, the dishwasher will not turn off.



[You're reading an excerpt. Click here to read official MIELE
DIAMOND G 5975 SCVI user guide
http://yourpdfguides.com/dref/4310638](http://yourpdfguides.com/dref/4310638)

The refill messages can be turned off when you use a tab detergent (see "Settings-Refill display"). Fault messages cannot be turned off. Refill display When consistently using multi-function Tab detergents, you can turn off the refill displays. ^ Select the desired setting and confirm with OK.

Be sure to turn this setting back on if you stop using multi-function tab detergents. Check filters This selection allows you to set the number of programs run before the filter check message shows. You can select between 30 and 60 programs. The filter check message is set by default to 50 programs. ^ Select the desired number of programs and confirm with OK.

51 Settings ! Reorganize programs The order of the programs in the program list can be reorganized. The two most frequently used programs can be saved to the first two positions. } Sensor Wash B } Cancel Select program for position e Continue } ^ Select with e the program which you would like to save to the first position of the main menu. Confirm the selection with the button next to the program. ^ Confirm with Continue. ^ Repeat with the second program. The selected programs are displayed as programmed. To change a program position, select Back until you reach the respective program position. ^ When you are done reorganizing the program list, confirm with Finished. 52 Settings ! Save options Additional options can be selected for some programs, e.

g. extended drying. See "Use - Selecting options". Save options allows you to save the selected options for future use of the program. This function is turned off by default. ^ Select the desired setting and confirm with OK. Buzzer When the buzzer is activated, a tone sounds at the end of a program and if a fault occurs. The buzzer at the end of a program is turned on by default. Buzzer at the end of a program The buzzer at the end of a program sounds five times in intervals with a brief break in between. The buzzer sounds up to one hour if the dishwasher is not turned off.

Buzzer in case of a fault The buzzer for a fault sounds continuously. The buzzer sounds up to two minutes if the dishwasher is not turned off or the fault is fixed. The buzzer for a fault cannot be set to off. Buzzer tone The buzzer volume can be set to 17 different levels. The buzzer cannot be turned off in case of a fault.

^ Select the desired volume. @@The temperatures are shown in °C/Celsius by default. @@The volume can be set to 17 different levels.

@@@The function is turned on by default. @@The dishwasher has various demo programs for showrooms.

@@ Demo mode: The program is started by pressing any button. It runs once and must be started again. @@ Demo wash sound: The program activates the pumps to demonstrate the wash sound. Trade show mode: Once the machine is used for the first time this option is disabled in the display. Drying Plus Demo: The door opens automatically. Turning the Showroom program on ^ Select the desired option, confirm with OK. ^ Confirm the following messages with OK. ^ Press any button to start the selected demo mode. ^ To cancel the demo mode press any button again and confirm with OK. Turning the Showroom program off ^ Select Off to deactivate the Showroom program and confirm with OK.

^ Confirm the message Deactivate demo mode? with OK. Factory default All settings can be reset to factory default. ^ Confirm the message Reset to factory default? with OK. ^ Confirm the information All settings are reset to factory default with OK. Leaving the "Settings J menu" ^ To leave the "Settings J" touch the "Clear" U control. The main menu appears. 55 RemoteVision Miele's RemoteVision Wi-Fi technology creates a 'virtual link' between your appliance and our monitoring center. If a fault occurs, Miele's client service center will be notified and contact you, or another trusted individual identified on your call roster, in order to gain access to your appliance to fix the problem. For information on set-up and installation of the RemoteVision module, see the separate RemoteVision installation manual. Be sure your wireless system meets the following requirements A wireless router that supports an IEEE 802.

11b protocol Windows XP® or newer operating system, Mac® OS X 10.3 or higher Cable or DSL modem Microsoft® Internet Explorer 6 or higher, Safari 2.0 or higher, Firefox 1.5 or higher * Please note that each wireless router manufacturer supplies their own device drivers and setup programs. Due to the differences in manufacturers, exact router setup instructions are not included in this manual.

Wording and instructions may vary. 56 Frequently asked questions With the aid of the following guide, minor problems can be fixed without a service call. ,Repairs should only be carried out by a qualified and trained person in accordance with local and national safety regulations. Unauthorized repairs could cause personal injury or machine damage. Technical faults Problem The program does not start.

Possible fault The door is not properly closed. The machine is not plugged in. The fuse has tripped. Solution Close the door firmly. Insert the plug. Reset the circuit breaker. See data plate for minimum amperage. Press g and select a program. Select the desired program. Reset the circuit breaker.

See data plate for minimum amperage. Install the reflector properly, see the Installation diagram. The dishwasher is not turned on. No program is selected. The dishwasher stops during a program. The optic indicator is not visible when a program has started. The fuse has tripped. The reflector was not properly installed. 57 Frequently asked questions Problem The optical interface flashes fast, the buzzer sounds or the display shows the fault: ; Technical fault FXX Possible fault Solution Before trying to remedy the fault: Turn the dishwasher off with the K button. There may be a technical fault.

Waterproof fault F70 The waterproof system has activated. The door may be blocked. After a few seconds: Turn the dishwasher on. Select the desired program. Close the door.

If the problem persists, contact Technical Service. Turn off the water supply. Contact Miele Technical Service. Remove the item, if necessary restart the program. If the message shows again contact Miele Technical Service.

Automatic door closing fault F32 Automatic door opening fault F33 Possible technical fault. Open the door by hand and restart the program. If the message shows again contact Miele Technical Service. 58 Frequently asked questions Problems water intake/drain Problem Possible fault The optical interface flashes fast, the buzzer sounds and the display shows the fault: Water intake fault Solution The water supply is closed. Open the water supply all the way. Fault water intake F12/F13 Before fixing the fault: Turn the dishwasher off K. Fault in the water intake. Open the water supply all the way. Check and clean the water intake filter, see "User Maintenance Instructions".



[You're reading an excerpt. Click here to read official MIELE](http://yourpdfguides.com/dref/4310638)

[DIAMOND G 5975 SCVI user guide](http://yourpdfguides.com/dref/4310638)

<http://yourpdfguides.com/dref/4310638>

The water pressure at the water connection is lower than 4.

35 psi. Consult a plumber. 59 Frequently asked questions Problem The optical interface flashes fast. The program "Energy Saver" displays the fault: Water intake temp. too low Possible fault Solution The intake water does not have a minimum temperature of 115°F again, use a different (45°C). See "Plumbing". program. The optical interface flashes fast, the buzzer sounds and the display shows the Fault F11: fault: Fault in the water drain. Drain fault F11 There might be water in the wash cabinet.

Before fixing the fault: Turn the dishwasher off with the K button. Clean the triple filter. Clean the drain pump and the non-return valve. See "User Maintenance Instructions" for more information on the above. Remove any kinks in the drain hose.

60 Frequently asked questions General problems with the dishwasher Problem The display is dark. Possible fault The dishwasher has gone into "Standby" mode to save energy. The interior lighting is The interior light was not turned on when turned off. the door is opened. The optical function The middle or lower flashes rapidly.

spray arm is blocked by The buzzer sounds. dishware. The display shows the The spray arm jets of following fault the middle or lower message: spray arm are clogged. Middle spray arm blocked Solution Turn the dishwasher off using the K button. Turn the interior light on (see "Additional options BrilliantLight").

Open the dishwasher door and rearrange items blocking the spray arms. Turn the dishwasher off K. Then: Clean the spray arms. See "User Maintenance Instructions". or Lower spray arm blocked 61 Frequently asked questions Problem Detergent is left in the dispenser at the end of a program.

The detergent lid cannot be closed properly. The door and the interior walls are still wet after a program has finished. Water remains in the wash cabinet at the end of a program. The triple filter in the wash cabinet is clogged. The drain pump or the non-return valve may be blocked. The drain hose is kinked. Possible fault The dispenser was damp when detergent was added. Detergent residue is blocking the catch. This is not a fault! It is the normal operating mode of the drying system. Solution Dry the dispenser before adding detergent.

Remove the residue. The moisture will evaporate after a short time. Before fixing the fault: Turn the dishwasher off K. Clean the triple filter. See "User Maintenance Instructions".

Clean the drain pump and the non-return valve, see the "User Maintenance Instructions". Remove any kinks from the drain hose. 62 Frequently asked questions Sounds Problem There is a knocking noise in the wash cabinet There is a rattling noise in the wash cabinet Possible fault Solution The spray arm is hitting an Interrupt the program, item in the basket. rearrange items blocking the spray arms. Items are not secure in the Interrupt the program, and wash cabinet.

rearrange loose pieces. A foreign object has Remove the foreign object from the drain pump (see become lodged in the "Cleaning the drain pump drain pump. and non-return valve") This has no effect on the This may be caused by dishwasher. If in doubt, the installation or the diameter of the pipe. contact a plumber.

There is a knocking noise in the water line 63 Frequently asked questions Poor cleaning results Problem The dishes are not clean. Possible fault The dishes were not loaded correctly. The program was not powerful enough. Solution See "Loading the dishwasher". Select a more intensive program (see "Program Guide").

Stubborn but normal Use the function "Adjust soiling (e.g. coffee, tea). Sensor Wash" (depending on model, see "Settings"). Not enough detergent was Use more detergent, or dispensed. change the detergent. The spray arms are Turn the spray arms and blocked. rearrange the dishes if necessary. The triple filter in the wash Clean the filter and insert it cabinet is clogged or not correctly. Clean the spray correctly inserted.

arm jets, if required (see The spray arm jets might "Cleaning and care"). be clogged as a result. The non-return valve is Clean the drain pump and the stuck open and blocked. non-return valve (see Wash water will run back "Cleaning and care"). into the wash cabinet.

Reduce the dosage (see "Settings - Rinse aid"). Glasses and cutlery The rinse aid dosage is show streaks. The set too high. glasses take on a bluish shimmer; the deposits can be wiped off. 64 Frequently asked questions Problem Possible fault Solution Increase the dosage, refill the reservoir or switch the rinse aid product when refilling (see "Rinse aid").

Leave dishes in longer (see "Use"). Change the detergent, or refill the rinse aid (see "Rinse aid"). Increase the dosage (see "Setting the rinse aid dosage"). Refill the salt container (see "Filling the salt container"). Reseat it making sure it screws back on correctly. Use a different detergent. Use normal (powder or gel) detergent. Program a higher water softener setting (see "Water softener"). Dishes are not dry. The rinse aid setting may be glasses and too low, or the rinse aid cutlery are reservoir is empty. spotted.

Dishes were taken out too soon. A "Tab" product was used. These products have a low drying effect. Not enough rinse aid was White residue is visible on cutlery used. and dishes. Clouding occurs The salt container is empty. on glassware and cutlery; film can be The salt container lid was not wiped off. screwed on properly. Unsuitable "Tab" products were used. The water softener is programmed on too low a setting.

65 Frequently asked questions Problem Glasses have a brown or blue discoloration; film cannot be wiped off. Glasses are dull and discolored; film cannot be wiped off. Possible fault Detergent deposits. Solution Change detergent right away. Glasses are not dishwasher safe.

The surface is affected. Tea or lipstick stains The wash temperature of have not been the selected program was completely removed. too low. The detergent has a low bleaching effect. Plastics are Natural dyes e.

g. from discolored. carrots, tomatoes or ketchup may be the cause. Not enough detergent was used to break down natural dyes. There are rust stains The affected items are not on cutlery. corrosion resistant. No program was run after refilling salt. Salt residuals got in the wash cycle. The salt container lid was not screwed on properly. There is no remedy.

Only use dishwasher safe glasses. Select a program with a higher wash temperature. Use a different detergent. Use more detergent (see "Detergent"). Discoloration is permanent. There is no remedy. Use only dishwasher safe cutlery. Start the "Express" program without a load after refilling salt (without the "Turbo" option).



[You're reading an excerpt. Click here to read official MIELE
DIAMOND G 5975 SCVI user guide
http://yourpdfguides.com/dref/4310638](http://yourpdfguides.com/dref/4310638)

Reseat it making sure it screws back on correctly. 66 After sales service Repairs In the event of a fault which you cannot correct yourself please contact the Miele Service Department at the phone number on the back of this booklet.

^ Please quote the model type and number of your appliance. These can be found on the data plate along the right edge of the door. MieleCare (USA only) MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance.

Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: <http://mieleusa.com/mielecare> PC Update The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology. When, for example, technological developments offer advanced modifications to your existing program cycles a service technician will be able to input these into your machine controls via the indicator light marked PC.

Miele will provide information when such possibilities become available. 67 Transport To transport the dishwasher, e.g. when moving to a new home, note the following: Empty the dishwasher. Secure any loose parts, e.g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door.

Residual water in the machine could leak and cause electrical damage. 68 User Maintenance Instructions To prevent accidents and appliance damage, read these instructions before installation or use. Cleaning and Care Exterior Check and clean your dishwasher regularly. This will help avoid faults and problems. ^ Use a conditioner suitable for your kitchen cabinetry. ^ Clean wood with a damp cloth and wipe dry. Clean the exterior with a solution of warm water and liquid soap applied with a soft sponge. Dry with a soft cloth. ,Abrasive cleaning agents, all-purpose cleaners, thinner or ammonium cleaners should not be used on the dishwasher. They will damage the surface.

Wash cabinet Generally, the wash cabinet is self cleaning if the correct amount of detergent is used. The wash cabinet can be cleaned with a dishwasher cleaner such as "Dis Cleaner" available from your Miele dealer or online at www.mieleusa.com. Glass cleaners may be used to clean the exterior. However do not allow them to sit or "puddle", this can cause damage to the surface. Remove the cleaner promptly. To better maintain your appliance avoid the following: cleaners containing soda, ammonia, thinners, or chlorides cleaners containing descaling agents or lime removers, abrasive cleaners, stainless steel cleaners, dishwasher soap (powder), caustic (oven) cleaners, scouring pads, steel wool, hard brushes, metal scrapers, steam cleaning products. Door and the door seal ^ Wipe the door seals regularly with a damp cloth to remove food deposits. ^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door.

These are outside of the wash cabinet and are not cleaned by water from the spray arms. 70 Cleaning and Care Indicator reflector The reflector of the optical interface is located in the steam deflector beneath the counter top. ^ Clean as necessary with a damp cloth. Control panel ^ Clean the control panel as necessary with a damp cloth. ,The appliance front and controls are not scratch proof. Remove spills immediately. 71 Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet prevents food from being redeposited on dishes. It also protects the circulation pump from damage caused by foreign objects (e.g. broken glass, bones, etc.

). During normal use, the filter system is self-cleaning. Cleaning the triple filter ,The machine must not be used without all the filters in place! ^ Check and clean the filter system periodically for any trapped or foreign objects. The level of soiling and time it takes before the filters need cleaning will vary depending on household. The display shows Filter check after 50 wash cycles (default setting). The filter check frequency can be set from 30 to 60 cycles. See "Settings J - Filter check". ^ Check and clean the triple filter. ^ Confirm with OK. The display changes to the program menu.

^ Turn off the dishwasher before cleaning. ^ Turn the handle counterclockwise to release the triple filter system, a. ^ Remove the triple filter from the machine. Clean any solid particles and rinse under running water. Scrub with a nylon brush if necessary.

,Be sure that debris does not get into the circulation pump causing it to clog. 72 Cleaning and Care To clean the underside of the filter the flap must be opened. ^ Push the clips together a and open the flap b. ^ Rinse under running water. ^ Close the flap so that the clip engages.

^ Return the filter so it lies flat in the base of the wash cabinet. ^ Lock the filter by turning the handle clockwise. ,The triple filter system must be inserted and locked. Large particles could get in the circulation system and cause blockage. 73 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months. ^ Turn off the dishwasher before cleaning. Removing the spray arms ^ Remove the cutlery tray (if present). ^ Push the upper spray arm up to engage the inner ratchet and unscrew the spray arm. ^ Pull the lower spray arm firmly upwards to remove.

^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b. ^ Remove the lower basket. ^ Use a pointed object such as a toothpick to push food particles into the spray arm jets. ^ Rinse thoroughly under running water. ^ Return the spray arms and check that they rotate freely. 74 Cleaning and Care Cleaning the water inlet filter A filter is incorporated into the intake hose attached to the dishwasher's shut off valve. If your water is hard or the pipes contain sediment, this filter may clog and prevent enough water from entering the wash cabinet. ,The plastic housing of the water connection contains electrical wiring. Do not cut the intake hose or submerge it in liquid. Installing an in-line water filter If your water contains a large number of insoluble substances, a filter between the water valve and the intake hose connection is recommended.



[You're reading an excerpt. Click here to read official MIELE
DIAMOND G 5975 SCVI user guide
http://yourpdfguides.com/dref/4310638](http://yourpdfguides.com/dref/4310638)

These filters can be purchased from Miele. Cleaning the filter ^ Turn off the dishwasher and pull the plug. ^ Turn off the water supply. ^ Unscrew the intake hose. ^ Carefully remove the rubber seal.

^ Remove the filter using needle nose pliers and rinse it under running water. ^ Reinsert the filter and seal. Make sure they are seated correctly. ^ Screw the intake hose back on the water valve, checking that it is not cross-threaded. ^ Slowly turn on the water supply and test for leaks.

75 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher and pull the plug. ^ Remove the triple filter (see "Triple filter system"). ^ Use a cup or bowl to scoop water out of the wash cabinet. The drain pump is beneath the non-return valve (see arrow). ^ Remove all foreign objects from the drain pump (glass or bone splinters). ^ Before returning the non-return valve, check that the drain pump is not blocked. Spin the propeller several times in both directions to check for obstructions. ^ Carefully reinsert the non-return valve and secure it with the locking clamp. ,Make sure the locking clamp ^ Tilt the locking clamp to the side a.

^ Pull out the non-return valve b and rinse it under running water. ^ Remove all foreign objects from the non-return valve. clicks into place! 76 Installation Instructions Please refer to the Installation Diagram supplied with these instructions. To comply with IEC sound testing protocols, please contact Miele for additional instructions. Information is subject to change. Please refer to our website to obtain the most current product specification, technical & warranty information. Help to protect the environment Disposal of the packing material The cardboard box and packaging protect the appliance during shipping.

These materials are biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags etc.

are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old machine Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. Ensure that the appliance presents no danger to children while being stored for disposal. Before discarding an old appliance, unplug it from the outlet, cut off its power cord and remove any doors to prevent hazards.

78 Electrical connection ,Installation, repairs and other work by unqualified persons could be dangerous. Check that the voltage, frequency and fuse rating shown on the data plate match the household mains supply. The power outlet must be accessible after installation. Do not use an extension cord to connect the dishwasher to the mains. Danger of overheating! See data plate on the right side of the door.

@@@GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. @@@@Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician. If there is any question concerning the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: U 1-800-999-1360 V 1-800-565-6435 Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle.

79 Electrical connection Hardwired electrical connection It is possible to hardwire this appliance to an existing power cable. ,Prior to making a hardwire ,CAUTION: Before servicing, disconnect the power supply by either removing the fuse, shutting off the power main or manually "tripping" the circuit breaker. Installation work and repairs should only be performed by a qualified technician in accordance with all applicable codes and standards. Repairs and service by unqualified persons could be dangerous and the manufacturer cannot be held responsible. Before connecting the appliance to the power supply, make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent machine damage.

Consult an electrician if in doubt. GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. @@@@ Water pressure: Must be between 4.5 - 145 psi (0.3 - 10 bar). If the water pressure is lower, a "Water Intake" notification will be shown. See "Frequently Asked Questions" for more information. If the water pressure is higher than shown, a pressure reducing valve must be used. Ensure that the water connection is secure after the first use. ,Installation, repairs and other work ,Do not drink water from the dishwasher! The dishwasher can heat its own water to the temperature required by the wash program.

This allows for connection of the machine to either a hot (max. 140°F / 60°C) or cold water source. For lowest energy consumption and for fastest possible wash times connect the dishwasher to a hot water source. All programs use hot water in the rinse cycles. To use the "Energy Saver" program, a hot water connection of minimum 115°F / 45°C and maximum 140°F / 60°C (water intake temperature) is necessary.

The higher the water intake temperature, the better the cleaning and drying results. The inlet hose is approximately 5 ft. (1.5 m) long. The water inlet hose comes equipped with an inlet hose ending with a 3/8" female compression fitting.

This can be directly connected to a water supply valve or to an appropriate coupling. ,To prevent damage to the dishwasher, it must only be connected to a fully vented drainage system. ,Do not cut the intake hose. If the hose is cut, the dishwasher will not work. There will be a water leak. If the hose is too long, coil it neatly and place it behind or under the machine. 81 Plumbing Drainage The machine comes equipped with a built-in non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher. The dishwasher is equipped with a 5 ft (1.5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions and adapters can be ordered from Miele.

The maximum drain hose length is 13 ft. (4 m), max. drain height: 39" (1 m). Use the clamp provided to attach the hose to the dishwashers P trap or disposal connection (see the "Installation Diagram"). The hose must always be attached on the sink side of the P trap. The drain hose must not be shortened. ,Make sure the hose is not kinked or cut when pushing the machine under the countertop. Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented. Otherwise the water inside the dishwasher may siphon out during the wash program.



[You're reading an excerpt. Click here to read official MIELE
DIAMOND G 5975 SCVI user guide
http://yourpdfguides.com/dref/4310638](http://yourpdfguides.com/dref/4310638)