




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE DIMENSION G 5575 SCVI. You'll find the answers to all your questions on the MIELE DIMENSION G 5575 SCVI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual MIELE DIMENSION G 5575 SCVI**  
**User guide MIELE DIMENSION G 5575 SCVI**  
**Operating instructions MIELE DIMENSION G 5575 SCVI**  
**Instructions for use MIELE DIMENSION G 5575 SCVI**  
**Instruction manual MIELE DIMENSION G 5575 SCVI**

**Miele**

## Operating Instructions

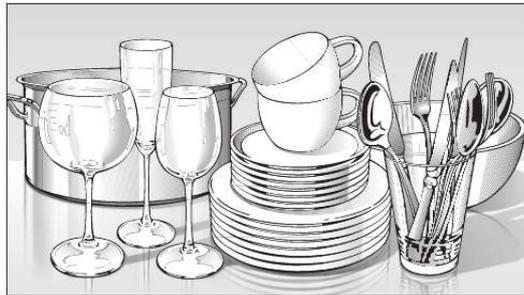

Dishwasher  
G 5570  
G 5575

To prevent accidents  
and appliance damage  
read these instructions  
**before**  
installation or use.

en - US, CA

M.-Nr. 09 016 340



[You're reading an excerpt. Click here to read official MIELE DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)  
<http://yourpdfguides.com/dref/4310651>

**Manual abstract:**

.....  
.....  
.....  
.....

*.. 4 Guide to the dishwasher .....*

.....  
.....  
.....

.....

.....

*. 7 Control panel .....*

.....

.....

.....

.....

.....

*8 Caring for the environment .....*

.....

.....

.....

.....

.....

*.. 9 Before using for the first time .....*

.....

.....

.....

.....

*. 10 To open the door .....*

.....

.....

.....

.....

.....

.....

*. 10 To close the door .....*

.....

.....

.....

.....

.....

*. 10 Display .....*

.....

.....

.....

.....

.....

.....

*..... 11 Filling the salt container .*

.....

.....

.....

.....  
.....  
.....  
..... 13 Refill salt message .....

.....  
.....  
.....  
.....  
.....  
..... 14 Rinse aid ..  
.....  
.....

.....  
.....  
.....  
.....  
..... 15 Adding rinse aid .  
.....  
.....  
.....

.....  
.....  
.....  
..... 15 Rinse aid indicator .  
.....  
.....

.....  
.....  
.....  
.....  
..... 16 Loading the dishwasher ..  
.....  
.....

.....  
.....  
.....  
.....  
..... 17 Items not recommended for dishwashing .....

.....  
.....  
.....  
..... 18 Typical load for 10 place settings .....

.....  
.....  
.....  
..... 19 Typical load for 16 place settings .

.....  
.....  
.....  
..... 20 Upper basket .....

.....  
.....  
..... 21 Lower basket .

.....  
.....  
.....

.....  
.....  
.....

.. 25 Cutlery.....

.....  
.....  
.....

.....  
.....  
.....

28 Optional accessories .....

.....  
.....  
.....

.....  
.....  
..... 30 Use.....

.....  
.....  
.....

.....  
.....  
.....

..... 31 Adding detergent. ....

.....  
.....  
.....

.....  
.....  
.....

..... 32 Turning on .....

.....  
.....  
.....

.....  
.....  
.....

..... 33 Selecting a program .....

.....  
.....  
.....

.....  
.....

..... 33 Starting a program ..

.....

.....  
.....  
.....  
.....

..... 33 Program Guide ...

.....  
.....  
.....

.....  
.....  
.....

..... 34 Use ..

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 35 Time display. .

.....  
.....  
.....  
.....

.....  
.....  
.....

.. 35 Standby .....

.....  
.....  
.....  
.....

.....  
.....

.... 35 At the end of a program.

.....  
.....  
.....  
.....

.... 36 Preparing your appliance for an extended vacation .....

.....  
.....

..... 36 Interrupting a program. . .

.....  
.....  
.....  
.....

.....  
.....

... 37 Changing a program ..

.....  
.....  
.....

.....  
.....  
.....  
*37 2 Contents Additional options* .....

.....  
.....  
.....  
.....  
.....  
.....  
*... 38 Intensive lower basket* ..

.....  
.....  
.....  
.....  
.....  
.....  
*.... 38 Turbo* .....

.....  
.....  
.....  
.....  
.....  
.....  
*... 38 Delay start* .....

.....  
.....  
.....  
.....  
.....  
.....  
*..... 39 Settings menu* ..

.....  
.....  
.....  
.....  
.....  
.....  
*.... 41 Opening the "Settings" menu* .

.....  
.....  
.....  
.....  
.....  
.....  
*41 Water hardness* .....

.....  
.....  
.....  
.....  
.....  
.....  
*. 42 Buzzer* .....

.....  
.....  
.....



.....  
.....  
.....  
.....  
.....  
.....  
.....  
*. 55 User Maintenance Instructions. . . .*  
.....

.....  
.....  
.....  
.....  
*. . . . . 57 Cleaning and Care . . . . .*  
.....  
.....  
.....  
.....

.....  
*. . . 58 Triple filter system . . .*  
.....  
.....  
.....  
.....  
.....

*. 60 Cleaning the drain pump and non-return valve . . . . .*  
.....  
.....  
*. . . . . 63 Installation instructions . .*

.....  
.....  
.....  
.....  
.....  
.....  
*. 65 Help to protect the environment. . . .*  
.....  
.....

.....  
.....  
*. . . 66 Electrical connection . .*  
.....  
.....  
.....  
.....

*. . . . 67 Plumbing. . . . .*  
.....  
.....  
.....  
.....  
.....  
.....

*69 Connection to the water supply . . . . .*  
.....

.....  
.....  
.....  
69 Drainage.....  
.....  
.....  
.....  
.....  
.....

..... @@ Use the dishwasher only for its intended purpose. This appliance is intended for residential use only. @@ This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt.

@@ connect this appliance to electricity. Extension cords do not guarantee the required safety of the appliance (e.g. danger of overheating). properly installed and grounded by a qualified technician.

To guarantee the electrical safety of this appliance continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician. damaged it must only be replaced by a Miele Service technician with a genuine Miele power cord. @@@@ be performed by a Miele authorized service technician.

Work by unqualified persons could be dangerous and may void the warranty. dishwasher. A damaged appliance is dangerous. Unplug the machine and contact Miele Technical Service Department. ~ The dishwasher must be installed ~ This dishwasher should only be ~ Do not install this dishwasher installed under a continuous counter top secured to adjacent cabinetry. beneath a cooking surface, oven or any appliance that radiates heat. High temperatures from these units may damage the dishwasher. dishwasher. If the supplied toe-kick is not used, a cabinet matching toe-kick must be installed. area where it will be exposed to temperatures below freezing.

~ Installation and repair work should ~ Do not install or use a damaged ~ A toe-kick must be used with the ~ Do not install the dishwasher in an ~ Do not cut the intake hose or ~ Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! ~ This appliance must not be used in a non-stationary location (e.g. on a boat). Do not cover or crush the plug of the appliance. Ensure that the cabinet opening for the dishwasher provides ample space for the plug and cord. Installing the dishwasher in a tight space may crimp the power cord or put pressure on the plug which could cause overheating. submerge it in liquid. This hose contains electrical components that could cause injury or property damage if cut or submerged.

all installation and plumbing work is complete. ~ , WARNING - Fire hazard! ~ Only power up the dishwasher when 5 IMPORTANT SAFETY INSTRUCTIONS Use allow children to play in, on or near the dishwasher. It is possible for small fingers may be pinched in the door. ~ To reduce the risk of injury, do not ~ Do not inhale or swallow detergents. ~ Only use the dishwasher if all panels are properly in place. ~ Do not sit or stand on the door or baskets of the dishwasher.



[You're reading an excerpt. Click here to read official MIELE DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)  
<http://yourpdfguides.com/dref/4310651>

Close the door when not in use. ~ Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, turn on all hot water faucets and let water flow from each for several minutes before using the dishwasher.

This will release any accumulated hydrogen gas. Do not smoke or use an open flame during this time. Dishwasher are "dishwasher safe". For items not labeled, check the manufacturer's recommendations. Dishwasher detergents contain irritant and corrosive ingredients. They can cause burning in the mouth and throat if swallowed, or inhibit breathing. Consult a doctor immediately if detergent has been swallowed or inhaled. ~ Do not tamper with the controls. ~ Do not drink water from the dishwasher! Harmful residues could be present. salt container with detergent.

It will destroy the rinse aid compartment and water softener. a program. Allow the dishes to cool until they are cool enough to handle before unloading them. ~ Do not fill the rinse aid reservoir or ~ Dishes can be very hot at the end of ~ The water supply must be turned off sing for the first time ^ Press the K button to turn the dishwasher on. A Welcome screen shows when the dishwasher is turned on for the first time. Language The display changes automatically to the language setting. ^ Select the desired language and confirm with the center button. The selected language set is marked with a ( check. Water hardness The display changes to the water hardness setting. To achieve good cleaning results, the dishwasher needs soft water.

Hard water results in calcium deposits on dishware and in the dishwasher. If your tap water hardness is above 4 °d (4 gr/gal [US]), the water should be softened. Your local water authority will be able to advise you of the water hardness level in your area. The dishwasher must be prograe aid reservoir holds approximately 3.7 fl.

oz. (110 ml). ,Filling the rinse aid reservoir with detergent (liquid or powder) will damage the reservoir. Only pour rinse aid formulated for residential dishwashers into the reservoir. When using "Tab" detergents rinse aid is not needed.

Adding rinse aid ^ Press the button on the rinse aid reservoir in the direction of the arrow until the flap springs open. ^ Press on the flap until you hear it click shut. Failure to close it all the way allows water to enter the reservoir during the wash program. ^ Clean any spilled rinse aid. This prevents over-foaming occurring during the next program. You can adjust the rinse aid dosage for best results (see "Settings - Rinse aid"). 15 Before using for the first time Rinse aid indicator When the ( Refill rinse aid message appears, the reservoir contains sufficient rinse aid for 2 - 3 programs only. ^ Add rinse aid once the program has finished. ^ Confirm with the center button. The "Refill rinse aid" message will go out.

If using "Tab" detergent products in your dishwasher, the messages can be turned off if desired (see "Settings - Deactivate indicators"). If you switch to using detergent that does not contain salt or rinse aid, it is important to remember to replenish the salt and rinse aid and to turn the indicators back on. 16 Loading the dishwasher ,Do not wash items soiled with ^ The spray arms must not be blocked by items that are too tall or hang through the baskets. Check clearance by manually rotating the spray arms. ^ Place very small items in the cutlery tray or basket so they do not fall to the bottom of the wash cabinet. ^ Food residue and spilled liquids should be cleaned from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms. ash, sand, wax, grease or paint in the dishwasher. Ash and sand do not dissolve and will be distributed throughout the inside of the dishwasher.

Wax, grease and paint will cause permanent discoloration and damage to the dishwasher.

^ Scrape food from dishes before placing them in the dishwasher, rinsing is not necessary. ^ Some foods contain natural dyes, e.g. carrots or tomatoes. Plastic items may discolor permanently if they come in contact with food dyes.

^ All items can be placed anywhere in the baskets. ^ Load dishes so that water can reach all surfaces. Do not place dishes or cutlery inside other pieces. ^ Make sure that all items are securely positioned. ^ Hollow items such as cups and glasses should be placed upside down in the baskets.

^ To ensure good water coverage, tall, narrow and hollow items, i.e. vases or champagne glasses, should be placed in the center of the basket rather than in the corners. ^ Concave based items such as mugs or bowls, should be placed at an angle so that water does not pool. 17 Loading the dishwasher Items not recommended for dishwashing Cutlery with wooden handles Wooden cutting boards Glued items such as old knives with handles glued together around the shank of the blade Handmade craft items, antique, metal trimmed or decorative glassware Plastic items that are not heat resistant Copper, brass, tin or aluminum Dishes with color painted over the glaze. These dishes may fade over time Fine glassware and crystal items should only be washed using the "China & Crystal" program\*. Otherwise clouding or etching may occur after frequent washing. Cast iron pots and pans Glassware: There are no standard guidelines for washing glassware, when in doubt wash by hand. When purchasing new dishes, glasses and cutlery, make sure they are dishwasher safe. Only wash items marked "dishwasher safe" in the dishwasher.

If fine glassware is washed in the dishwasher select the "China & Crystal" program\*. This will reduce the risk of clouding. Silver and aluminum: Silver or aluminum items may tarnish. Silverware previously cleaned with a silver polish may be damp or spotted at the end of a program where water has adhered to the polish. This can be rubbed off with a soft, dry cloth. Silver that has been cleaned in an immersion dip is usually dry at the end of a program, but may tarnish. If left to dry, foods containing sulfur can discolor silver. These include egg yolk, onions, mayonnaise, mustard, fish and marinades. Silverware may tarnish or pit if washed next to stainless steel. Leave space between these metals.

Clean aluminum items, e.g. grease filters, with domestic dishwasher detergent only. \* depending on model If unsure whether your china and crystal are dishwasher safe, please check with the manufacturer. The China & Crystal program\*, although extremely gentle and thorough can cause the china and crystal to "wear" if they are not dishwasher safe.

18 Loading the dishwasher Typical load for 10 place settings Upper basket Lower basket Cutlery tray 19 Loading the dishwasher Typical load for 16 place settings Upper basket Lower basket Cutlery tray 20 Loading the dishwasher Upper basket the upper and lower basket inserted (except during the Tall items program, if available).



[You're reading an excerpt. Click here to read official MIELE DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)  
<http://yourpdfguides.com/dref/4310651>

*Foldable spikes* The rows of spikes can be lowered to make more room for larger items, such as casserole dishes. Always use the dishwasher with ^ Press the yellow lever down a and fold down the spikes b. ^ Load the upper basket with small, lightweight, or delicate items such as cups, saucers, glasses, dessert bowls, etc. Shallow pans can also be placed in the upper basket.

^ Long items such as soup ladles, mixing spoons and long knives should be placed lying down across the front of the upper basket. Hinged cup rack ^ To make room for tall items, raise the rack upwards. Glasses can be arranged along the cup rack to give them some support during the program. ^ Lower the cup rack and lean the glasses against it. 21 Loading the dishwasher Jumbo cup rack (depending on model): The cup rack can be set at two different widths so that it can also accommodate large cups. Universal support bar The support bar will hold tall glasses and stem ware securely. ^ Pull the cup rack upwards and click it back into position at the required width. ^ Fold the bar down and lean the desired glasses against it. ^ If desired, a section of the cutlery tray can be removed to allow for even taller glasses. 22 Loading the dishwasher Adjusting the height: You can set the support bar at two different heights.

^ Pull the support bar upwards and click it back into position at the required height. Use the low setting for small glasses and tumblers. Use the high setting for tall glasses and stem ware. 23 Loading the dishwasher Adjusting the upper basket In order to gain more space for taller items the upper basket can be adjusted on three levels with 2 cm between each level. The upper basket can also be set at an angle with one side high and the other side low. Make sure, however, that the basket can slide smoothly in and out of the cabinet. ^ Slide out the upper basket. To adjust the upper basket upwards: To adjust the upper basket downwards: ^ Pull up on the levers at the sides of the upper basket. ^ Adjust the basket to the desired height and then release the levers to lock the basket in place. Depending on the setting of the upper basket, the following plate dimensions can be accommodated.

Depending on the setting of the upper basket, a variety of plate dimensions can be accommodated. ^ Lift the basket up until it clicks into place. 24 Loading the dishwasher Lower basket ^ For larger and heavier items such as plates, serving platters, saucepans, bowls, etc. Glasses, cups, small plates and saucers can also be arranged in the lower basket. Dishwasher with cutlery tray Heavily soiled items ^ Place large platters and dishes in the center of the lower basket.

Dishwasher with cutlery basket When tilted, plates up to 13 3/4" (35 cm) in diameter can be accommodated. 25 Loading the dishwasher Removable MultiComfort insert The rear section of the lower basket is used for cups, glasses, plates, pots and pans. You can remove the MultiComfort insert to provide more space for larger items such as pots and pans. Glass rack ^ The glass rack can be raised to make more room for tall items. ^ Stem glassware, e.

g. wine glasses, champagne flutes or beer glasses, can be leaned against the glass rack or suspended from it. The height of the glass rack is adjustable. To remove the insert a ^ Press the yellow handle forwards and remove the insert. To replace the insert b ^ Slide the hooks of the insert under the struts of the lower basket. ^ Push down on the insert to snap it into position. ^ Slide the glass rack to the desired height until the catches click into place at the top. 26 Loading the dishwasher Foldable spikes (depending on model) The spikes at the front are used for plates, soup bowls, platters, desert bowls, and saucers. Both rows of spikes can be folded down to create more room for larger dishware, e. g.

pots, pans and bowls. ^ Press the yellow lever down a and fold down the spikes b. 27 Loading the dishwasher Cutlery Split cutlery tray (depending on model) Spoons with thick handles may have to be placed as knives and forks with their heads in the holders. ^ Arrange the cutlery as shown in the cutlery tray. For easier unloading cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc. Spoon heads should be placed in contact with at least one of the serrated retainers on the base of the cutlery tray to ensure that water runs off them freely. The upper spray arm must not be blocked by tall cutlery items (e.g. cake servers). The side sections of the tray can be moved into the middle to accommodate tall dishware items in the upper basket.

^ You can use the yellow slide to adjust the height of the middle section of the cutlery tray to make more room for large items of cutlery. 28 Loading the dishwasher Cutlery basket (depending on model) Cutlery insert for the cutlery basket Use the insert supplied for heavily soiled items of cutlery. The insert separates the items so that they can be reached better by the spray jets. The cutlery basket can be placed anywhere on the front rows of spikes in the lower basket. ^ To avoid risk of injury, knives and forks should be placed with the handles upwards in the basket.

However, cutlery placed handle down in the basket will come out cleaner and drier. ^ Place small items of cutlery in the individual slots on three sides of the cutlery basket. ^ Fit it onto the cutlery basket if required. ^ Insert cutlery with the handles facing downwards, and distribute them evenly along the insert. 29

Optional accessories Optional dishwasher accessories are available from your Miele dealer, Miele or Mieleusa.

com (depending on your model some may already be supplied with your machine as standard). If you would like to... the following accessory will need to be ordered... ..

a Cappuccinatore insert for the upper basket. ... a cutlery basket for the lower basket. ... a glassware rack for the lower basket. .  
..wash a Miele Cappuccinatore ...

wash additional items of cutlery ...wash long-stemmed glassware MieleCare Collection Miele branded cleaning and care products, including dishwasher salt, detergent and rinse aid, are available to order from your Miele dealer, Miele or the on-line Miele store [www.mieleusa.com](http://www.mieleusa.com)

30 Use Detergent You can use powder, gel or tab detergents. Follow the dosage information on the detergent packaging. If using a Tab detergent see "Settings Deactivate indicators". Detergent tabs are not recommended for use with the program "Express" (depending on model). The tabs may not dissolve completely. Dishwasher detergents contain irritant and corrosive ingredients. Avoid inhaling or swallowing dishwasher detergent. Keep children away from detergent. Keep detergent out of the reach of children. Keep children away from the dishwasher when the door is open.

There could still be detergent residues in the dishwasher. Only add detergent just before starting the program and lock the door with the child safety lock (depending on model). Only use detergents formulated for domestic dishwashers. Use only the recommended amount of detergent.



[You're reading an excerpt. Click here to read official MIELE](http://yourpdfguides.com/dref/4310651)

[DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)

<http://yourpdfguides.com/dref/4310651>

Continued use of too much detergent may cause machine damage. Dishwasher cleaning products are available from Miele. When using the "China & Crystal" program (depending on model) reduce the amount of detergent used to at least 1/2 of the normal dosage. Also make certain your china and crystal are dishwasher safe. 31 Use Adding detergent ^ Press the latch on the detergent dispenser. The flap will spring open.

The flap is always open at the end of a program. ^ Add detergent to the compartments and close the container flap. ^ Use one tab or add powder or gel detergent to compartment II and close the flap. ^ If a Pre-rinse is desired, and available for your chosen program, add 1 teaspoon (5 ml) of detergent to compartment I. Compartment I holds a maximum of 2 teaspoons (10 ml), compartment II holds a maximum of 3.

5 tablespoons (50 ml) of detergent. The horizontal marks in compartment II indicate the levels of approximately 1 1/4 and 2 tablespoons (20 and 30 ml) respectively. The marks indicate the approximate fill level in ml when the door is open in a horizontal position. 32 Use Turning on ^ Open the water supply, if it is closed. ^ Open the door.

^ Make sure the spray arms can rotate freely. ^ Press the K button to turn the dishwasher on. The last program selected will appear in the display and the appropriate indicator light will come on. After a short while, the estimated program duration for the program selected will appear in the display. Starting a program ^ Start the program by closing the door. The optical function light comes on as confirmation for a started program. If additional options are selected, the corresponding indicators will also light up. Cancel a program only in the first few minutes. Otherwise important program steps (e.g.

the water softening) may be interrupted. Selecting a program Choose your program according to the type of load and soiling. See the "Program Guide" for more information. ^ Select the desired program with the Program selection button. The indicator light for the selected program will come on. You can now select the additional options (see "Additional Options"). 33 Program Guide Program When to use Pre-rinse 1 2 Program sequence Main wash X Interim rinse

1 X 2 Final Drying rinse X X Pots & Pans For normally soiled pots & pans with dried on food, and heavily soiled dishware, use 120% detergent recommended. Program for completely washing a full load of normally soiled dishware with the ability to adjust energy and water consumption based on the soil load of the dishware. For temperature sensitive glassware and lightly soiled dishware, use 50% detergent recommended. To sanitize dishware, e.g. baby bottles, cutting boards and preparation dishware. "Quick program" for lightly soiled dishware, e.g. @@@@^ To turn the dishwasher back on press K.

@@@@@@@@@@@@@@@@It will stop 10 minutes after the end of the program. ^ Open the door. @@@@^ Dishes tends to chip if removed still hot from the dishwasher. Let the dishware cool. @^ Unload the dishwasher.

Dishes tend to break and chip more easily when they are hot. @@@@^ Press the K button to turn the dishwasher off. ^ Press the K button to turn the dishwasher on again. ^ Select the desired program with the Program selection button. ^ Start the program by closing the door. @@Danger of scalding. @@Before closing the door again, leave it ajar for approx. 20 seconds. This will enable the temperature in the wash cabinet to settle. @@@@^ Open the door.

^ Press the K button to turn the dishwasher on. The K indicator light comes on. ^ Select a program. ^ Press the Intensive lower basket button. @^ Start the program by closing the door. @^ Open the door. ^ Press the K button to turn the dishwasher on. The K indicator light comes on. ^ Select a program. ^ Press the Turbo button.

@^ Start the program by closing the door. @@The start time can be delayed from 30 minutes to 24 hours. The delay is set in 30 minute increments. @@Wipe dry with a cloth if necessary. @@Do not use liquid detergent.

The detergent could leak out of the compartment. ^ Open the door. ^ Press the K button to turn the dishwasher on. The K indicator light comes on. ^ Select the desired program with the "Program" button.

^ Press the , button. The last delay start time will show in the time display. The , indicator light comes on. ^ Set the desired delay start time with the , button. @@To start again at 30 minutes, press the , button twice. ^ Close the door. If, after you have set the delay start time, you do not close the door within a few seconds, the display will revert to showing the program duration. You will have to enter the delay start time again. The time will count down to the program start in 1-minute steps. Once the delay start time has elapsed, the selected program starts.

The display shows the remaining time, the , indicator light goes out, and the indicator light of the selected program comes on. 39 Additional options Starting a program before the Delay start has elapsed: A program can be started before the Delay start time has elapsed. ^ Open the door. ^ Press the K button to turn the dishwasher off. ^ Press the K button to turn the dishwasher on again. ^ Select the desired program. ^ Start the program by closing the door. The optical control lights to confirm that a program has started. 40 Settings menu The "Settings" menu allows you to change standard settings Opening the "Settings" menu ^ Press the K button to turn the dishwasher off, if it is still on. ^ Hold the program button down.

^ Turn the dishwasher on with the K button and hold the program button down for a few seconds. The first option of the Settings menu will appear in the display and all the indicator lights will come on. ^ Select the menu option you wish to change. The selected options are marked with a check ( . Language ! The display contents can be shown in different languages.

The displayed language can be changed in the Language !. ^ Select the desired language and confirm with the center button. The flag after the word Language serves as a guide when an unfamiliar language has been selected. Select the menu option with a flag until the Language ! submenu is displayed. 41

Settings menu Water hardness Your dishwasher is fitted with a water softener which you need to program to the water hardness level in your area. The dishwasher must be correctly programmed to match the hardness of your water. Your local water authority will be able to advise you of the exact water hardness level in your area. In areas where the water hardness fluctuates (e.g. 37 - 50 °d [39 -52 gr/gal]) always program the machine to the higher value (in this example 50 °d [52 gr/gal]). A check ( will appear beside the water hardness which has been set. ^ Select the hardness of your water supply and confirm with the center button. °d 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37-50 51-60 61-70

gr/gal 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 38 39-52 53-63 64-73 Value to set in the display 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37-50 51-60 61-70 42 Settings menu Rinse aid For best results the rinse aid dosage can be adjusted.



[You're reading an excerpt. Click here to read official MIELE DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)  
<http://yourpdfguides.com/dref/4310651>

The dosage can be set between 0-6 ml. The factory default dosage setting is 3 ml rinse aid.

The amount of rinse aid dispensed can be more than the value set due to the automatic adjustment of the "Sensor Wash" program. If spots appear on the dishes: Use a higher setting for rinse aid. If smearing or streaking show: Use a lower setting for rinse aid. ^ Select the desired rinse aid amount and confirm with the center button. Buzzer When the buzzer is activated, a tone sounds at the end of a program and if a fault occurs. Buzzer at the end of a program The buzzer at the end of a program sounds four times in intervals with a brief break in between. The buzzer sounds if the dishwasher has not been turned off. The buzzer at the end of a program is turned off by default. Buzzer in case of a fault In the event of a fault, the buzzer sounds continuously. The fault buzzer cannot be turned off.

Buzzer volume There are seven different volume settings. If no volume level is selected, the buzzer is deactivated. ^ Select the desired volume and confirm with the center button. 43 Settings menu Optimize standby A few minutes after the last key is pressed or at the end of the program the dishwasher will turn off to save energy. The display and the indicators are turned off and only the K Start/Stop indicator light flashes slowly.

If you do not turn the dishwasher off after the program ends, it will turn completely off after a few minutes in Standby mode. This function can also be turned off. The display and the indicators stay on and the dishwasher will turn off after approx. 6 hours. ^ Select the desired setting and press the center button.

@@^ Select the desired setting and confirm with the center button. @@@@It is not available for every program. If you are using powder dishwasher detergent, add approx. 1 teaspoon (5 g) to compartment I. ^ Select the desired setting and confirm with the center button. @@This function is not available for every program. ^ Select the desired setting and confirm with the center button. @@@@It is not available for every program. ^ Select the desired setting and confirm with the center button. @@@@You can select between 30 and 60 cycles.

The "Filter check" message is set by default to 50 cycles. @@@@^ Select Close and confirm with the center button. @@The dishwasher has a demo program for dealer's showrooms. Demo with wash sound: The program activates the pumps to demonstrate the wash sound. Turning the demo mode on ^ Select the desired option. ^ Select the option On and confirm with the center button. ^ Close the door. Demo mode will begin. Turning the demo mode off Demo mode will switch off automatically when it reaches the end of the cycle. 46 Frequently Asked Questions ,Repairs should only be carried out by a qualified and trained person in accordance with local and national safety regulations.

Unauthorized repairs could cause personal injury or machine damage. Technical faults Problem After the dishwasher was turned on with the K button, the display stays off and the "Start/Stop" indicator does not flash. The dishwasher stops during a program. Possible fault The machine is not plugged in. The circuit breaker has tripped.

Solution Insert the plug. Reset the circuit breaker. See the data plate for minimum amperage. One of the following faults appears on the display: ; Fault FXX The circuit breaker has Reset the circuit breaker tripped. (see the data plate for minimum amperage).

If the circuit breaker trips again. Contact Miele. Before fixing the fault: Press the K button to turn the dishwasher off. There may be a technical fault. After a few seconds: Turn the dishwasher on. Select the desired program. Press the Start/Stop button. If the fault is indicated again, a technical fault has occurred. Contact Miele. Turn off the water supply.

Contact Miele. L Waterproof The waterproof system has activated. 47 Frequently Asked Questions Faults in the water intake/water drain Problem One of the following faults appears on the display: 2 Open water supply Possible fault Solution Before fixing the fault: Press the K button to turn the dishwasher off. The water supply valve Open the water supply valve all is closed. the way. Before fixing the fault: Press the K button to turn the dishwasher off. Fault in the water intake. Open the water supply all the way and restart the program. Clean the water intake filter (see "Cleaning and Care"). The water pressure at the water connection is less than 30kPa (0.

3 bar/4.35 psi). Consult a plumber. 2 Water intake 2 Drain Fault in the water drain. Clean the triple filter (see There might be water in "Cleaning and care"). the wash cabinet. Clean the drain pump (see "Cleaning and Care"). Clean the non-return valve (see "Cleaning and Care"). Remove any kinks in the drain hose. 48 Frequently Asked Questions General problems with the dishwasher Problem The indicators and the display is dark.

Only the "Start/Stop" K indicator flashes slowly. Detergent residue is left in the dispenser at the end of a program. The detergent dispenser lid cannot be closed properly. The door and the interior walls are still wet after a program has finished. Water remains in the wash cabinet at the end of a program. Possible fault Solution The display goes into Press the K button. "Standby" mode to save Standby is ended. energy The dispenser was damp when detergent was added. Detergent residue is blocking the catch. This is not a fault.

It is the normal operating mode of the drying system. Dry the dispenser before adding detergent. Remove the residue. The moisture will evaporate after a short time. Before fixing the fault: Press the K button to turn the dishwasher off. The triple filter in the wash cabinet is clogged. The drain pump or the non-return valve may be blocked. The drain hose is kinked. Clean the triple filter (see "Cleaning and care"). Clean the drain pump and the non-return valve (see "Cleaning and care").

Remove any kinks from the drain hose. 49 Frequently Asked Questions Sounds Problem There is a knocking noise in the wash cabinet There is a rattling noise in the wash cabinet Possible fault Solution The spray arm is hitting an Interrupt the program, item in the basket. rearrange items blocking the spray arms. Items are not secure in the Interrupt the program, and wash cabinet. rearrange loose pieces.

A foreign object has Remove the foreign object from the drain pump (see become lodged in the "Cleaning the drain pump drain pump. and non-return valve") This has no effect on the This may be caused by dishwasher. If in doubt, the installation or the diameter of the pipe. contact a plumber. There is a knocking noise in the water line 50 Frequently Asked Questions Poor cleaning results Problem The dishes are not clean.

Possible fault The dishes were not loaded correctly. The program was not powerful enough.



[You're reading an excerpt. Click here to read official MIELE DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)  
<http://yourpdfguides.com/dref/4310651>

*Solution See "Loading the dishwasher". Select a more intensive program (see "Program Guide"). Stubborn but normal Use the function "Adjust soiling (e.g. coffee, tea). Sensor Wash" (depending on model, see "Settings"). Not enough detergent was Use more detergent, or dispensed. change the detergent.*

*The spray arms are Turn the spray arms and blocked. rearrange the dishes if necessary. The triple filter in the wash Clean the filter and insert it cabinet is clogged or not correctly. Clean the spray correctly inserted. arm jets, if required (see The spray arm jets might "Cleaning and care"). be clogged as a result. The non-return valve is Clean the drain pump and the stuck open and blocked. non-return valve (see Wash water will run back "Cleaning and care"). into the wash cabinet. Reduce the dosage (see "Settings - Rinse aid").*

*Glasses and cutlery The rinse aid dosage is show streaks. The set too high. glasses take on a bluish shimmer; the deposits can be wiped off. 51 Frequently Asked Questions Problem Possible fault Solution Increase the dosage, refill the reservoir or switch the rinse aid product when refilling (see "Rinse aid"). Leave dishes in longer (see "Use").*

*Change the detergent, or refill the rinse aid (see "Rinse aid"). Increase the dosage (see "Setting the rinse aid dosage"). Refill the salt container (see "Filling the salt container"). Reseat it making sure it screws back on correctly. Use a different detergent.*

*Use normal (powder or gel) detergent. Program a higher water softener setting (see "Water softener"). Dishes are not dry, The rinse aid setting may be glasses and too low, or the rinse aid cutlery are reservoir is empty. spotted. Dishes were taken out too soon. A "Tab" product was used. These products have a low drying effect. Not enough rinse aid was White residue is visible on cutlery used. and dishes. Clouding occurs The salt container is empty.*

*on glassware and cutlery; film can be The salt container lid was not wiped off. screwed on properly. Unsuitable "Tab" products were used. The water softener is programmed on too low a setting. 52 Frequently Asked Questions Problem Glasses have a brown or blue discoloration; film cannot be wiped off. Glasses are dull and discolored; film cannot be wiped off. Possible fault Detergent deposits. Solution Change detergent right away. Glasses are not dishwasher safe. The surface is affected.*

*Tea or lipstick stains The wash temperature of have not been the selected program was completely removed. too low. The detergent has a low bleaching effect. Plastics are Natural dyes e.g.*

*from discolored. carrots, tomatoes or ketchup may be the cause. Not enough detergent was used to break down natural dyes. There are rust stains The affected items are not on cutlery. corrosion resistant.*

*No program was run after refilling salt. Salt residuals got in the wash cycle. The salt container lid was not screwed on properly. There is no remedy. Only use dishwasher safe glasses. Select a program with a higher wash temperature. Use a different detergent. Use more detergent (see "Detergent"). Discoloration is permanent. There is no remedy.*

*Use only dishwasher safe cutlery. Start the "Express" program without a load after refilling salt (without the "Turbo" option). Reseat it making sure it screws back on correctly. 53 After sales service Repairs In the event of a fault which you cannot correct yourself please contact the Miele Service Department at the phone number on the back of this booklet. ^ Please quote the model type and number of your appliance. These can be found on the data plate along the right edge of the door. MieleCare (USA only) MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership. MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance. Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele.*

*Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home. To learn more about MieleCare Extended Service Contracts, please contact your appliance dealer or visit us online at: <http://mieleusa.com/mielecare> PC Update The Program Correction (PC) allows a technician to update the dishwasher to make use of new technology. When, for example, technological developments offer advanced modifications to your existing program cycles a service technician will be able to input these into your machine controls via the indicator light marked PC. Miele will provide information when such possibilities become available.*

*54 Transport To transport the dishwasher, e.g. when moving to a new home, note the following: Empty the dishwasher. Secure any loose parts, e.g. hoses, cables, cutlery baskets. Transport the dishwasher in the upright position. If unavoidable it may be transported on its back. Do not transport it on its side or on the door. Residual water in the machine could leak and cause electrical damage. 55 56 User Maintenance Instructions To prevent accidents and appliance damage, read these instructions before installation or use. Cleaning and Care Exterior Check and clean your dishwasher regularly. This will help avoid faults and problems. ^ Use a conditioner suitable for your kitchen cabinetry. ^ Clean wood with a damp cloth and wipe dry.*

*Clean the exterior with a solution of warm water and liquid soap applied with a soft sponge. Dry with a soft cloth. Abrasive cleaning agents, all-purpose cleaners, thinner or ammonium cleaners should not be used on the dishwasher. They will damage the surface. Wash cabinet Generally, the wash cabinet is self cleaning if the correct amount of detergent is used. The wash cabinet can be cleaned with a dishwasher cleaner such as "Dis Cleaner" available from your Miele dealer or online at [www.mieleusa.com](http://www.mieleusa.com). Glass cleaners may be used to clean the exterior. However do not allow them to sit or "puddle", this can cause damage to the surface.*

*Remove the cleaner promptly. To better maintain your appliance avoid the following: cleaners containing soda, ammonia, thinners, or chlorides cleaners containing descaling agents or lime removers, abrasive cleaners, stainless steel cleaners, dishwasher soap (powder), caustic (oven) cleaners, scouring pads, steel wool, hard brushes, metal scrapers, steam cleaning products. Door and the door seal ^ Wipe the door seals regularly with a damp cloth to remove food deposits.*



**[You're reading an excerpt. Click here to read official MIELE DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)**  
<http://yourpdfguides.com/dref/4310651>

^ Food residue and spilled liquids should be wiped from the sides of the dishwasher door. These are outside of the wash cabinet and are not cleaned by water from the spray arms.

58 Cleaning and Care Indicator reflector The reflector of the optical interface is located in the steam deflector beneath the counter top. ^ Clean as necessary with a damp cloth. Control panel ^ Clean the control panel as necessary with a damp cloth. ,The appliance front and controls are not scratch proof. Remove spills immediately.

59 Cleaning and Care Triple filter system The triple filter system in the base of the wash cabinet retains coarse dirt from the suds solution, preventing it from reaching the circulation system and re-entering the cabinet through the spray arms. Cleaning the triple filter ^ Turn the dishwasher off. ,The dishwasher must not be used without all the filters in place. Collection of coarse dirt may cause the filters to clog. The level of soiling and time it takes before the filters need cleaning will vary depending on your household use. The message Check filters will appear in the display after every 50 program cycles (factory default setting). The filter check frequency can be set from 30 and 60 program cycles (see "Settings, filter check"). ^ Check the triple filter system. ^ Clean the triple filter, if necessary. ^ Confirm the message with the center button.

The display changes to the Main menu. ^ Turn the handle counter-clockwise to release the triple filter system a. ^ Remove the triple filter system from the machine b. Clean any solid particles and rinse the filter well under running water. Scrub with a nylon brush if necessary. ,Make sure that when cleaning the filters, no coarse dirt falls into the circulation system, causing a blockage. 60 Cleaning and Care To clean the inside of the filter, the flap must be opened: ^ Push the clips together in the direction of the arrows as shown, a and open the flap b. ^ Rinse all parts under running water. ^ Close the flap so that the clip engages. ^ Replace the triple filter so it lies flat in the base of the wash cabinet.

^ Lock the filter by turning the handle clockwise, until the arrows point to each other. ,The triple filter system must be inserted correctly and locked. Otherwise large particles could get into the circulation system and cause a blockage. 61 Cleaning and Care Cleaning the spray arms Sometimes particles of food get stuck in the spray arm jets. The spray arms should be inspected and cleaned every 4 - 6 months.

^ Turn off the dishwasher before cleaning. Removing the spray arms ^ Remove the cutlery tray (if present). ^ Push the upper spray arm up to engage the inner ratchet and unscrew the spray arm. ^ Pull the lower spray arm firmly upwards to remove. ^ Lift up the middle spray arm, a, to engage the ratchet and unscrew the spray arm, b.

^ Remove the lower basket. ^ Use a pointed object such as a toothpick to push food particles into the spray arm jets. ^ Rinse thoroughly under running water.

^ Return the spray arms and check that they rotate freely. 62 Cleaning and Care Cleaning the drain pump and non-return valve If the dishwasher is not completely drained at the end of a program, the drain pump or non-return valve may be blocked. ^ Turn off the dishwasher and pull the plug. ^ Remove the triple filter (see "Triple filter system"). ^ Use a cup or bowl to scoop water out of the wash cabinet. The drain pump is beneath the non-return valve (see arrow). ^ Remove all foreign objects from the drain pump (glass or bone splinters).

^ Before returning the non-return valve, check that the drain pump is not blocked. Spin the propeller several times in both directions to check for obstructions.

^ Carefully reinsert the non-return valve and secure it with the locking clamp. ^ Tilt the locking clamp to the side a. ^ Pull out the non-return valve b and rinse it under running water. ^ Remove all foreign objects from the non-return valve. ,Make sure the locking clamp clicks into place! 63 64 Installation Instructions

Please refer to the Installation Diagram supplied with these instructions. To comply with IEC sound testing protocols, please contact Miele for additional instructions. Information is subject to change. Please refer to our website to obtain the most current product specification, technical & warranty information. Help to protect the environment Disposal of the packing material The cardboard box and packaging protect the appliance during shipping. These materials are biodegradable and recyclable. Please recycle. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of children. Danger of suffocation! Disposal of an old machine Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials. Ensure that the appliance presents no danger to children while being stored for disposal. @@The power outlet must be accessible after installation. Do not use an extension cord to connect the dishwasher to the mains.

Danger of overheating! See data plate on the right side of the door. @@GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED.

@@@The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. ,Improper connection of the equipment grounding conductor can result in electric shock. Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician. If there is any question concerning the proper electrical connection or grounding of this appliance to the power supply, please consult a licensed electrician or call Miele's Technical Service Department: U 1-800-999-1360 V 1-800-565-6435 Specifications The dishwasher comes equipped with a 4 ft (1.2 m) power cord with a molded plug for connection to 120 V, 60 Hz, 15 A grounded receptacle. 67 Electrical connection Hardwired electrical connection It is possible to hardwire this appliance to an existing power cable. ,Prior to making a hardwire ,CAUTION: Before servicing, disconnect the power supply by either removing the fuse, shutting off the power main or manually "tripping" the circuit breaker. Installation work and repairs should only be performed by a qualified technician in accordance with all applicable codes and standards.

Repairs and service by unqualified persons could be dangerous and the manufacturer cannot be held responsible. @@This data must correspond to prevent machine damage. Consult an electrician if in doubt. GROUNDING INSTRUCTIONS THIS APPLIANCE MUST BE GROUNDED. @@@@If not connected directly to a water supply valve, an appropriate adapter (not included) is required. Water pressure: Must be between 4.5 - 145 psi (0.3 - 10 bar). If the water pressure is lower, a "Water Intake" notification will be shown. See "Frequently Asked Questions" for more information.



[You're reading an excerpt. Click here to read official MIELE DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)  
<http://yourpdfguides.com/dref/4310651>

*If the water pressure is higher than shown, a pressure reducing valve must be used. Ensure that the water connection is secure after the first use. ,Installation, repairs and other work ,Do not drink water from the dishwasher! The dishwasher can heat its own water to the temperature required by the wash program. This allows for connection of the machine to either a hot (max. 140°F / 60°C) or cold water source.*

*For lowest energy consumption and for fastest possible wash times connect the dishwasher to a hot water source. All programs use hot water in the rinse cycles. To use the "Energy Saver" program, a hot water connection of minimum 115°F / 45°C and maximum 140°F / 60°C (water intake temperature) is necessary. The higher the water intake temperature, the better the cleaning and drying results. The inlet hose is approximately 5 ft. (1.5 m) long. The water inlet hose comes equipped with an inlet hose ending with a 3/8" female compression fitting. This can be directly connected to a water supply valve or to an appropriate coupling. ,To prevent damage to the dishwasher, it must only be connected to a fully vented drainage system. ,Do not cut the intake hose. If the hose is cut, the dishwasher will not work. There will be a water leak. If the hose is too long, coil it neatly and place it behind or under the machine. 69 Plumbing Drainage The machine comes equipped with a built-in non-return valve on the discharge side to prevent waste water from flowing back into the dishwasher.*

*The dishwasher is equipped with a 5 ft (1.5 m) flexible drain hose with an internal diameter of 7/8" (22 mm). Drain hose extensions and adapters can be ordered from Miele. The maximum drain hose length is 13 ft. (4 m), max. drain height: 39" (1 m). Use the clamp provided to attach the hose to the dishwashers P trap or disposal connection (see the "Installation Diagram"). The hose must always be attached on the sink side of the P trap. The drain hose must not be shortened. ,Make sure the hose is not kinked or cut when pushing the machine under the countertop.*

*Venting the drainage system If the dishwasher drain hose is connected to a floor drain or to a drain pipe that is less than 8" (20 cm) above the floor, the drain must be vented. Otherwise the water inside the dishwasher may siphon out during the wash program. ^ Open the dishwasher door and remove the lower basket. ^ Pull the lower spray arm firmly upwards to remove. When attaching the hose to a garbage disposal fitting, make sure the plug which is normally blocking the fitting is knocked out or removed.*

*The hose can be angled to the left or right side at the rear of the machine. The existing nipple that the drain hose is connected to may be designed for various hose diameters. If the nipple diameter is too large or too small it should be replaced or an adapter may be used. If the nipple extends more than 2" (50 mm) into the drain hose it should be shortened, or the hose could clog. 70 ^ Cut off the vent cap located at the right rear of the triple filter system, as illustrated.*

*71 Alteration rights reserved / 4711 G5570/G5575 / M.-Nr. 09 016 340 / 03 INFORMATION IS SUBJECT TO CHANGE. PLEASE REFER TO OUR WEBSITE TO OBTAIN THE MOST CURRENT PRODUCT SPECIFICATIONS, TECHNICAL & WARRANTY INFORMATION. .*



[You're reading an excerpt. Click here to read official MIELE DIMENSION G 5575 SCVI user guide](http://yourpdfguides.com/dref/4310651)  
<http://yourpdfguides.com/dref/4310651>